
Instruction manual

Contact Information

For assistance or support, please contact our customer service team. We're committed to resolving your concerns promptly.



help@icosiest.com [24/7]

(909)312-3668 [9AM-5PM(PT) Monday to Friday]

As a valued customer, your satisfaction is our TOP priority!

Assembly Instructions

BEFORE YOU BEGIN:

 
 
 
 
- Please read all instructions thoroughly before starting assembly
- Keep these instructions for future reference
- Verify all components and hardware against the parts list
- Follow each step in sequence for proper assembly

IMPORTANT SAFETY NOTES:

- Assemble the product close to its intended location to avoid unnecessary moving
- Place the product only on flat, stable surfaces
- WARNING: Keep small parts and packaging materials away from children - choking hazard


SKU NO.
B020500003
B020500004

Packing List

NO.	PICTURE	QTY
A		64
B		64
C		20
D	 M3x12	36
E		12
F		5
G	 M4x12	2
H		2
I	 M4x25	2
J	 M4x35	36
K	 M4x18	6
L		6
M		2


Packing List

NO.	PICTURE	QTY
N		8
0	 M4x10	12

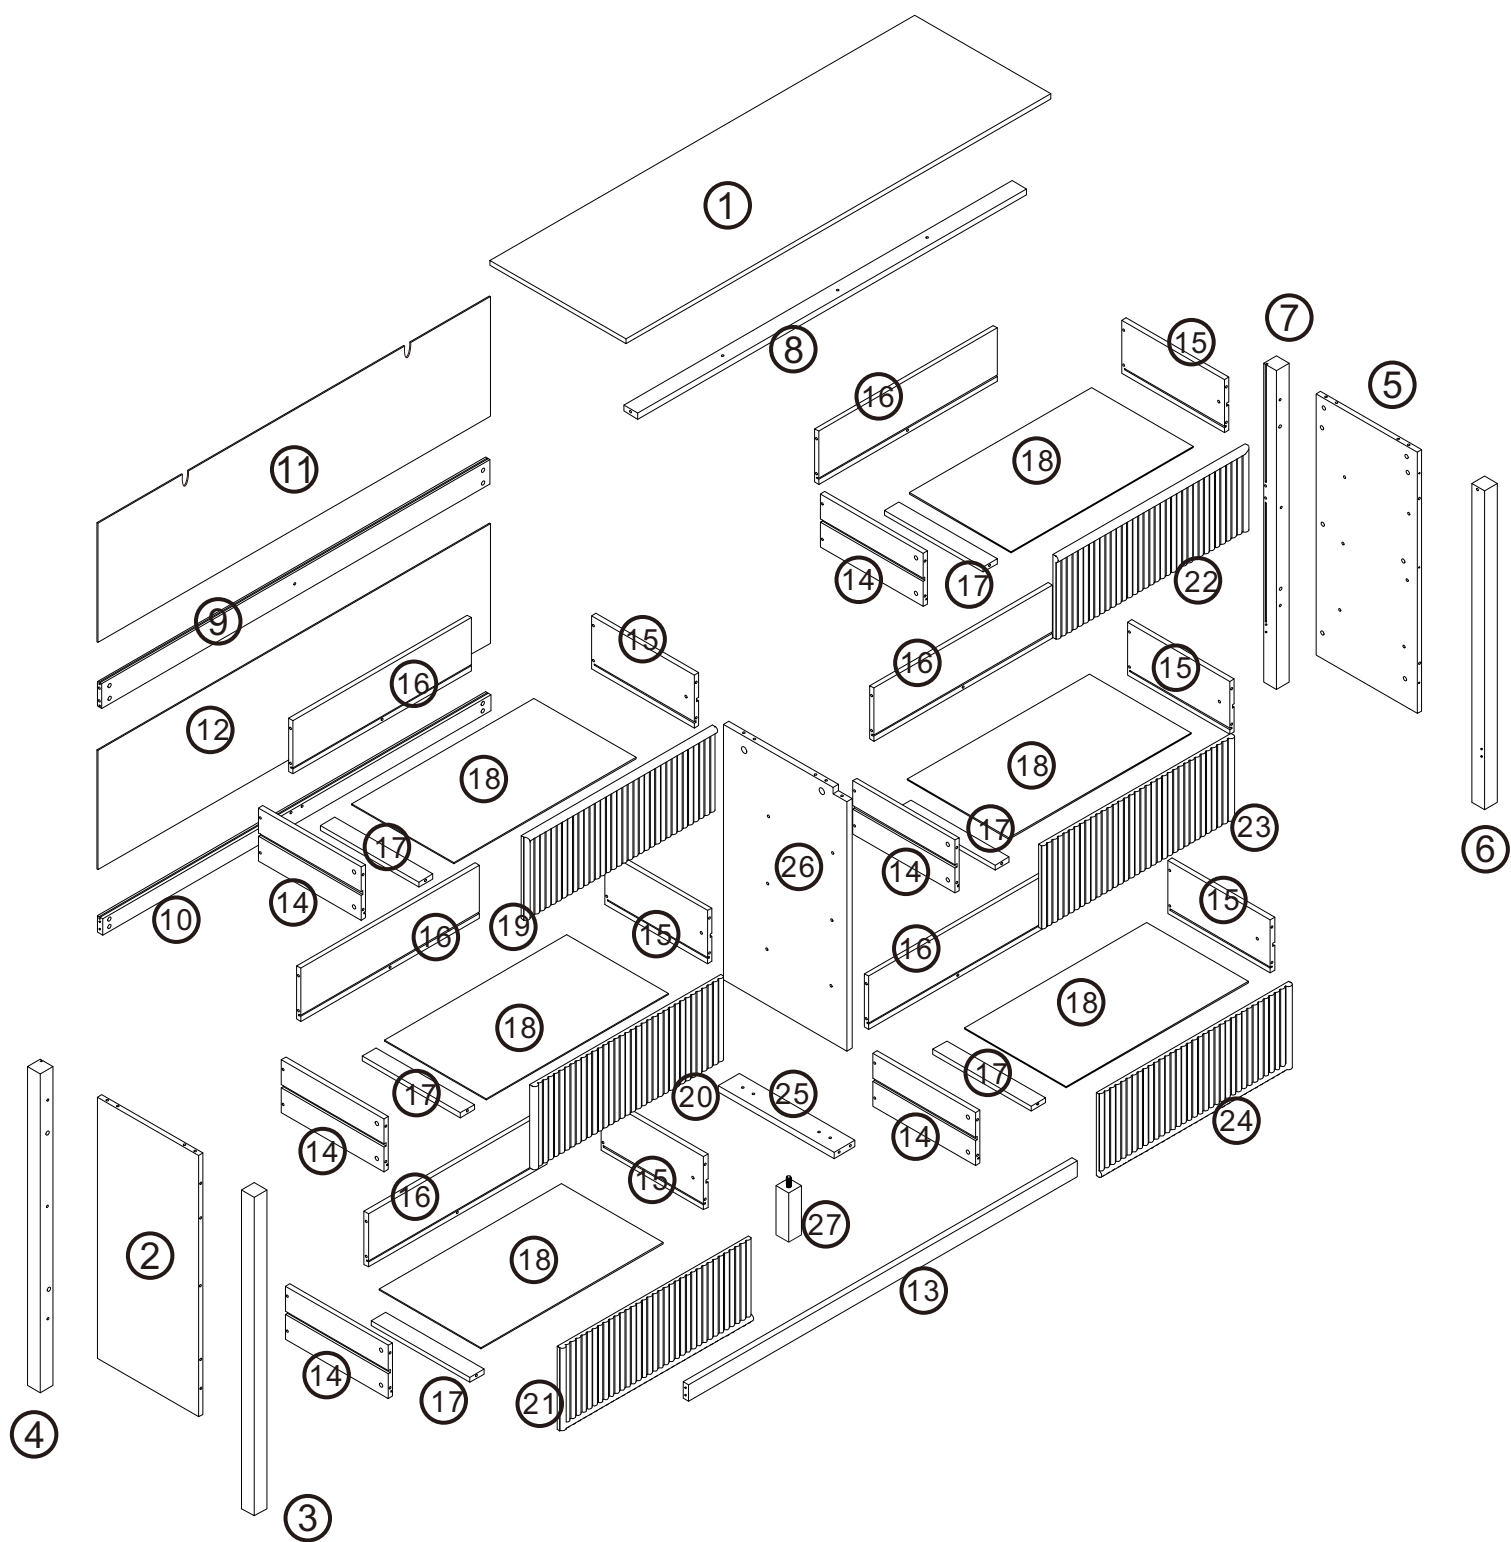 


01





	Ax6
	Bx6
	Cx4

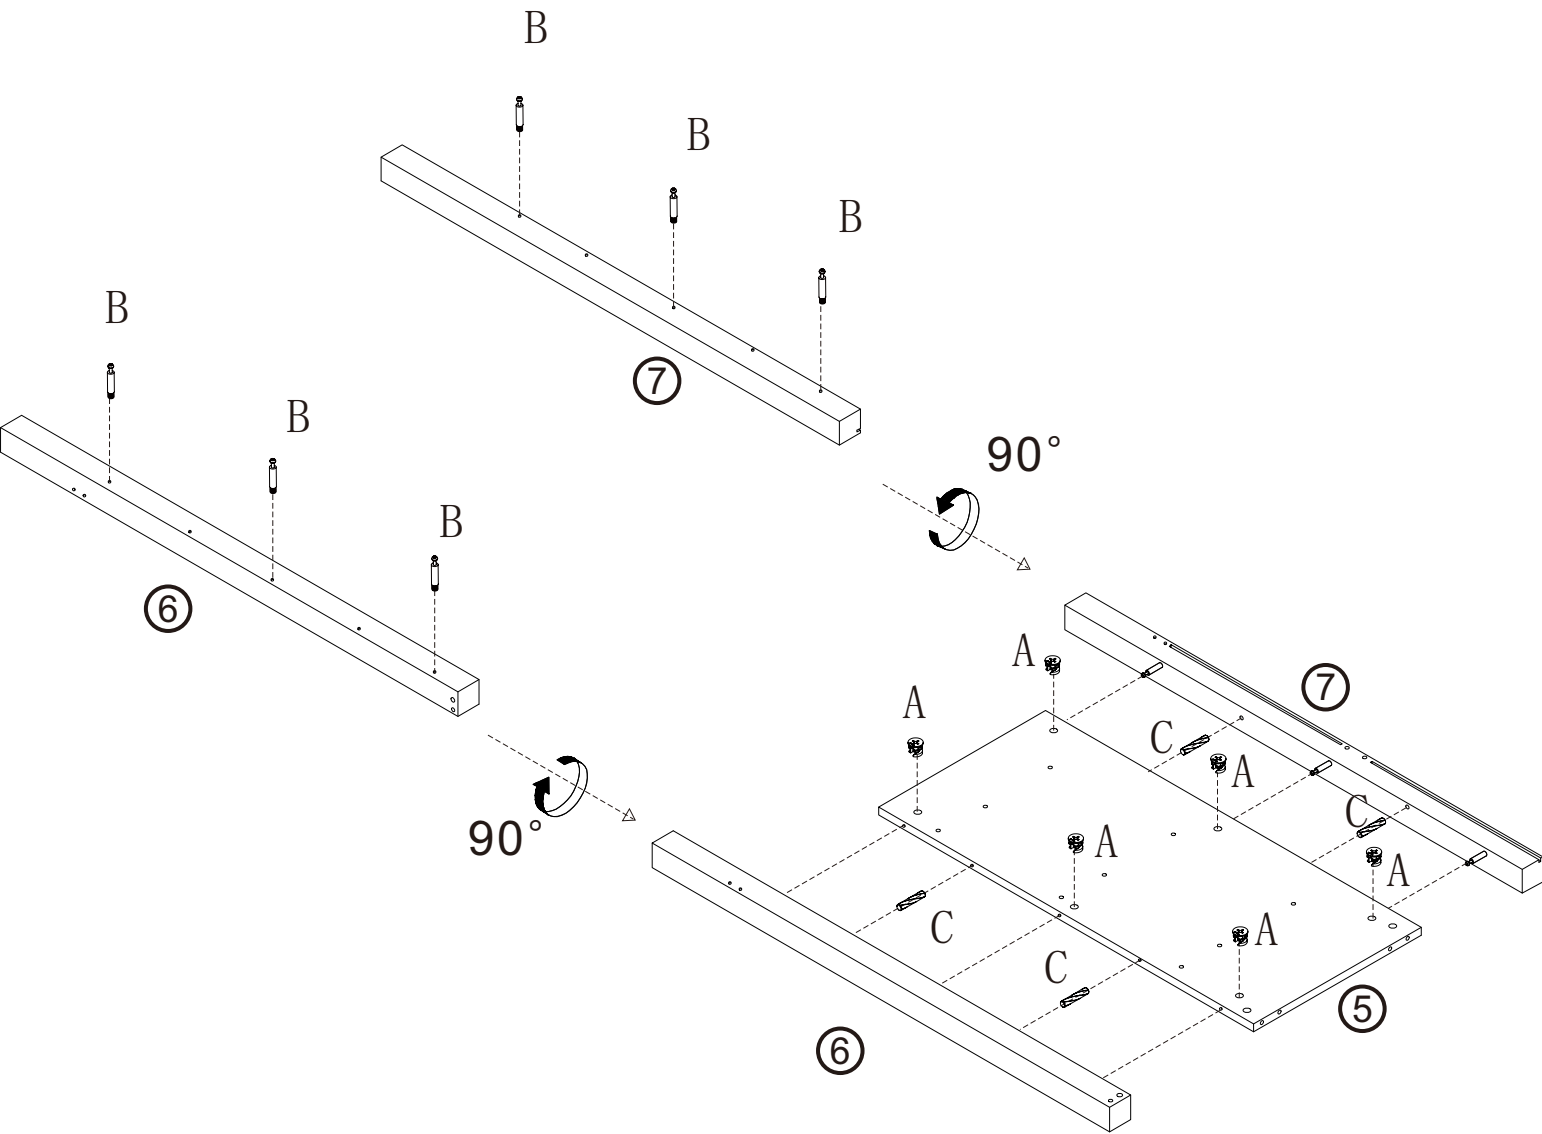 

02

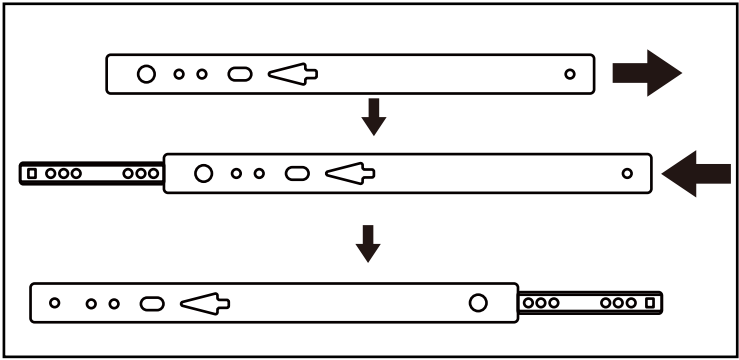 


	B x 6
	D x 9
	E x 3

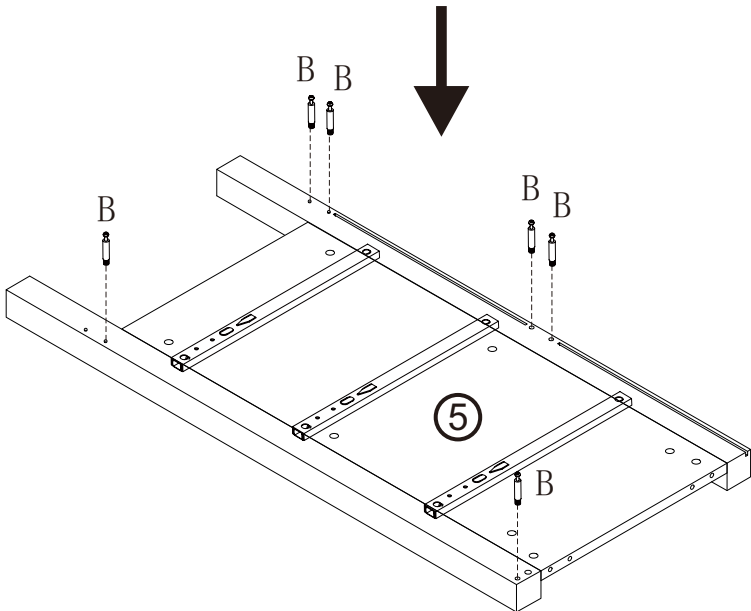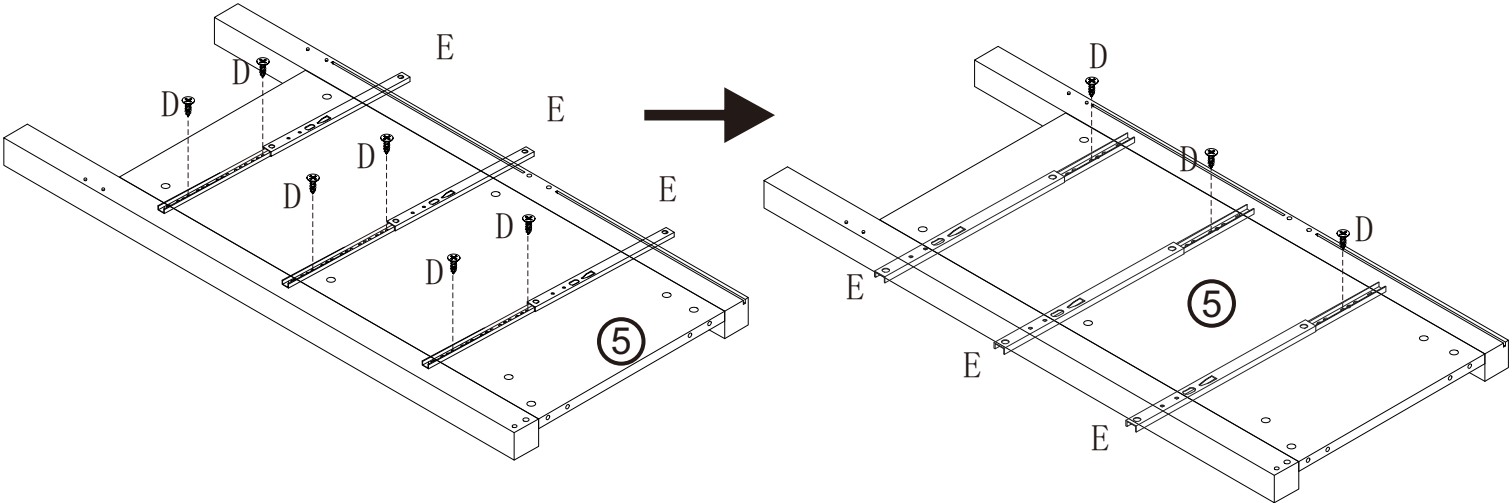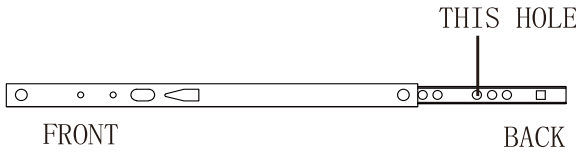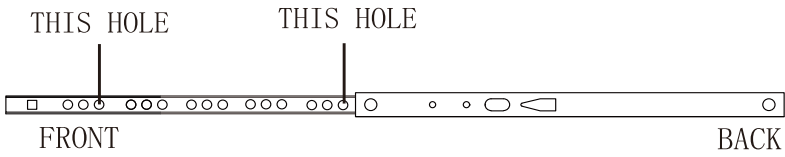    


03




	A x 6
	B x 6
	C x 4

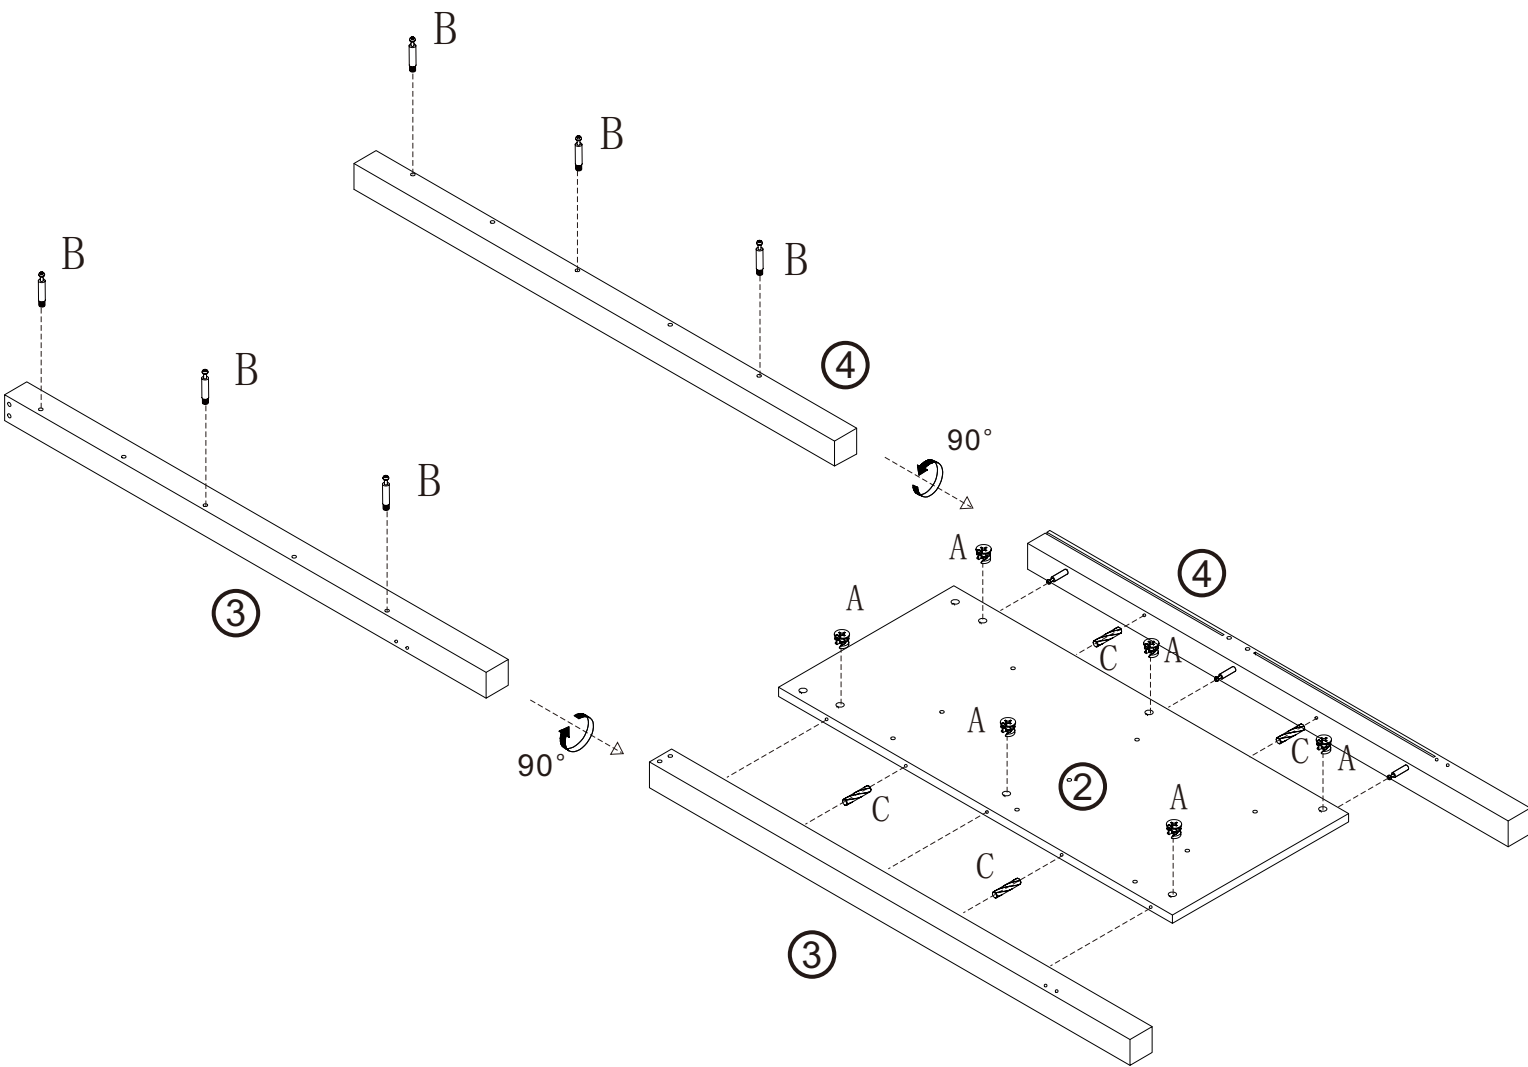 

04

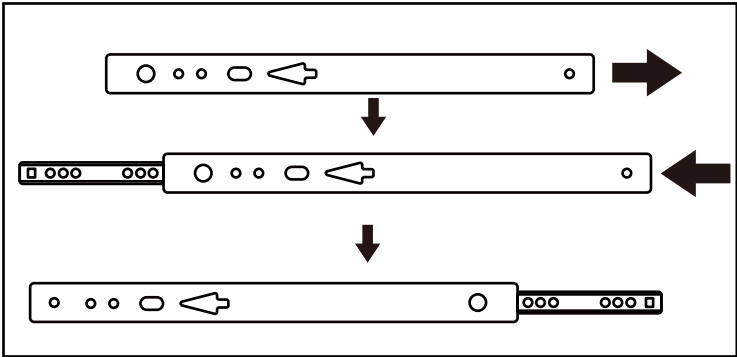 


	B x 6
	D x 9
	E x 3






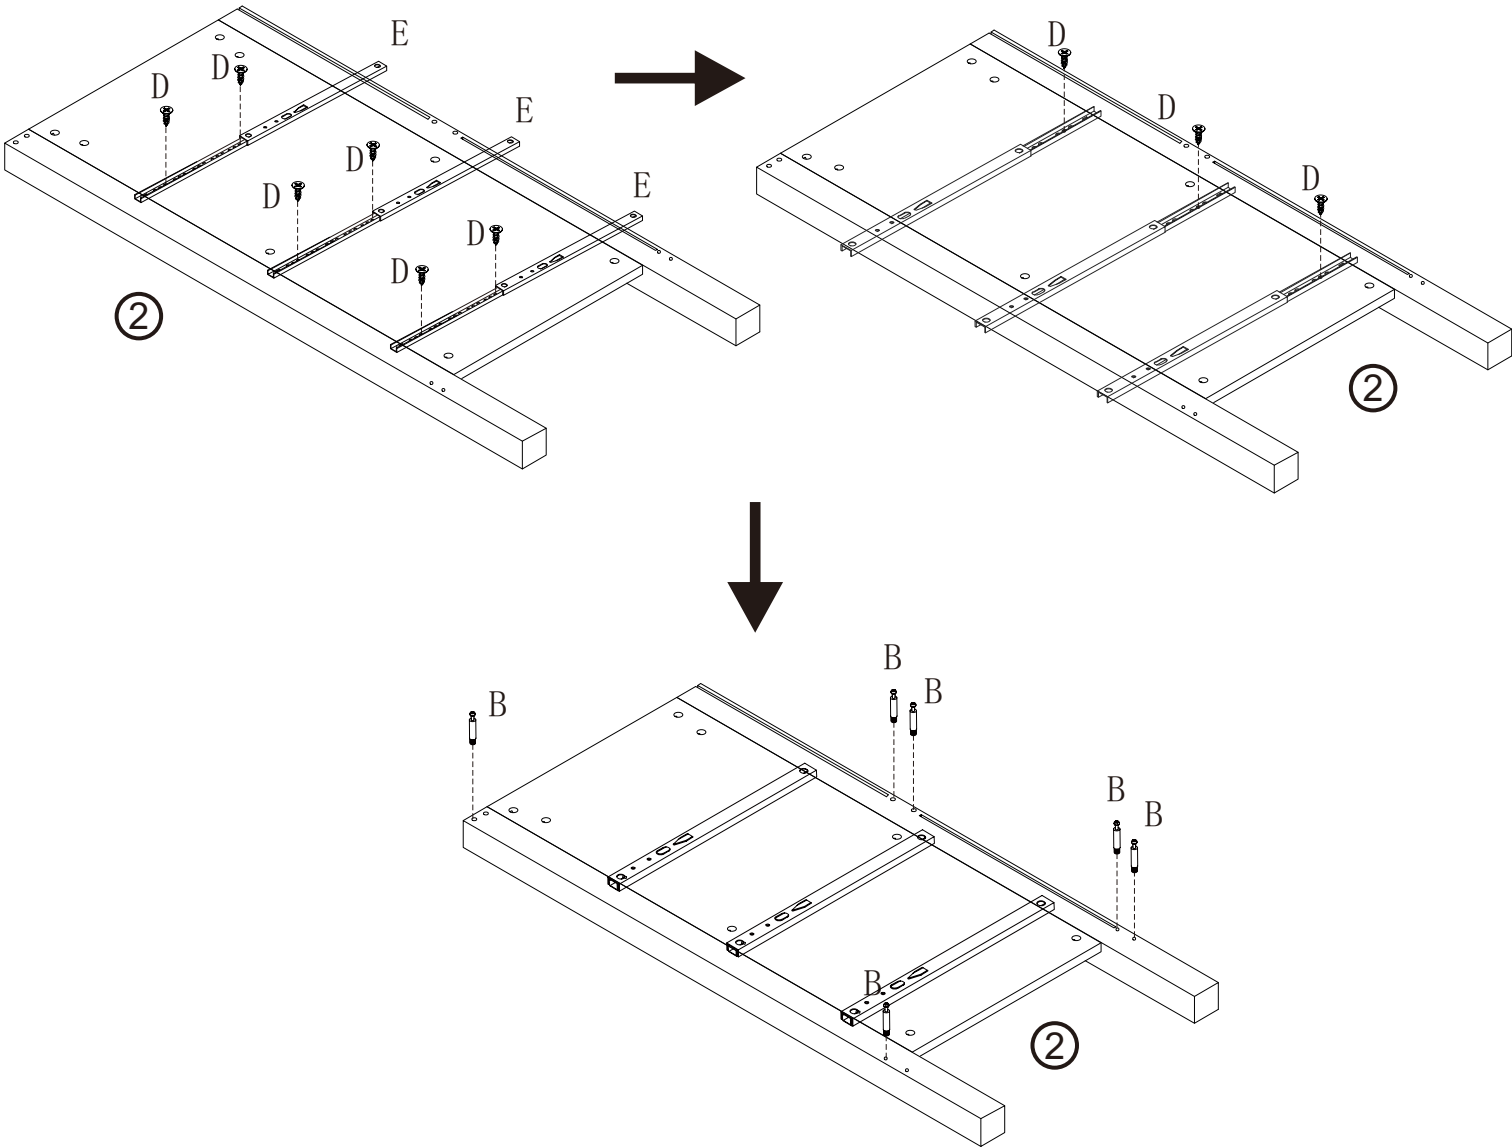 
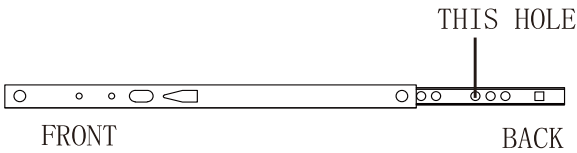 
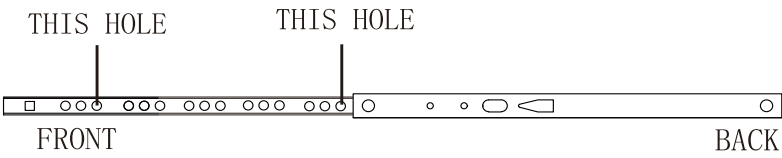 


Product Assembly

 05

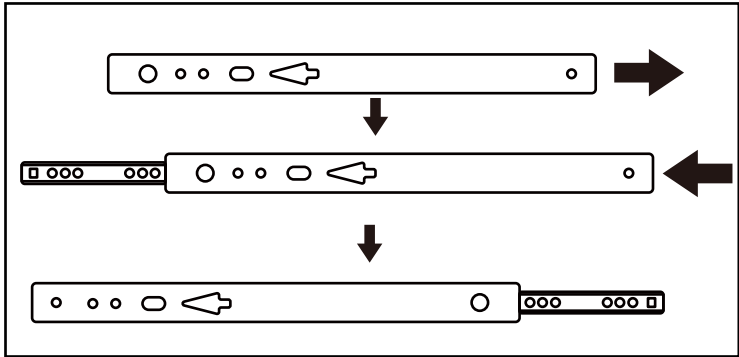


	Dx18
	E x 6

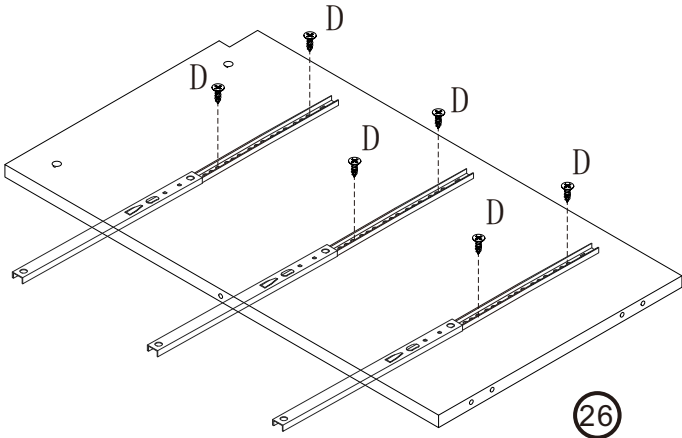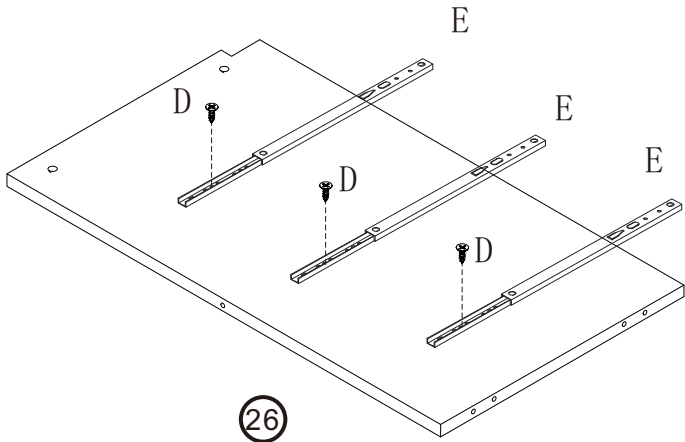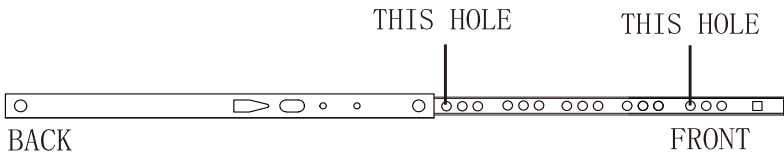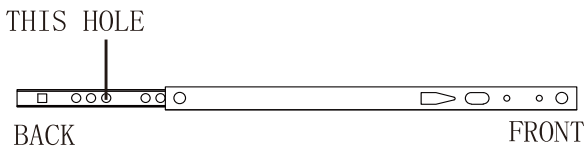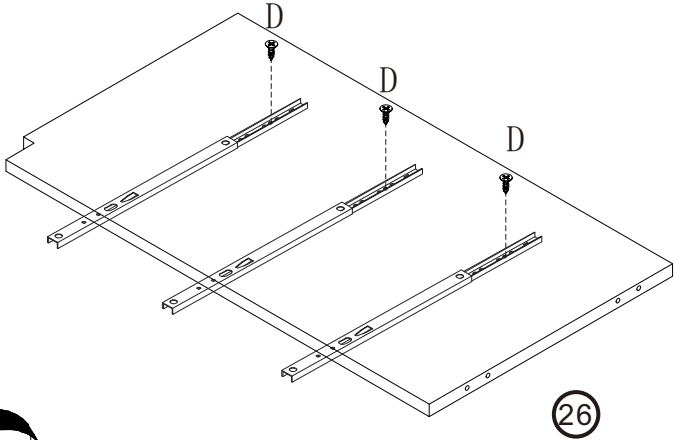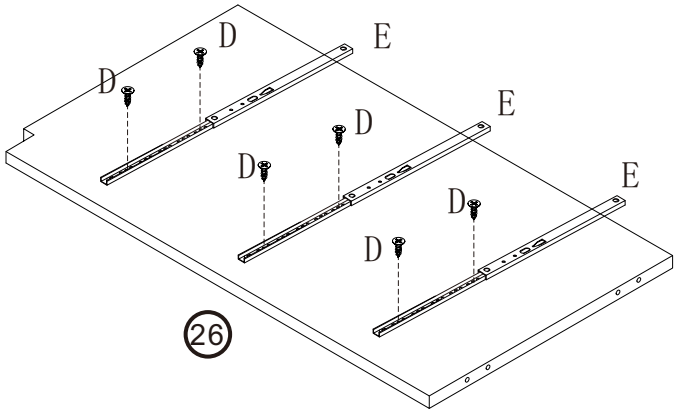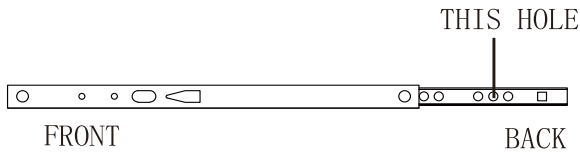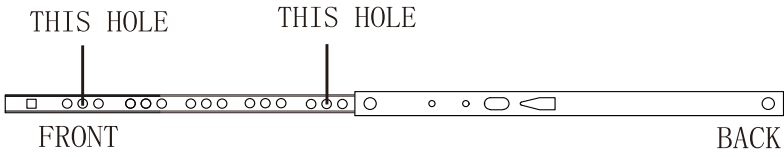        


06

	A x 4
	B x 4

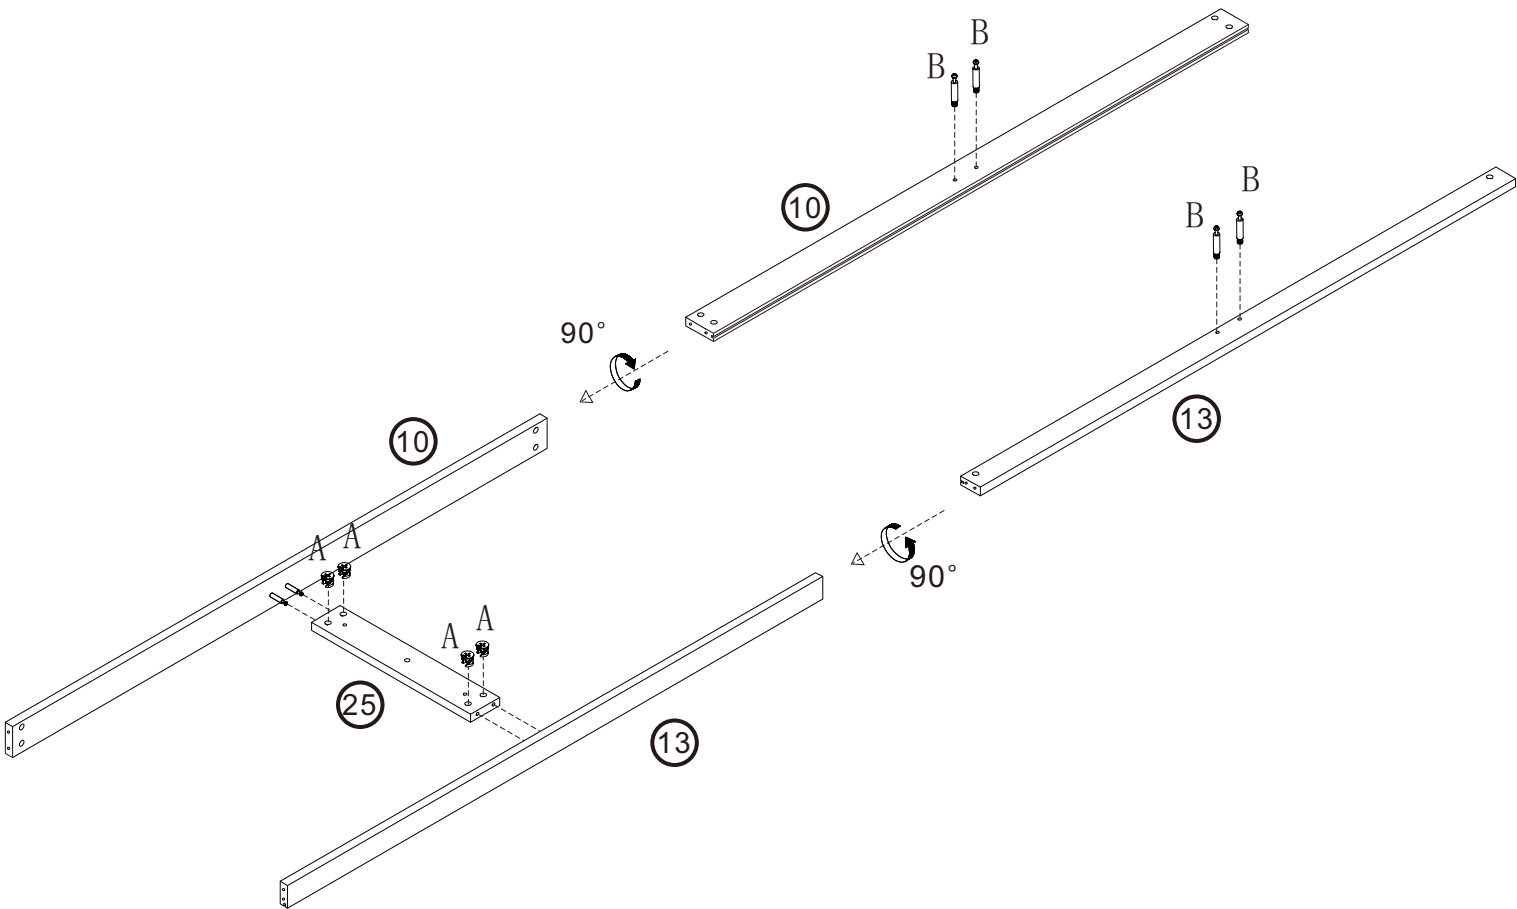 


07

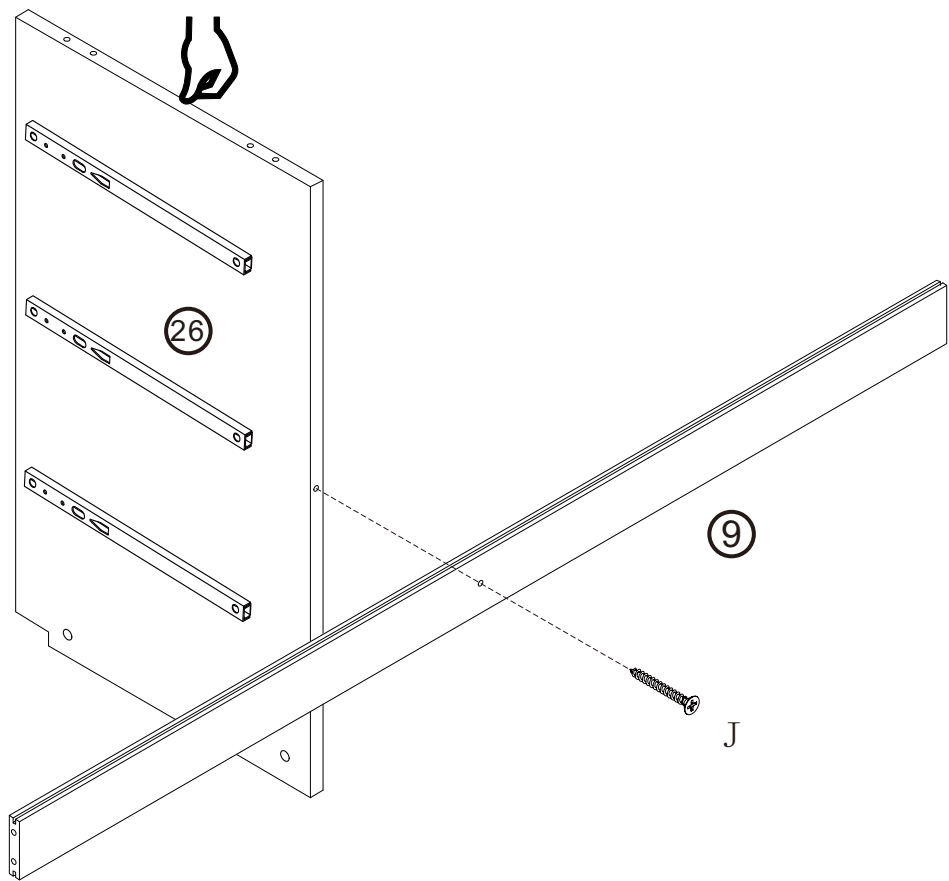 


08

	C x 2
	J x 2

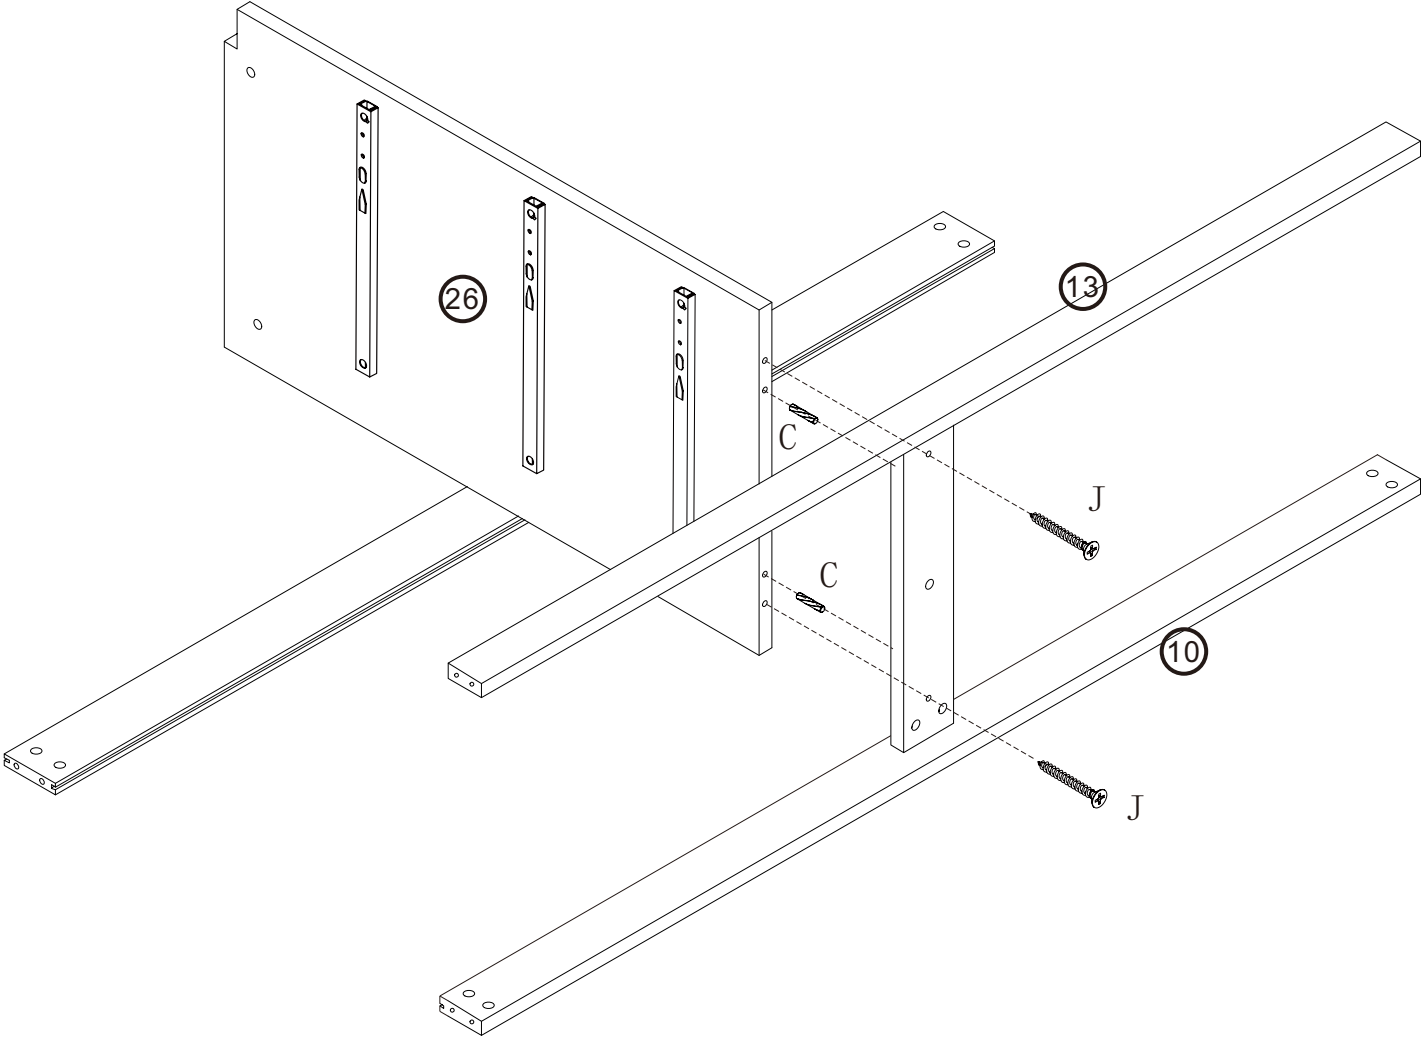 


09

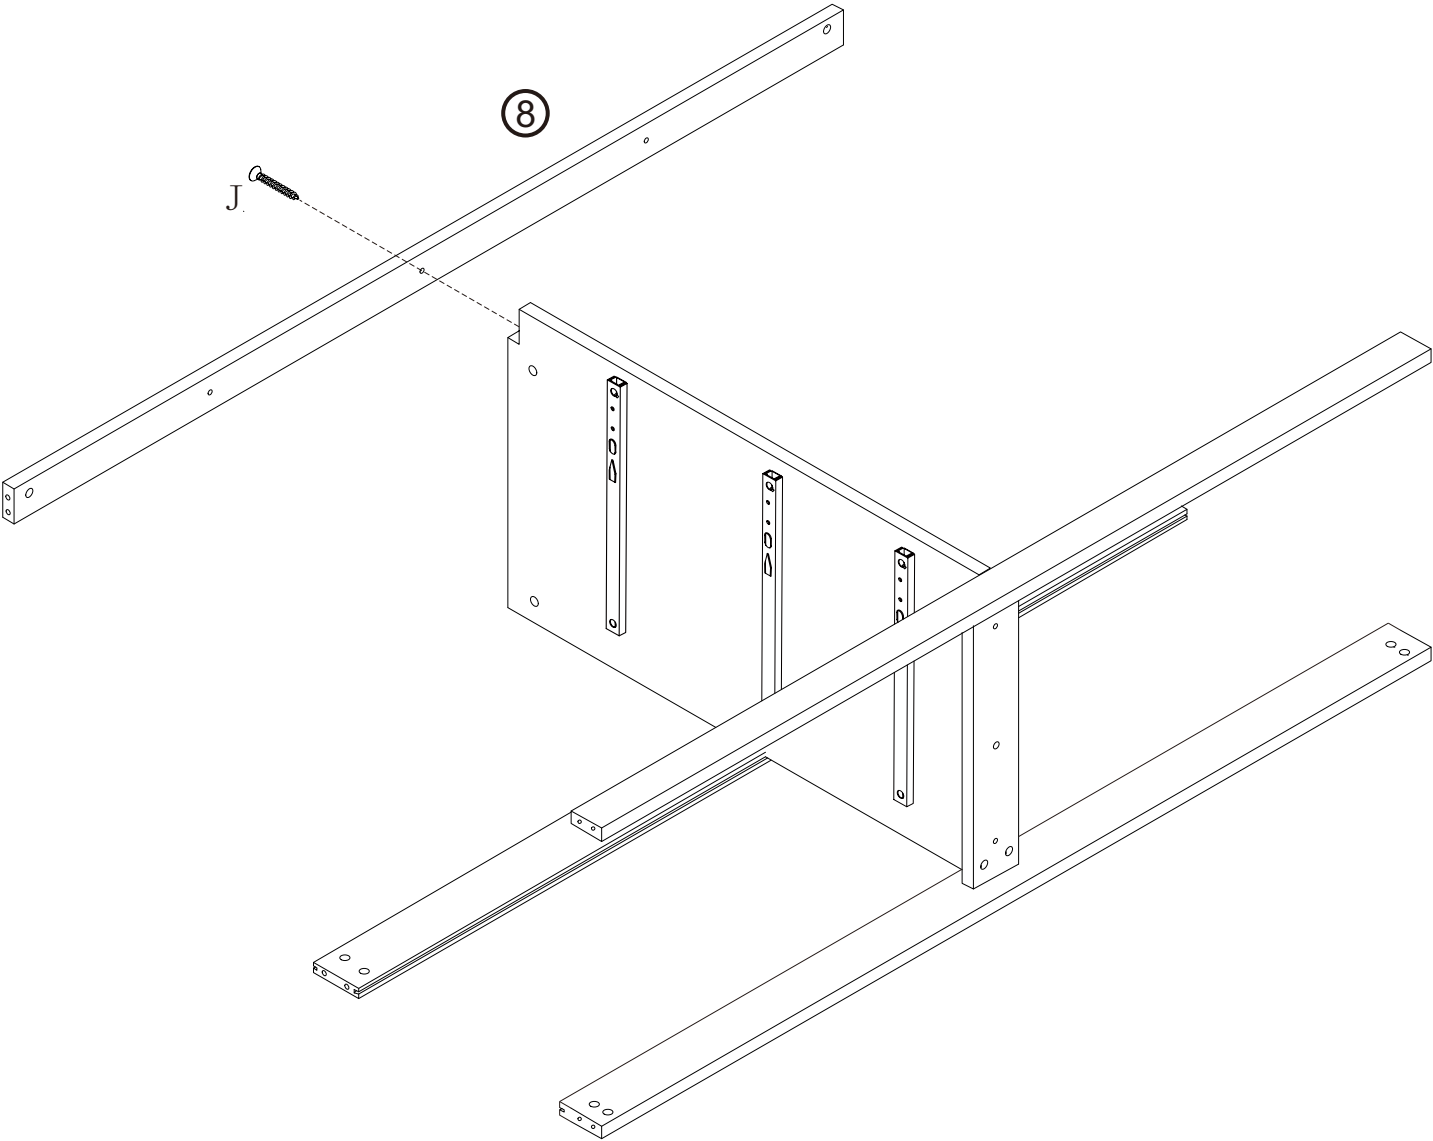 


10

	A x 6
	C x 2


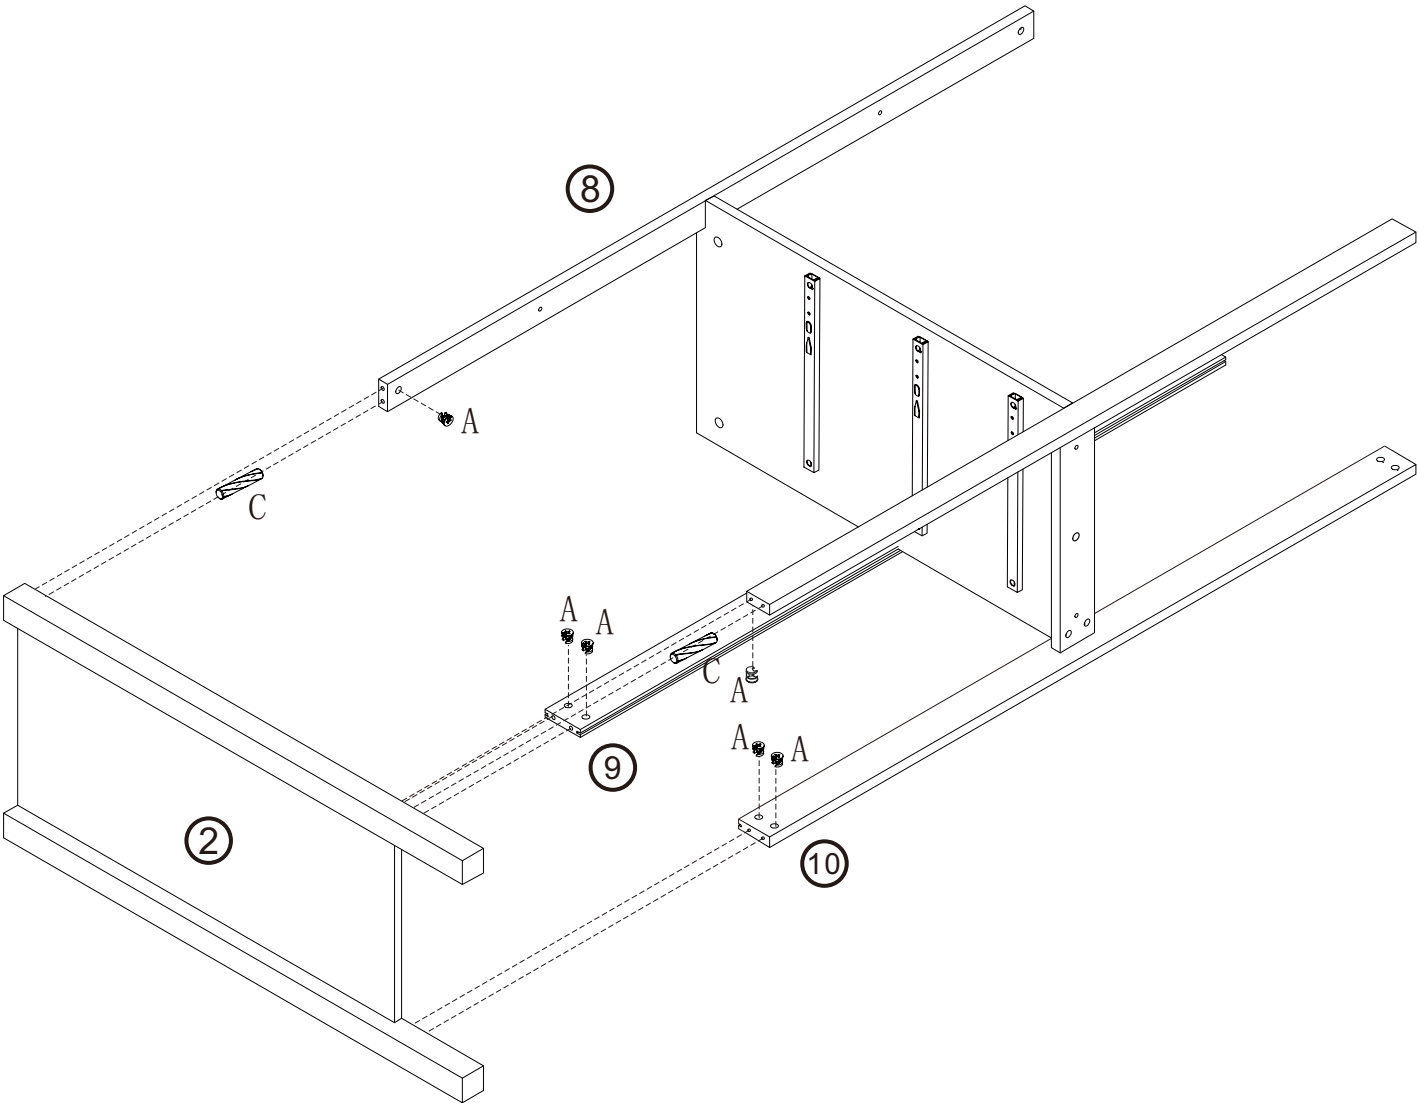 


11

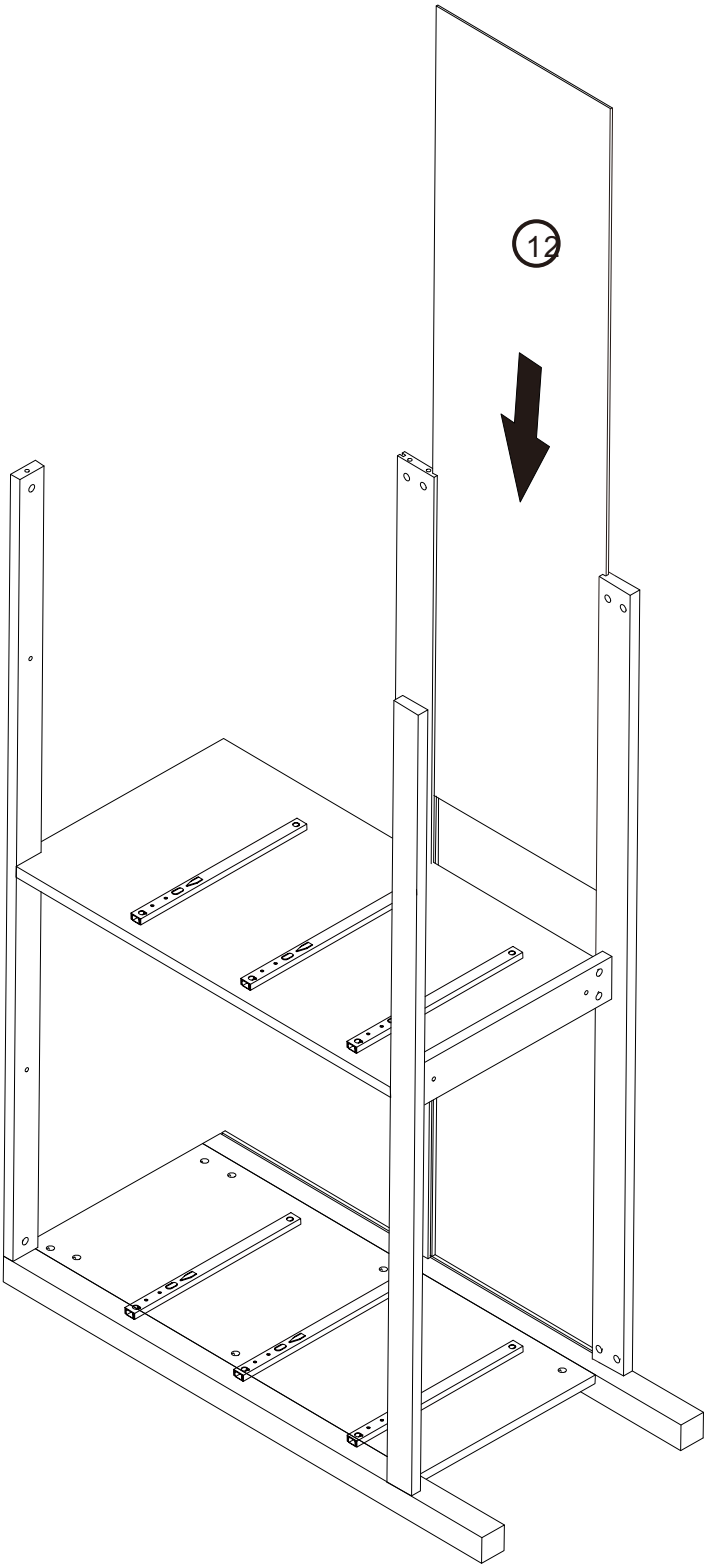 



12


	A x 6
	C x 2
	F x 4

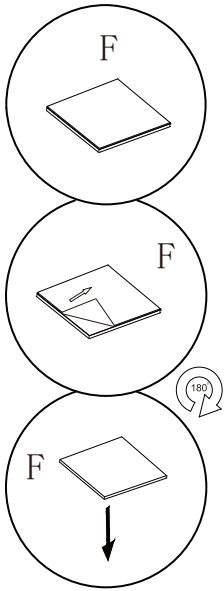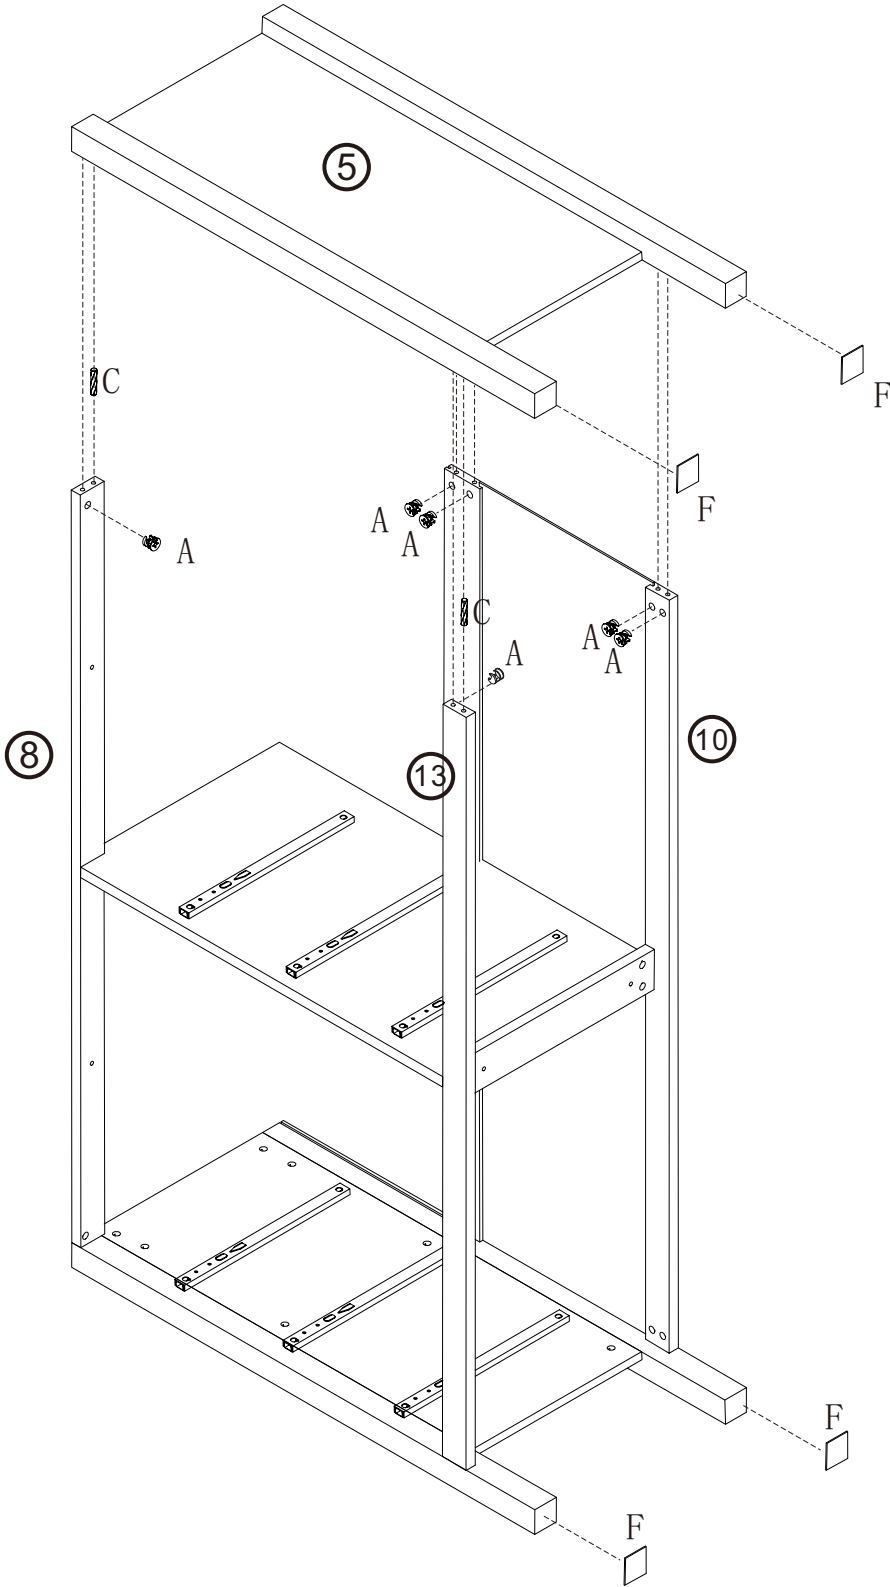  

13

  
 
 F x 1

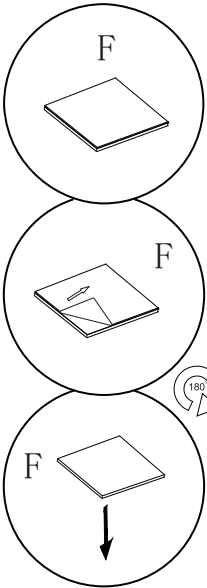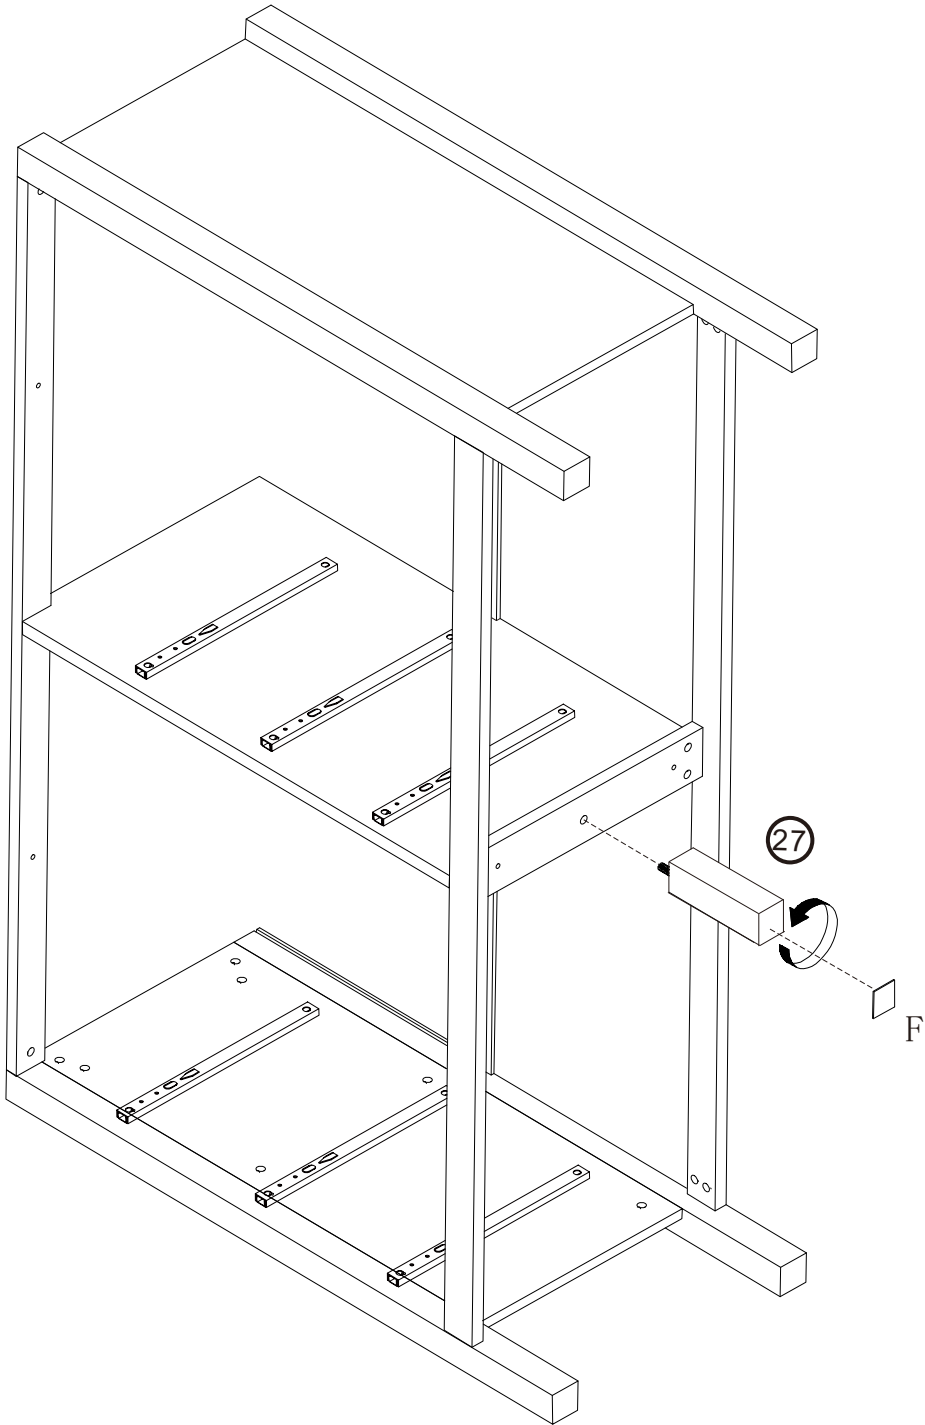

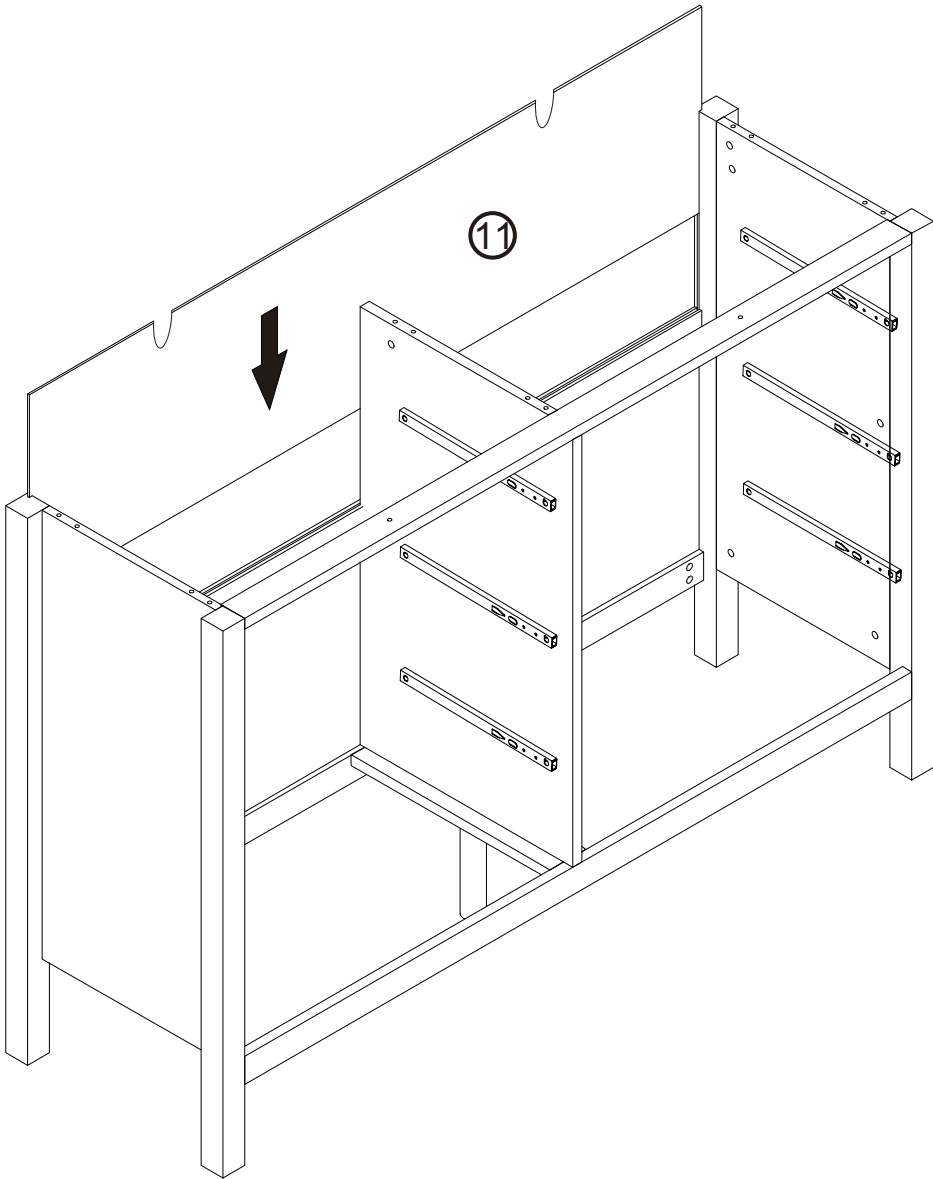


15

	A x 6
	B x 6
	C x 6
	G x 2
	H x 2
	I x 2

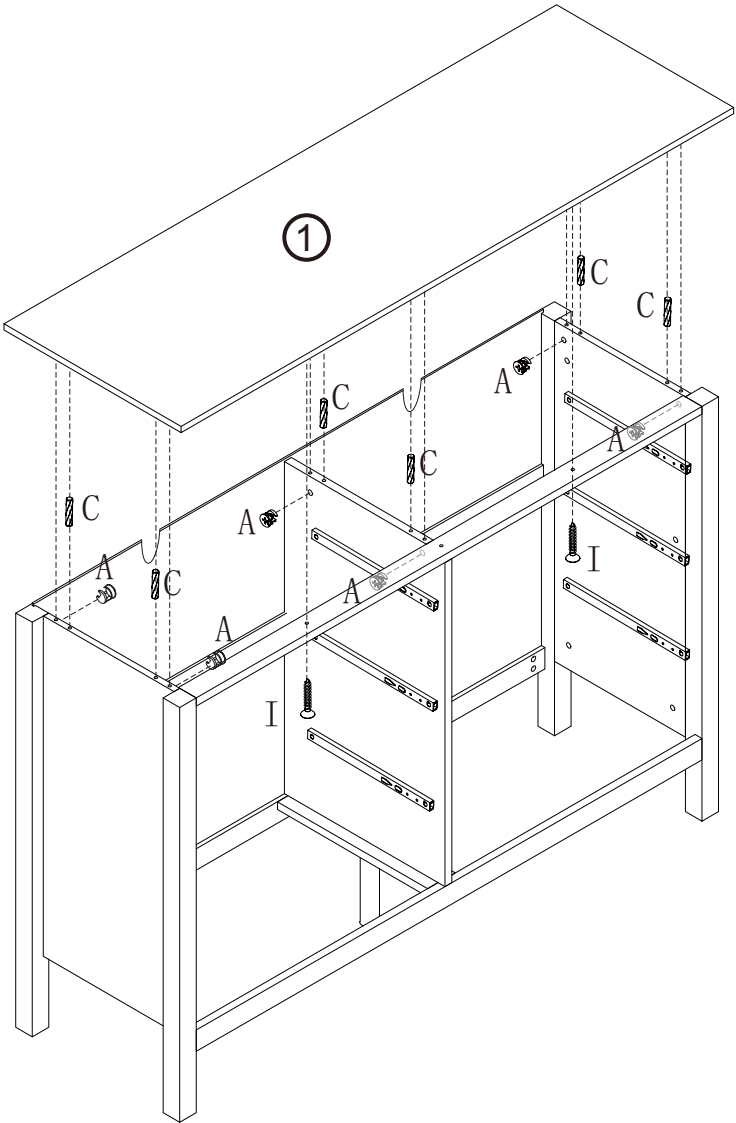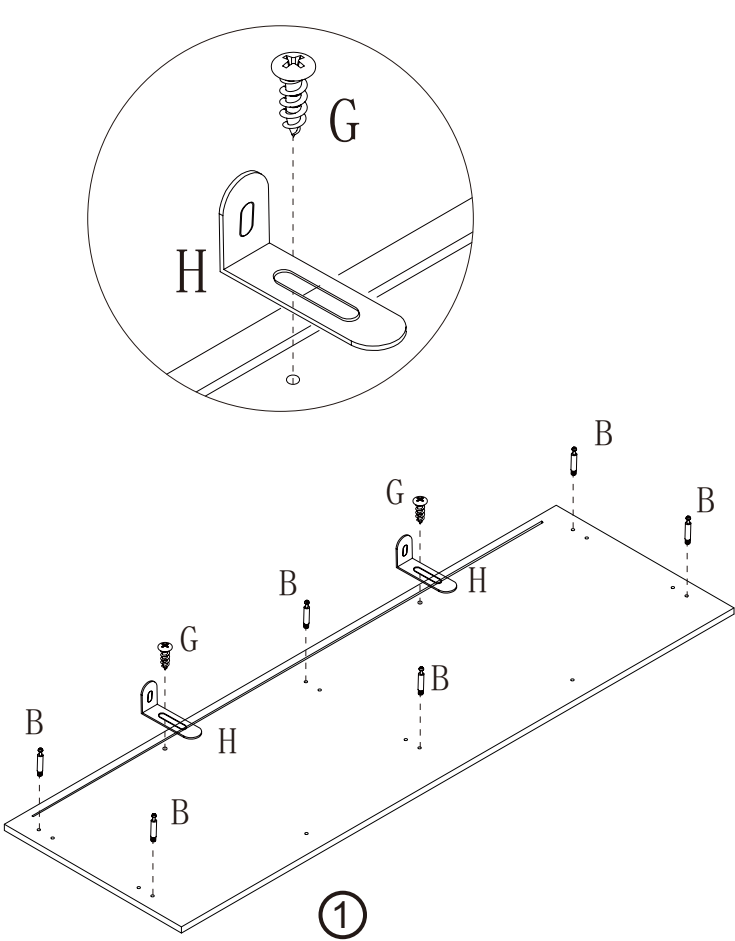  


16

   Nx8

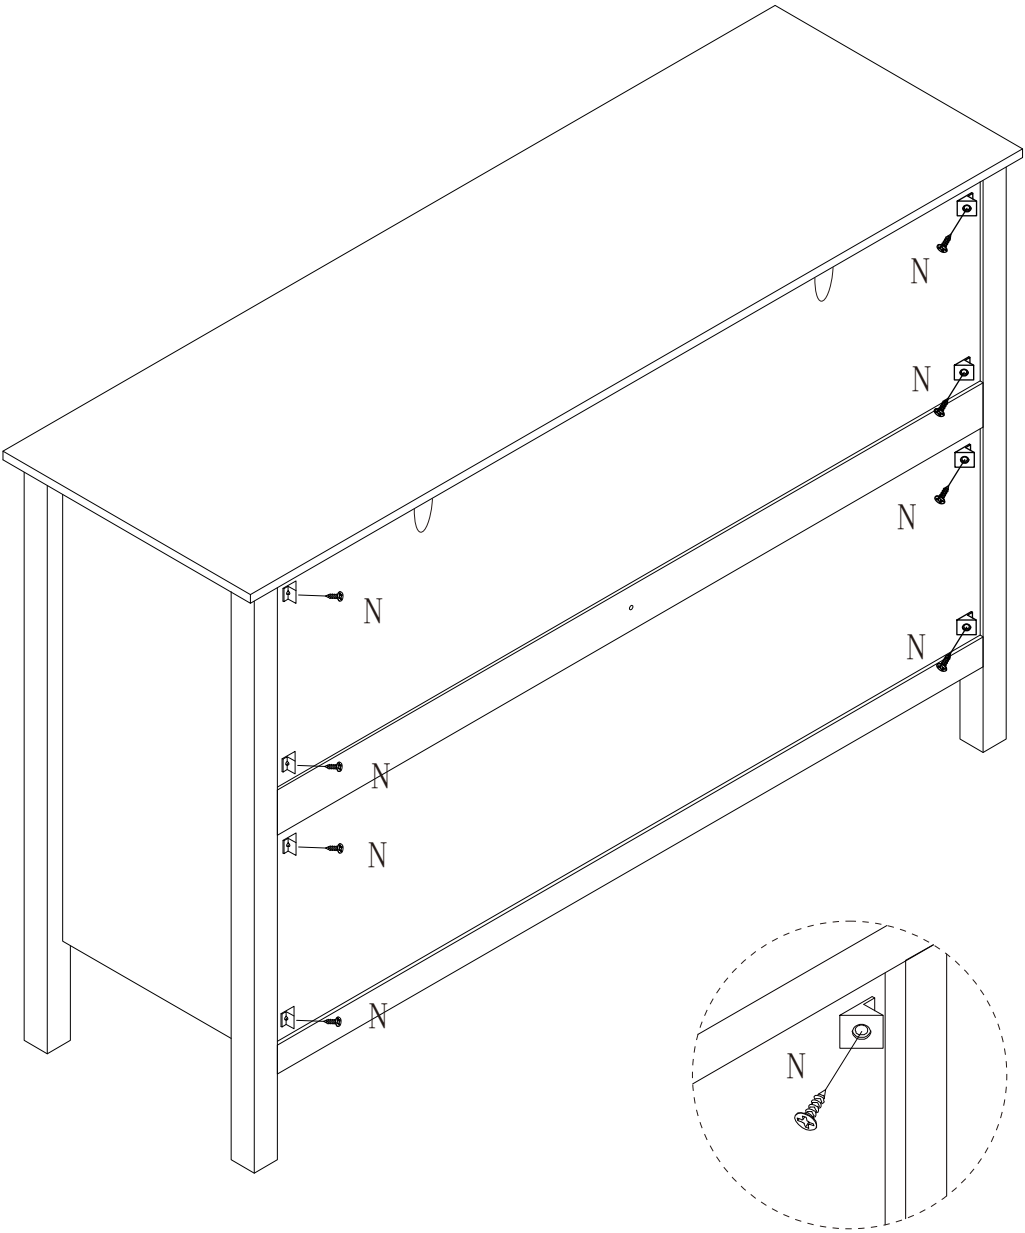



	J x 2
	M x 2

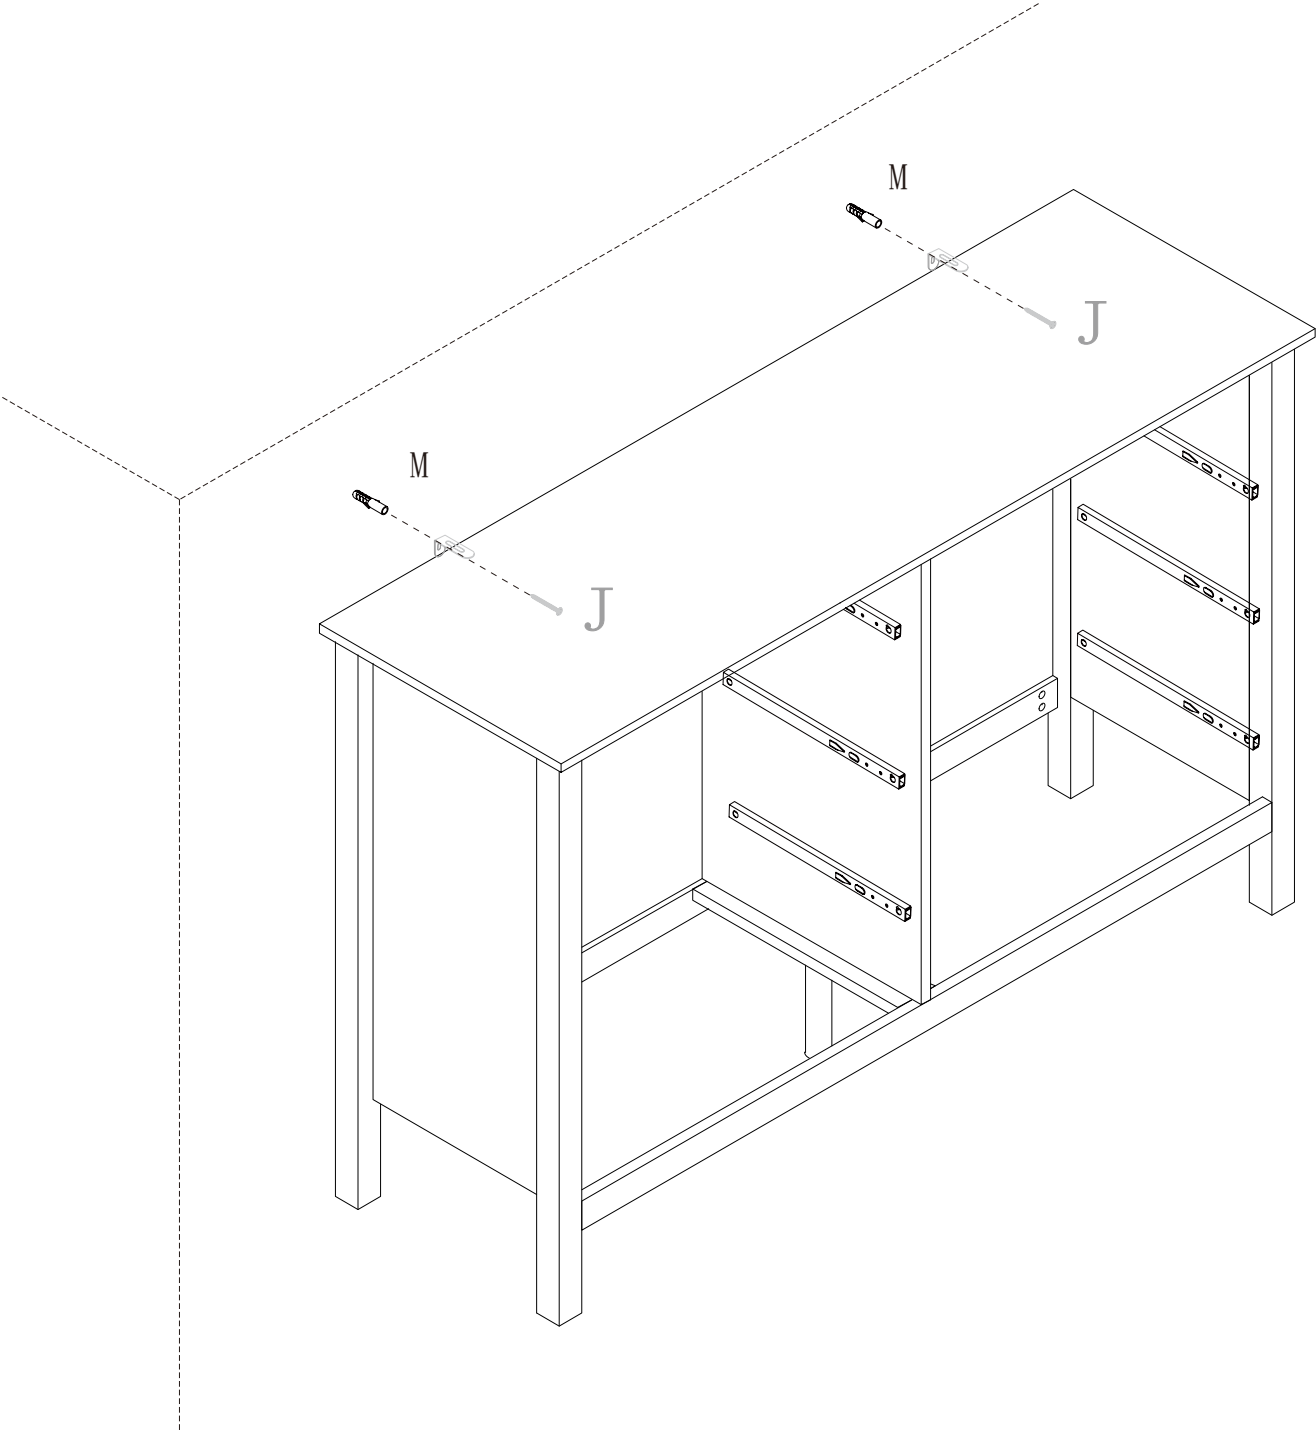 

18







x6

   Jx30

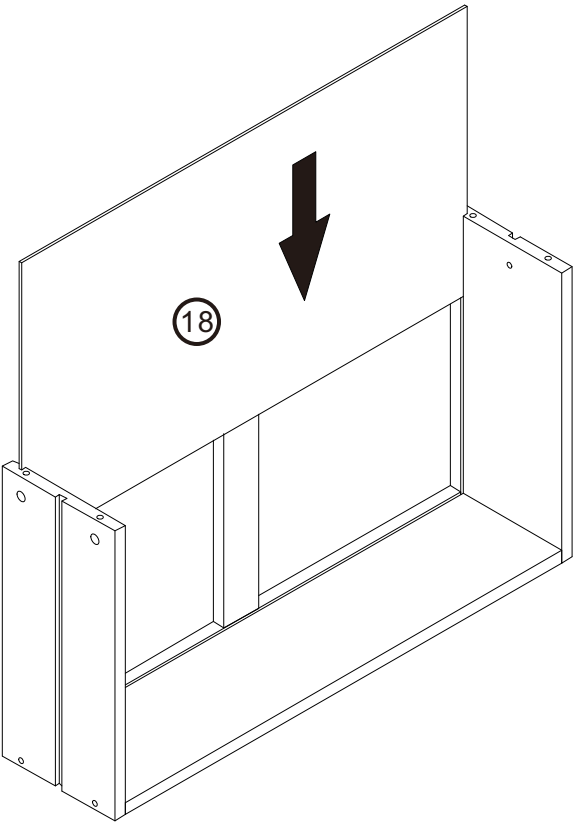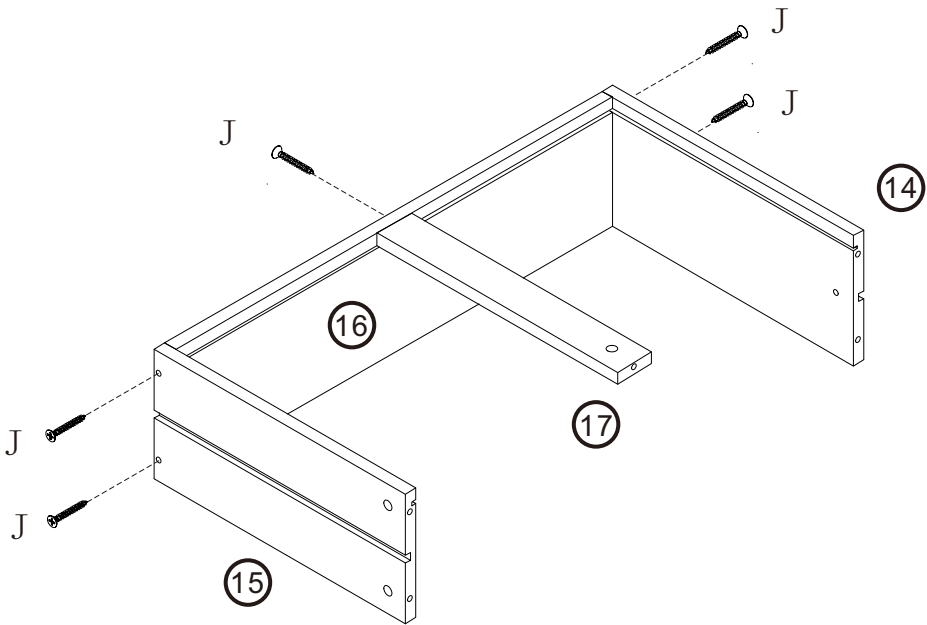




19

	A x 15
	B x 15
	K x 3
	L x 3

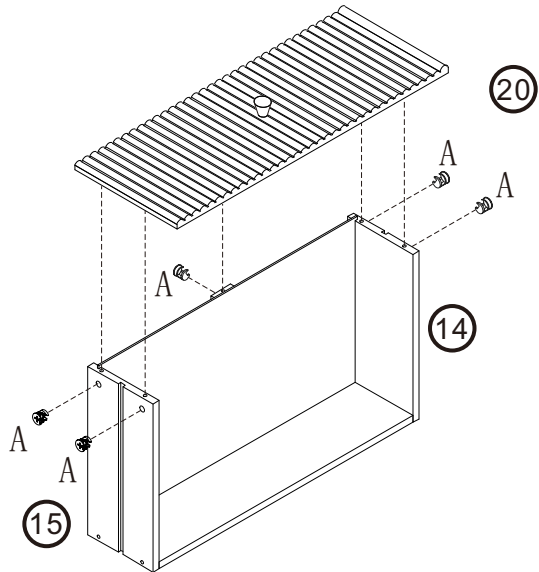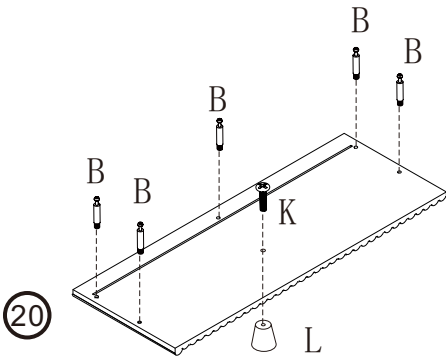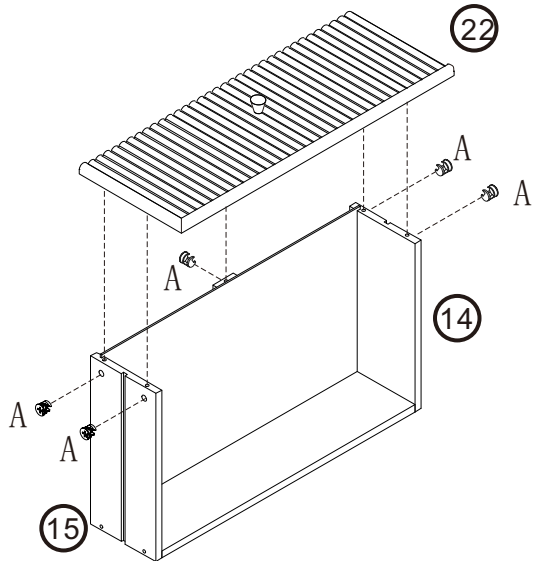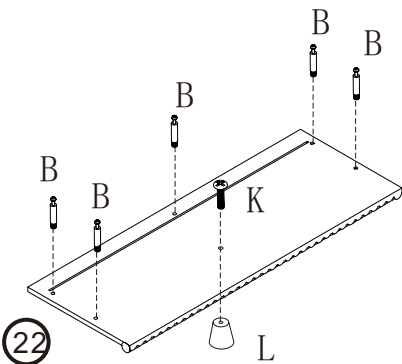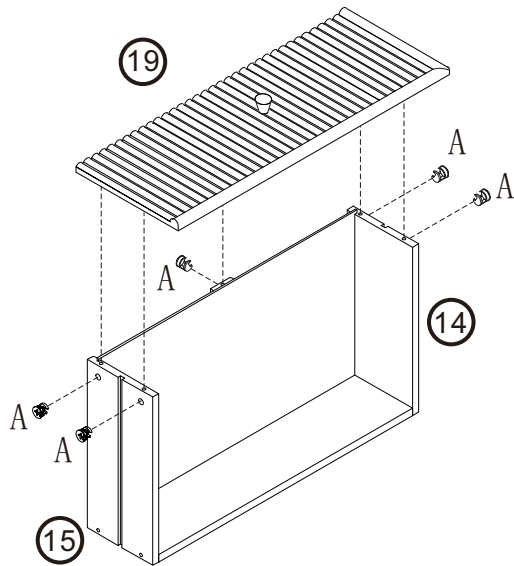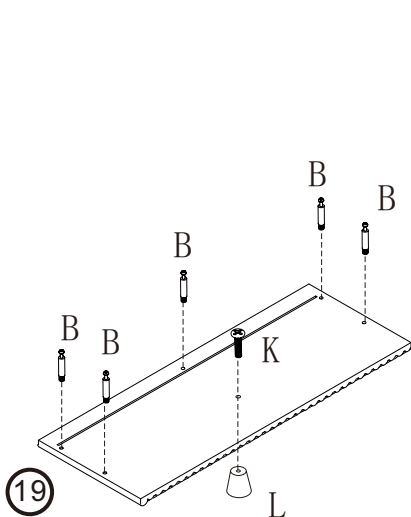      



20

	A x 15
	B x 15
	K x 3
	L x 3

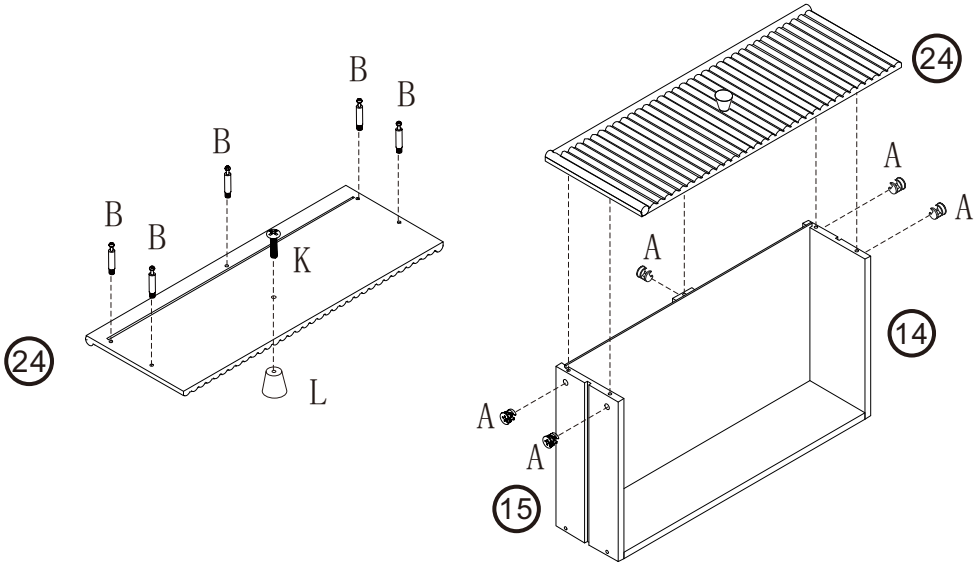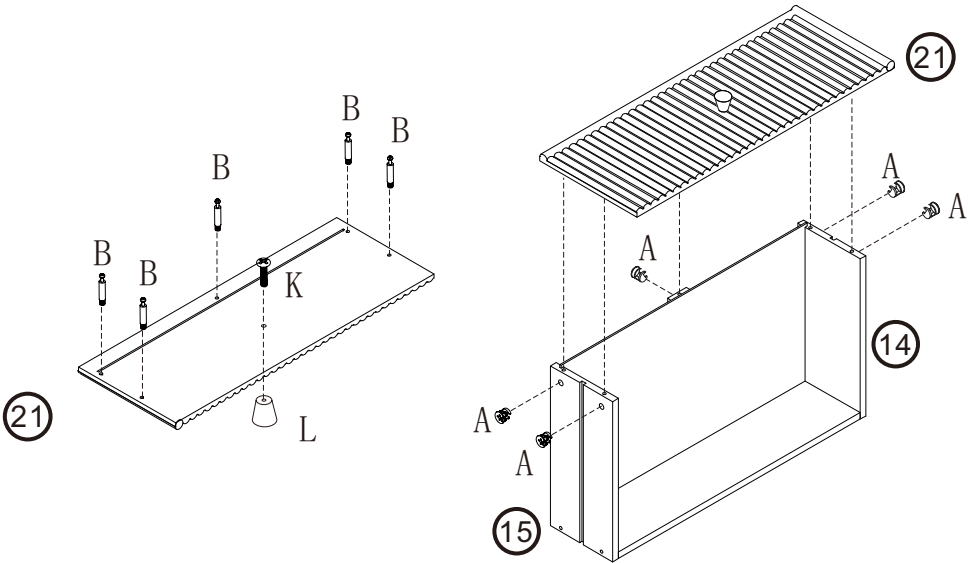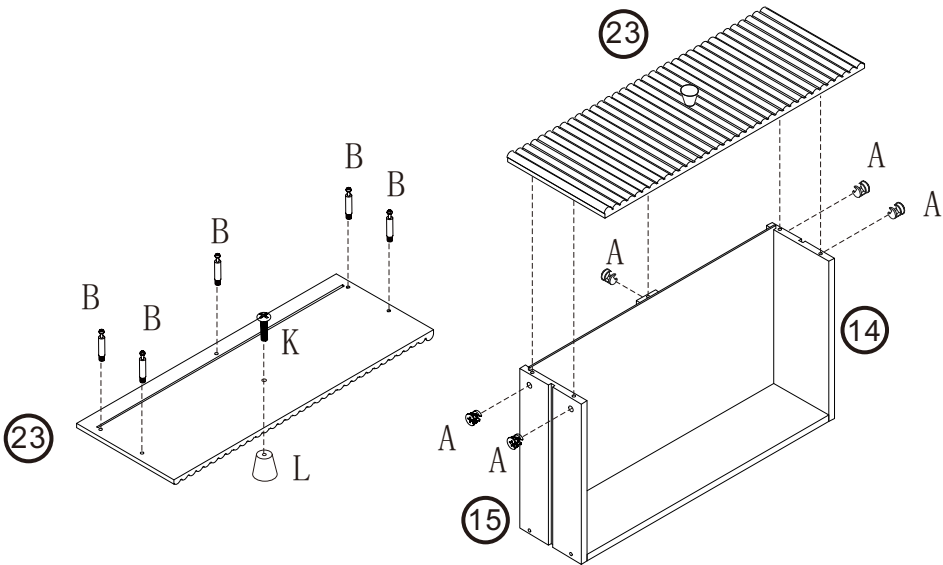   

21

  0x12

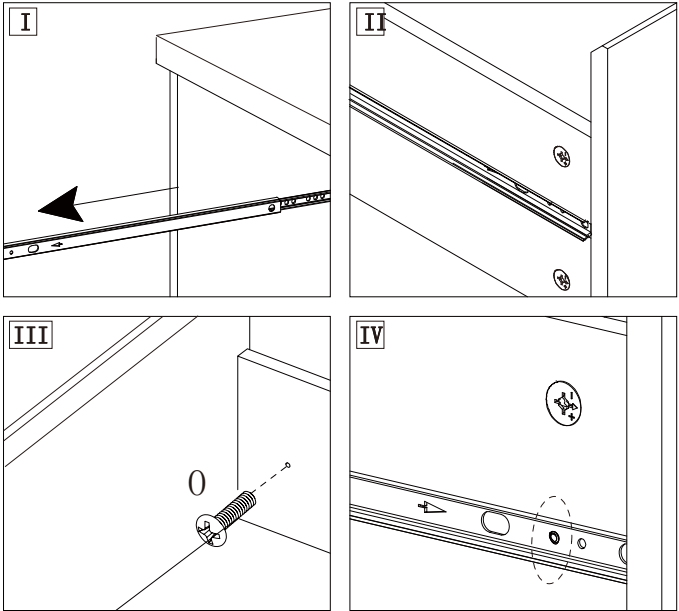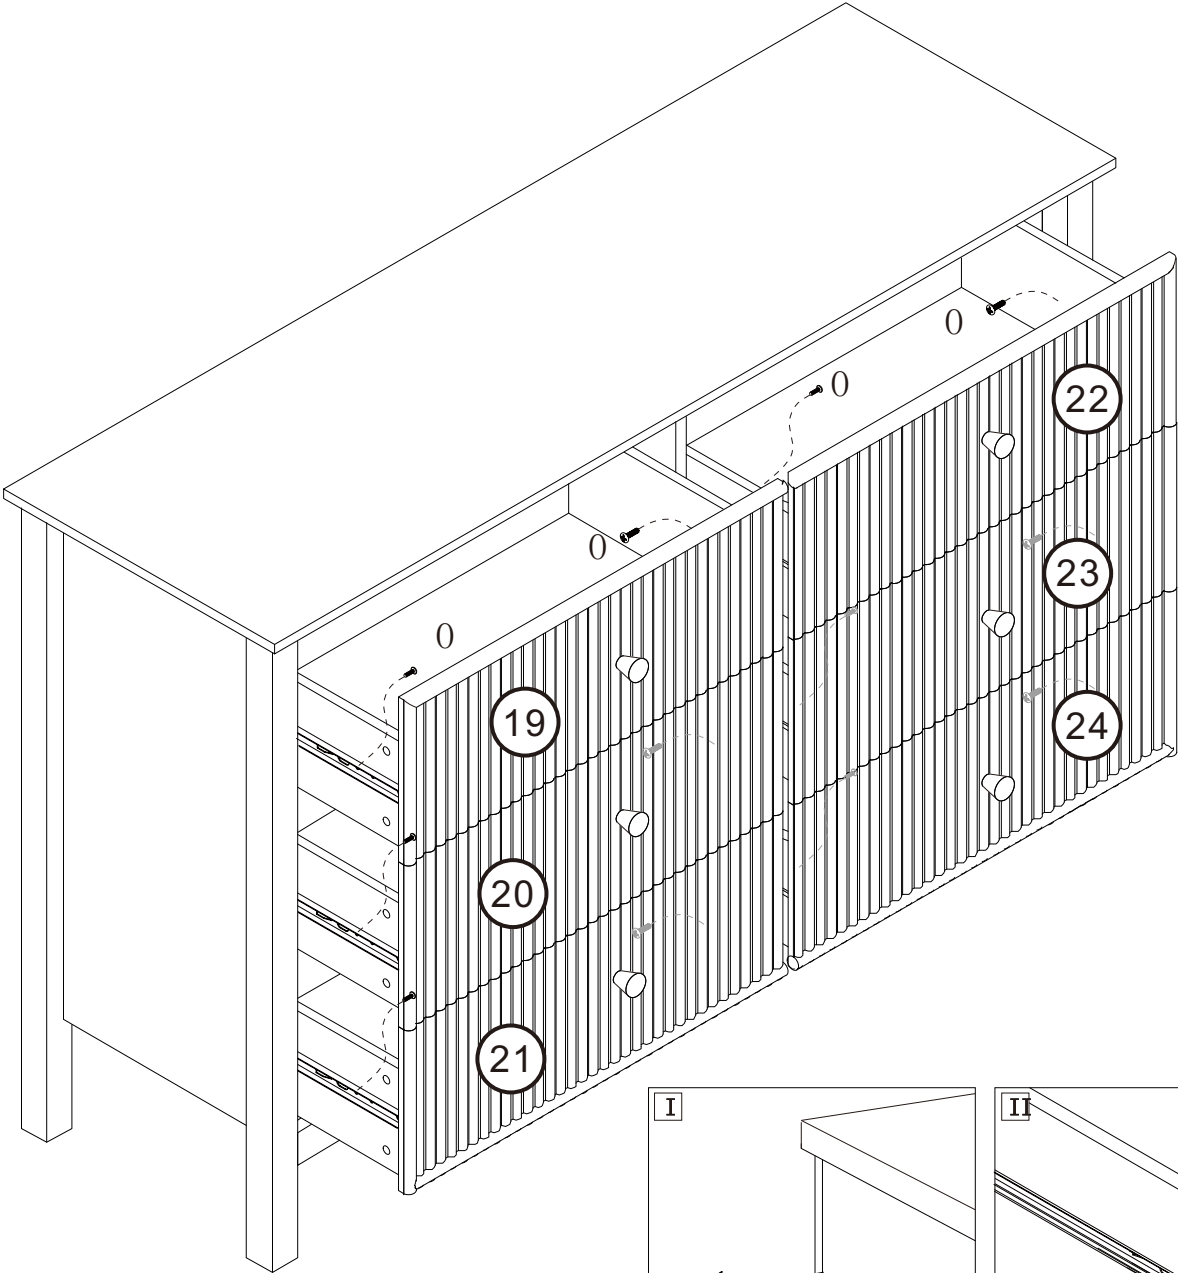

Return / Damage Claim Instructions

- DO NOT discard the box / original packaging.
In case a return is required, the item must be returned in original box.
Without this your return will not be accepted.

- Take a photo of the box markings.

A photo of the markings (text) on the side of the box is required in case a part is needed for replacement. This helps our staff identify your product number to ensure you receive the correct parts.

- Take a photo of the damaged part (if applicable).
A photo of the damage is always required to file a claim and get your replacement or refund processed quickly. Please make sure you have the box even if it is damaged.

- Send us an email with the images requested.
Email us directly from marketplace where your item was purchased with the attached images and a description of your claim.

How satisfied are you with our products? Your comments mean a lot to us!

Find more awesome deals on <http://www.icosiest.com>

For latest information, follow us on [facebook.com/icosiest](https://www.facebook.com/icosiest)

For daily design inspirations, like us on [instagram.com/icosiest_furniture/](https://www.instagram.com/icosiest_furniture/)