 
 
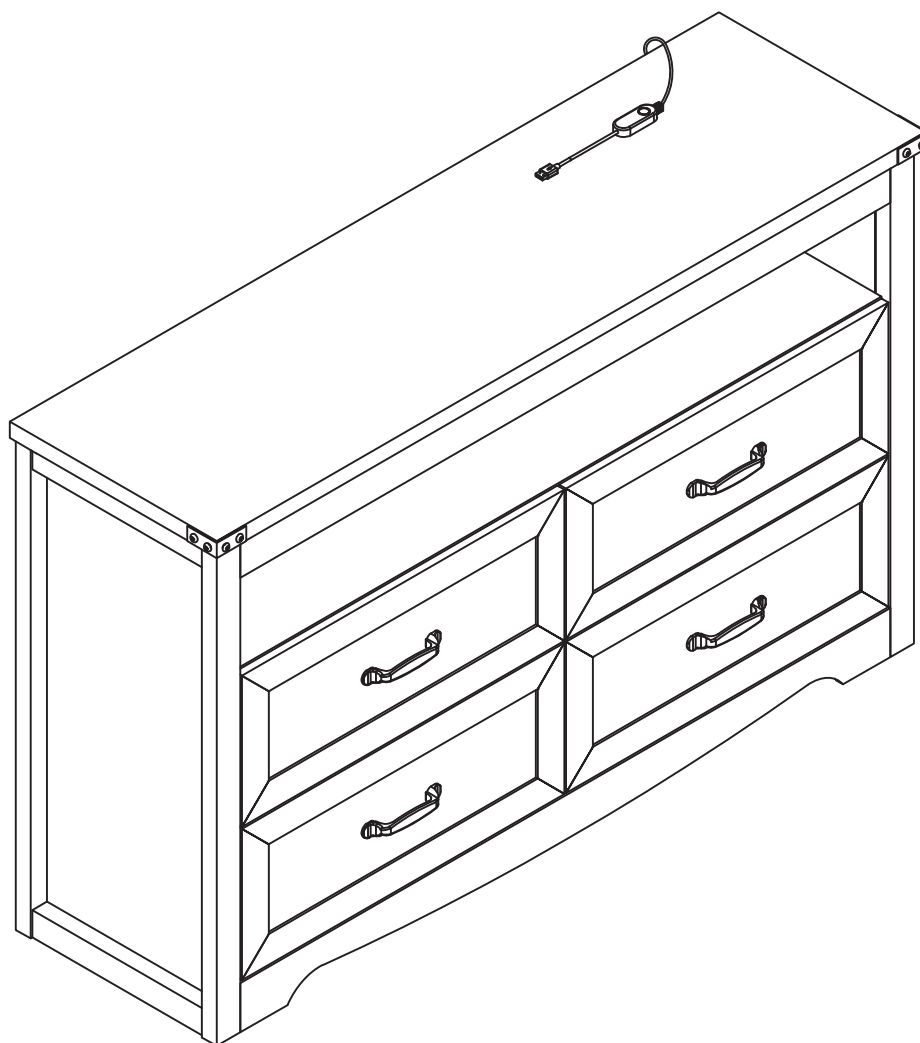 
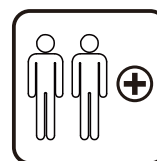 



Installation & Assembly

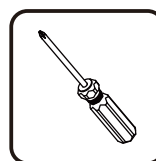


Version: 1.0

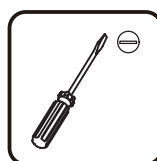

 
EN_IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY.

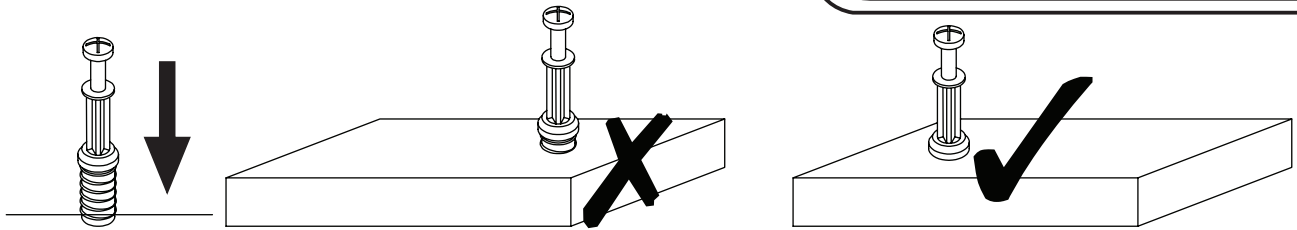

 
EN_QUICKFIT: Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.

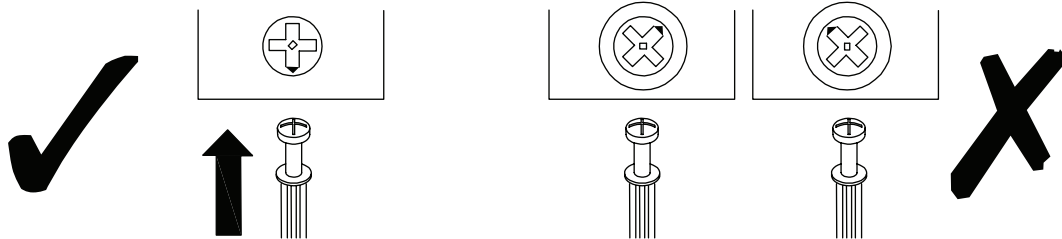








 
EN_CAM LOCK: When fitting cam lock, ensure starting position is correct before you insert connecting quickfit.







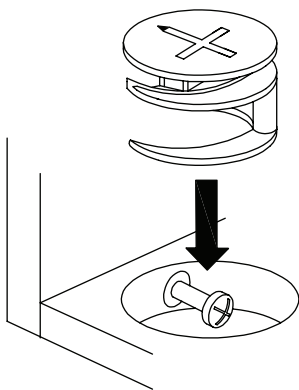




 
EN_Quickfit head should be in the centre of the cam lock when the two panels are joined.
Cam lock should be inserted before quickfit.

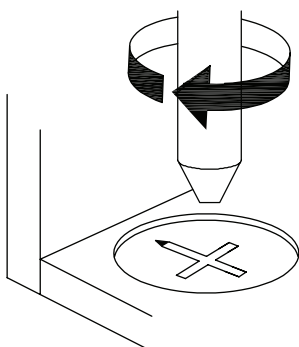


EN_Turn cam lock clockwise to tighten.

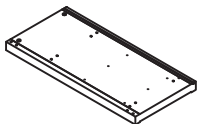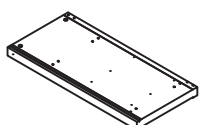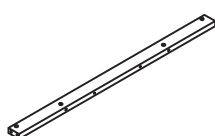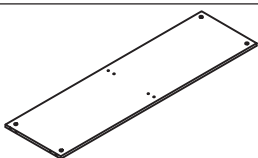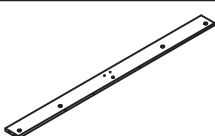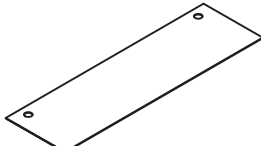        
NO.	PARTS	QTY	SPARE
①		x1	
②		x1	
③		x1	
④		x1	
⑤		x1	
⑥		x1	
⑦		x1	
⑧		x1	
⑨		x2	
⑩		x1	
⑪		x1	

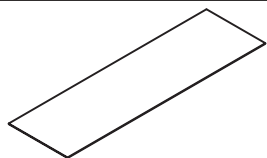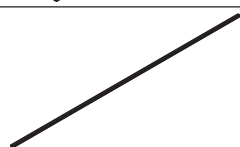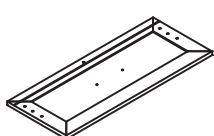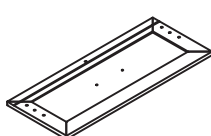     
 
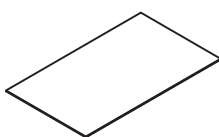 
NO.	PARTS	QTY	SPARE
⑫		x1	
⑬		x1	
⑭		x2	
⑮		x2	
⑯		x4	
⑰		x4	
⑱		x4	
⑲		x4	
⑳		x4	
	 Hardware Kit		

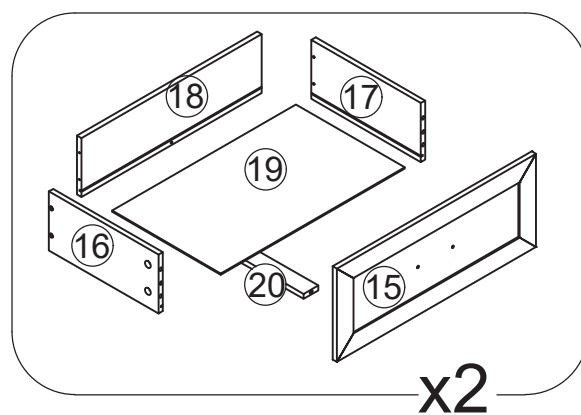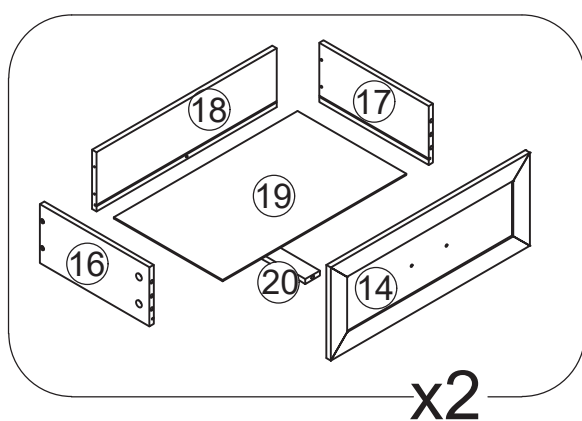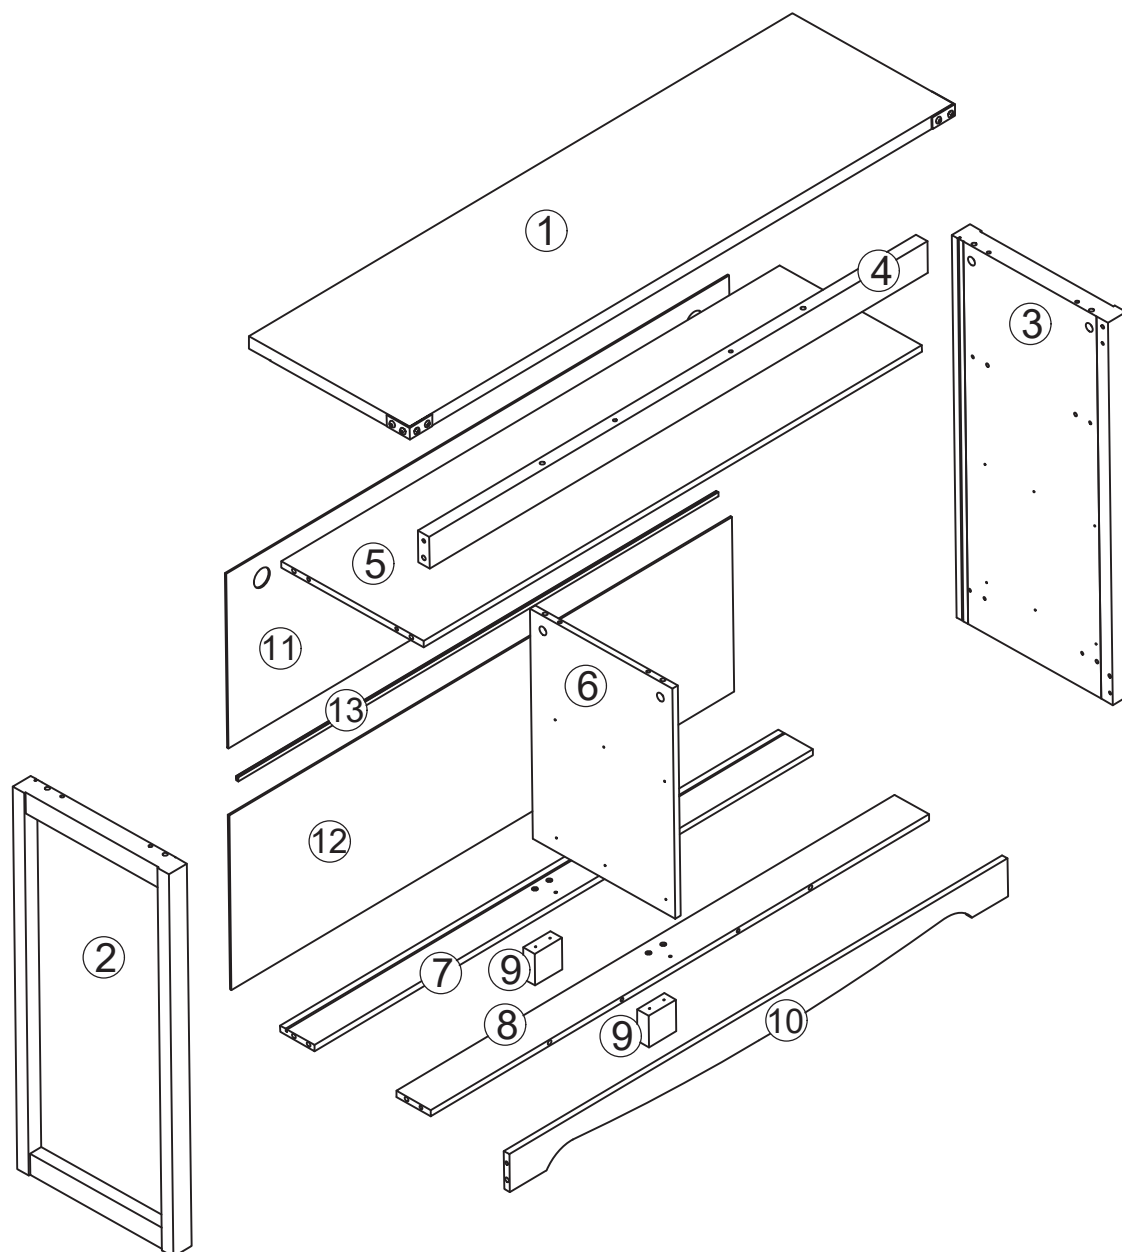   

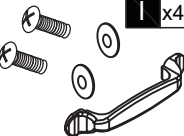  A x44 Ø6x35mm +3(spare)	 B x44 Ø15x10mm +3(spare)	 C x28 Ø6x30mm +1(spare)	 D x28 Ø4x35mm +2(spare)	 E x48 Ø3.5x10mm +3(spare)	 F x2
 G x1	 H x3	 I x4	 J x16 +1(spare)	 K x16 Ø3x16mm +1(spare)	 L x2
 M x2	 N x2 Ø6x30mm	 CL x4 L300mm	 CR x4 L300mm	 DL x4 L300mm	 DR x4 L300mm

    01



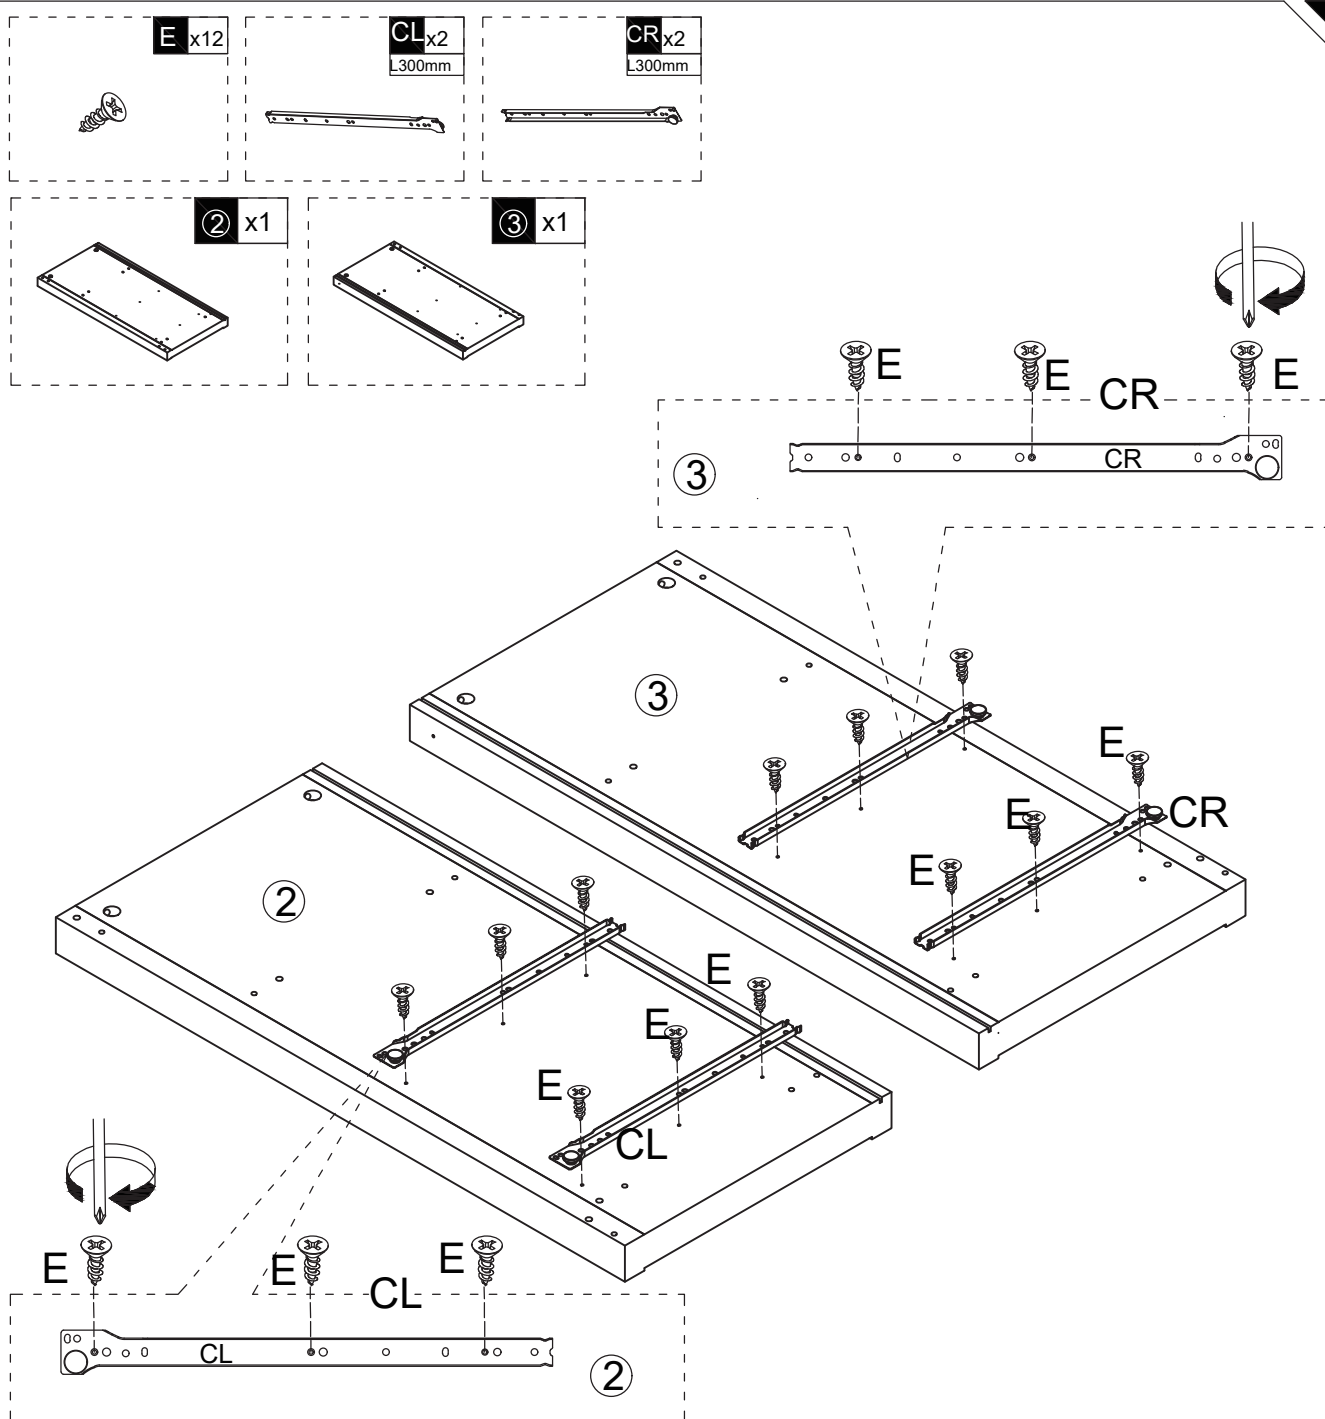


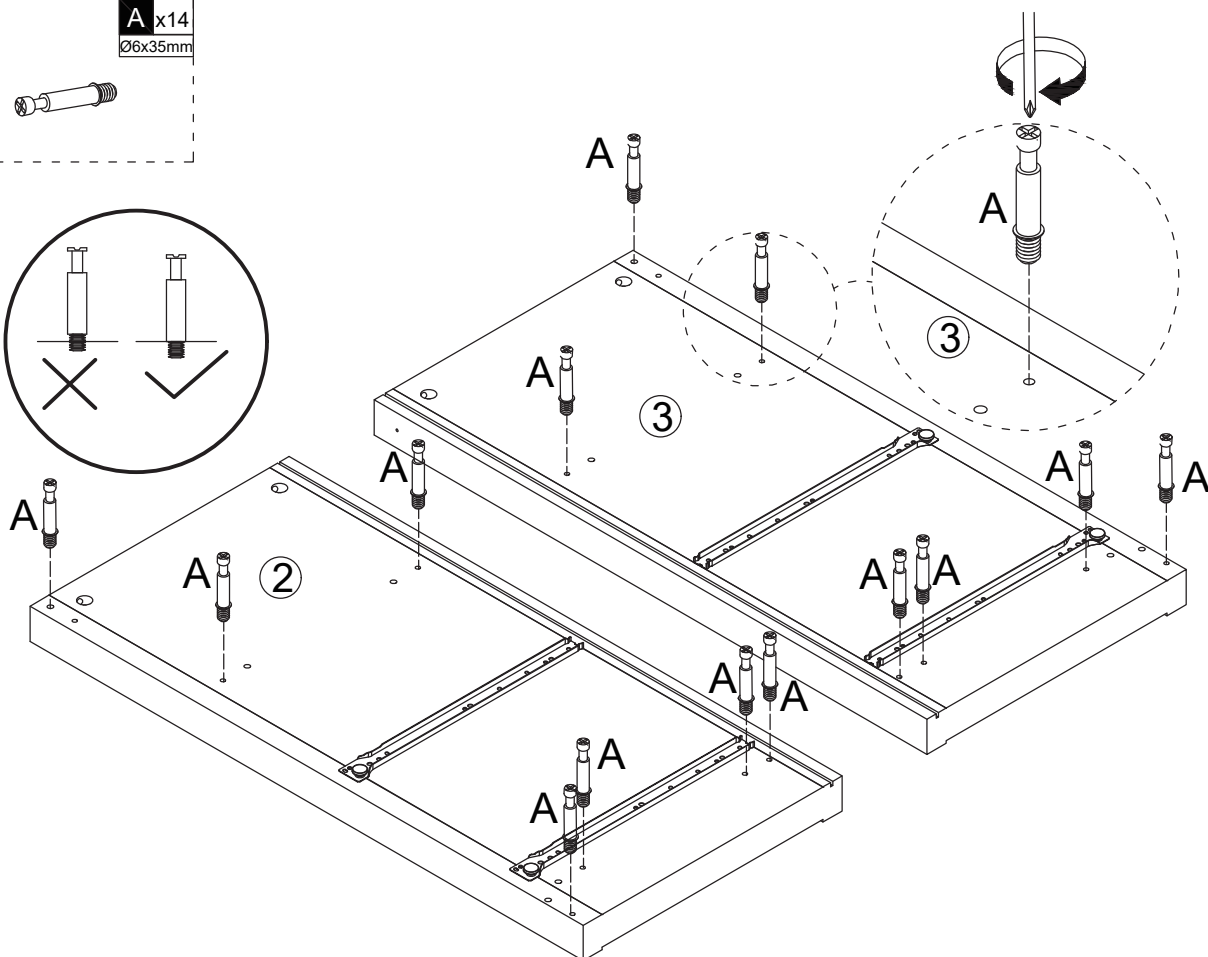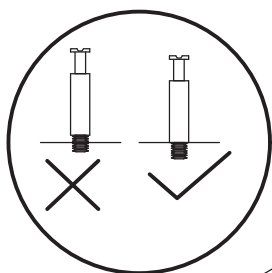A x14
Ø6x35mm

E x12

CL x2
L300mmCR x2
L300mm





 
 
 
⑥ x1

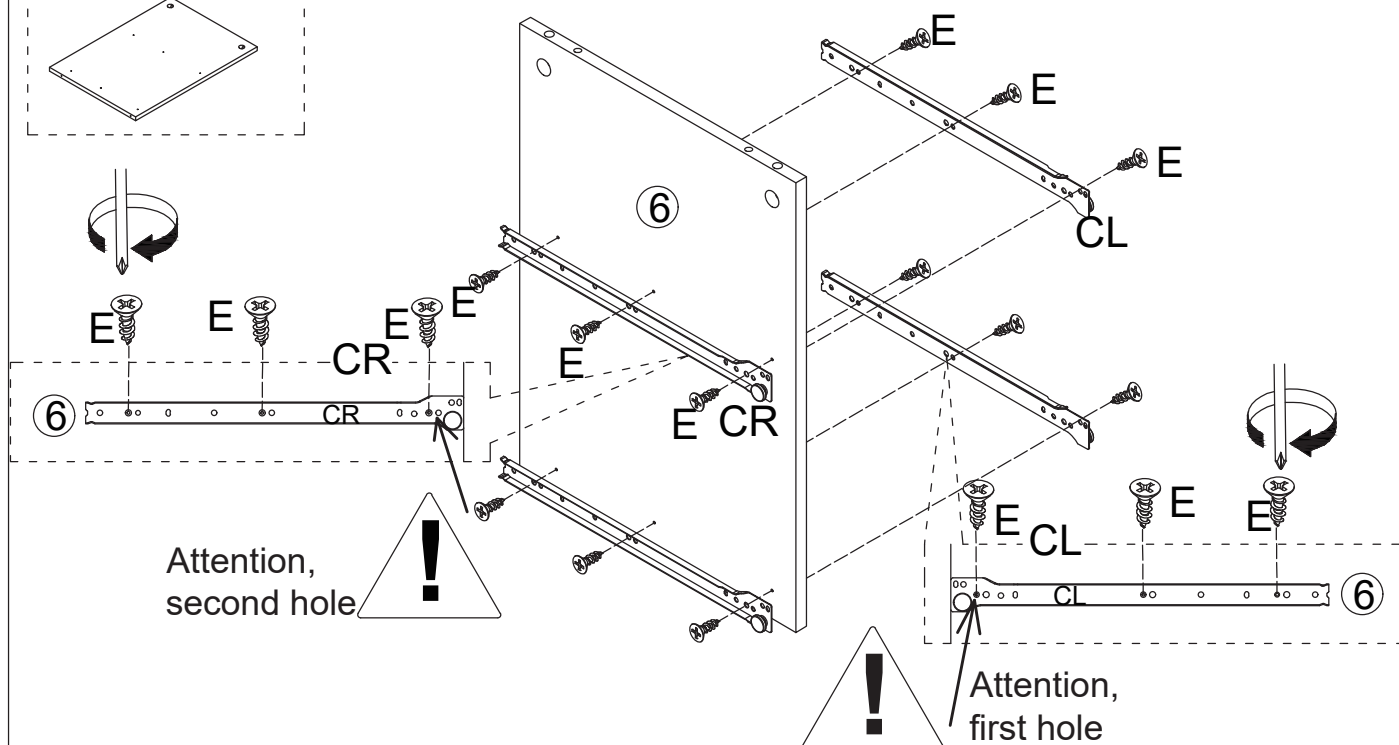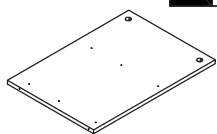


A x4
Ø6x35mm

⑤ x1

       
⑩ x1

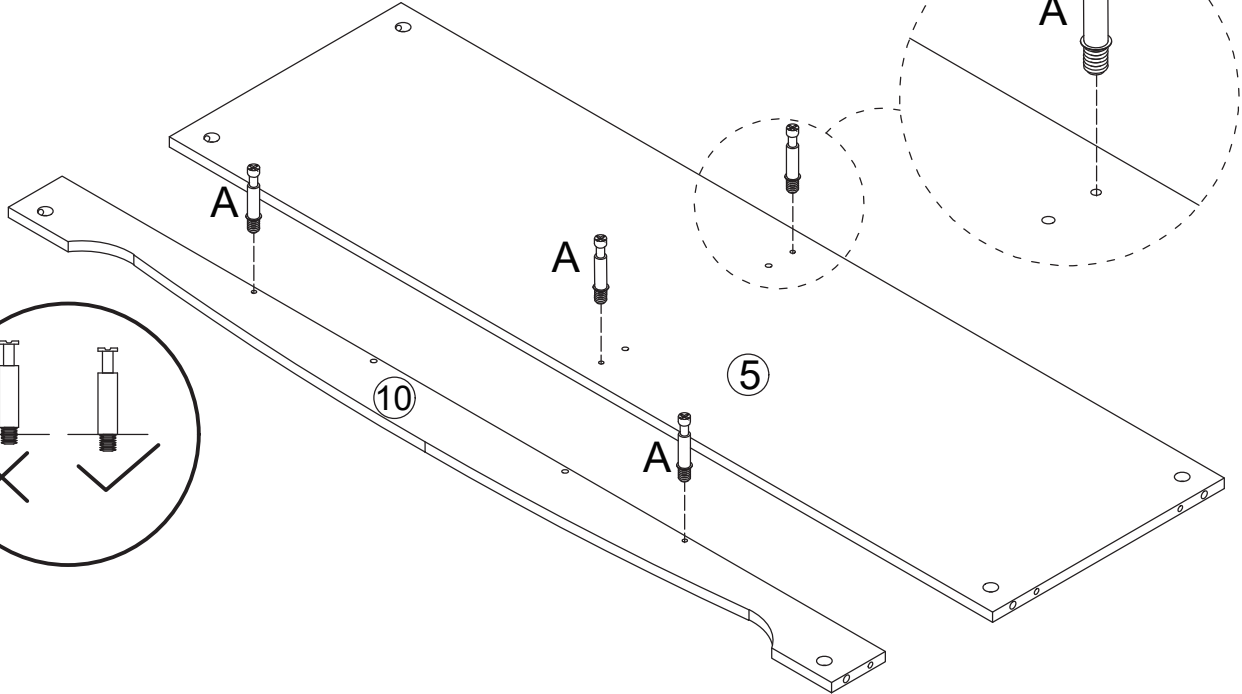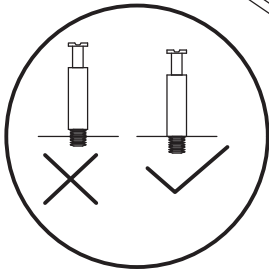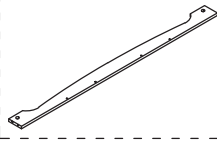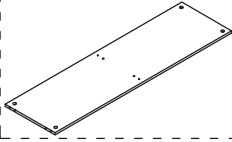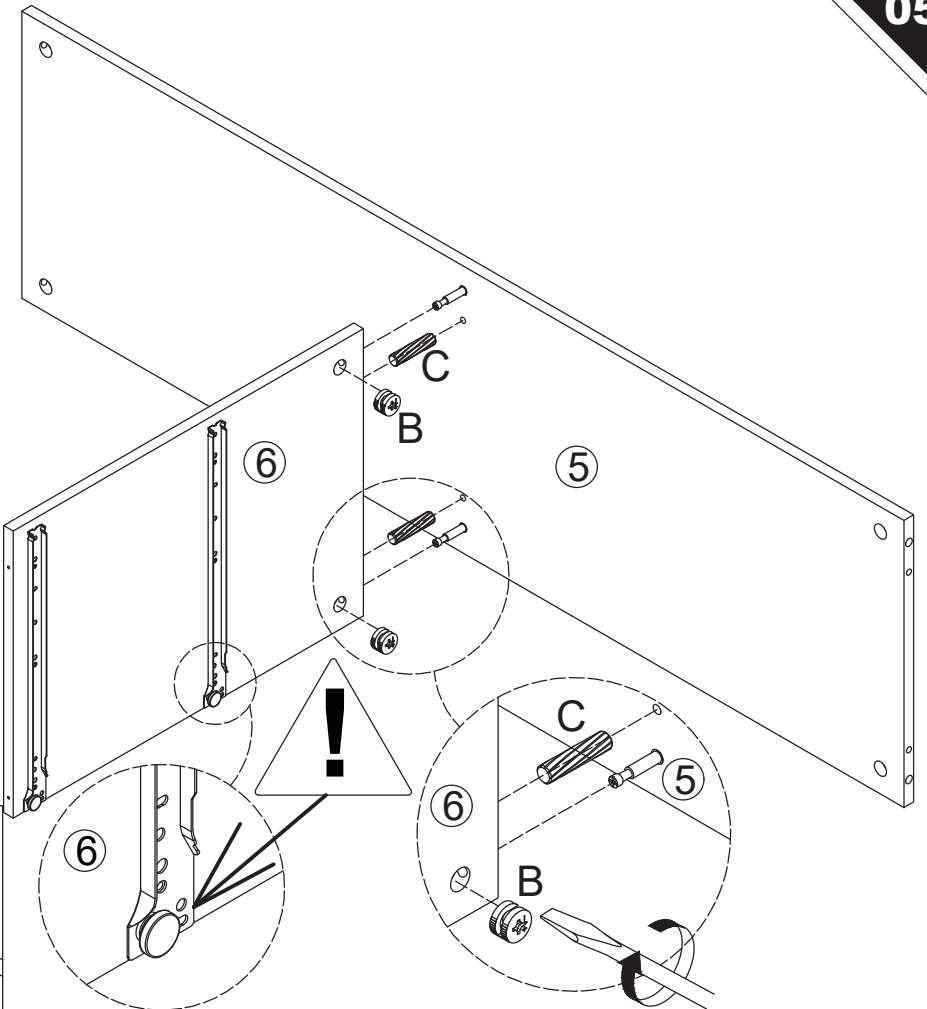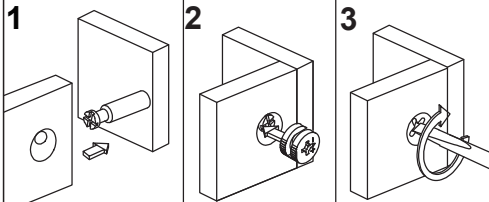B x2
Ø15x10mmC x2
Ø6x30mm

 
06

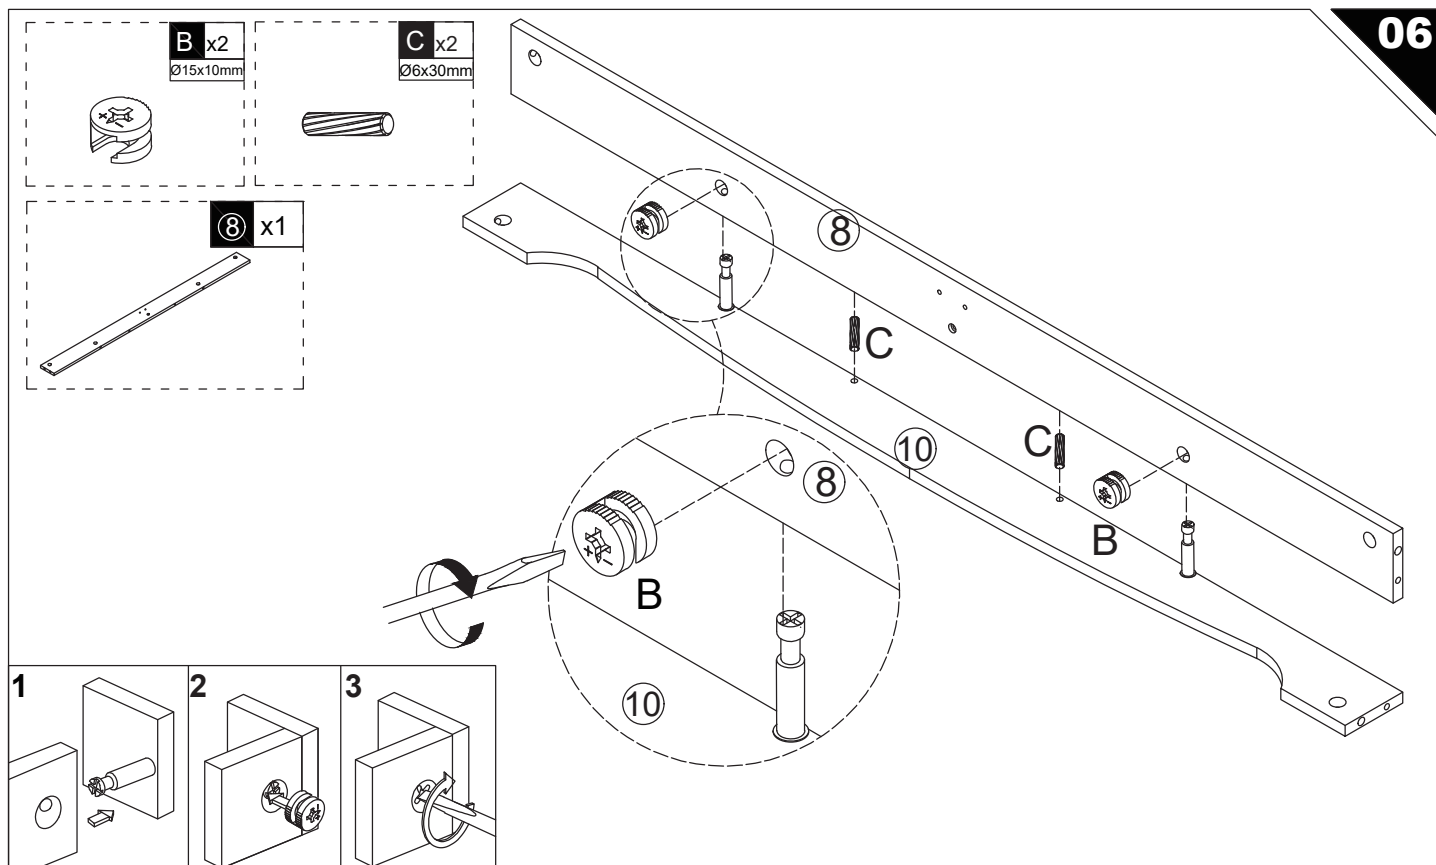


07

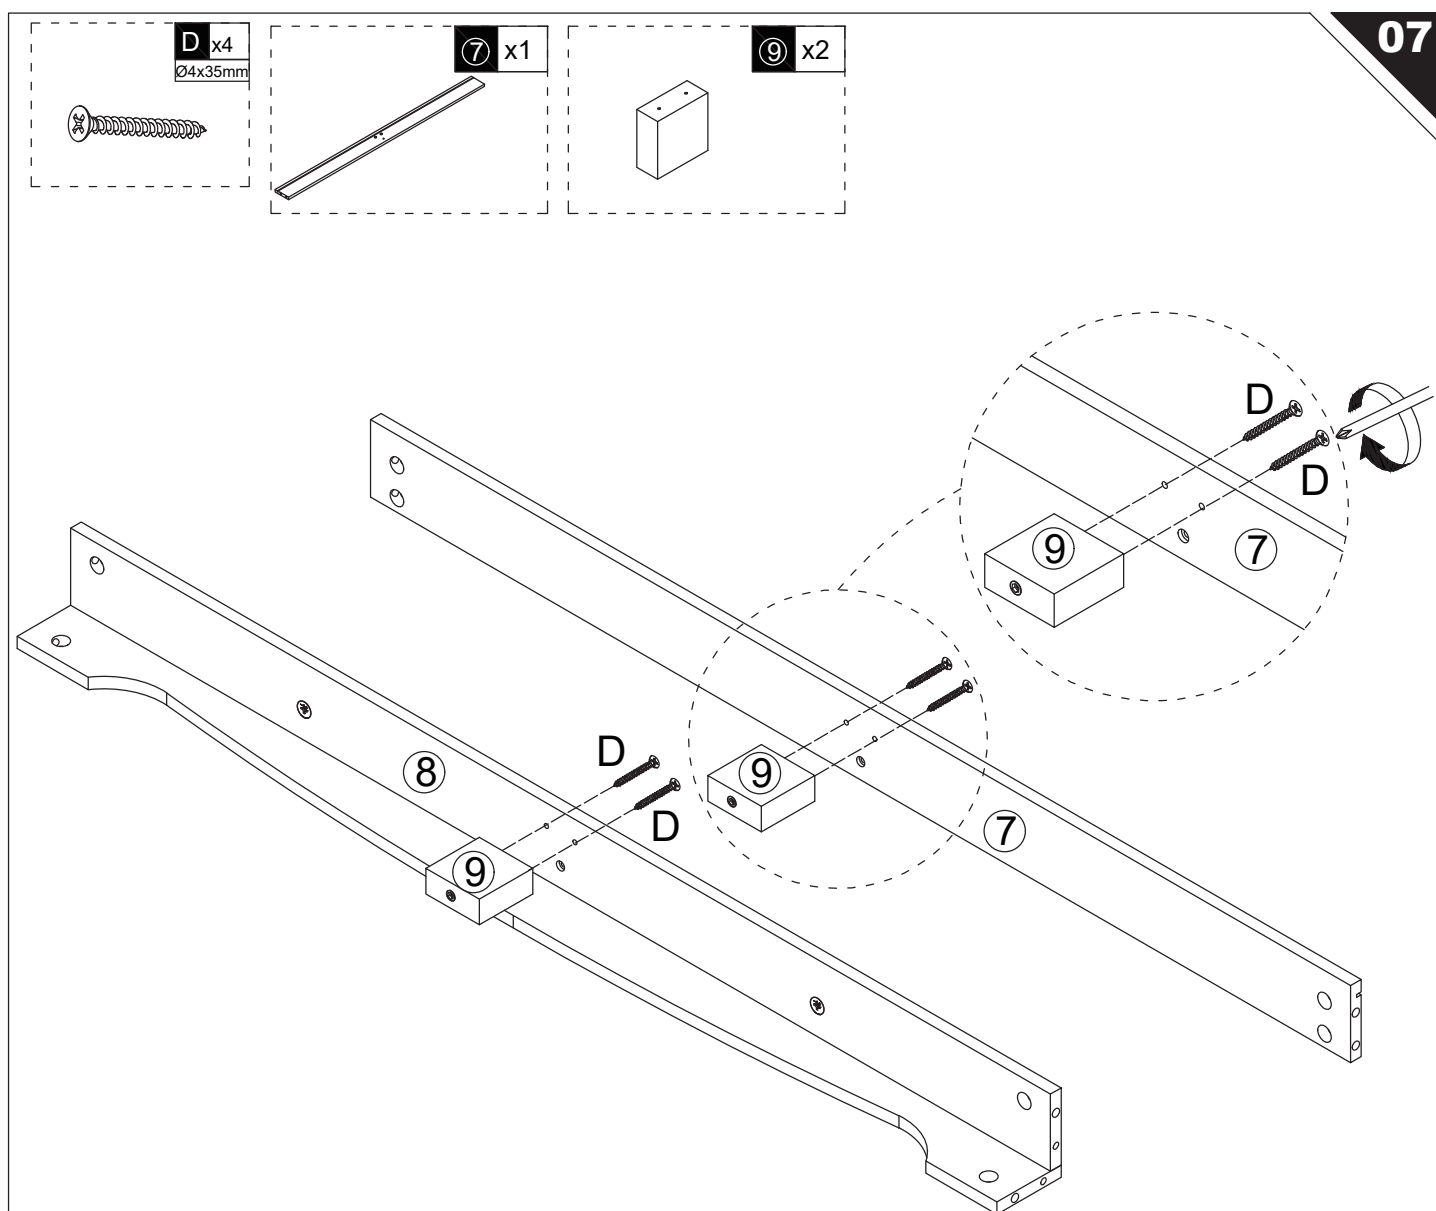 



08

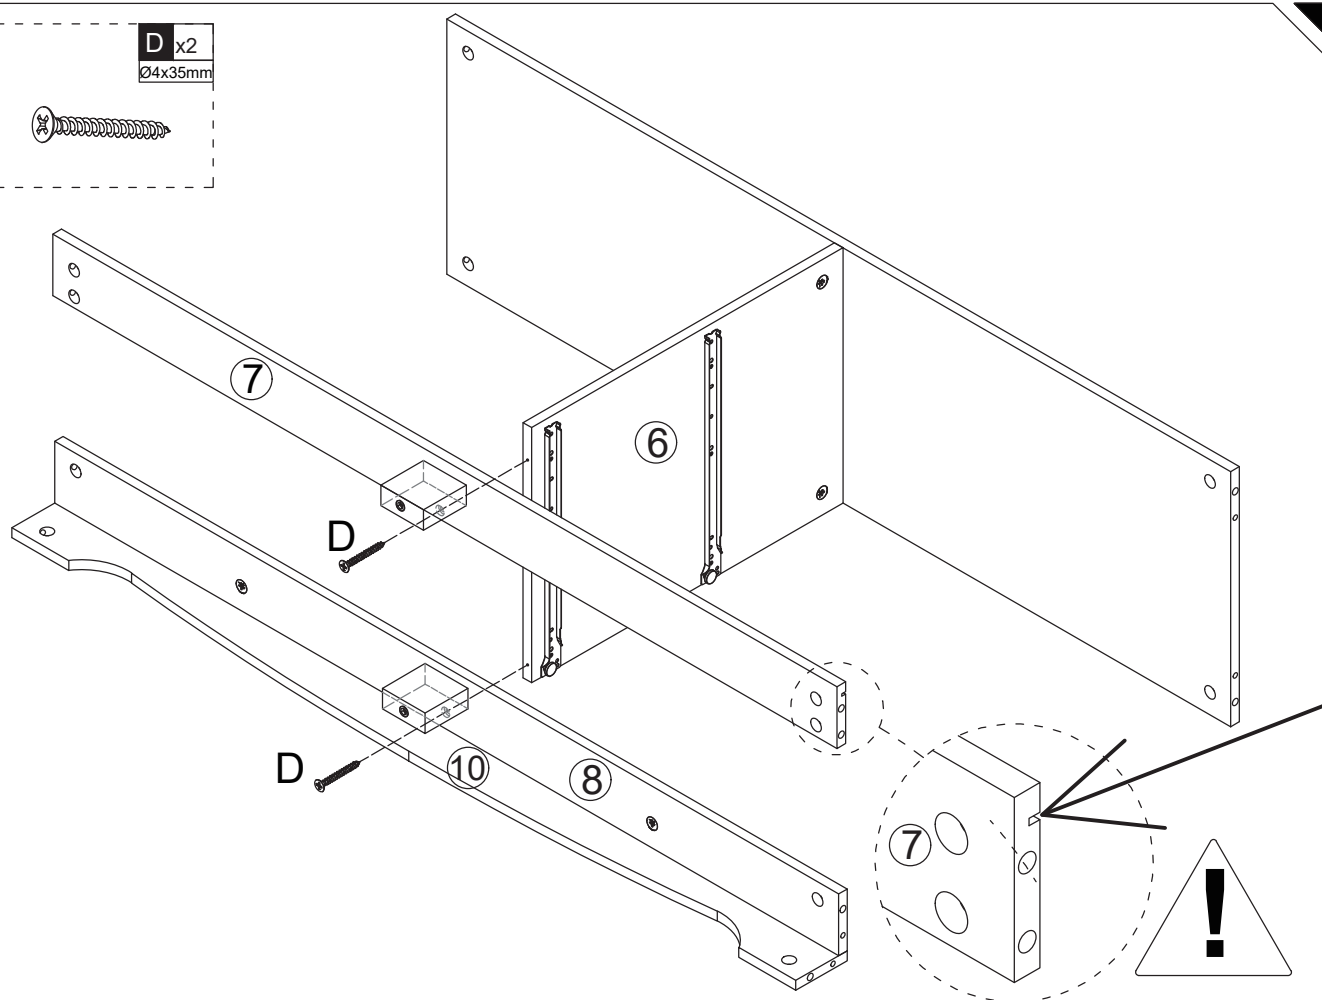 D x2
Ø4x35mm

 09

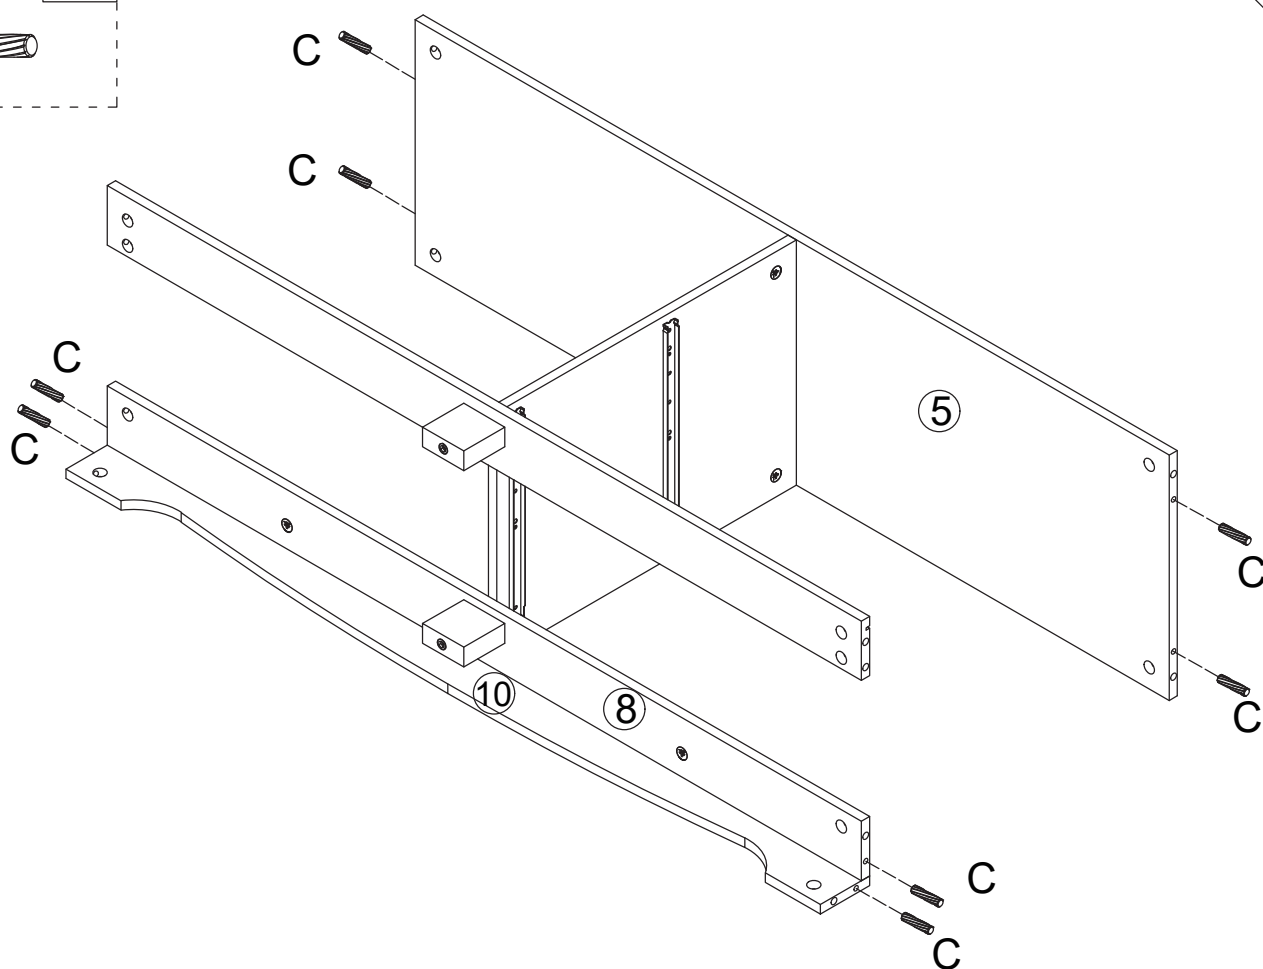C x8
Ø6x30mm

B	x6
Ø15x10mm	

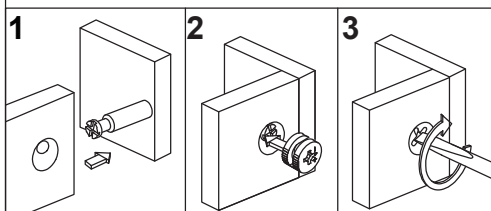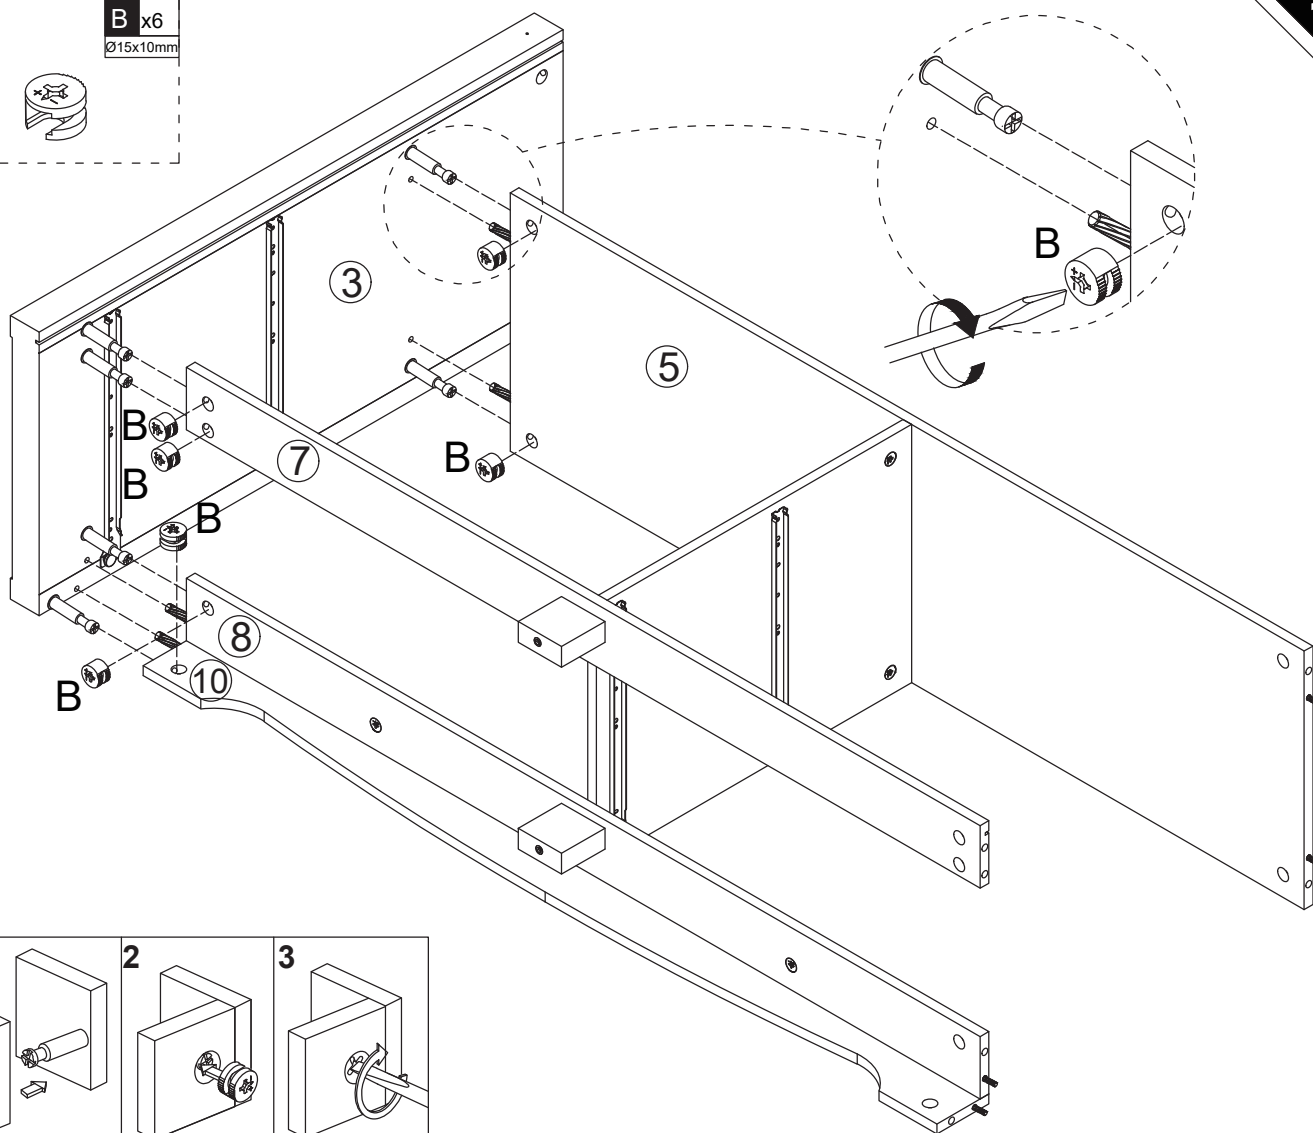  



B	x1
Ø15x10mm	




C x2
Ø6x30mm



  
④ x1

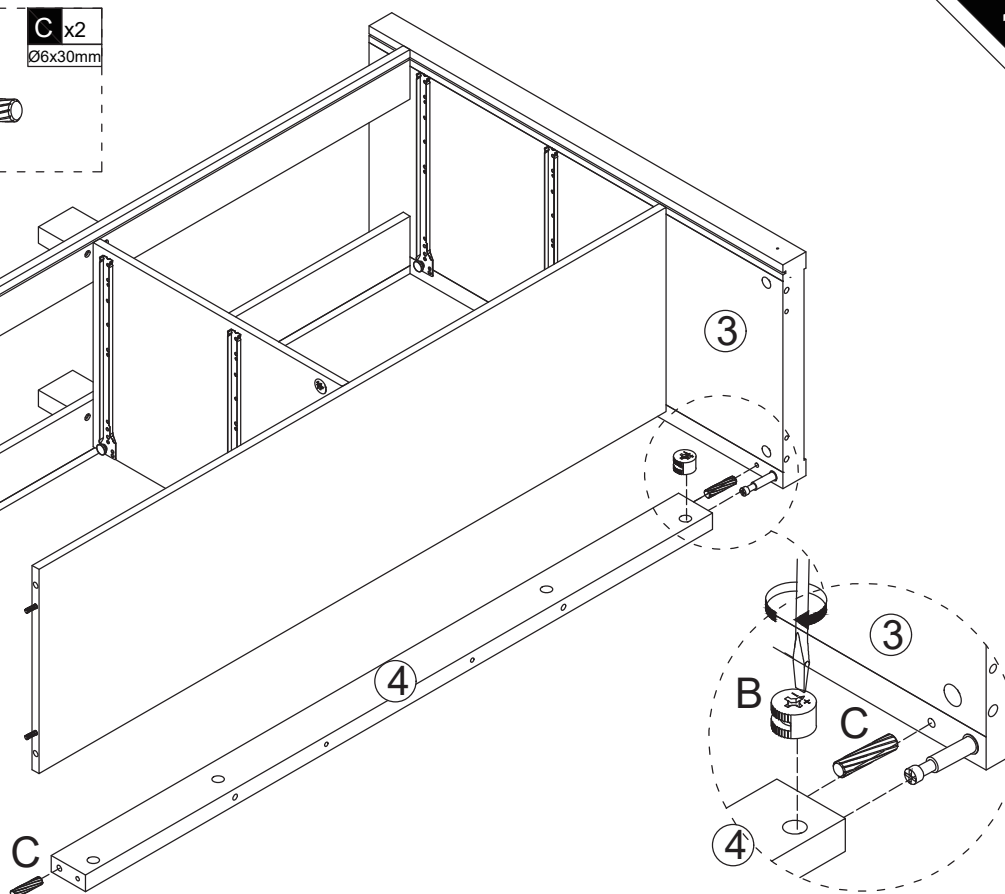
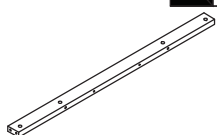





B x7
Ø15x10mm

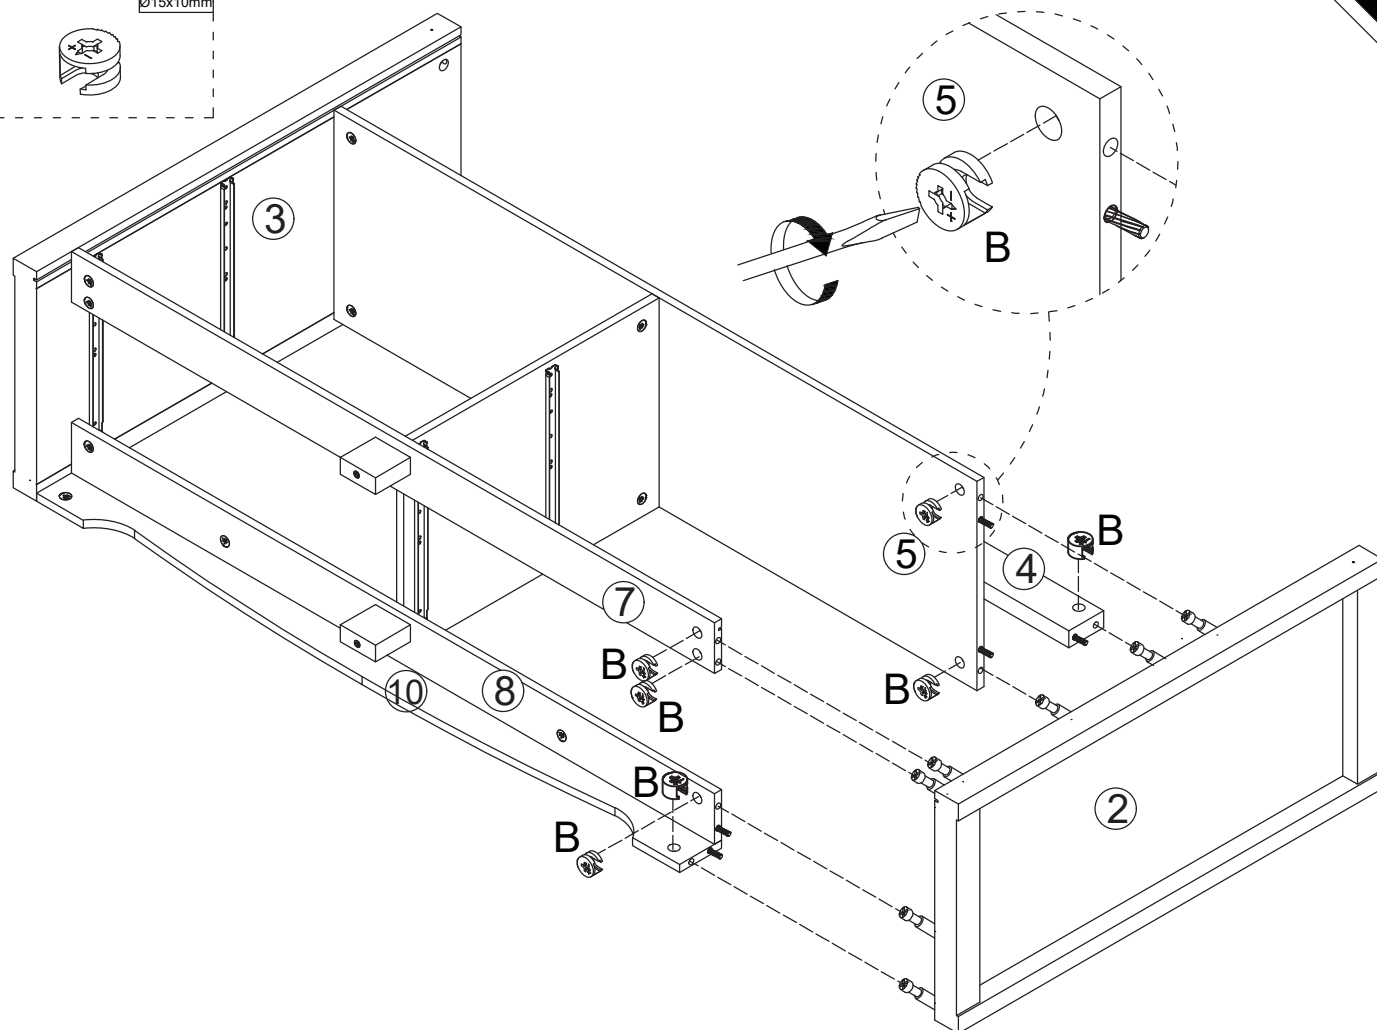 


F x2


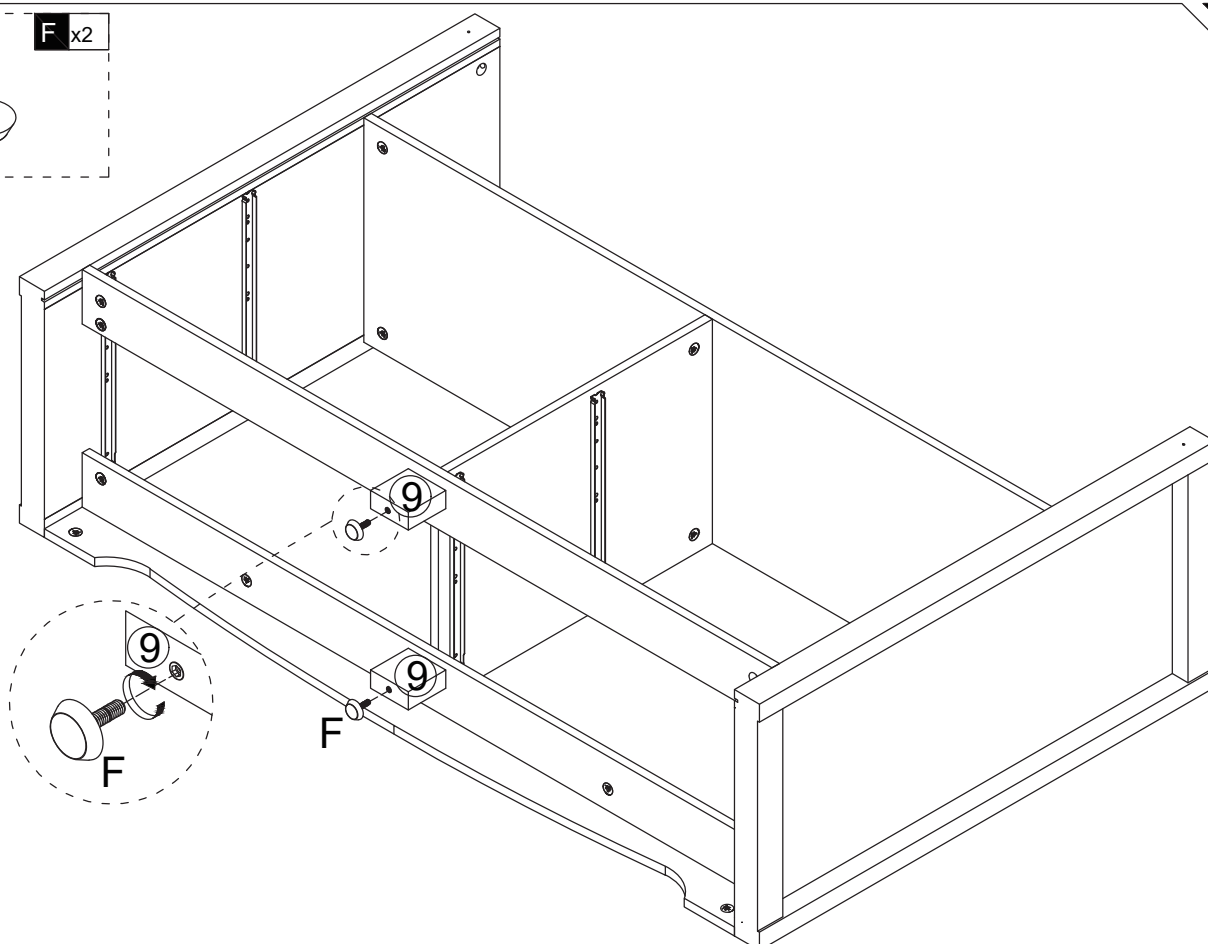 


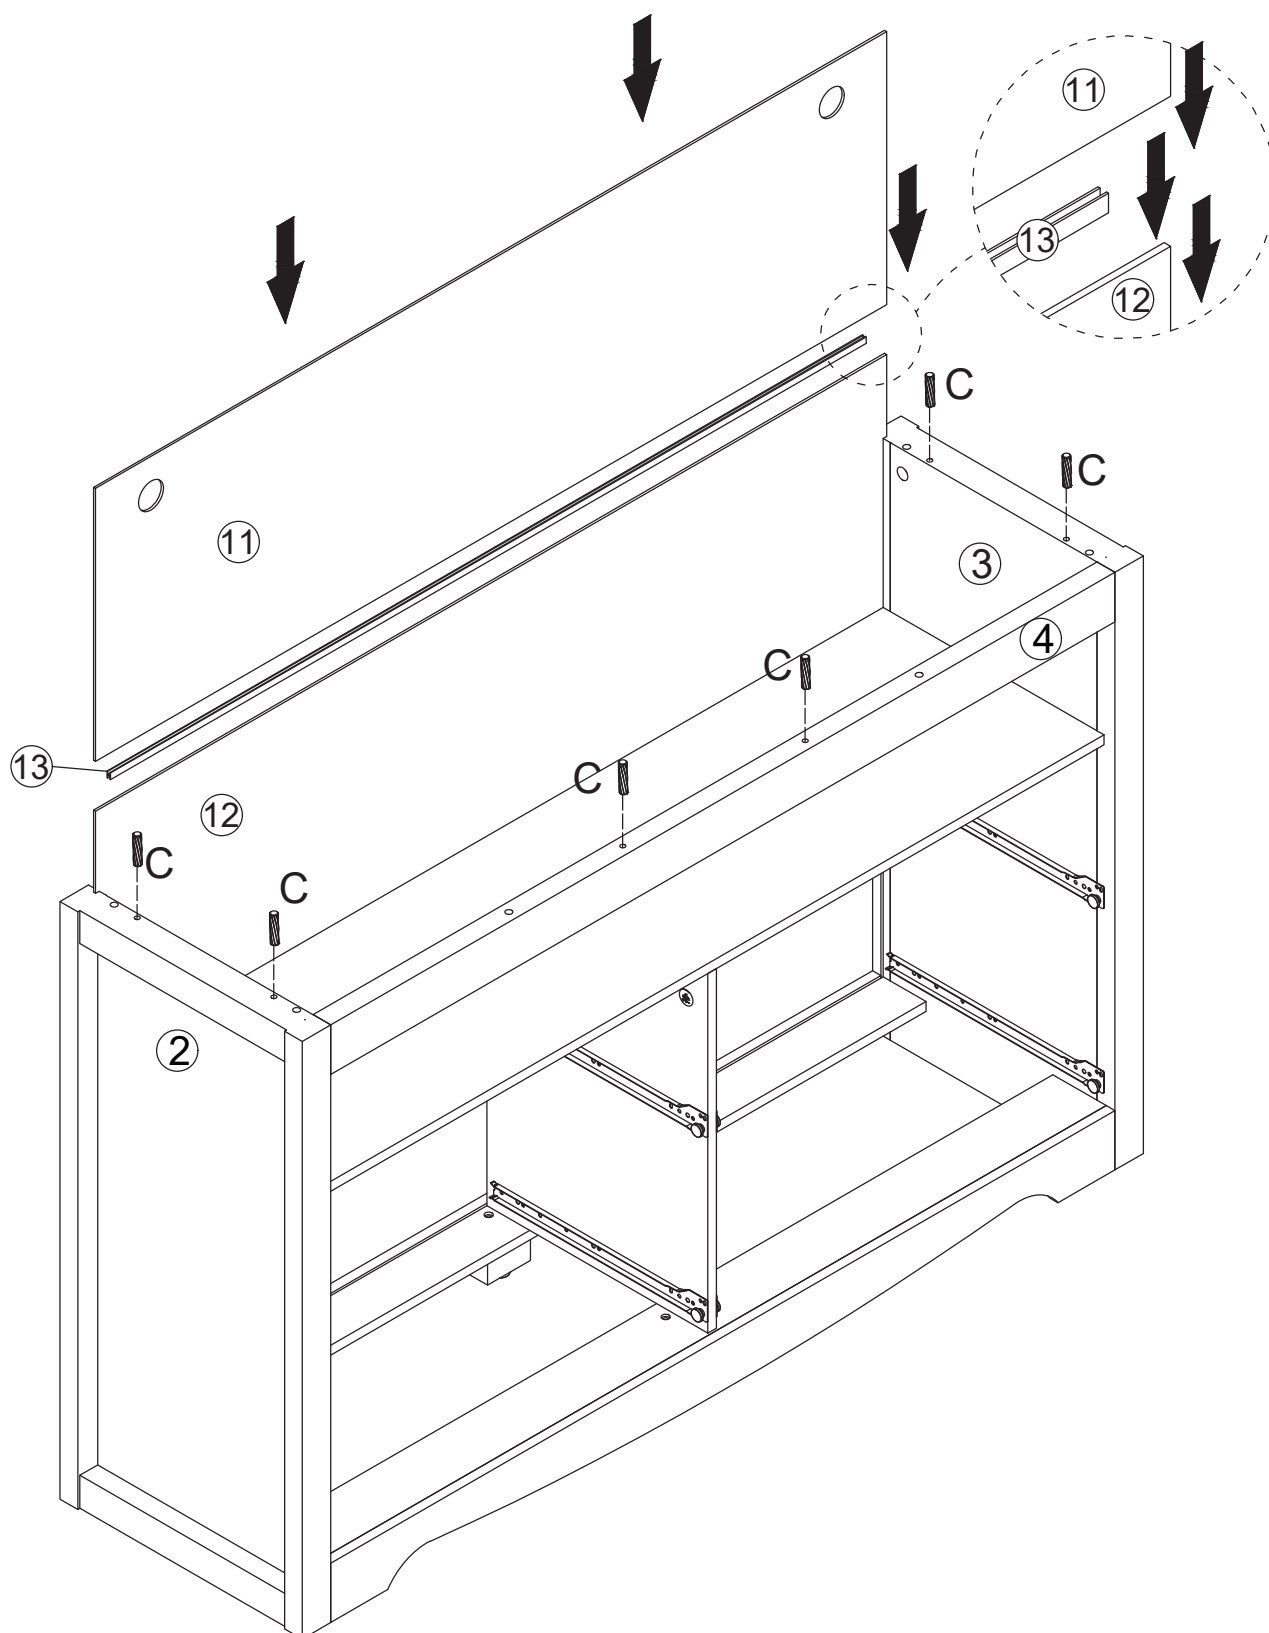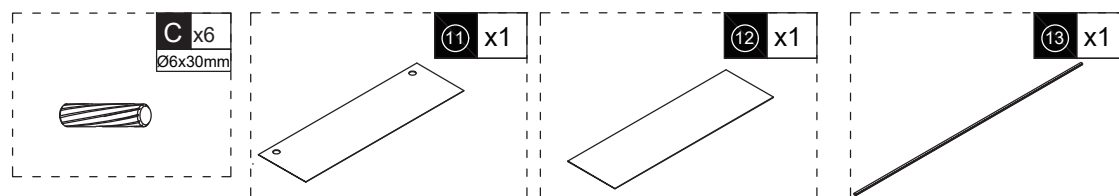  

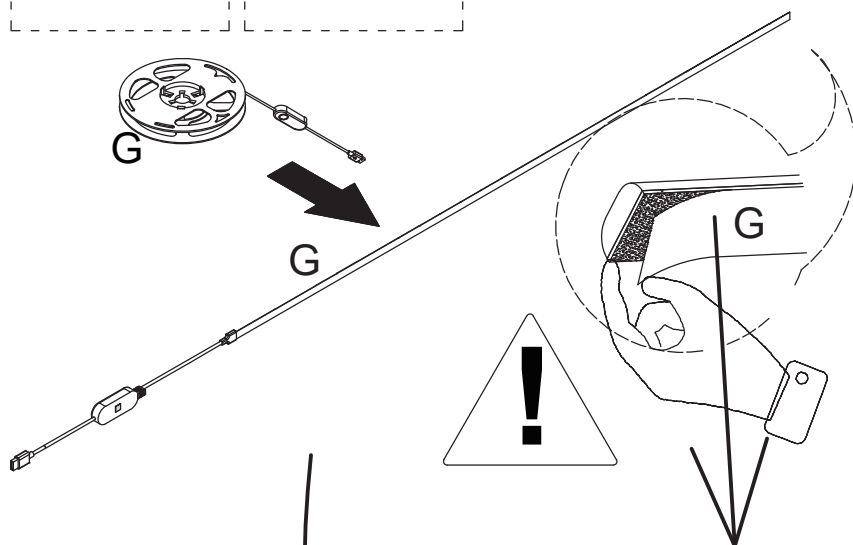 
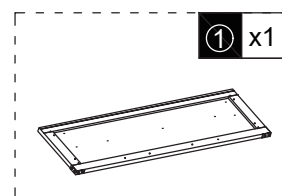 
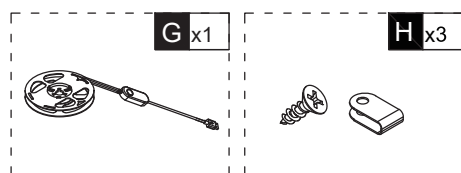 


   
Tear off the back adhesive tape of one of the light strips

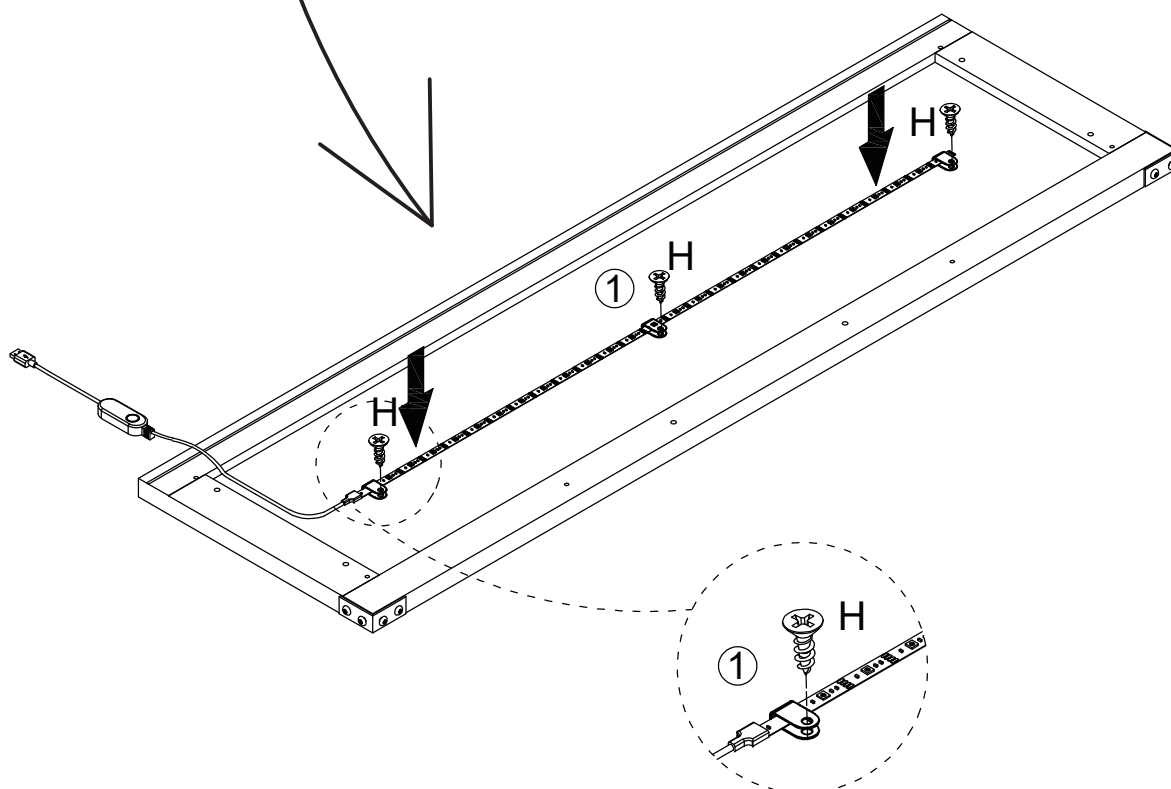

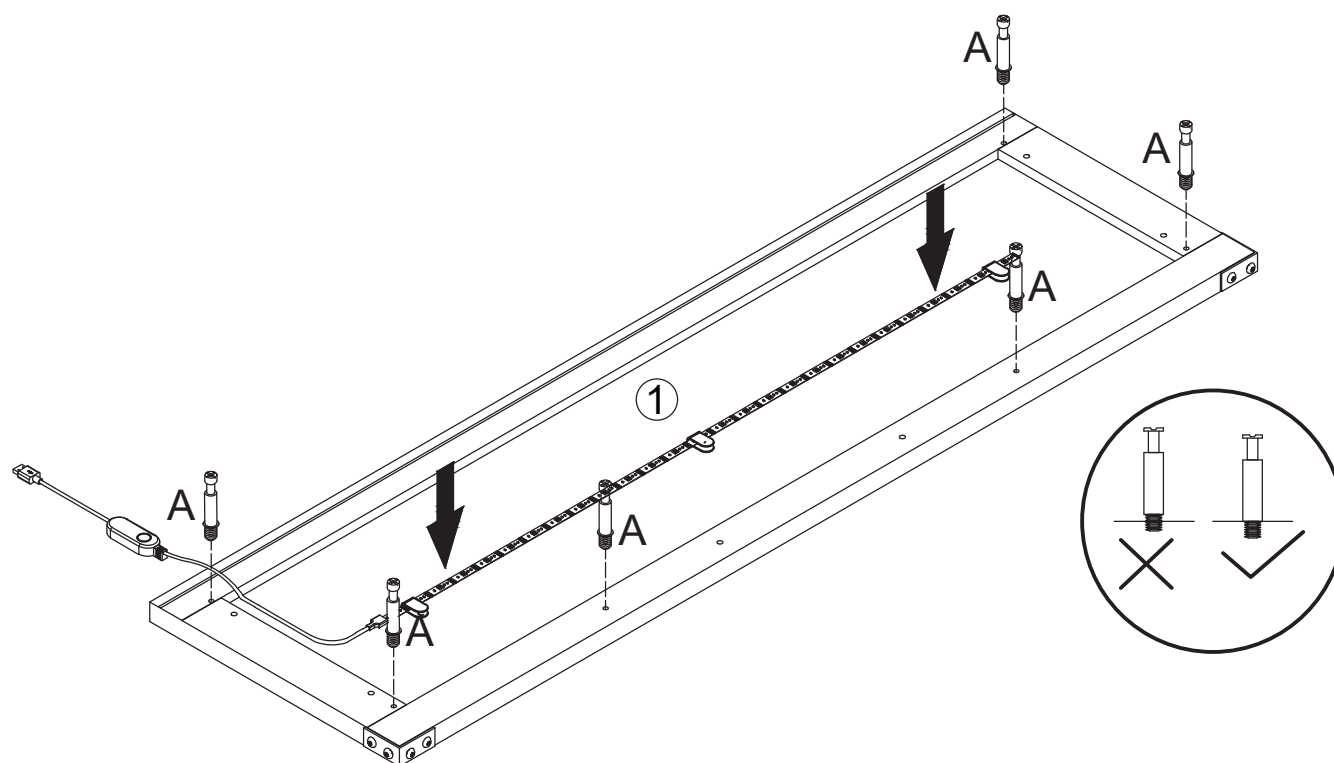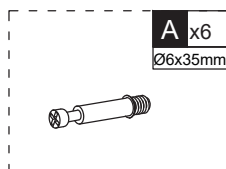


B x6
Ø15x10mm

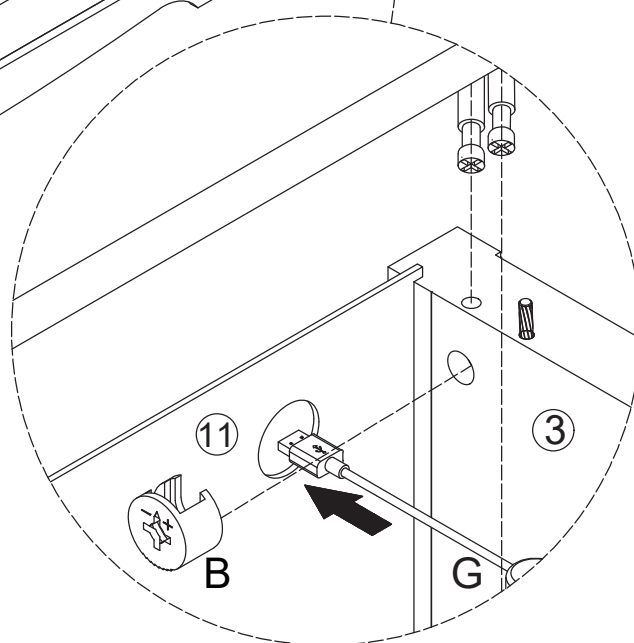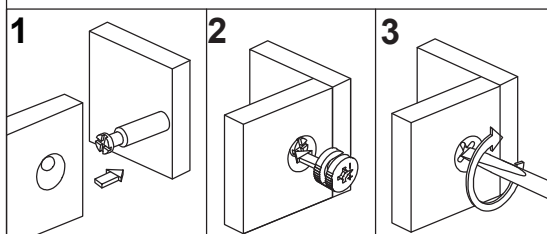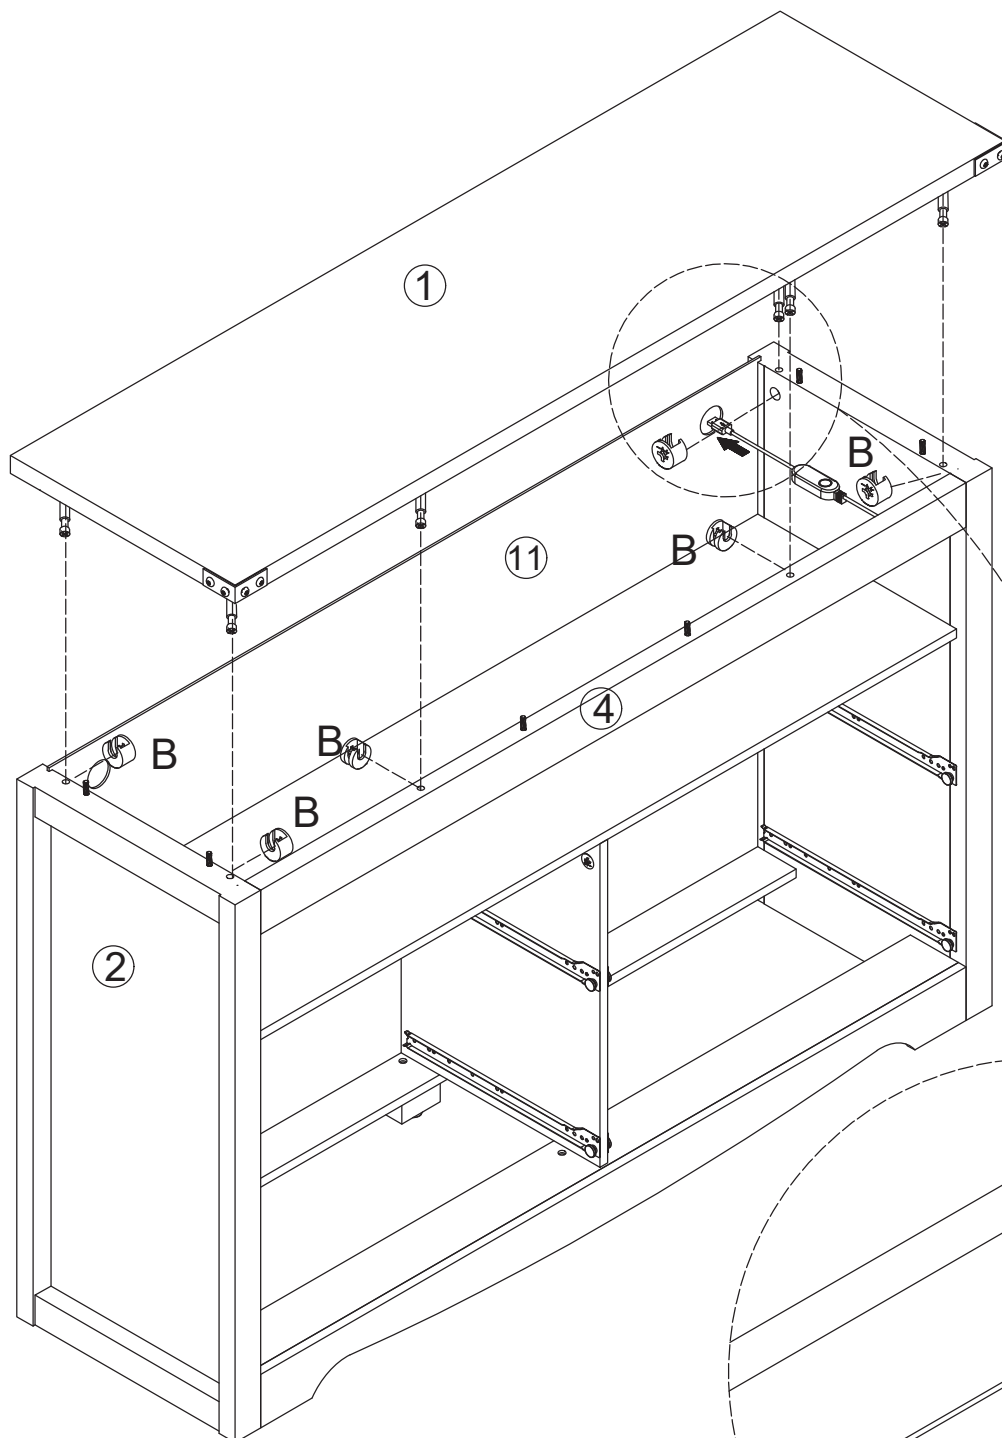   


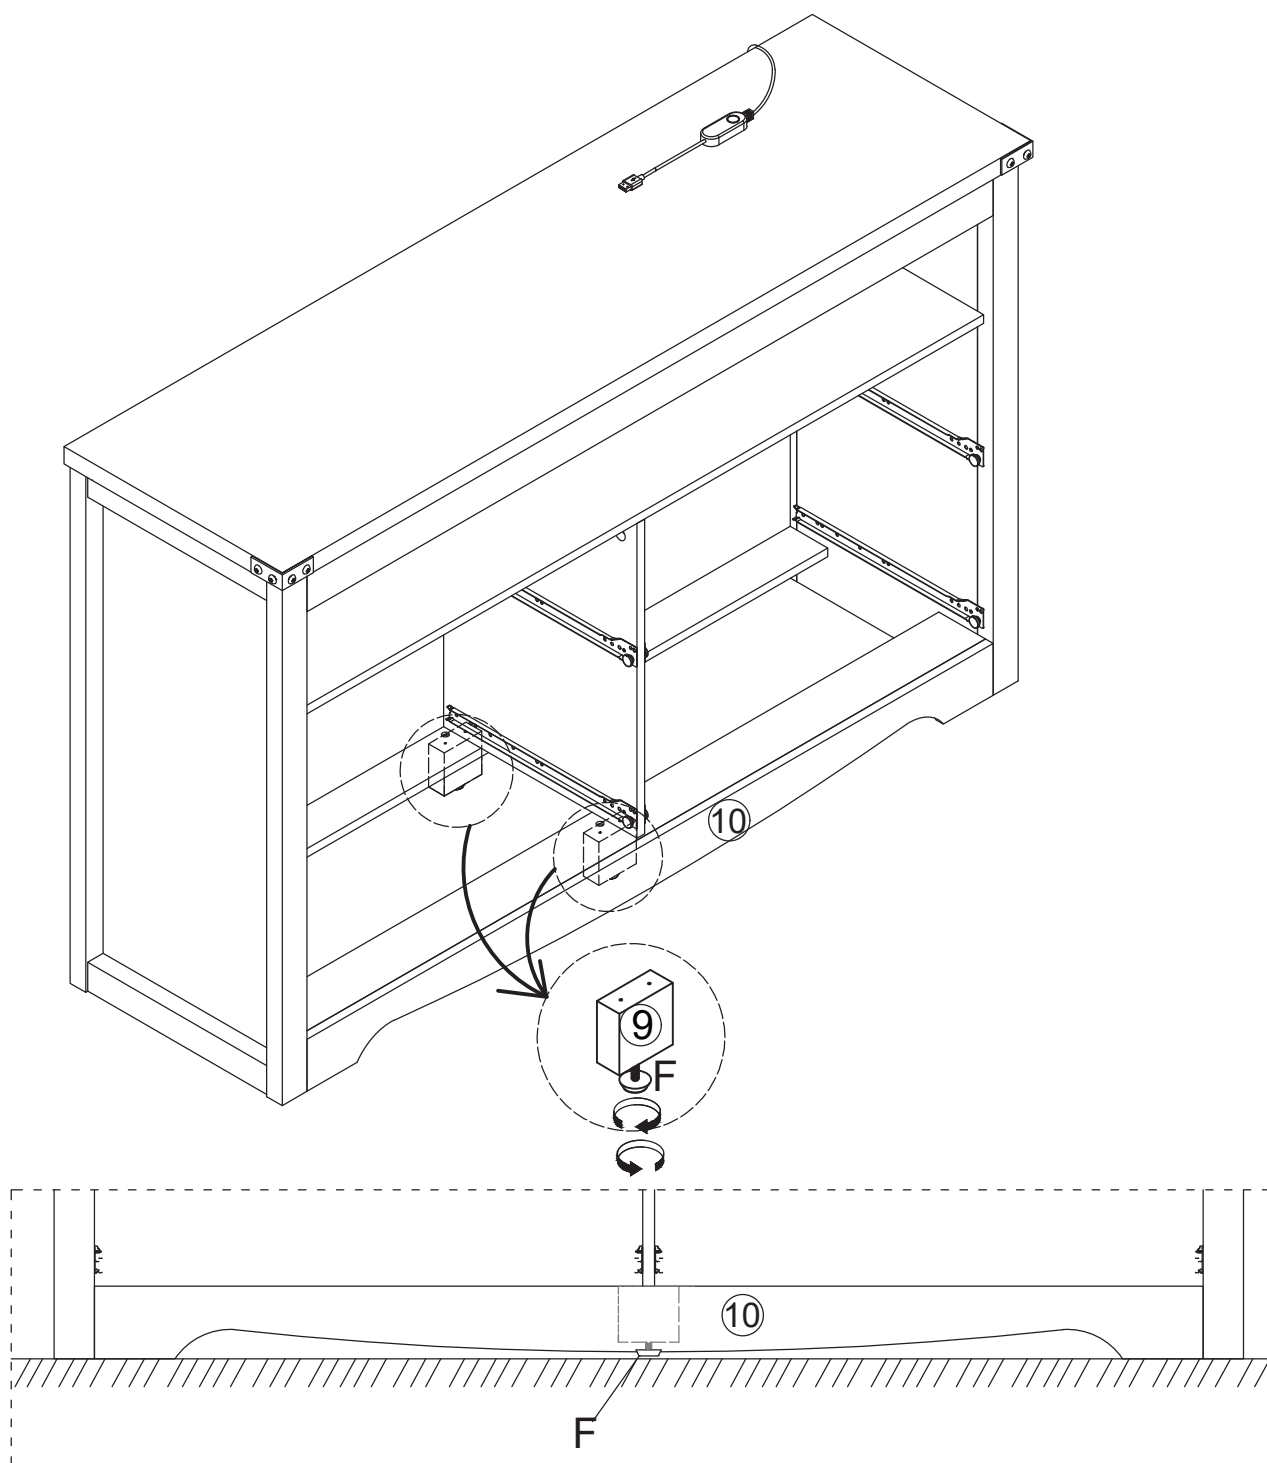 


 
When the cabinet is not stable with the ground, please rotate the accessory F under the No. 9 board


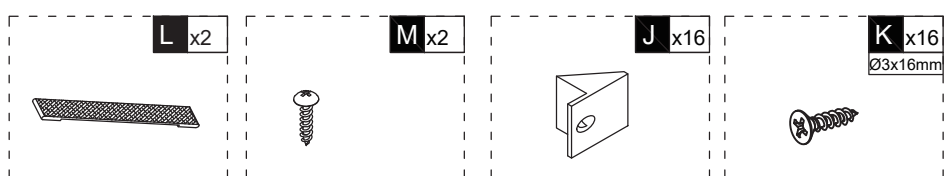






 
Fasten Anti-tip tape L to the back of the cabinet by Screw M to prevent the dresser from tipping over.



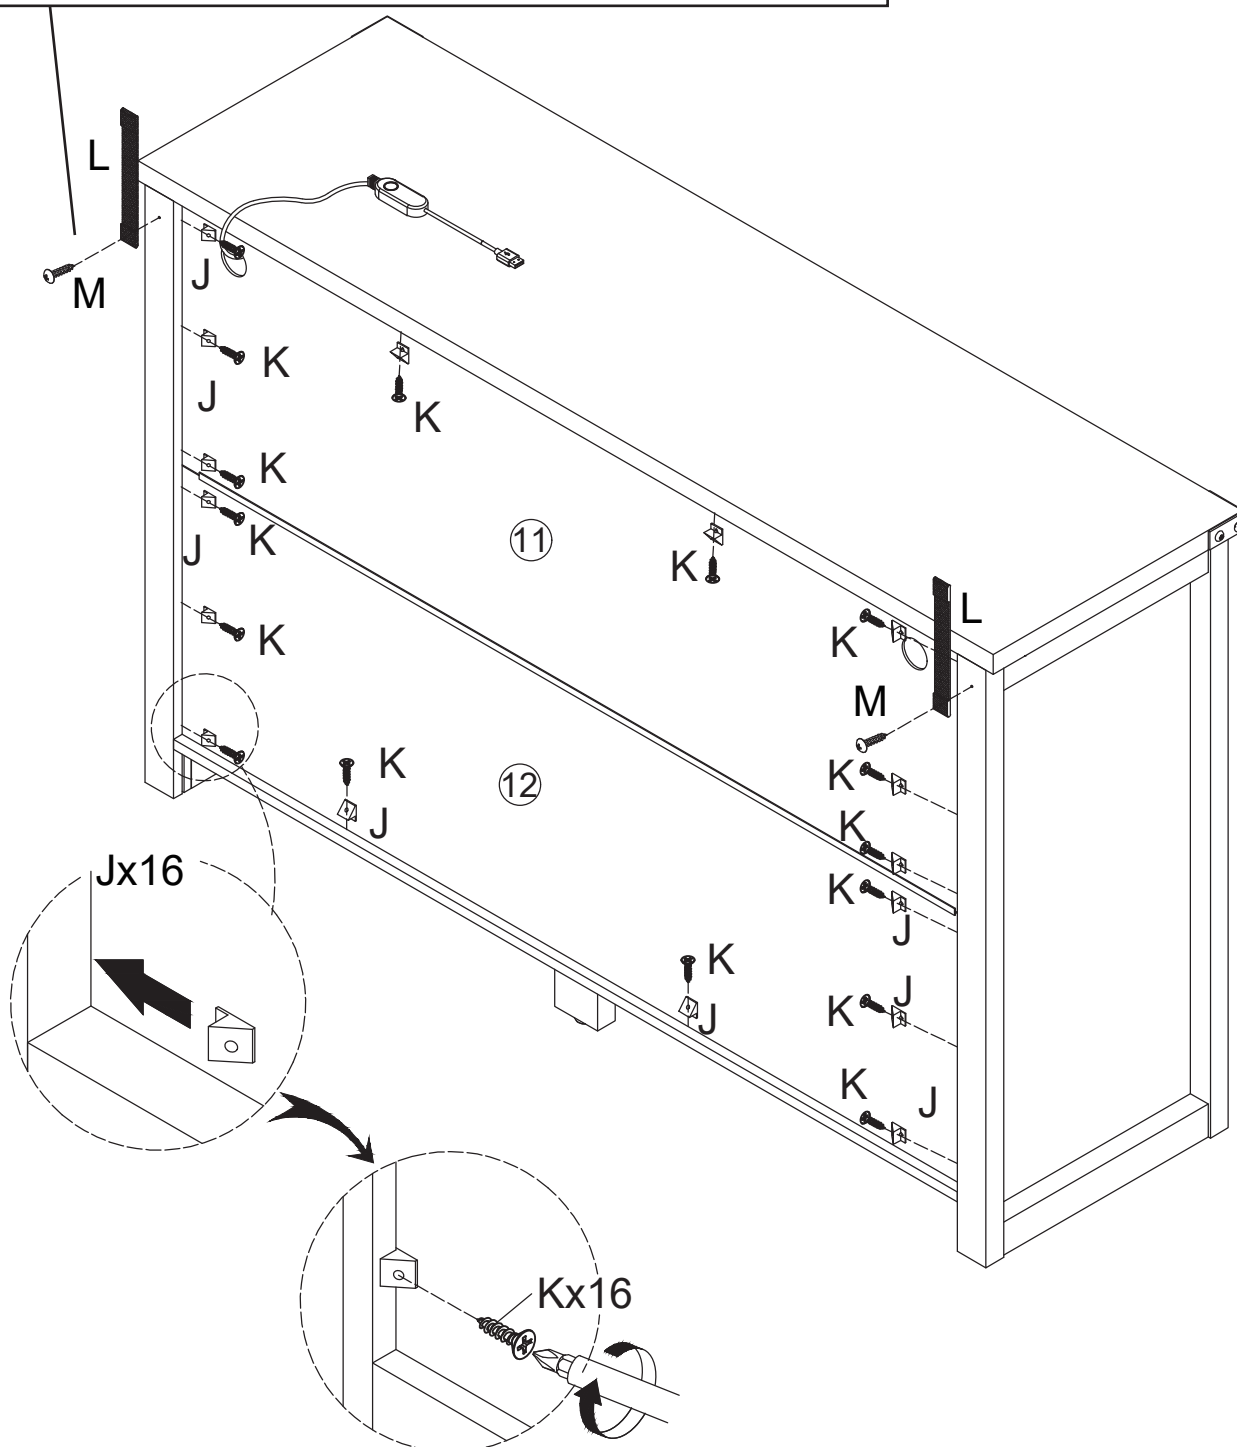


            Lock the back panel buckle (J) with screws (K) to the back of the cabinet to reinforce its stability!

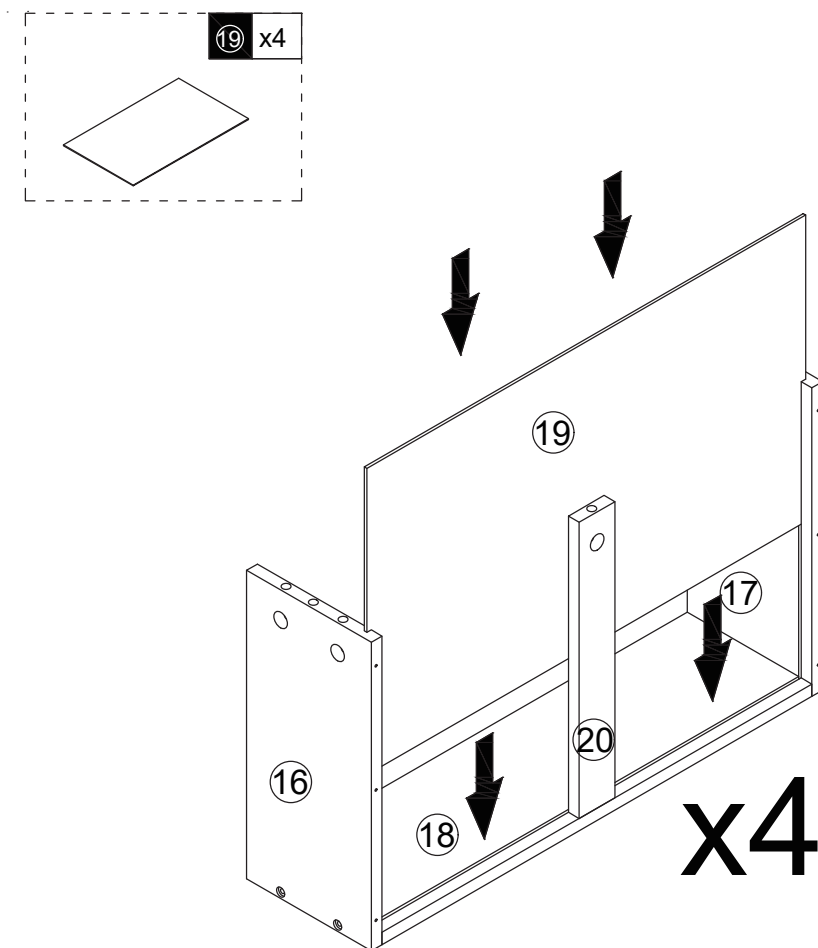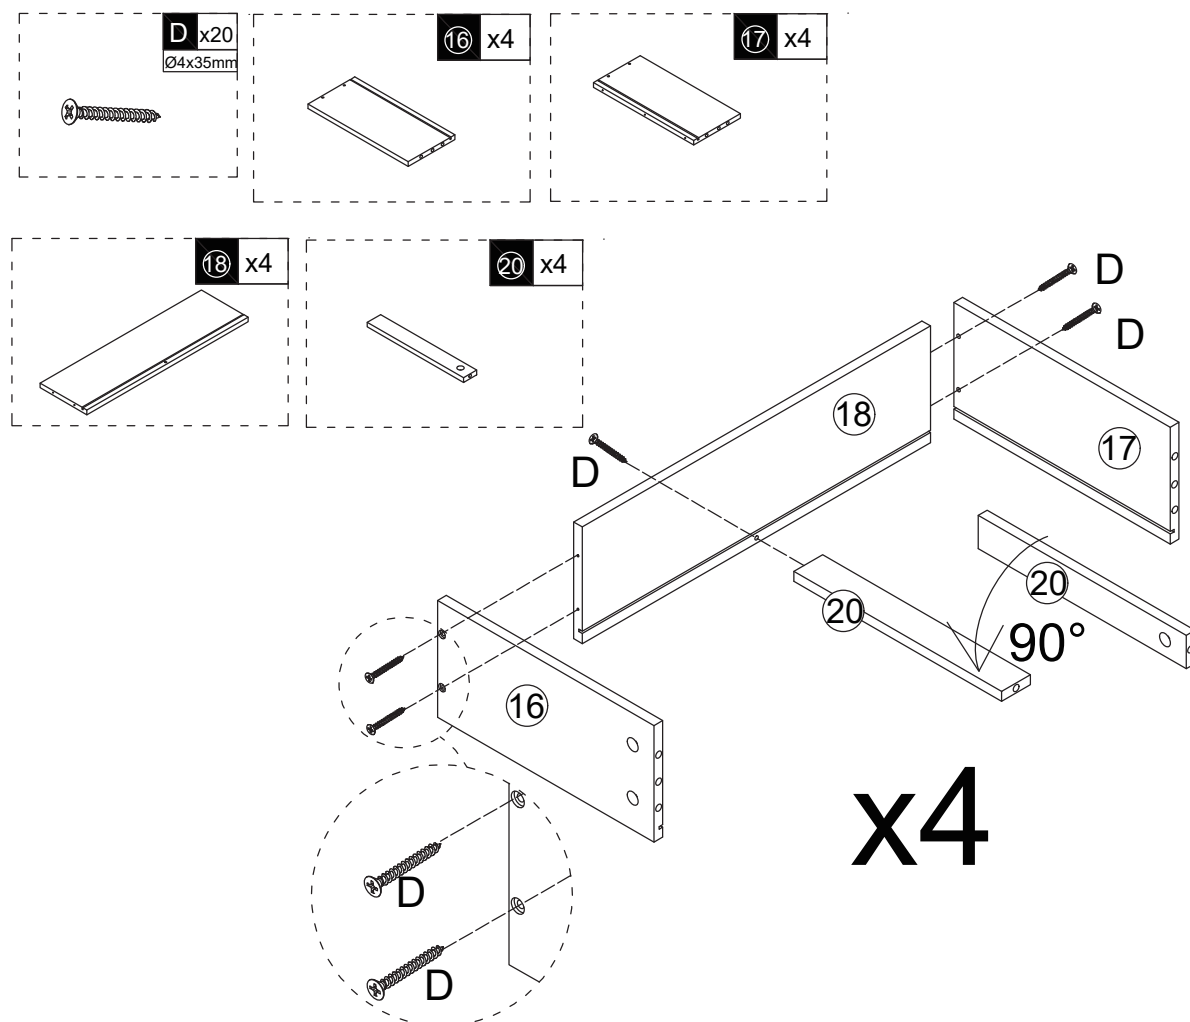


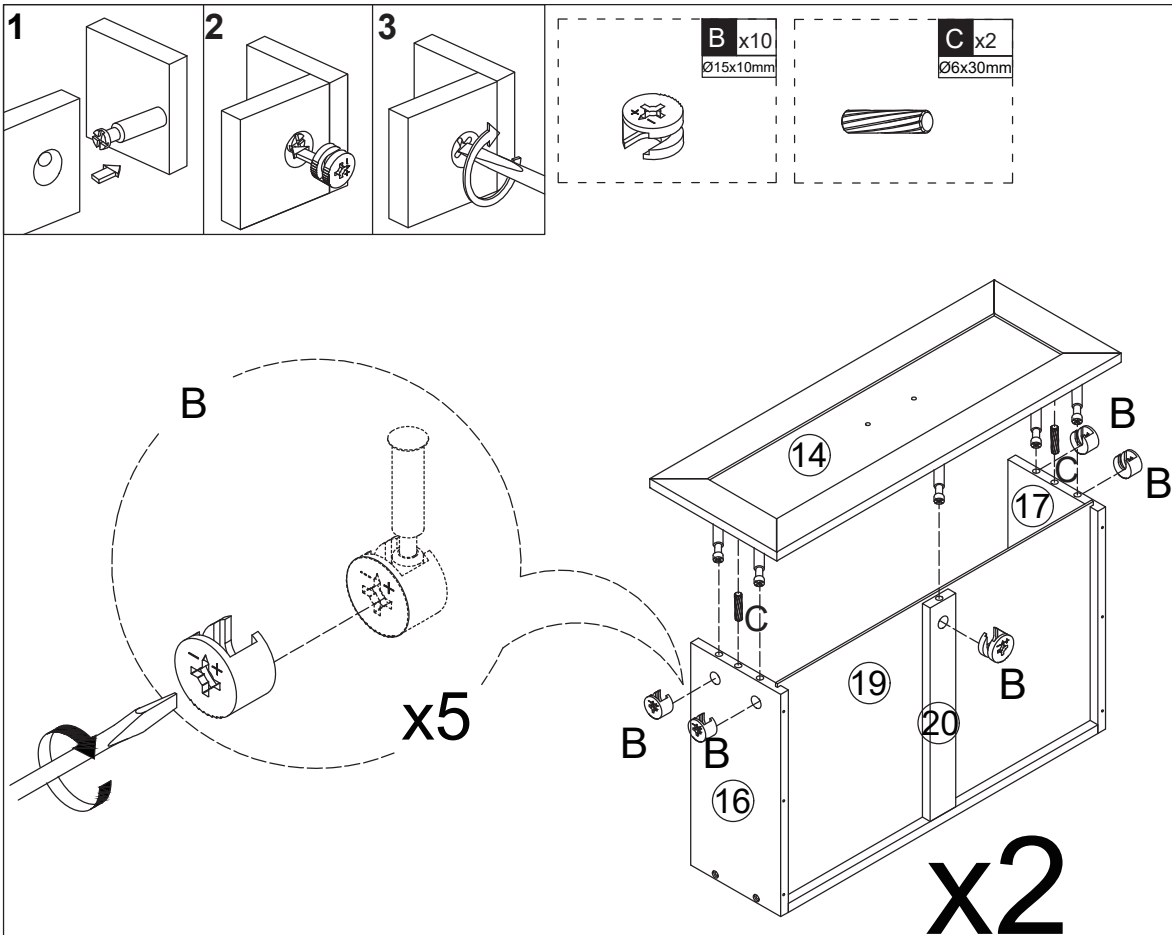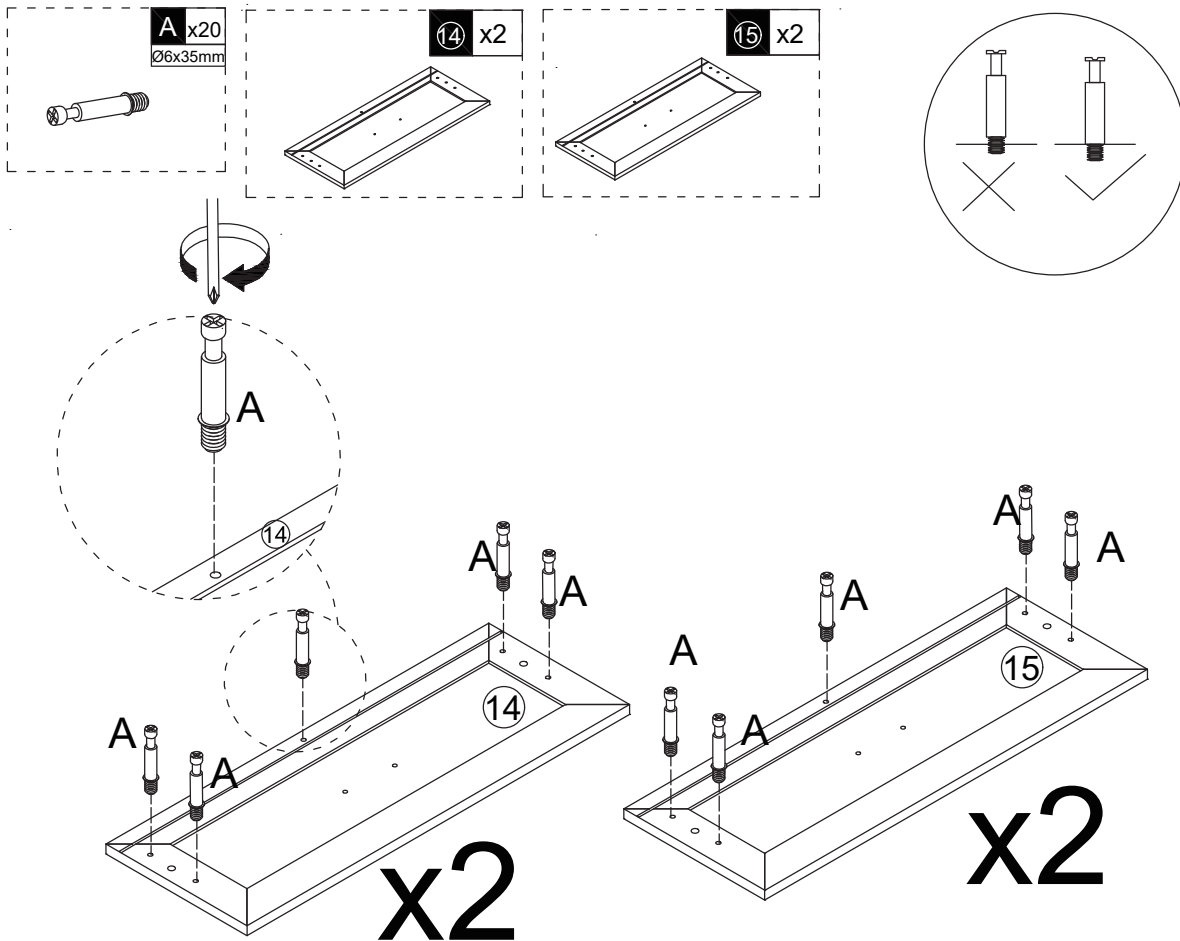

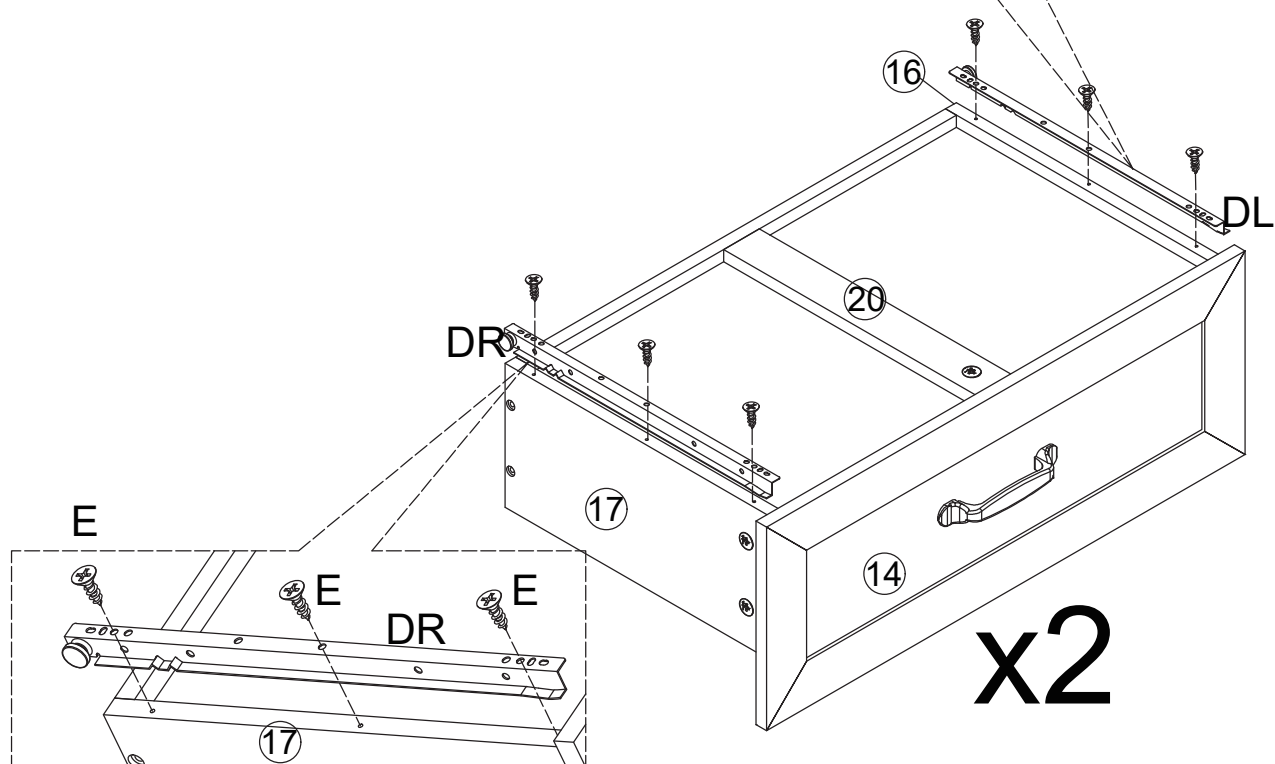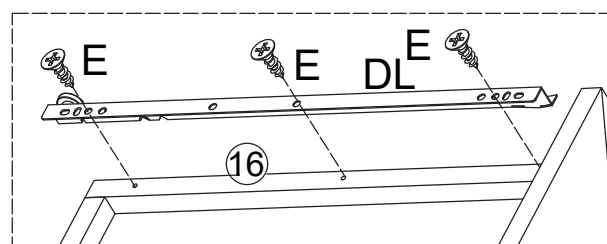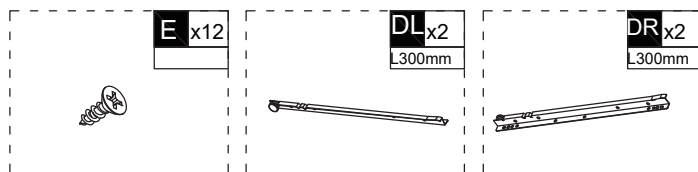
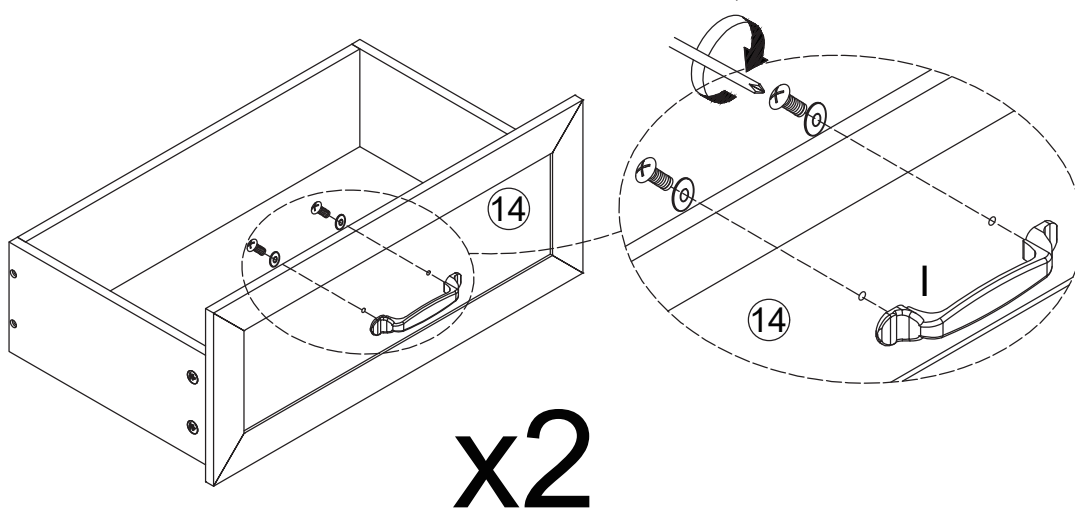
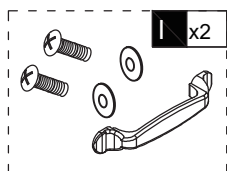


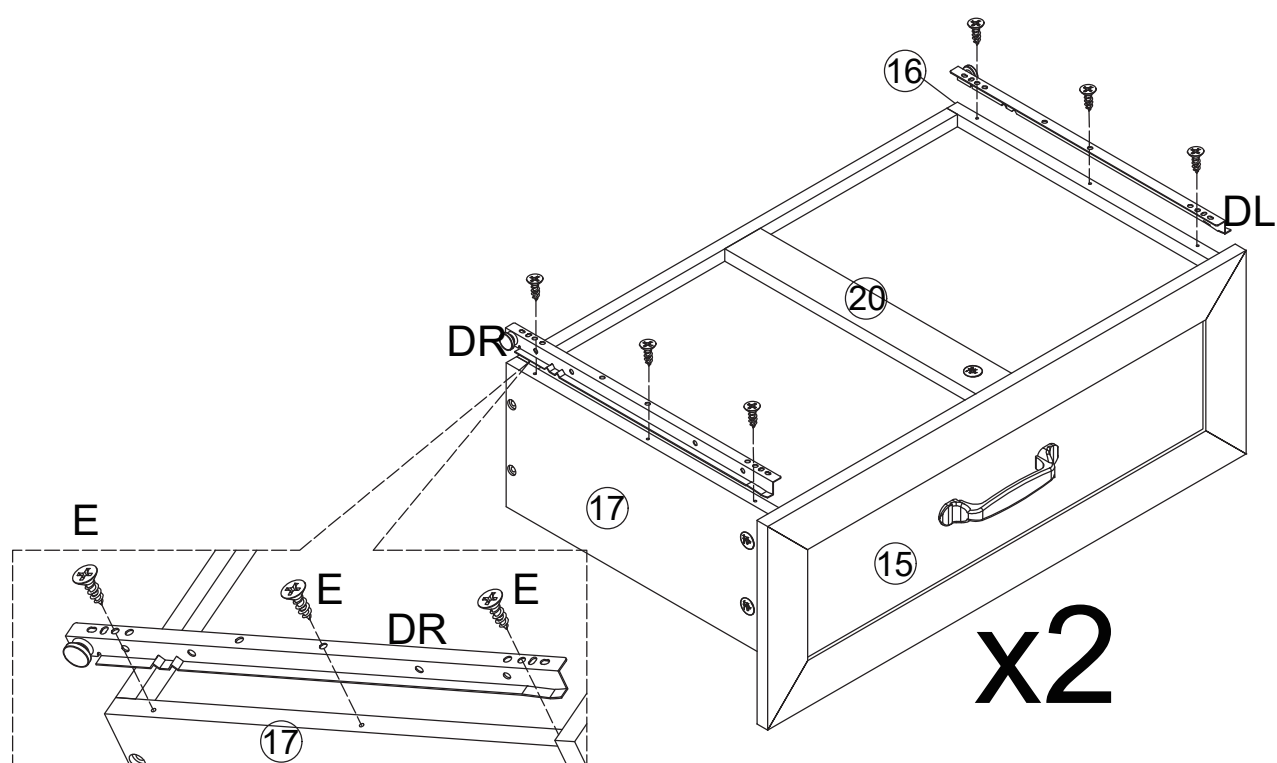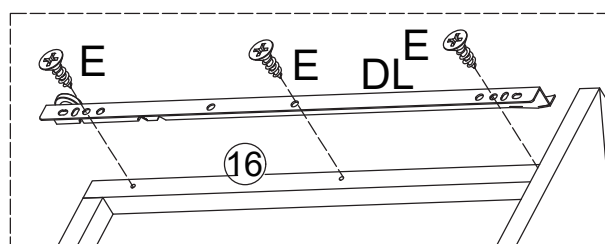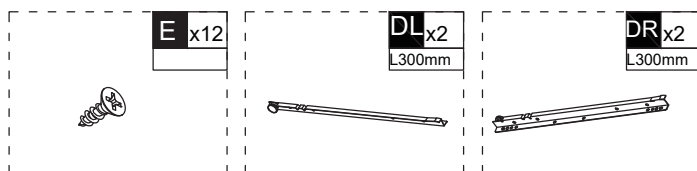

 (1)

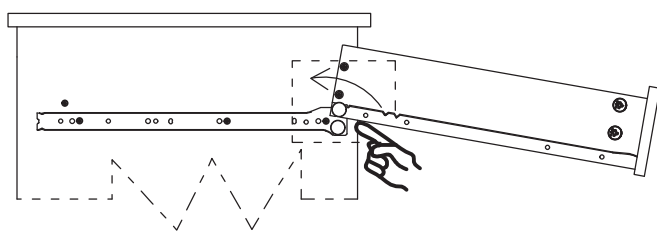

   (2)

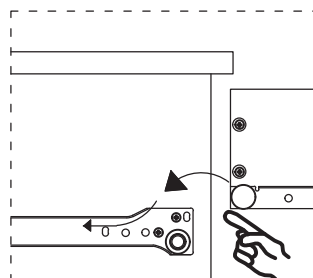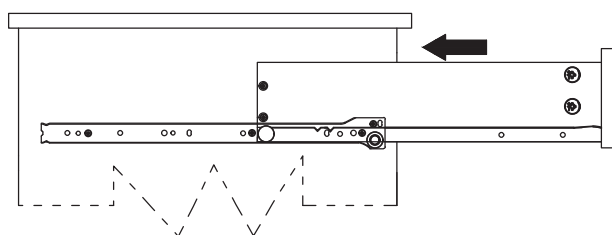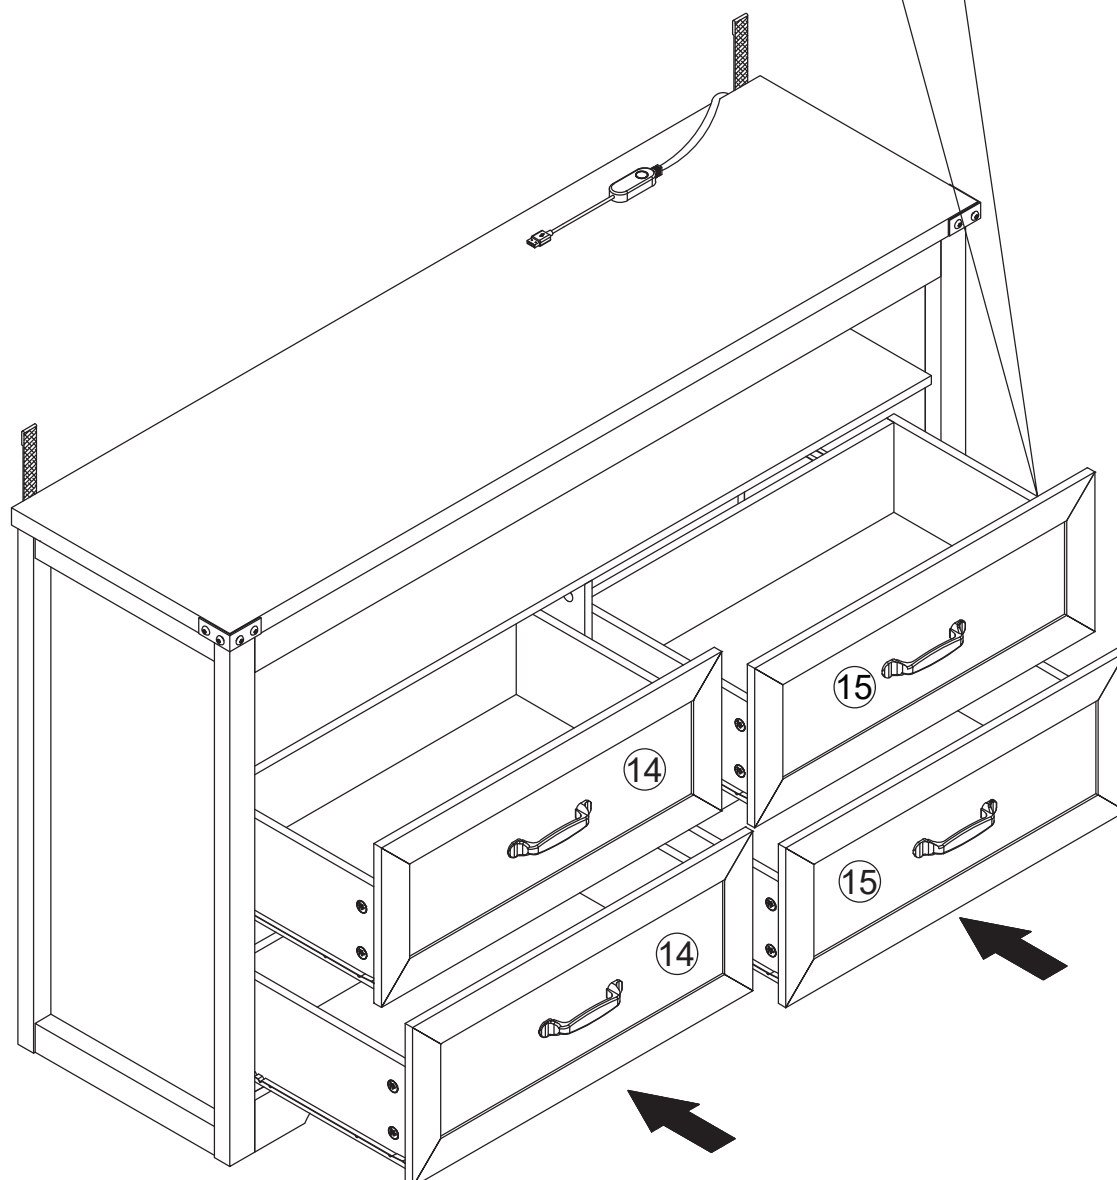**x4**

D x2
Ø4x35mmN x2
Ø6x30mm

WALL

I x2

WALL

drilling hole
Ø6x30mm

II x2

WALL

N

III x2

Power supply

WALL

- (1) Please mark two locations for drilling holes on the wall based on the actual situation of the cabinet and the user.
- (2) Choose the size of the drill bit according to the size of the accessory (N), and use an electric drill to drill the size of the accessory (N) on the wall.
- (3) Use a hammer to hammer the accessory (N) onto the position of the electric drill just now.
- (4) Place the cabinet in the appropriate position and use screws (D) to pass through the anti tipping cloth strip (L) and lock it with the accessory (N) to prevent the cabinet from tipping over!

N L D

Scan QR code to download
APP controller

OR

Flip to the other side to
find the control button

G