




INSTALLATION

Product Manual

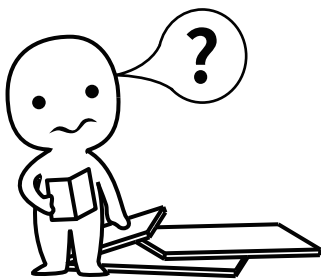


IMPORTANT INFORMATION!

please read the entire manual before starting to assemble and/or using this product. follow the manual thoroughly and keep it for further reference.

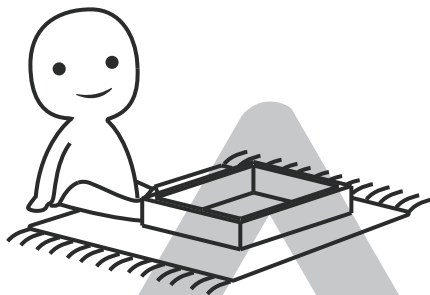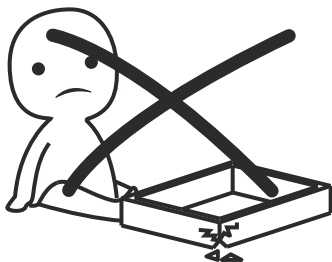



AVOID SCRATCHES!

In order to avoid scratching this furniture should be assembled on a soft layer-could be a rug.

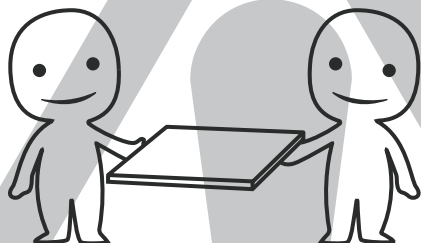

IMPROVE EFFICIENCY !

 Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.

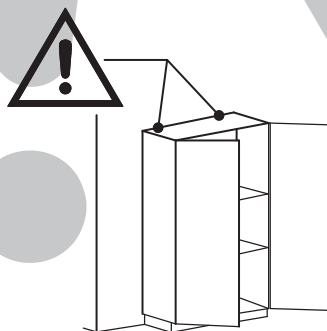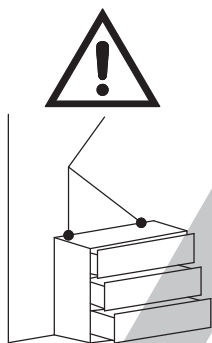

ANTI-TOPPLE WARNING !

 
Overturned furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.

IMPORTANT !




It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly, and once every 3 months - in order to assure stability through-out the lifespan of the product.

For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag. For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.

Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.

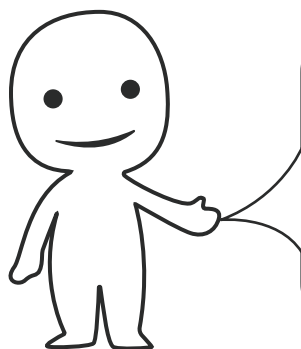


Please prepare the following tools

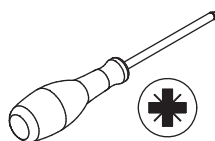   


When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size

<p>A x 36</p>  <p>CRA0635A</p>	<p>B x 36</p>  <p>CRB1595A</p>	<p>C x 28</p>  <p>CRF0830A</p>	<p>D x 6</p>  <p>CRD0425A</p>	<p>E x 4</p>  <p>25 x 16 x 9 mm</p>
<p>F x 4</p>  <p>Ø 17.5 x 10 mm</p>	<p>G x 4</p>  <p>Ø 18 x 10 mm</p>	<p>H x 4</p>  <p>CRE3516A</p>	<p>J x 2</p>  <p>300 x 195 x 22 mm</p>	<p>K x 2</p>  <p>300 x 195 x 22 mm</p>
<p>L x 28</p>  <p>CRD3514A</p>	<p>M x 12</p>  <p>CRD3516A</p>	<p>N x 6</p>  <p>Ø 29 x 25 mm</p>	<p>P x 6</p>  <p>CRE0420A</p>	<p>Q x 8</p>  <p>CRD0430A</p>
<p>R x 2</p>  <p>200 mm</p>	<p>S x 18</p>  <p>CRE0312A</p>	<p>T x 4</p>  <p>Ø 15 mm</p>	<p>U x 1</p> 	

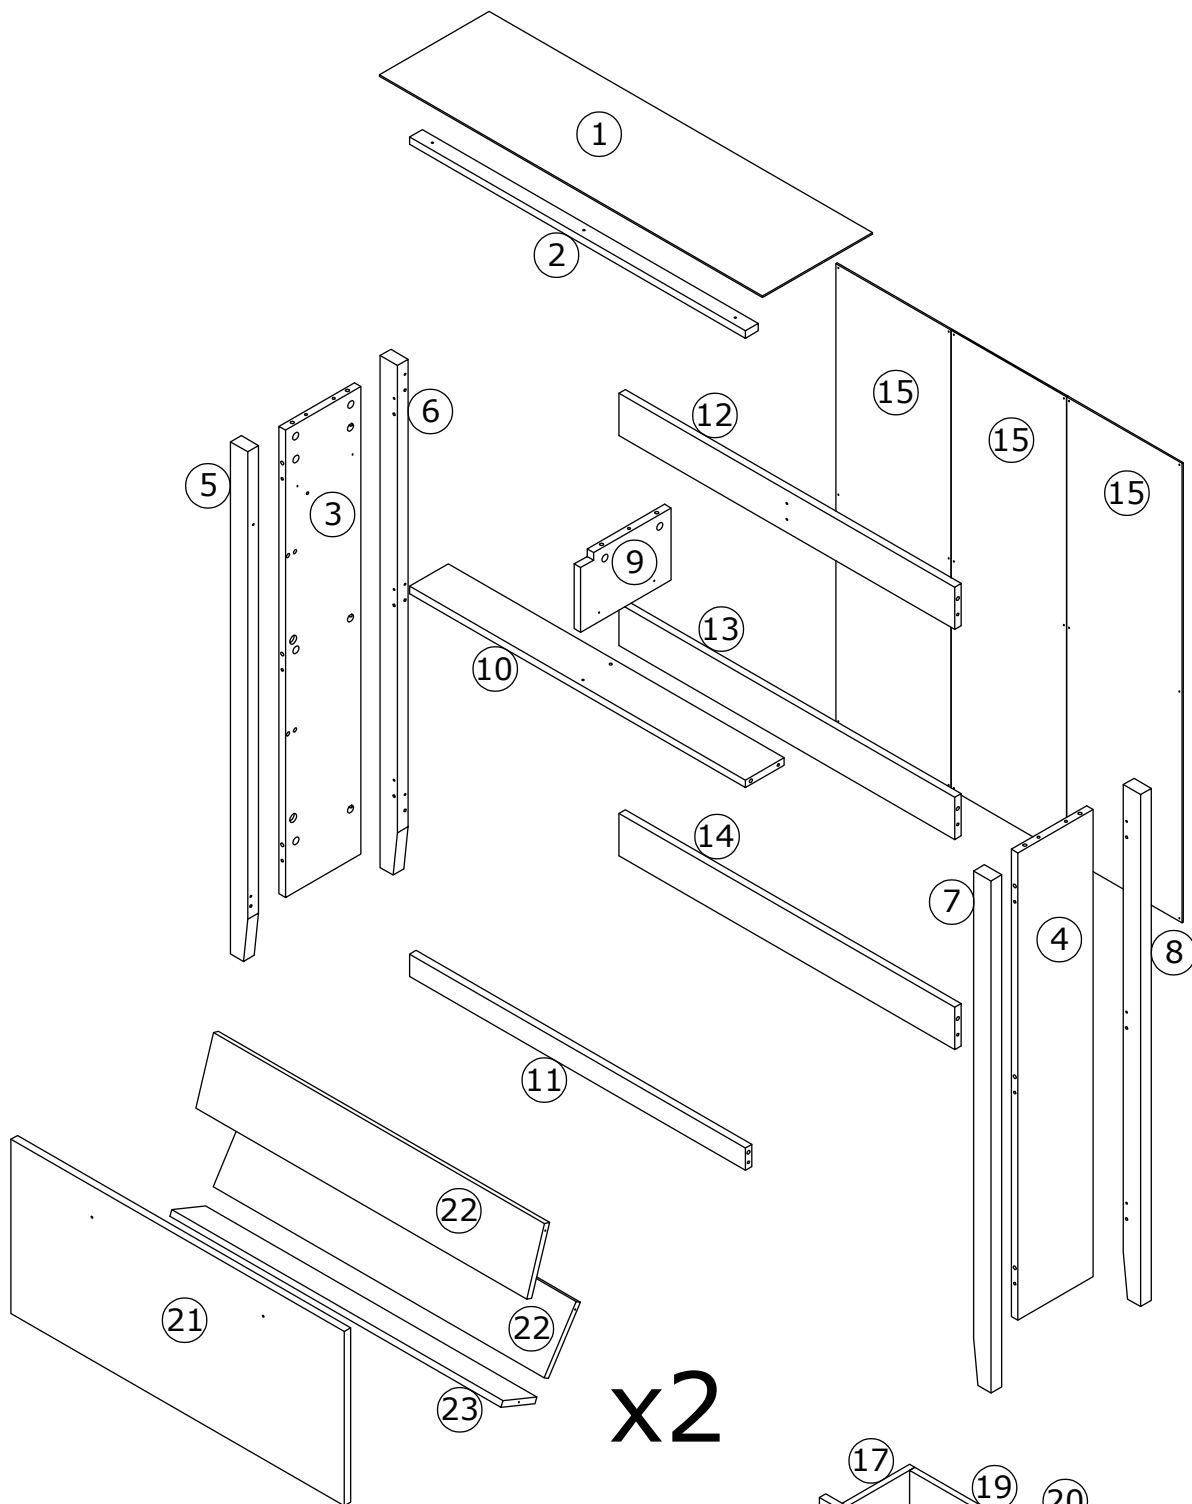 

x2

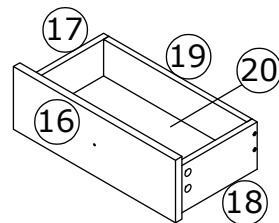 

x2

 
⚠ WARNING





Children have died from furniture tipover. To reduce the risk of furniture tipover:


- ALWAYS install Anti-tip device provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.

*This is a permanent label.
Do not remove!*

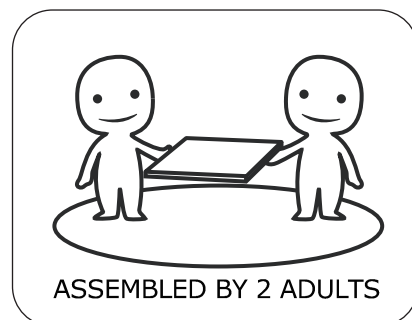


1



 
<p>E x 4</p>  <p>25 x 16 x 9 mm</p>	<p>F x 4</p>  <p>Ø 17.5 x 10 mm</p>
--	--

 


 
Knock part(E,F) into corresponding holes in plate #3 and #4 as shown.

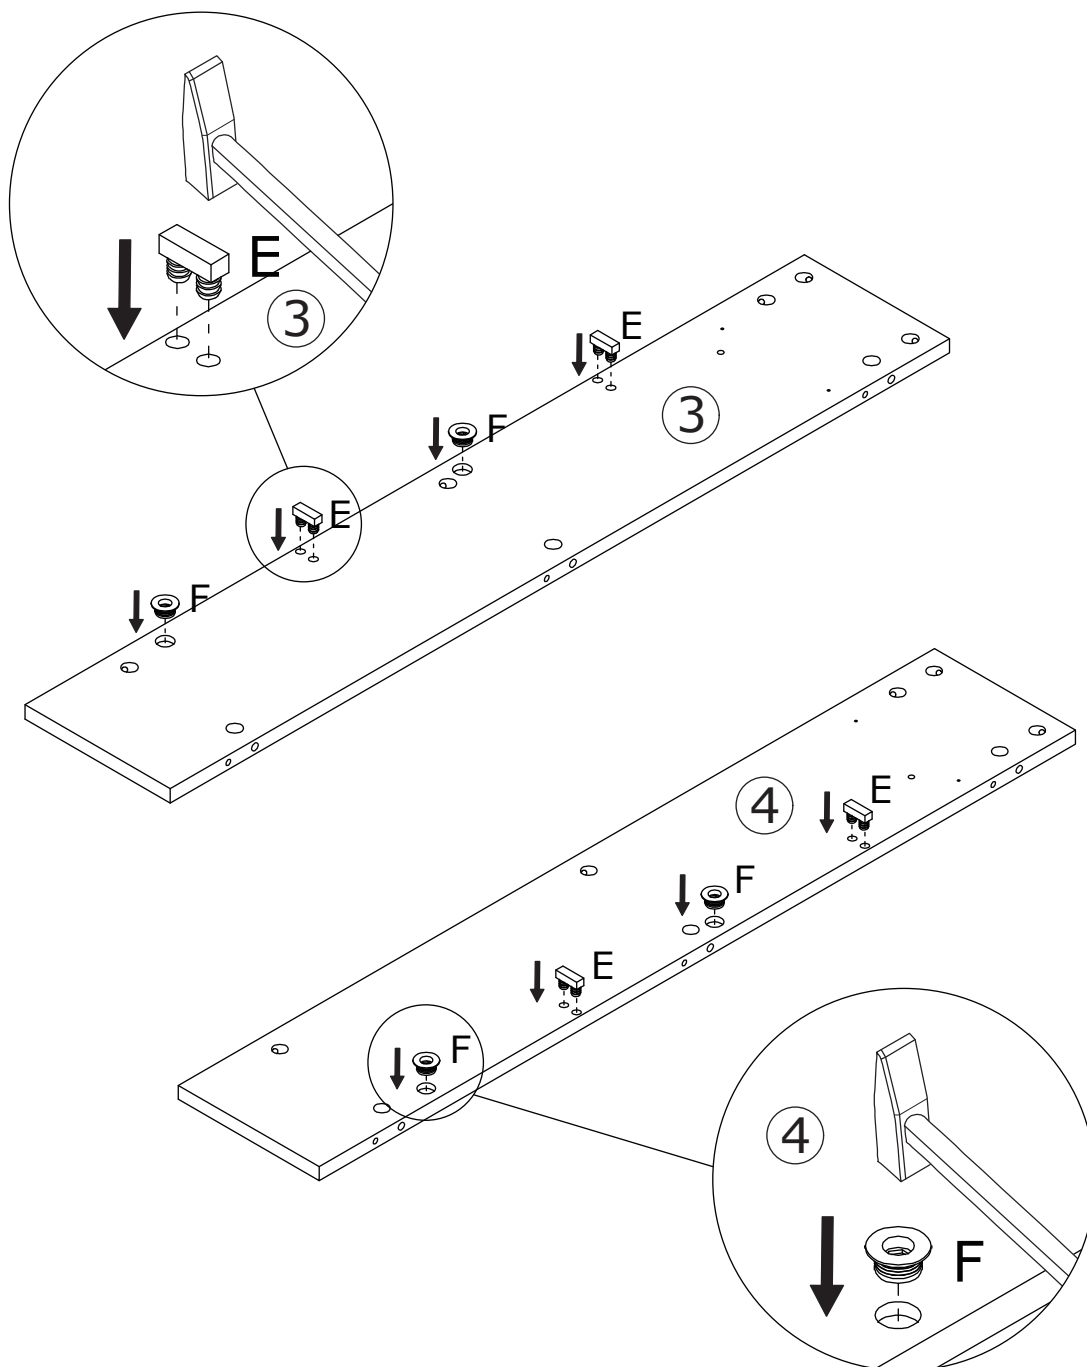




2

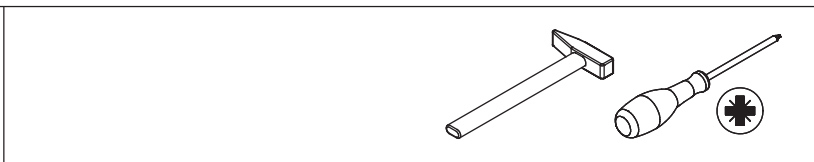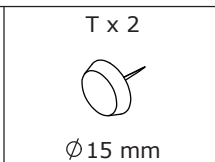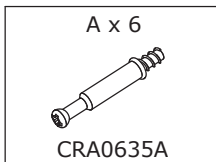   


 
 
Screw quickfit screw(A) into corresponding holes in plate #5 and #6 as shown. Knock foot peg(T) to sides of plate #5 and #6 as shown.

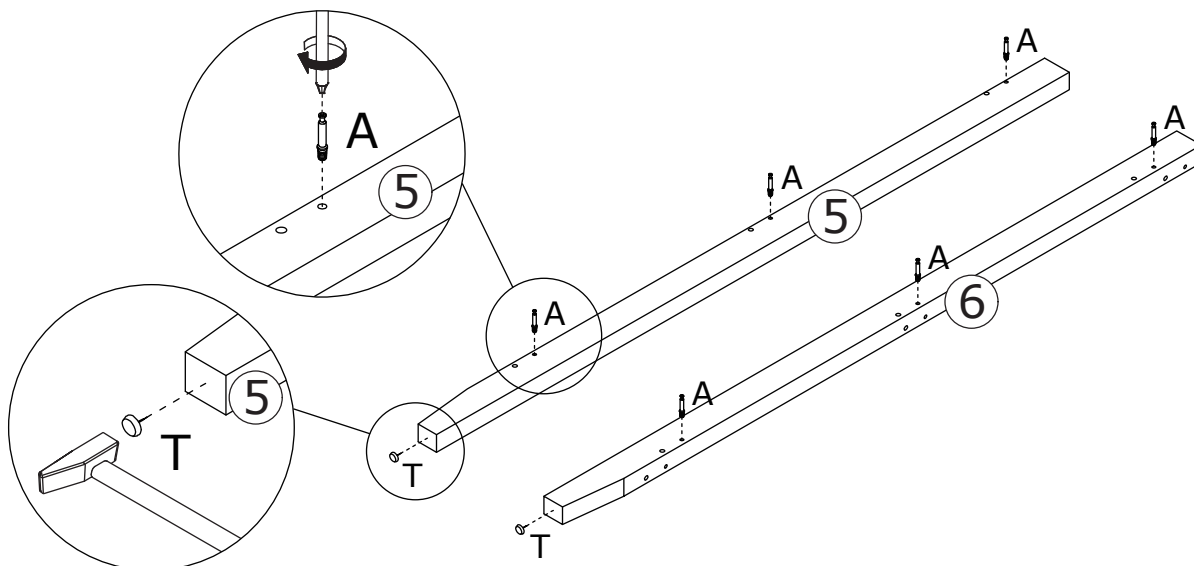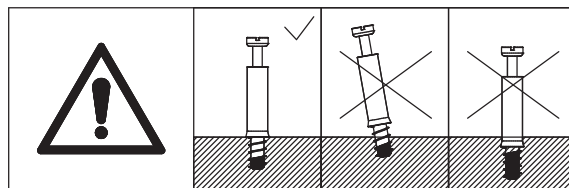


3

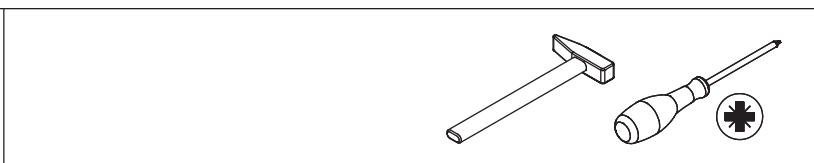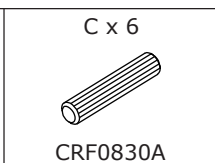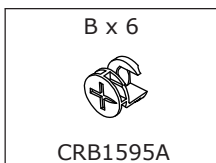   

   Connect plate #5 and #6 to plate #3 using wooden dowel(C) and turn cam lock(B) in plate #3 clockwise to tighten as shown.


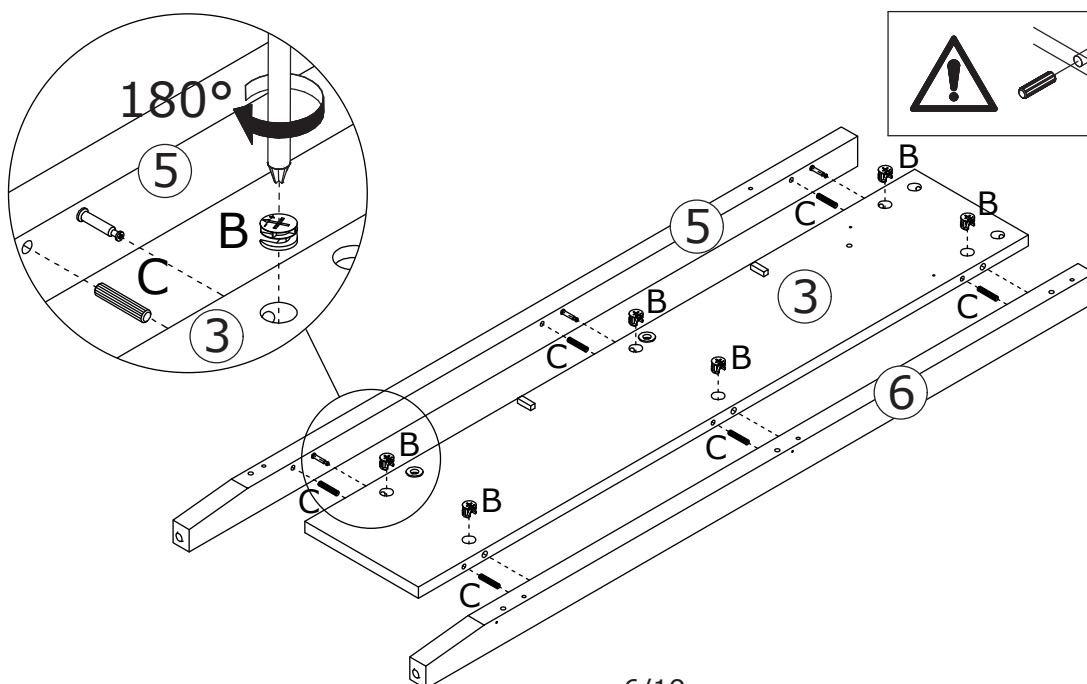
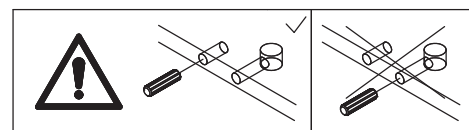
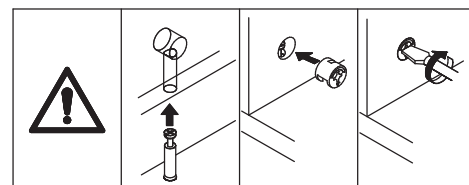


4

 


Fix slide rail(CL) to plate #3 with screw(L) as shown.

    Screw quickfit screw(A) into corresponding holes in plate #5 and #6 as shown.

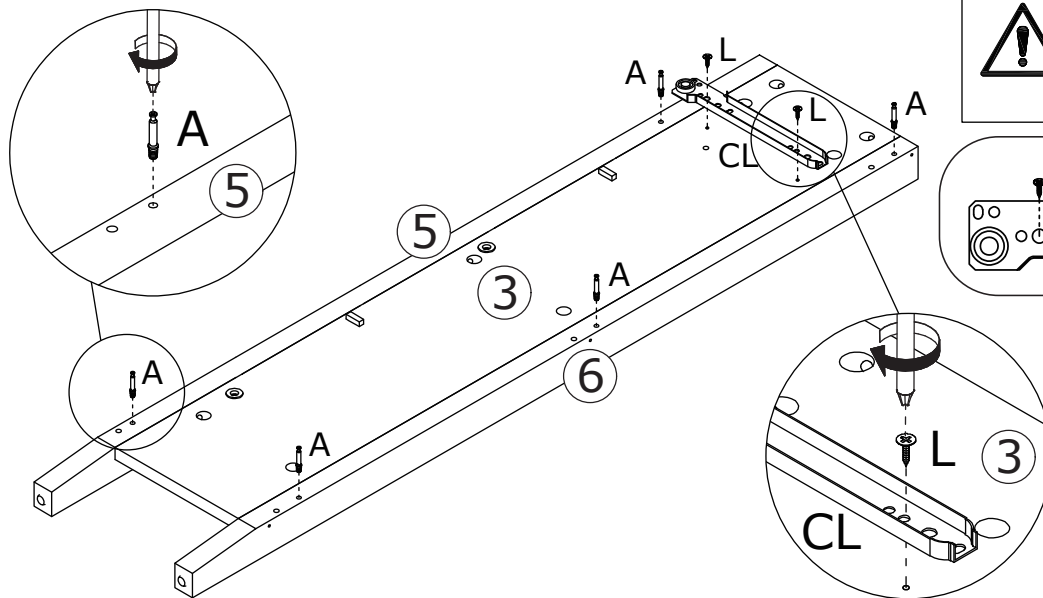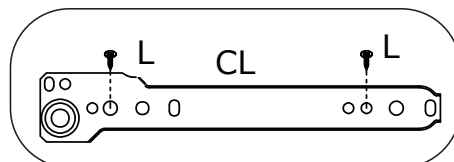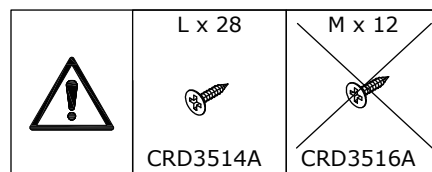
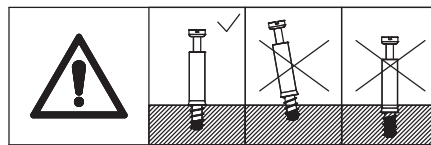


5

 

Screw quickfit screw(A) into corresponding holes in plate #7 and #8 as shown.

   
 
 
Knock foot peg(T) to sides of plate #7 and #8 as shown.

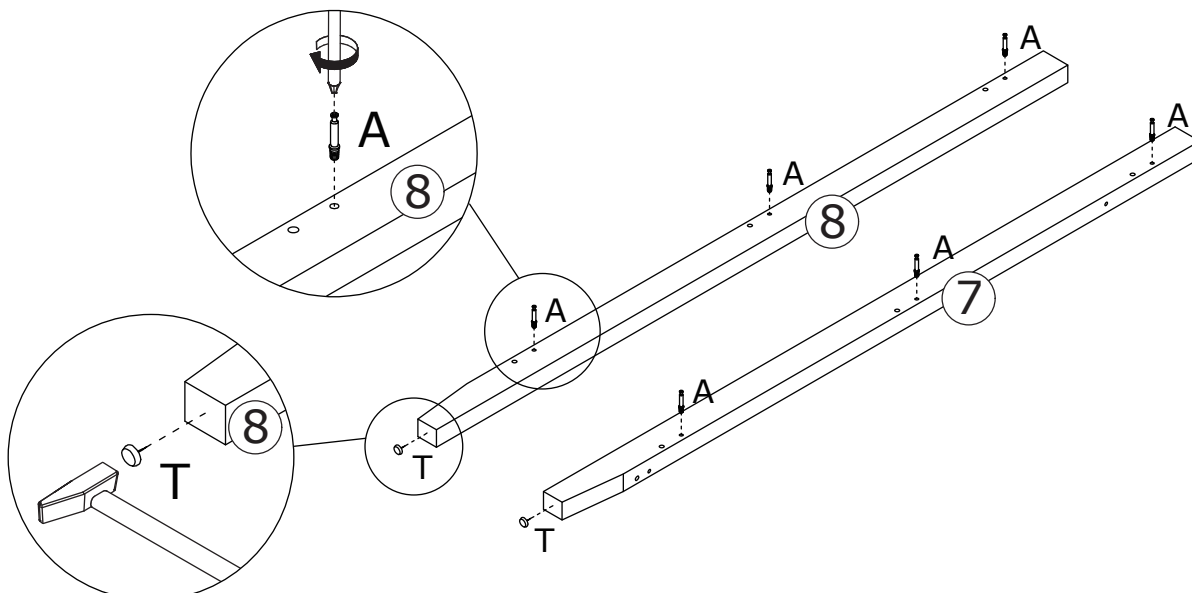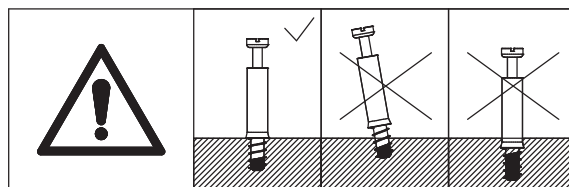

 

 

6

<p>B x 6</p>  <p>CRB1595A</p>	<p>C x 6</p>  <p>CRF0830A</p>	
--	--	---




Connect plate #7 and #8 with plate #4 using wooden dowel(C) and turn cam lock(B) in plate #4 clockwise to tighten as shown.

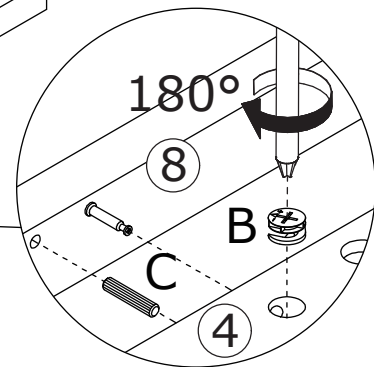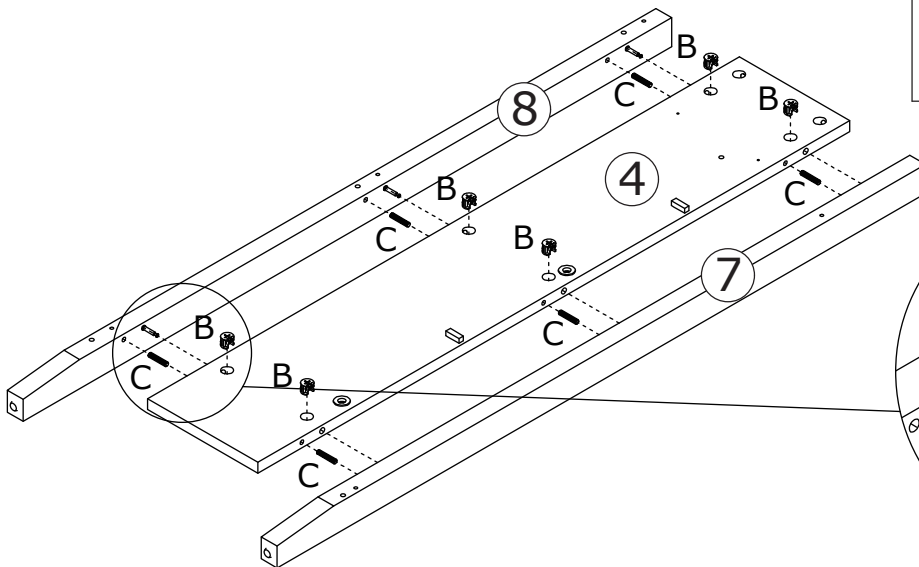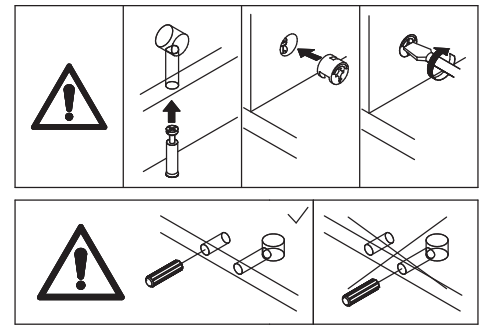

7

<p>A x 5</p>  <p>CRA0635A</p>	<p>L x 2</p>  <p>CRD3514A</p>	<p>R x 1</p>  <p>200 mm</p>	
--	--	--	---

   Fix slide rail(CR) to plate #4 with screw(L) as shown.
Screw quickfit screw(A) into corresponding holes in plate #7 and #8 as shown.

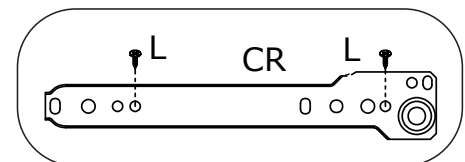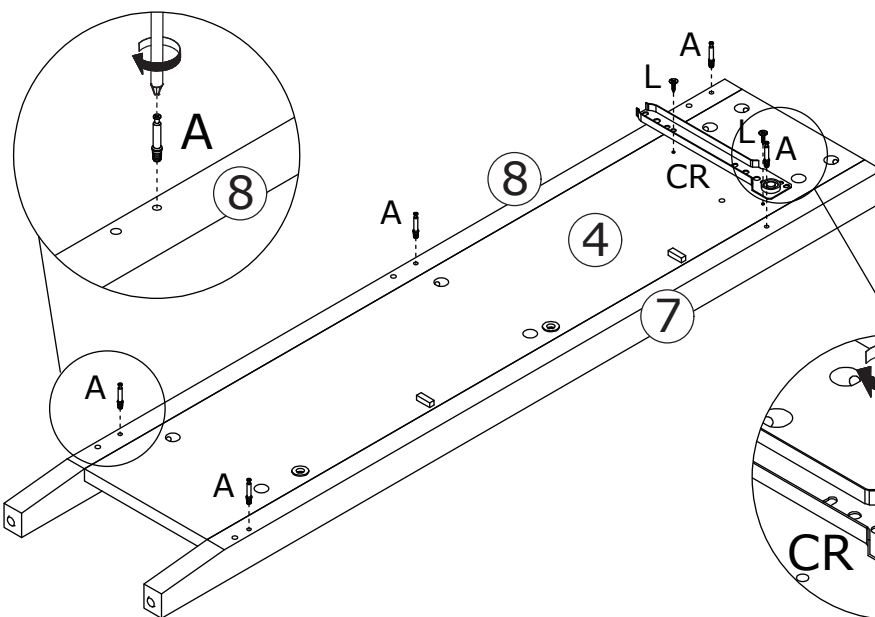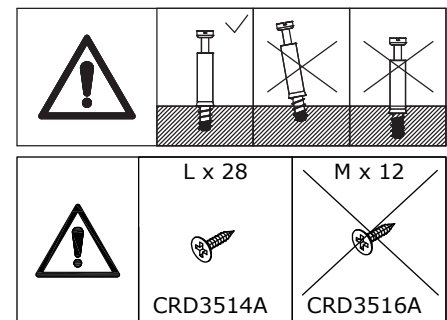


8

B x 5




CRB1595A



 
C x 5



CRF0830A

 

   Attach plate #10, #11, #12, #13 and #14 to plate #5, #3 and #6 with wooden dowel(C), and then turn cam lock(B) in plate #10, 11, 12, 13, 14 clockwise to tighten as shown.

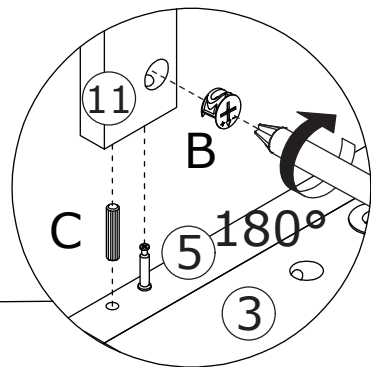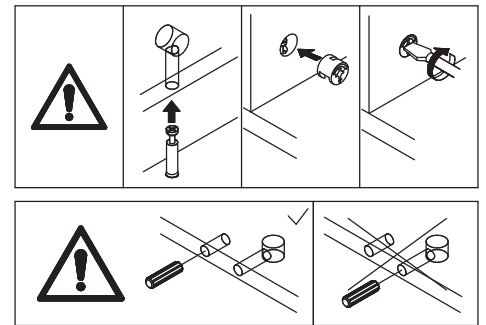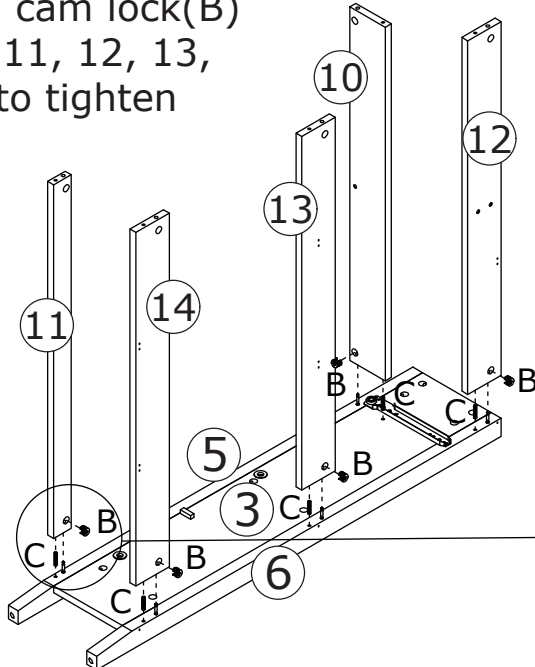

9

B x 5




CRB1595A

  
 
 
C x 5






 
CRF0830A



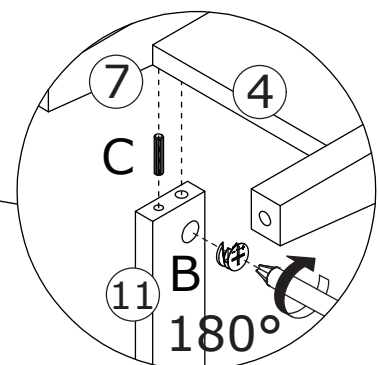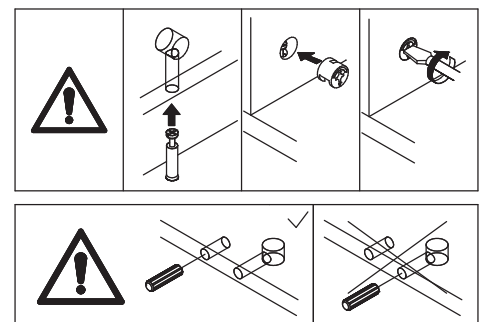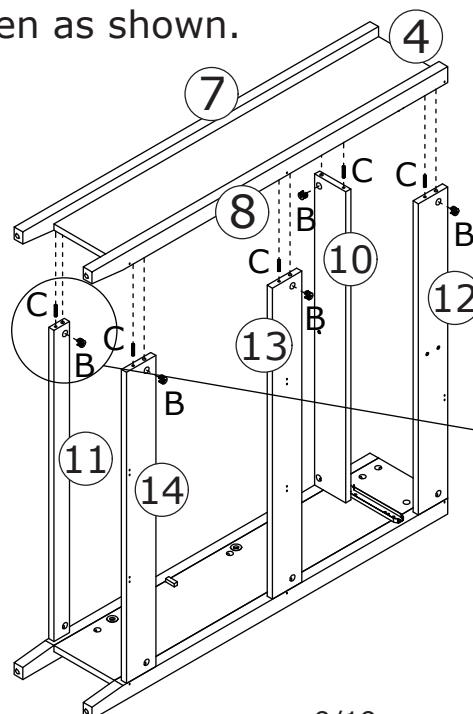


Attach plate #7, #4 and #8 to the component with wooden dowel(C), and then turn cam lock(B) in plate #10, 11, 12, 13, 14 clockwise to tighten as shown.





10

<p>L x 4</p>  <p>CRD3514A</p>	<p>R x 1</p>  <p>CL 200 mm</p>	<p>R x 1</p>  <p>CR 200 mm</p>	
--	---	---	---

Fix slide rail(CR) to plate #9 with screw(L) at first.
Flip the plate, fix rail(CL) as shown.



	<p>L x 28</p>  <p>CRD3514A</p>	<p>M x 12</p>  <p>CRD3516A</p>
---	---	---

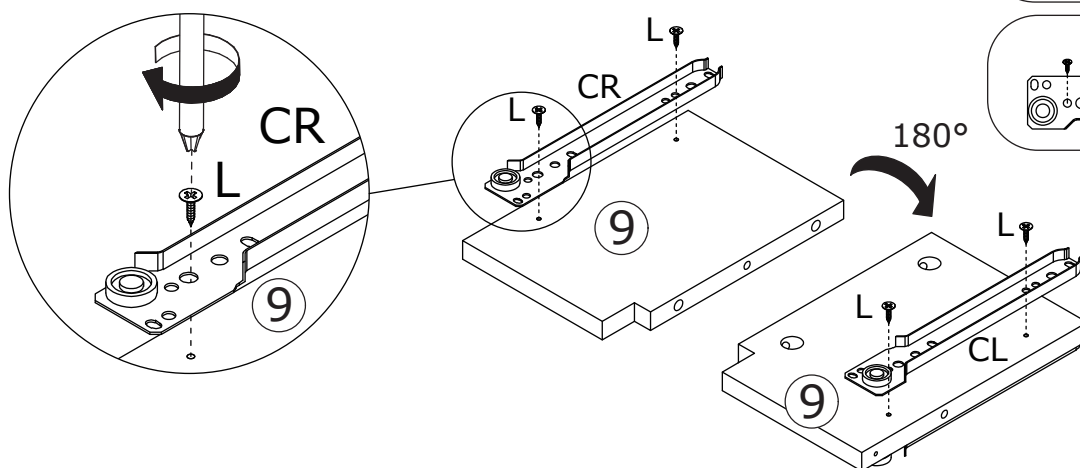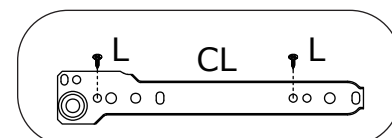  

11

<p>C x 1</p>  <p>CRF0830A</p>	<p>D x 1</p>  <p>CRD0425A</p>	
--	--	---

  Attach plate #9 to plate #10 with wooden dowel(C), and fix using screw(D) as shown.

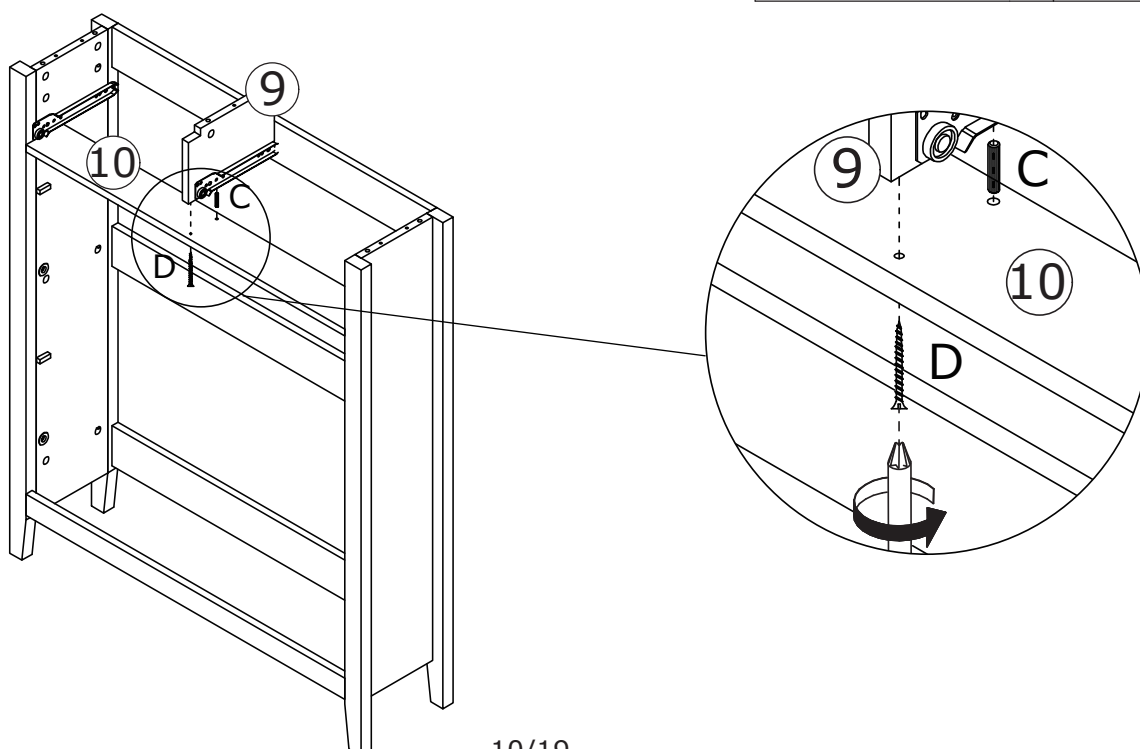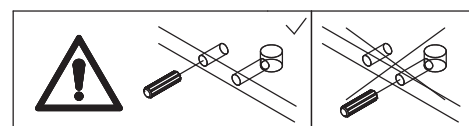


12



D x 2



 CRD0425A



  Fix plate #9 with plate #12 using screw(D) as shown.

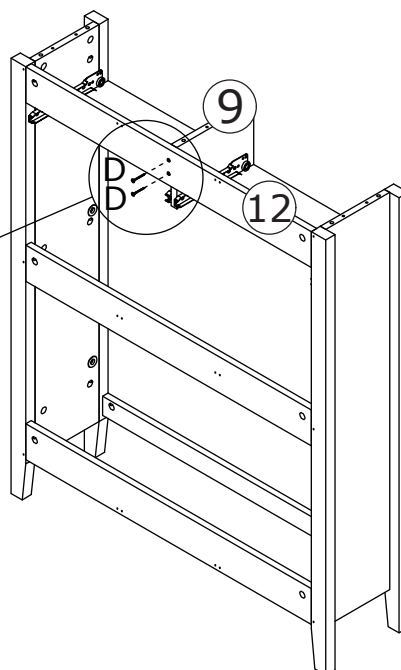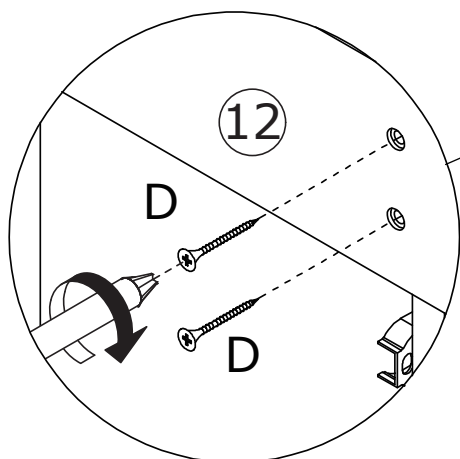


13



S x 18



 CRE0312A




  Fix back plate #15 using screw(S) as shown.

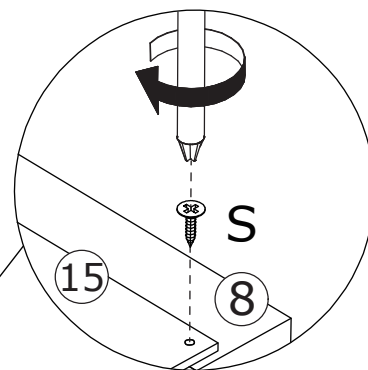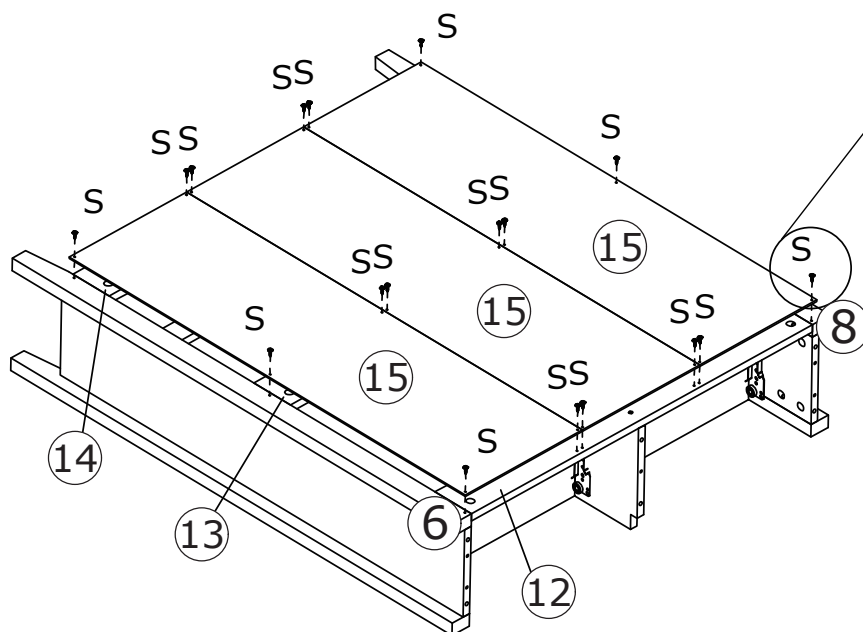


14


 
A x 6



CRA0635A

 

  Screw quickfit screw(A) into plate #1 as shown.

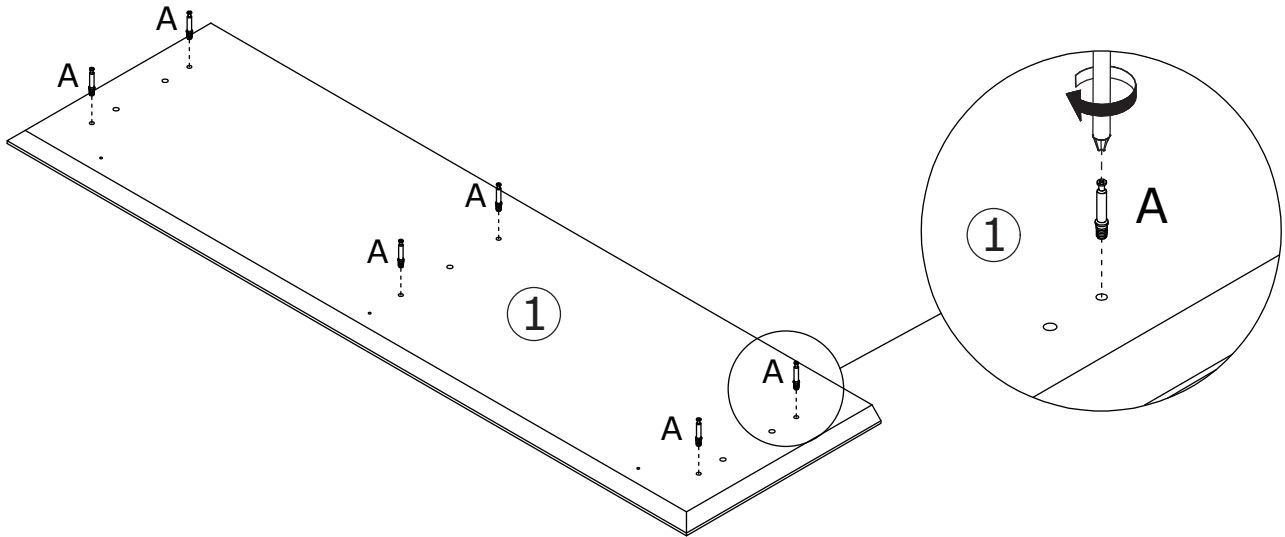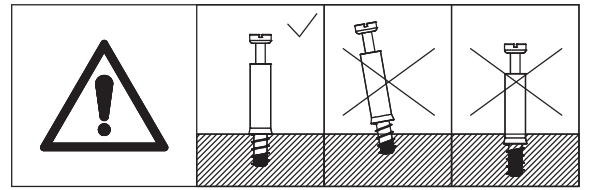


15


D x 3



 CRD0425A



 Attach plate #2 to plate #1 using screw(D) as shown.

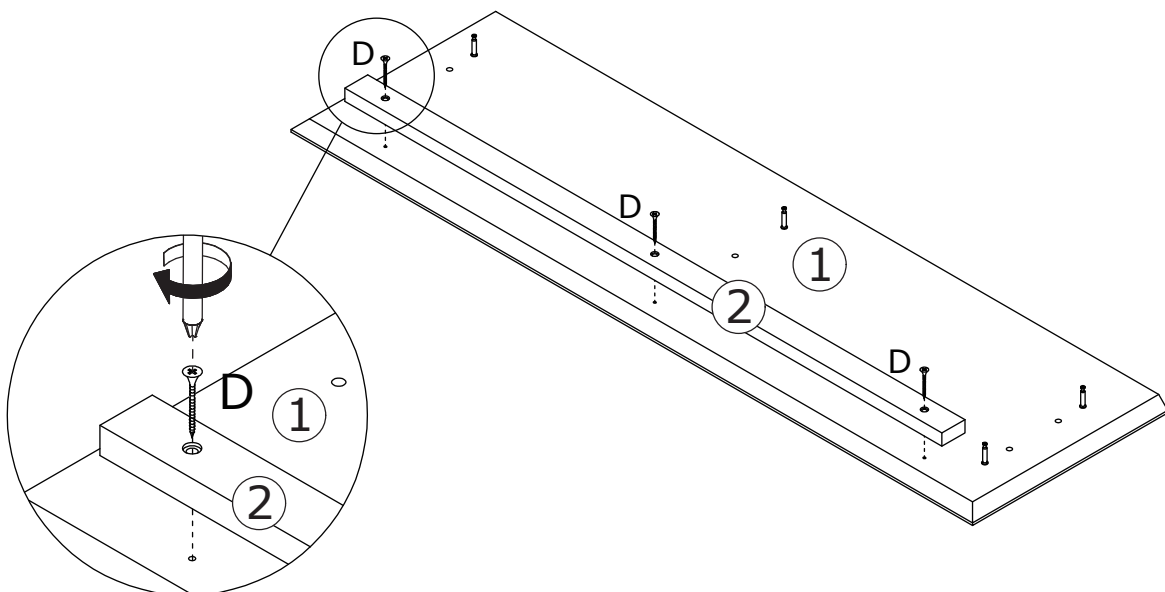


16

B x 6




CRB1595A



 
C x 5



CRF0830A

 


   Cover plate #1 to the top of the unit with wooden dowel(C) and then turn cam lock(B) in plate #3, 9, 4 clockwise to tighten as shown.

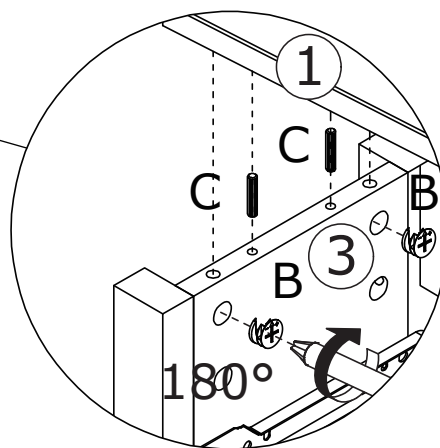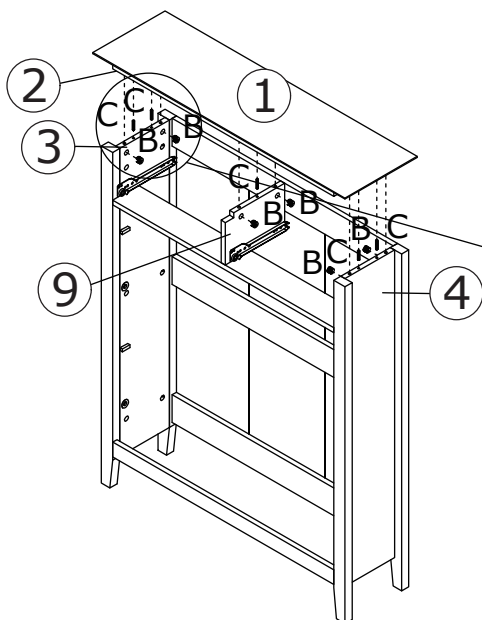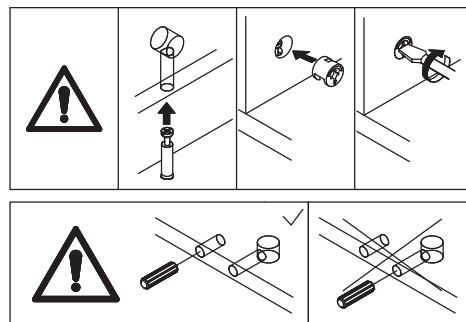

17

 K x 2




300 x 195 x 22 mm



L x 6



 CRD3514A





  Fix plastic hinge(K) to plate #21 with screw(L) as shown.

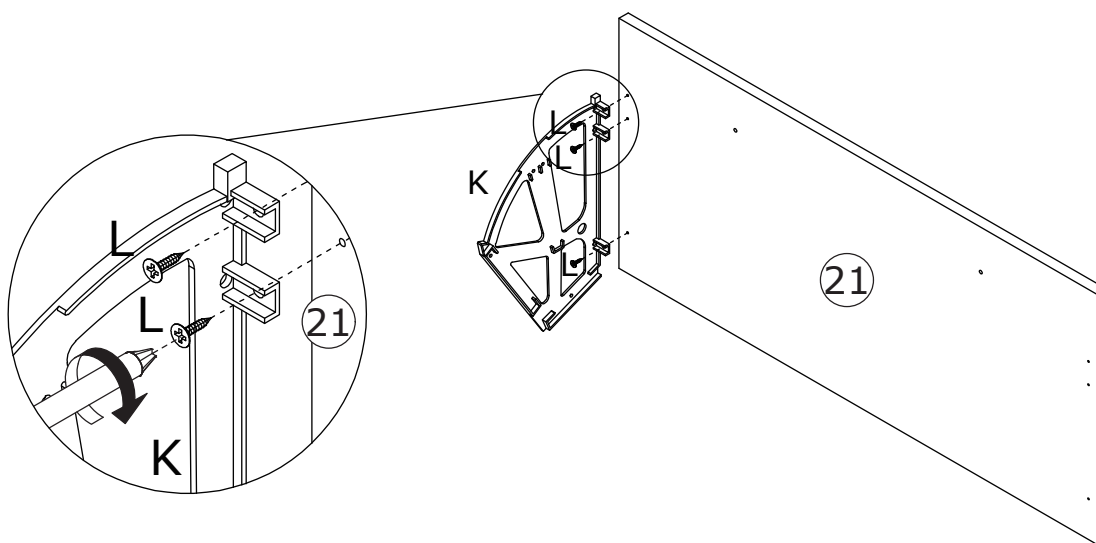
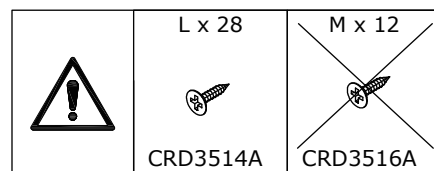


x2

 
 
18

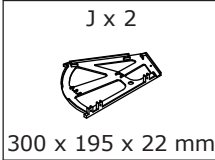

 
 
Fix plastic hinge(J) to plate #21 with screw(L) as shown.

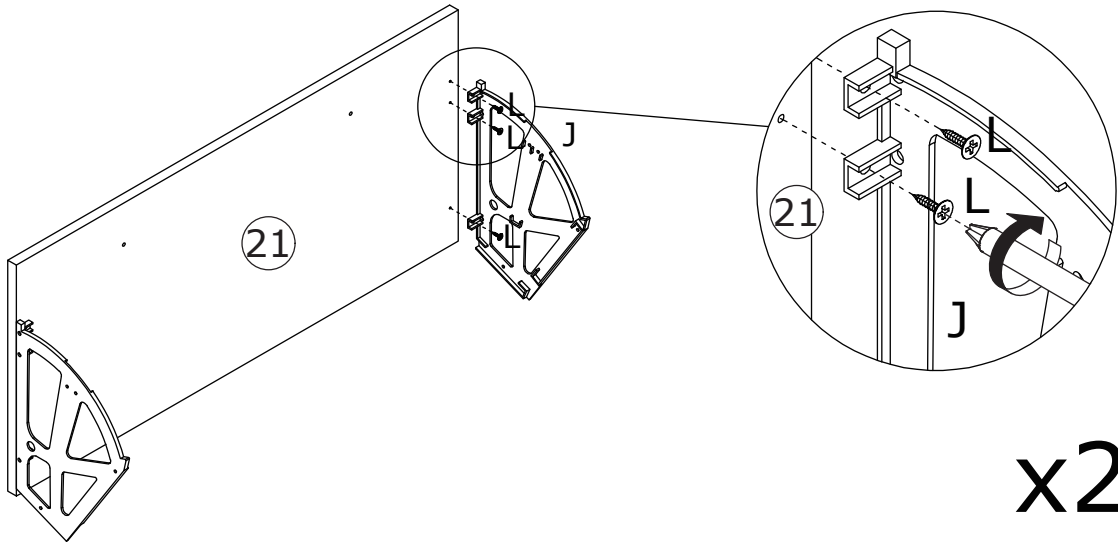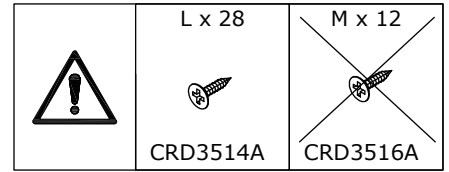

19

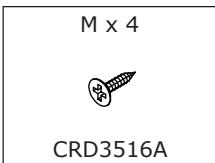  

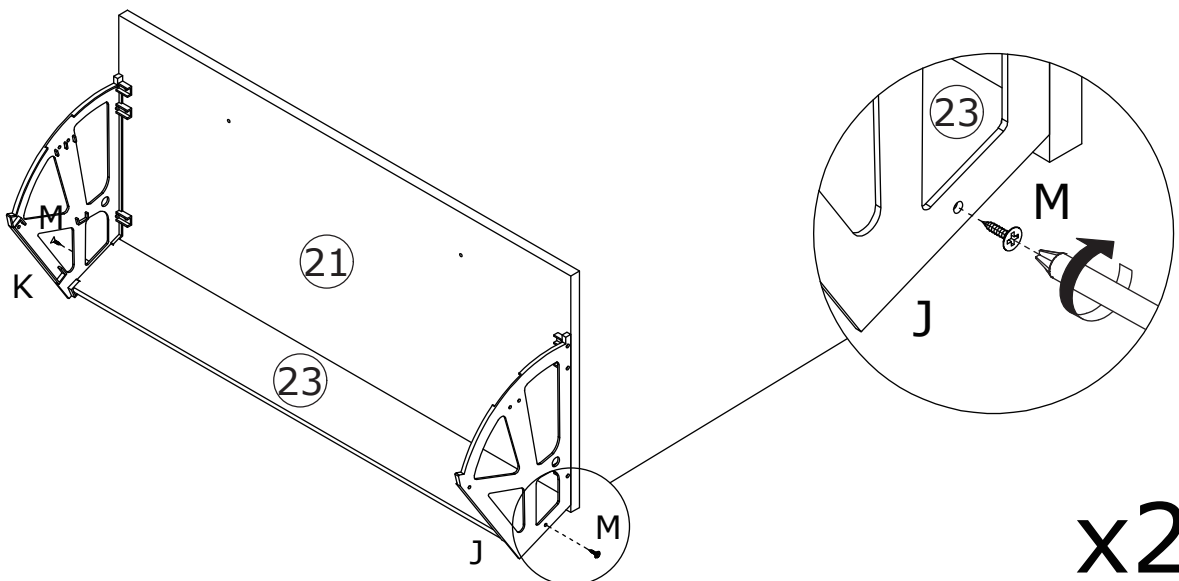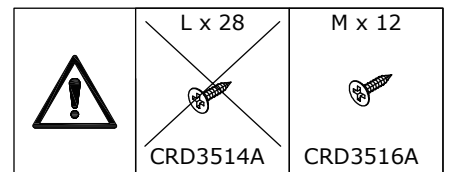  


Fix plate #23 with the two plastic hinges using screw(M) as shown.

 


20




 
M x 4  CRD3516A		
--	--	---

Fix plate #22 with the two plastic hinges using screw(M) as shown.

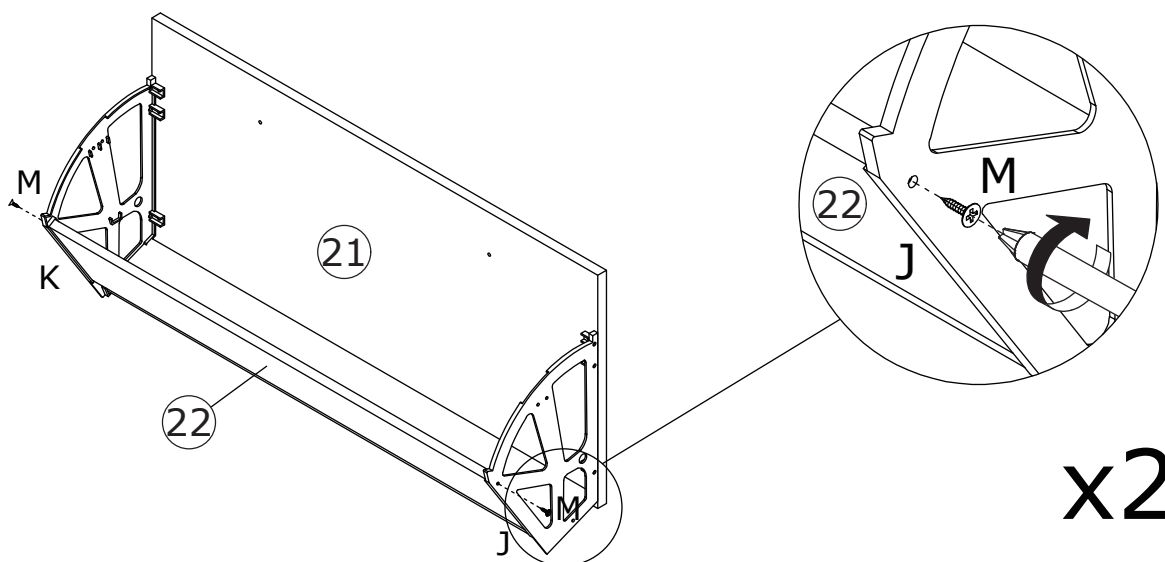


	L x 28  CRD3514A	M x 12  CRD3516A
---	---	---




21



M x 4  CRD3516A	N x 4  Ø 29 x 25 mm	P x 4  CRE0420A	
--	--	--	---

Fix another plate #22 with the two plastic hinges in middle using screw(M) as shown. Fix knob(N) to plate #21 using screw(P) as shown.


	L x 28  CRD3514A	M x 12  CRD3516A
---	---	---

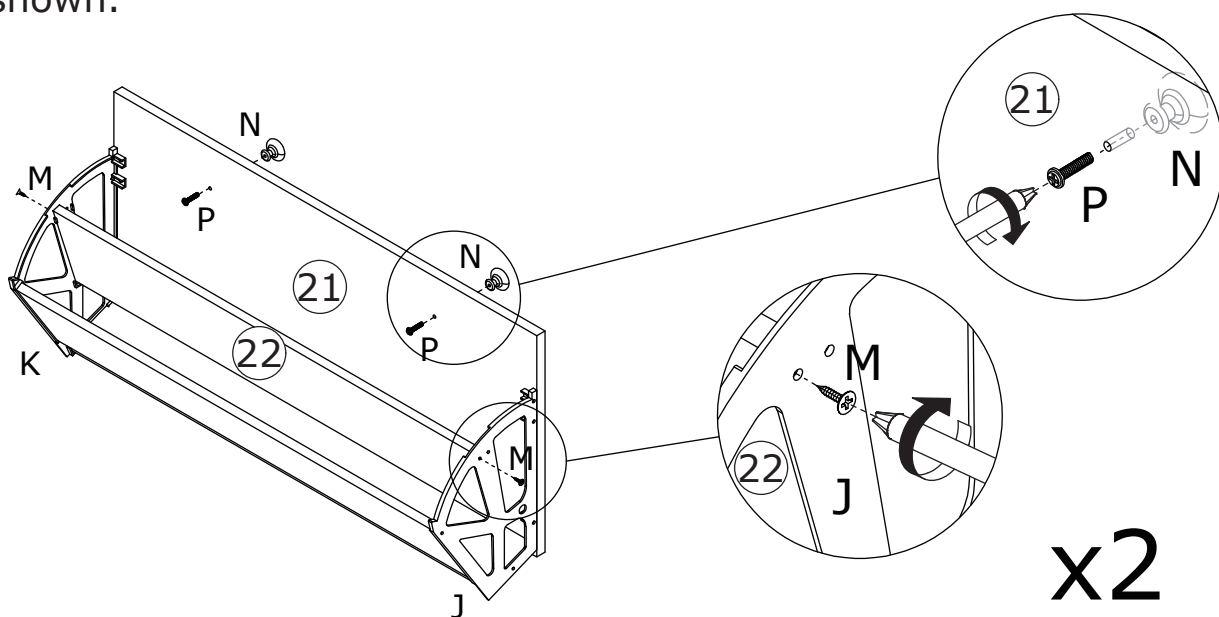 


22

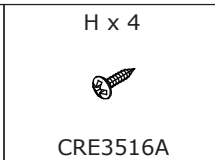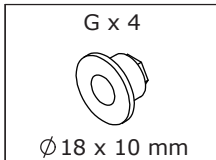  

 
Assemble the drawers, fix to side plates using part(G) with screw(H) as shown.

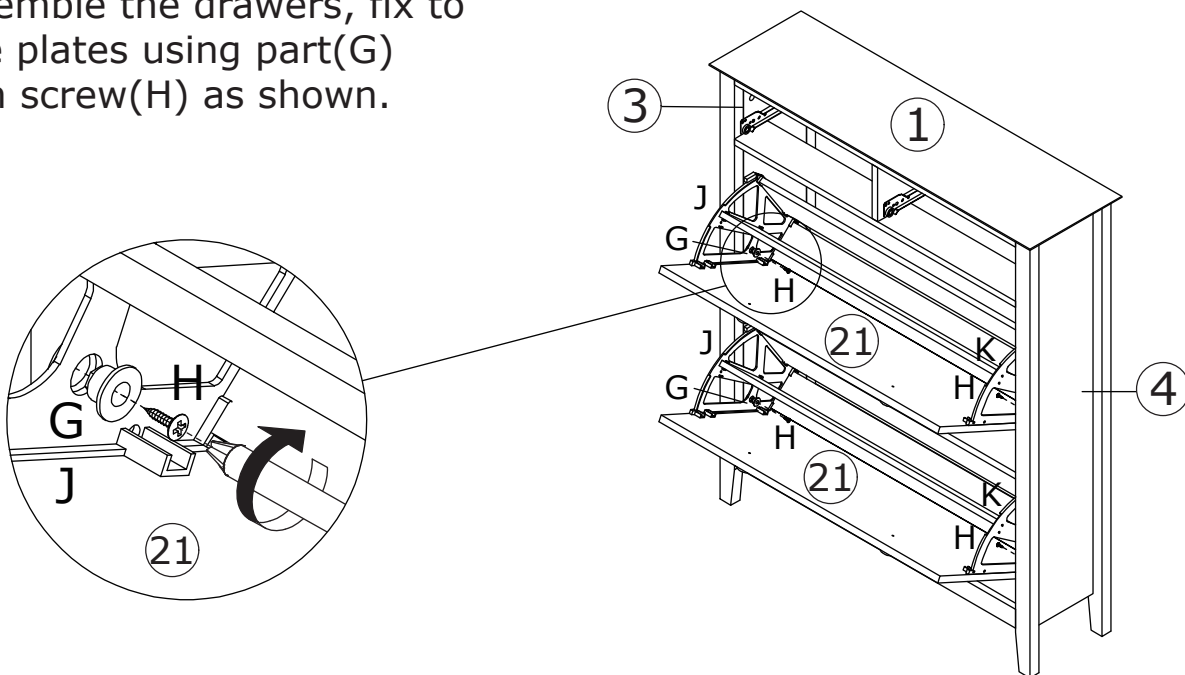

23

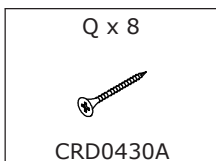 

 
Connect plate #17 and #18 with plate #19 using screw(Q) as shown.

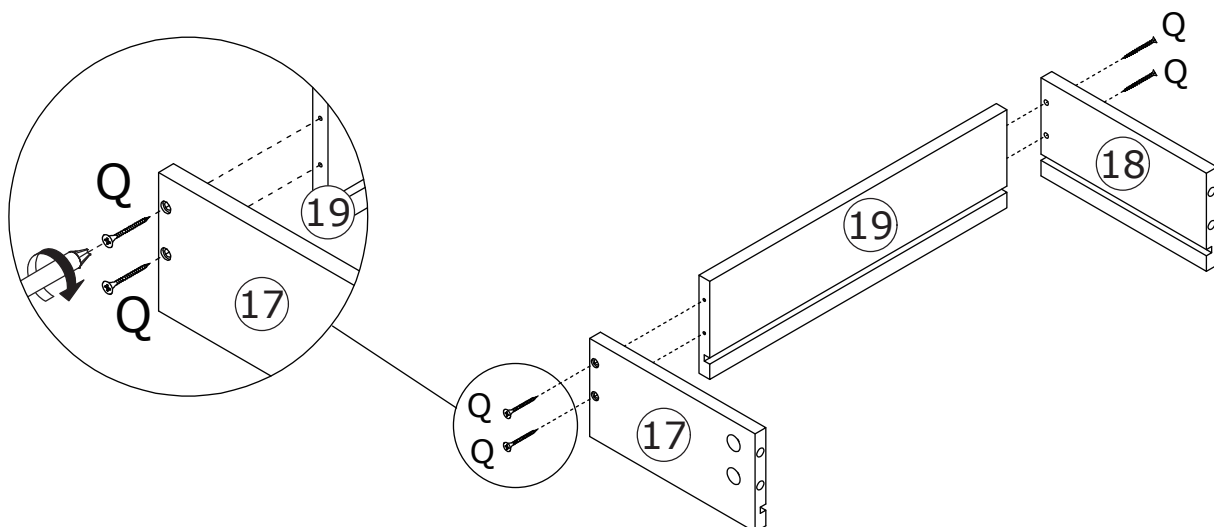

x2

24

 Slide plate #20 into available grooves as shown.


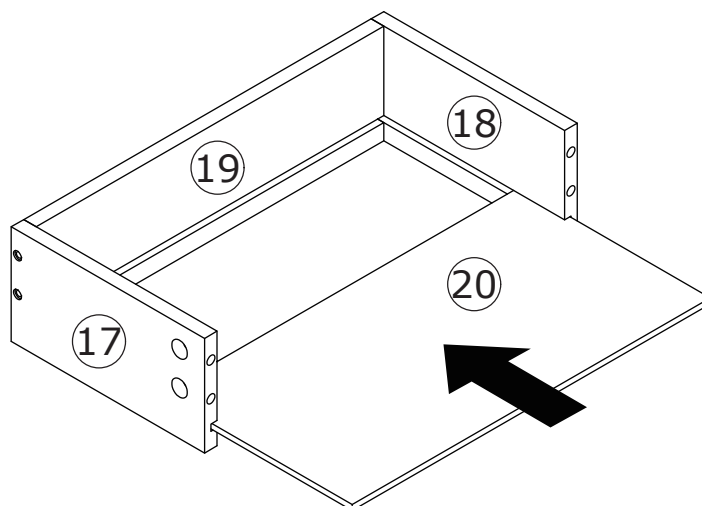


x2

  25




 


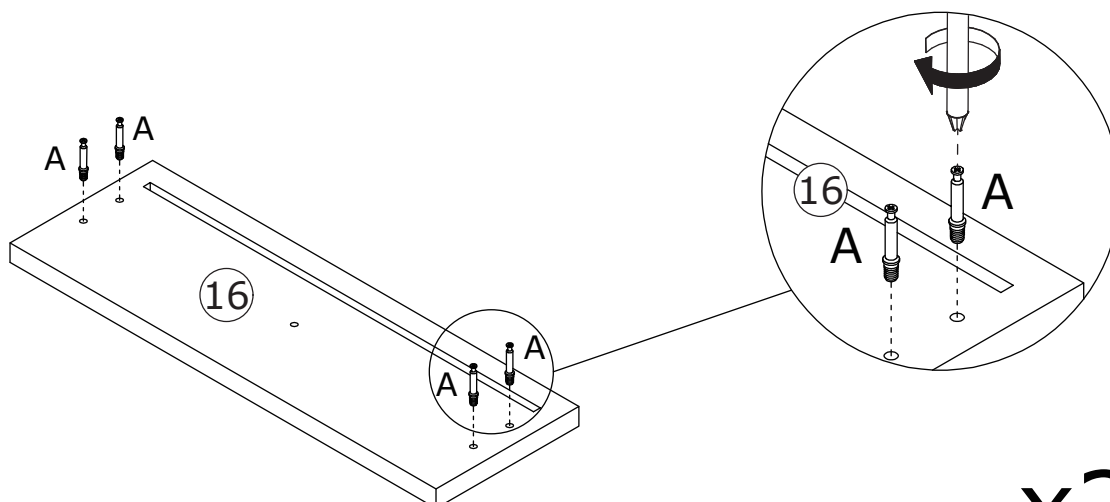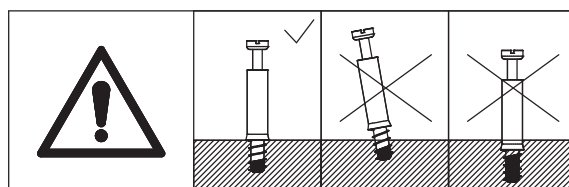Insert quickfit screw(A) into corresponding holes in plate #16 as shown.

 
 


x2

 
 

 
26

<p>B x 8</p>  <p>CRB1595A</p>	<p>N x 2</p>  <p>Ø 29 x 25 mm</p>	<p>P x 2</p>  <p>CRE0420A</p>	
--	--	--	---



Attach plate #16 to the component and turn cam lock(B) clockwise to tighten as shown. Fix knob(N) to plate #16 with screw(P) as shown.

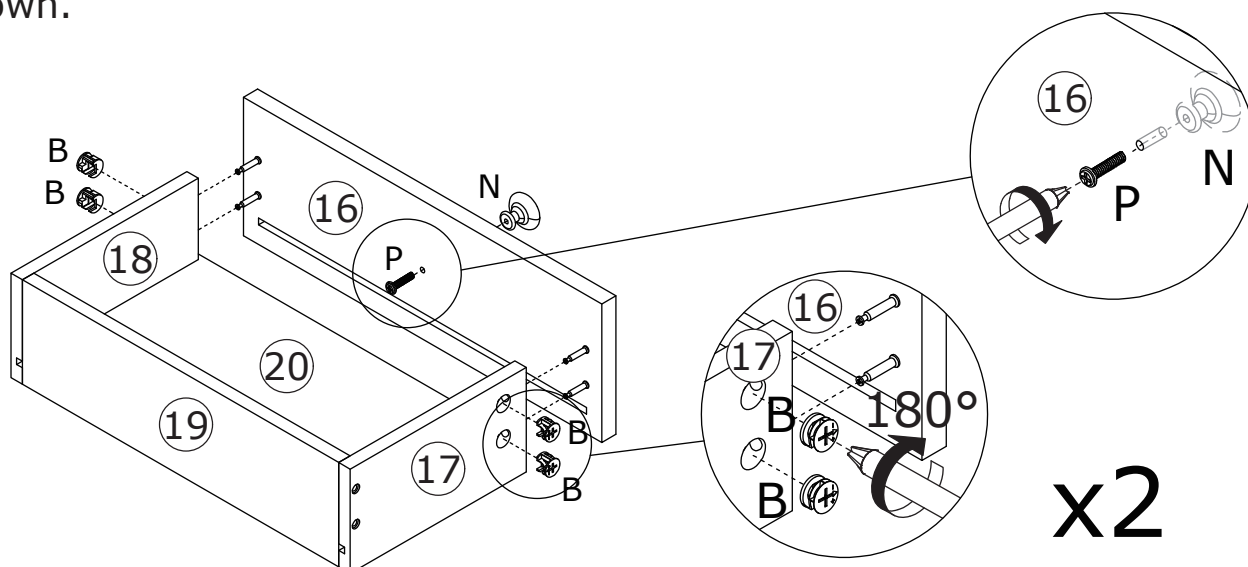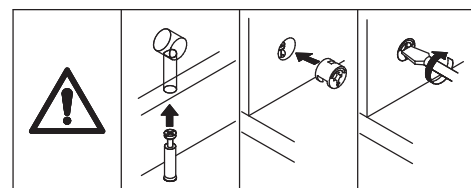

27

<p>R x 2</p>  <p>DL 200 mm</p>	<p>R x 2</p>  <p>DR 200 mm</p>	<p>L x 8</p>  <p>CRD3514A</p>	
---	---	--	---

  
Fix runner(DL) and (DR) to plate #17 and #18 respectively using screw(L) as shown.

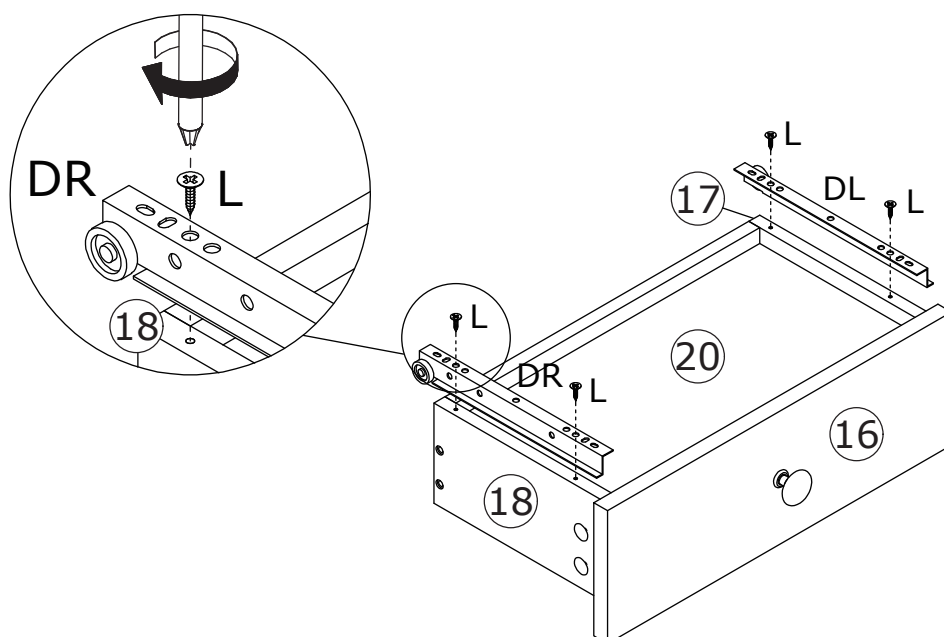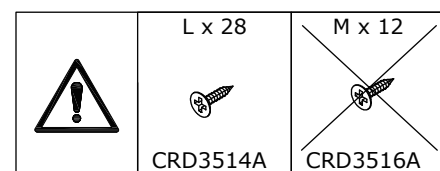

x2


28

 Align rails, slide drawers.


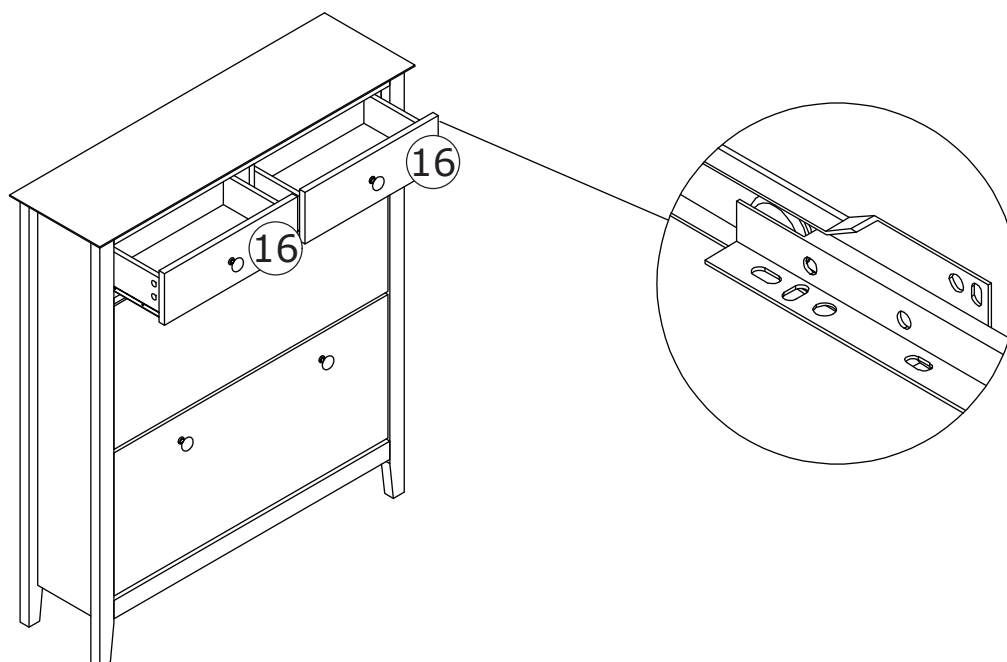


29

 U x 1



  Install anti-tipping device(U) as required.

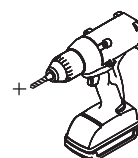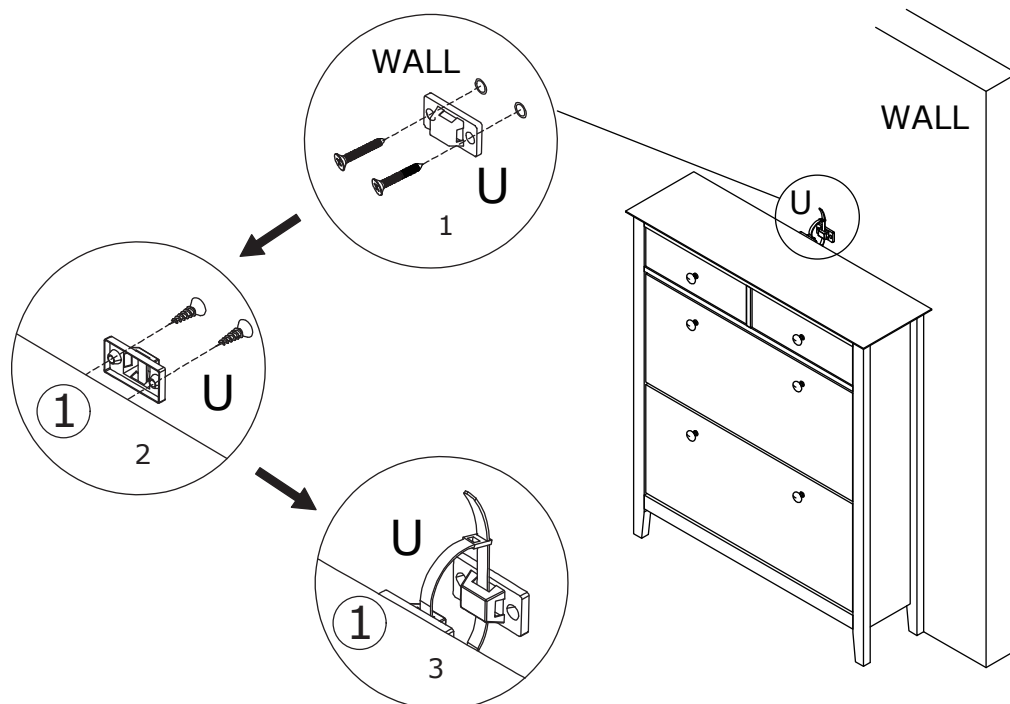

WARRANTY

WARRANTY CLAIMS

- There is a 30-day warranty for broken furniture or any other problems that do not work properly. The warranty will start from the date of purchase which must be verified by proof of purchase.
- Before making a claim, we may be able to answer your query, simply call us. Please leave your purchase order number, along with some details of the problem, if you want a replacement part. We will arrange within 48 hours. If there is out of stock, we will reply with a shipping date.
- The product must be used in accordance with the instructions provided. For health reasons.
- For other reasons, if the furniture needs to be returned, it must be cleaned and dried and operated within 30 days of receipt.

Type of Warranty Claim

- Failure to follow the furniture instructions will invalidate the warranty. Attention please.
- Does not include damage during installation, but includes damage during transportation.

Scope of responsibility

- Shall not bear any responsibility for misuse or user damage and / or loss of parts during the installation of furniture.
- After using, the damage and scratches of the furniture are not covered by the warranty.

The Warranty Relates to All Bought in The Us and Covers The Following Areas

- Sheet parts: 1 month from the date of purchase.
- Electrical parts: 1 month from the date of purchase.

RETURNS

CHANGED YOUR MIND AND NEED TO RETURN YOUR ITEM?

PLEASE FOLLOW THE BELOW INSTRUCTIONS:

- If you have purchased and have simply changed your mind, follow the retailer's instructions for returns.

DEFECTIVE ITEMS

- If your item is defective in any way, i.e. it doesn't work but you can't identify why, in the first instance, please call us.

DAMAGED ITEMS

- If you receive an order with obvious shipping damage from the retailer, then we suggest the delivery is refused. If the delivery has been accepted and then shipping damage is found, please follow the specific instructions advised by the retailer.
In all circumstances please save all packaging material and paperwork for the order. Please be aware that if you dispose of packaging material or attempt to return the merchandise without contacting the fulfiller, you jeopardise your chances of making a claim, and you may not receive a credit for the return.