



INSTALLATION MANUAL

FLOOR LAMP

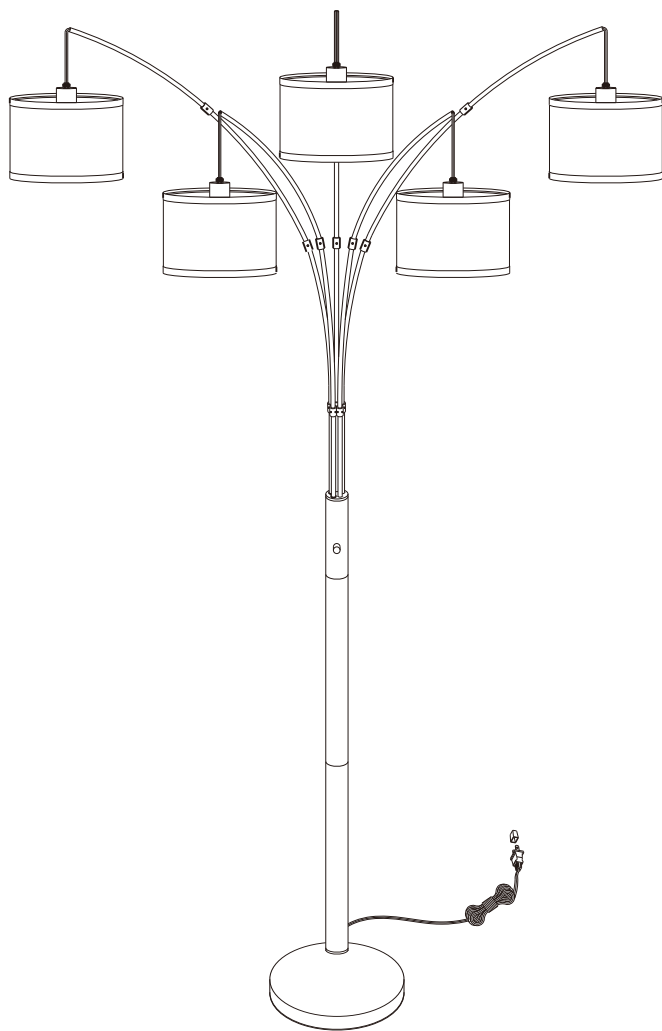

PACKING LIST

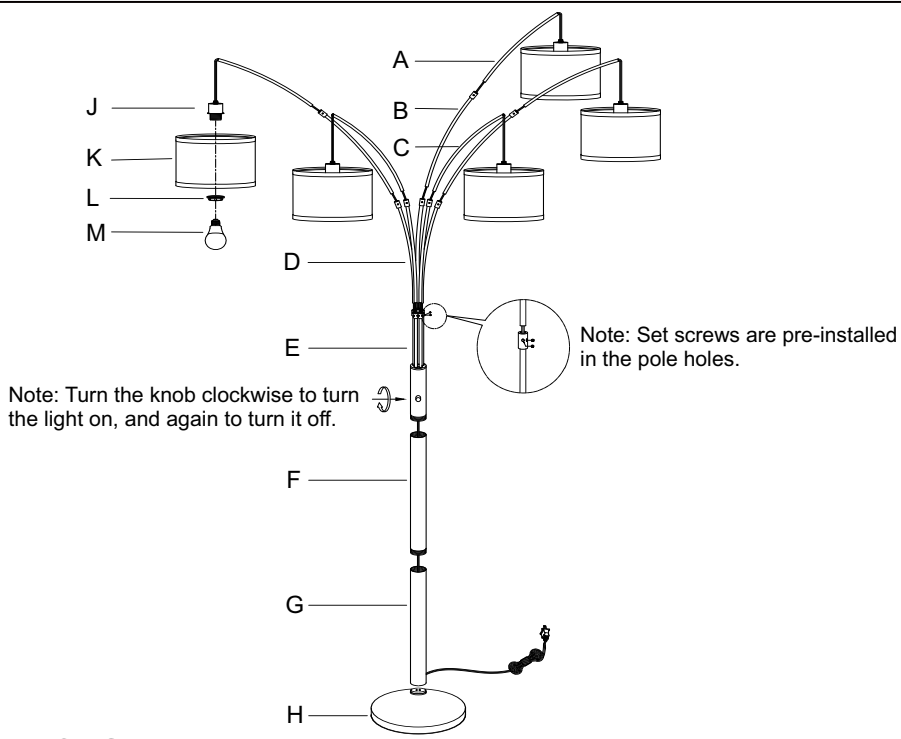

CONTACTS

Please contact us with following information:

1. Screen shot of your order page,including product picture, name and order ID number
2. Problem details with pictures / short video if possible.

Installation Kit

N		1x	O		1x	P		1x
Washer			Spring Washer			Screw		
Q		1x	R		1x	S		1x
M8 Allen Key			M4 Allen Key			Remote Control		
K1		5x	K2		5x	K3		5x
Shade Fixing Circle			Shade Cover			Shade Bracket		


NOTE:

The listed quantity is for installation, extra hardware may be included.

Installation Instructions


1. Install the Lamp Body

Step 1: Install in the following order: lamp pole (A) → lamp pole (B) → lamp pole (D) → lamp pole (E); lamp pole (C) → lamp pole (D) → lamp pole (E), then tighten the lamp pole with the set screws and M4 allen key (R).

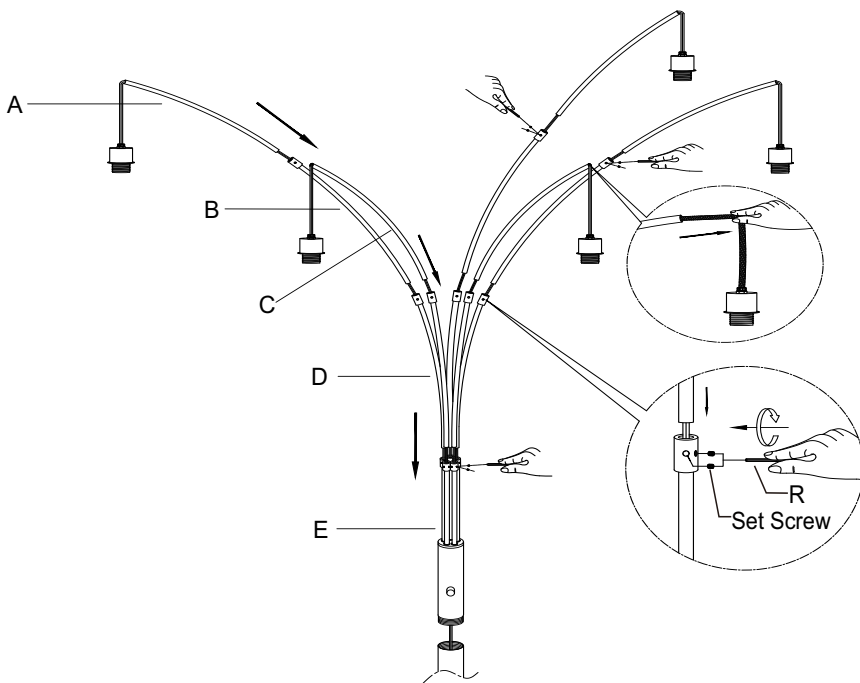

Step 2: Install in the following order: lamp pole (E) → lamp pole (F) → lamp pole (G) , then tighten.

Step 3: Insert the screw (P) sequentially through the spring washer (O), washer (N), and base (H), then connect it to the lamp tube (G). Secure it by tightening with an M8 allen key (Q).

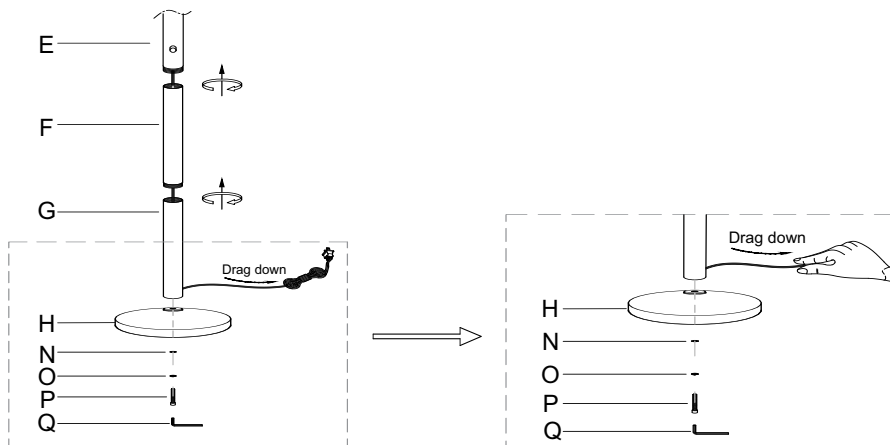


2. Install the Shade and Bulb

Step1: Follow the steps① - ④ in the illustration to install the shade (K).

Step2: Take down the socket ring (L), put the shade (K) into socket, then tighten shade (K) by socket ring (L).

Step3: Install the E26 Bulb x 5 (Included). You may also replace the bulbs with other E26 bulbs (maximum 60W); If you do not use the original bulb, the remote control may not be able to connect to it.

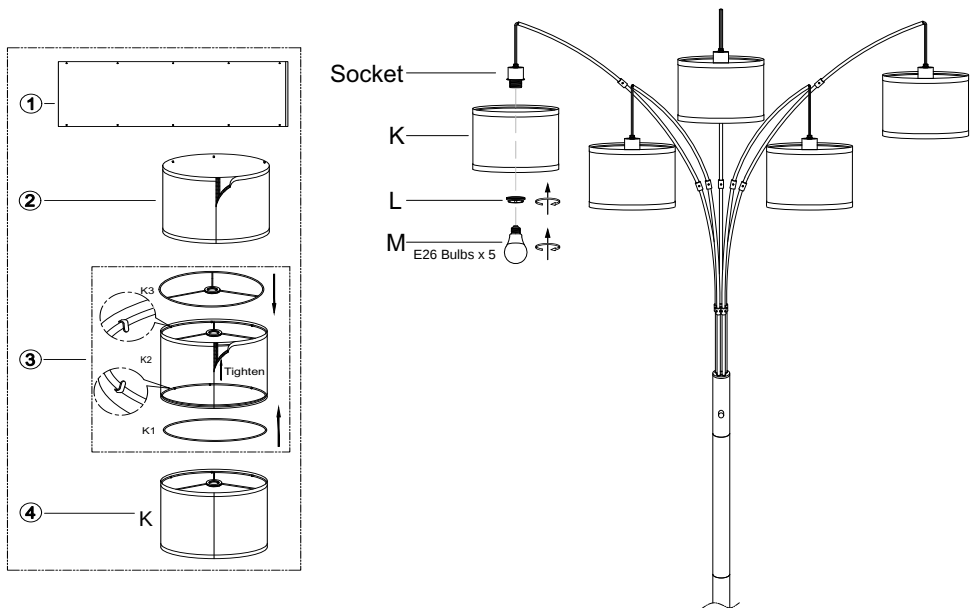

NOTE:

1. This lamp has an E26 base and is recommended for use with LED bulbs of 7W to 9W.

2. For bulbs with color temperature control, repeatedly switch "on" and "off" using the rocker switch to change settings.

Trouble Shooting

1. Missing / Broken Parts

- Make a list of the missing / broken parts according to the packing list, take photos for broken parts, then email us for free replacements.

2. Bulbs Do Not Light Up / Flicker

- Check if the bulb is loose, burned out, or missing.
- Replace the bulb with the correct type and wattage.
- Ensure the light switch is in the ON position.

3. Could Not Install / Assemble

- Take photos of the fixture, contact seller for technical support.

Clean And Care

To clean, wipe the fixture with a soft cloth. Spraying from chemical cleaners can discolor the finish of the fixture.

Do not use scouring pads, powders, steel wool, or abrasive paper to clean this fixture.

Ordering Parts

Keep this manual for future reference, and in case replacement parts are needed. Available parts can be ordered from the place of purchase. Use exact wording from diagrams when ordering parts.