 




ASSEMBLY INSTRUCTIONS

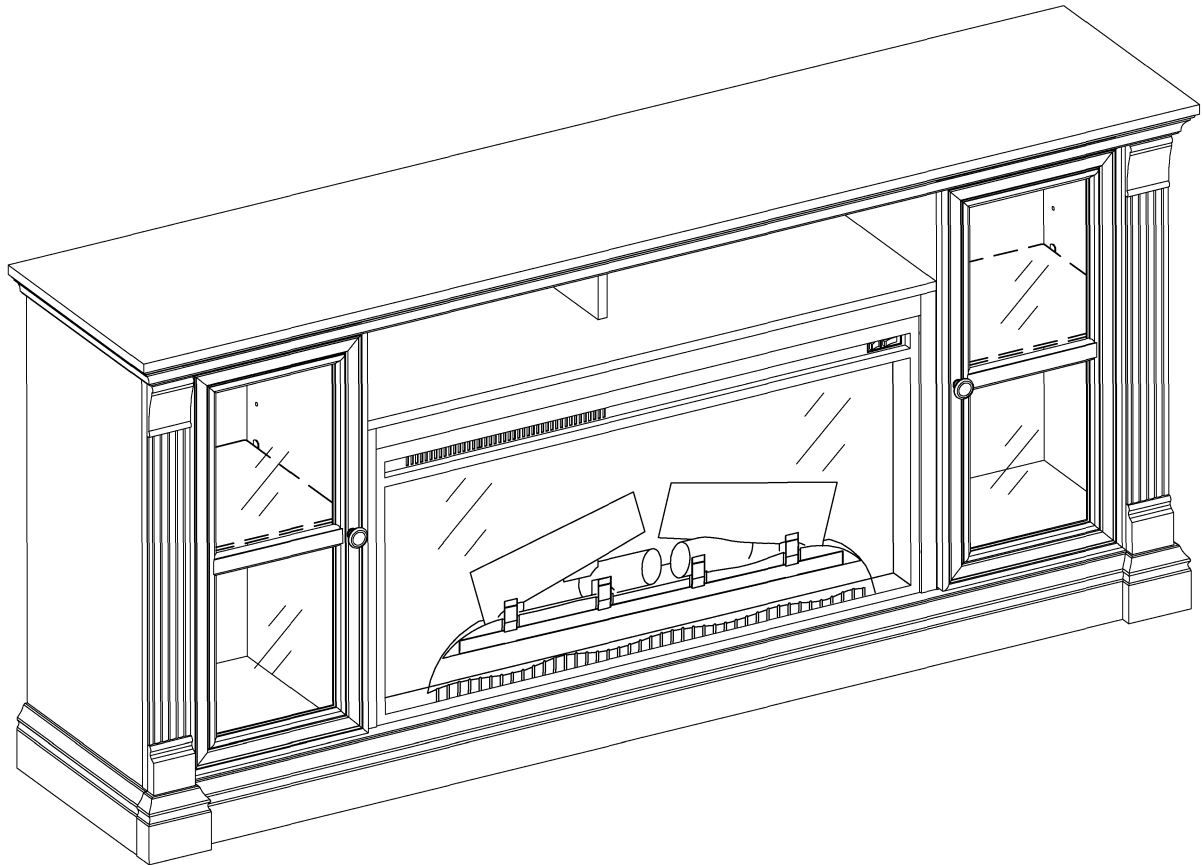

SAFETY TIPS: Static charge may cause dust on foam – clean with a dry or damp cloth. Small foam strands may be present – handle gently and dispose of properly. Do not burn or incinerate. Check local recycling guidelines.

Before You Start

  
1. Read through each step carefully and follow the proper order.
2. Separate and count all your parts and hardware.
3. Give yourself enough room for the assembly process.
4. Assemble this product on the empty carton or carpet to avoid scratching.
5. Two people are recommended for ease in the assembly of this product.
6. Keep all small parts of this product away from children. They may cause serious injury.
7. Have the following tools: Flat Head Screwdriver, #2 Phillips Head Screwdriver and Hammer.

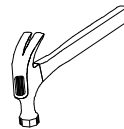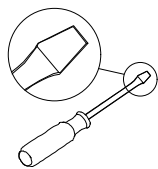

8. Note: Power tools should not be recommended to assemble this product. If using a power drill or power screwdriver for screwing, please be aware to slow down and stop when the screw is tight. Failure to do so may result in stripping the screw.



HOW THE KNOCK DOWN (KD) ASSEMBLY SYSTEM WORKS

 1. Screw the Cam Bolt into the pre-drilled hole on the panel. Make sure the Cam Bolt goes into the pre-drilled hole on the end of the panel for the Cam Lock.
2. Insert the Cam Lock into the pre-drilled large hole on the panel. Make sure the arrow on the face of the Cam Lock points towards the Cam Bolt.
3. Take a Phillips screwdriver and rotate the Cam Lock clockwise to lock the Cam Bolt.
4. Use the sticker to conceal the Cam.

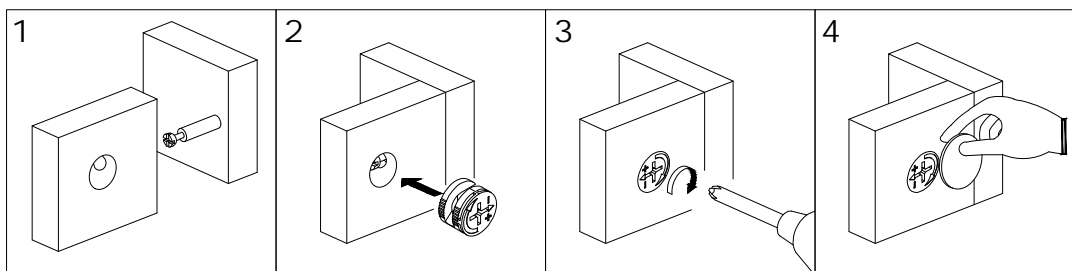


How do I get the two doors to align flat by adjusting the hinges?

  1

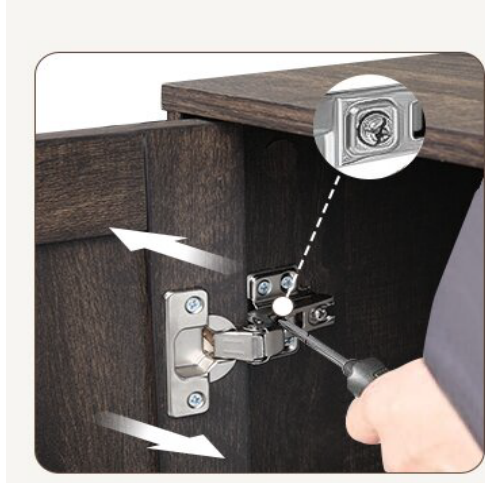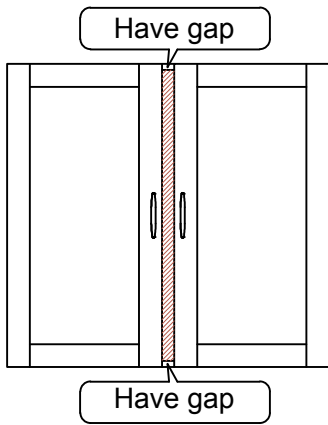

Turn the screw to the right can make the door approach inside.

 
2

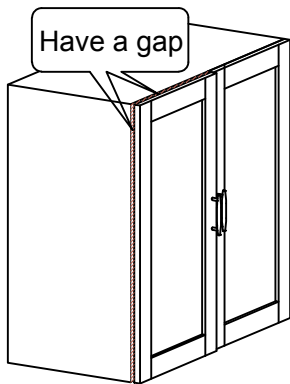

1. Rotate the screws to the left
2. Push the door to the cabinet
3. Rotate the screws to the right


Please take the following steps to adjust first.

 3

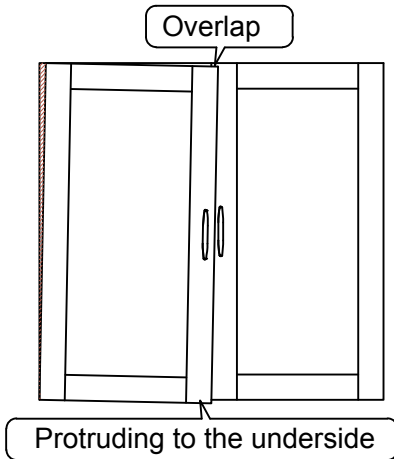


Turn the screw to the left can make the top of the door tilted outward.

  4

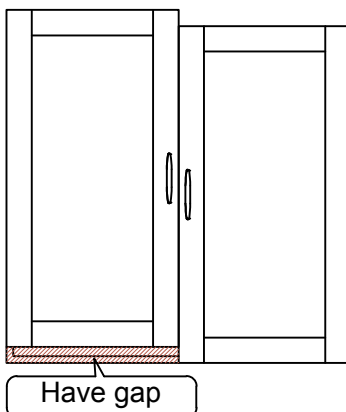
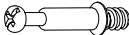



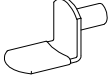



 
 

 

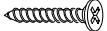
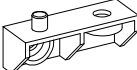

 


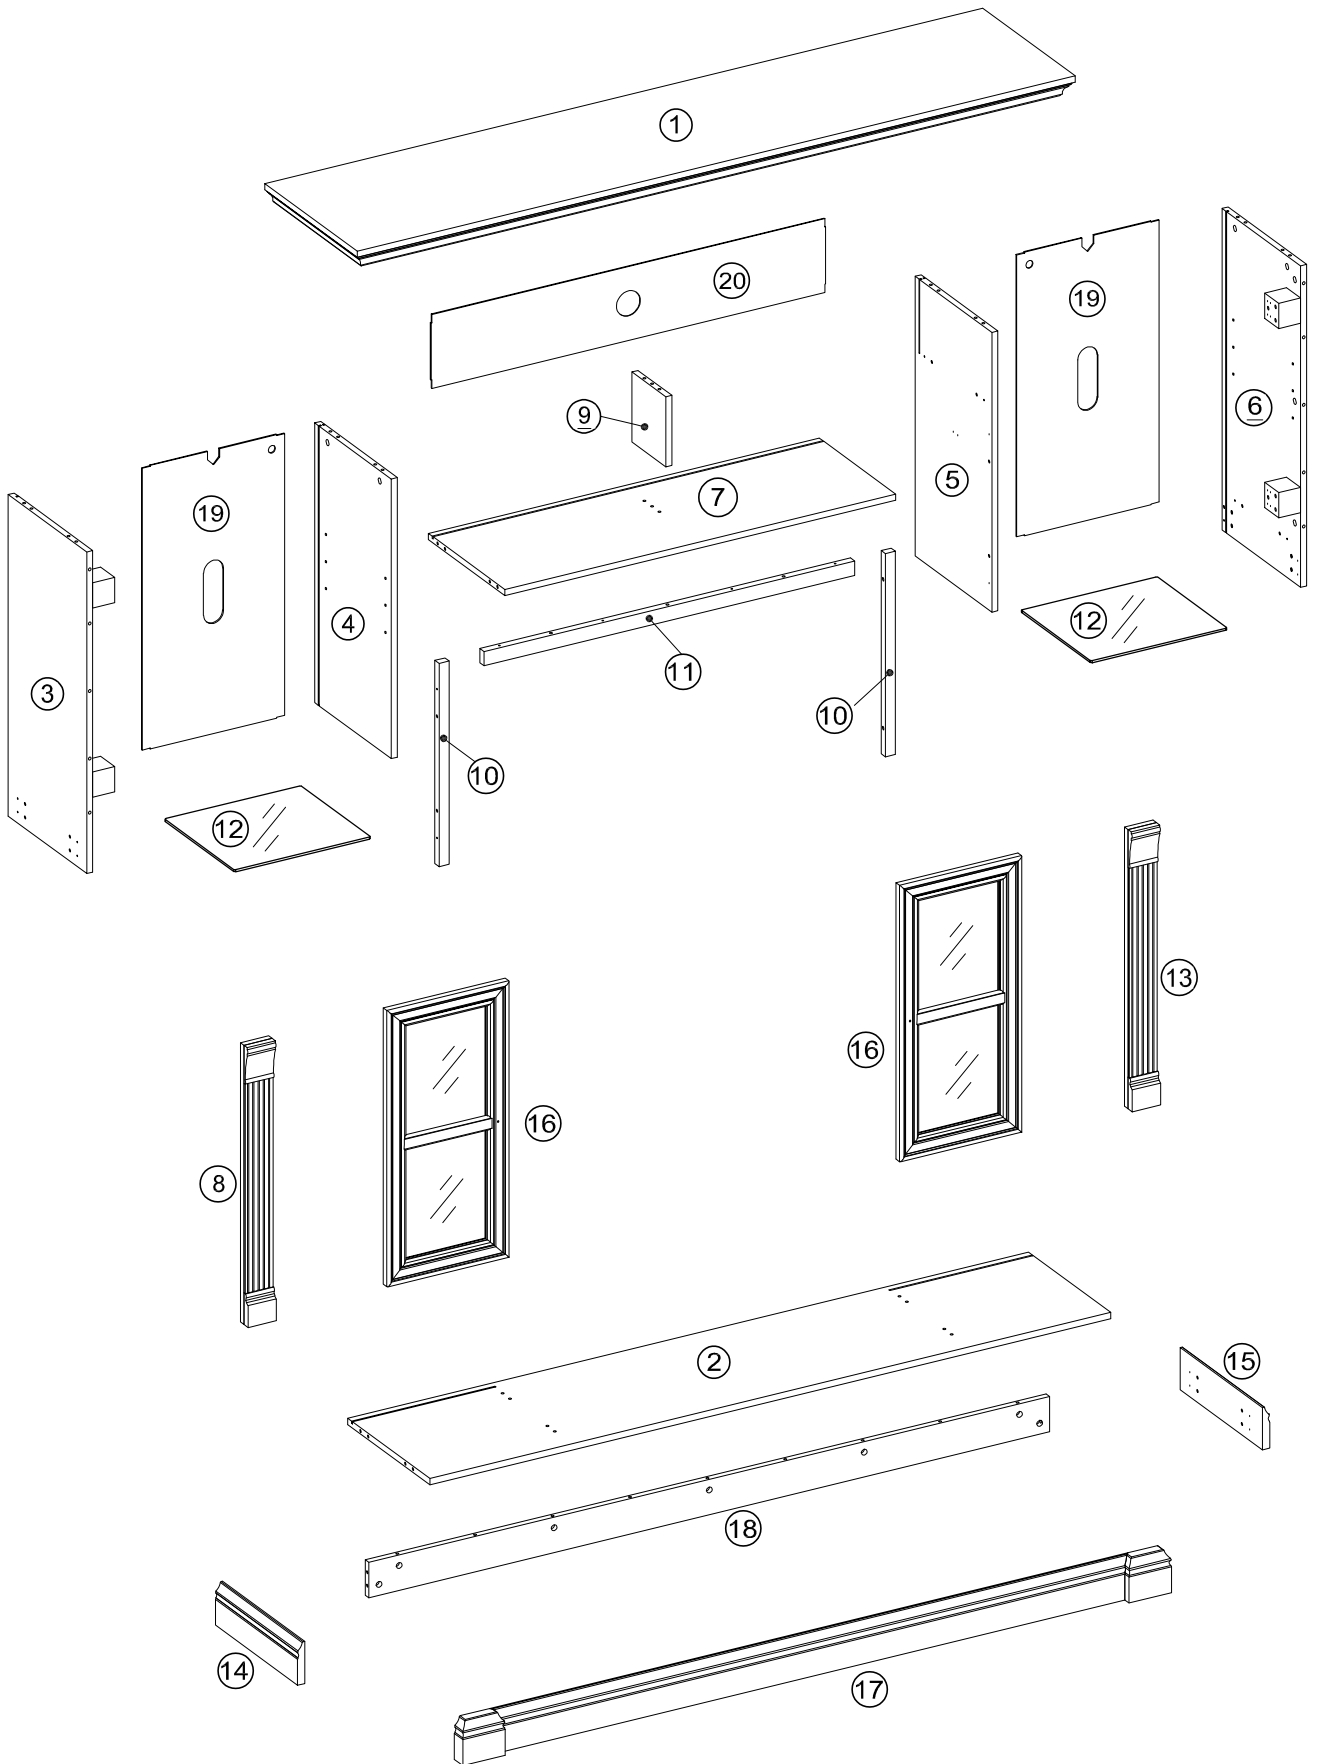
1. Turn the screw to the left
2. Lower the door's height so that 2 doors are of the same height
3. Turn the screw to the right


 

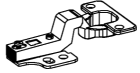
 

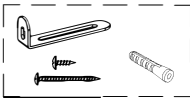
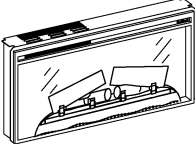
Parts List




Hardware List

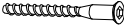A		Ø8x30mm	Wood dowel	39 pcs
B		Ø6x35mm	Cam bolt	31 pcs
C		Ø15x11mm	Cam lock	31 pcs
D			Sticker	31 pcs
E		Ø8x20mm	Wood dowel	8 pcs
F			Shelf support pin	8 pcs
G		Ø6x13mm	Bolt	10 pcs
H			Glue	1 pc
I		Ø6x50mm	Screw	6 pcs
J			Plastic wedge	20 pcs
K		Ø3x17mm	Flat-head screw	20 pcs
L		M 4	Hex key	1 pc
M		Ø3x12mm	Screw	12 pcs
N			Clip	6 pcs
O		Ø4x38mm	Screw	4 pcs
P			Connector	5 pcs
Q			Knob	2 pcs
R		Ø4x25mm	Screw	12 pcs
S		Ø4x19mm	Handle bolt	2 pcs





Hardware List

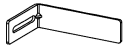T			L shape bracket	2 pcs
U		Ø4x12mm	Screw	4 pcs
V		35x35mm	L shape bracket	4 pcs
W		Ø35mm	Europe hinge	4 pcs
X		Ø3.5x14mm	Hinge screw	32 pcs
Y			Led strip light	2 PCS
Z			Tipping restraint	2 sets
AA		—	Fireplace Insert	1 pc

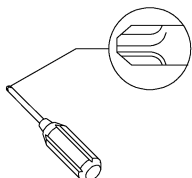     
 




Philips head screwdriver required for assembly
(not included)

STEP 1

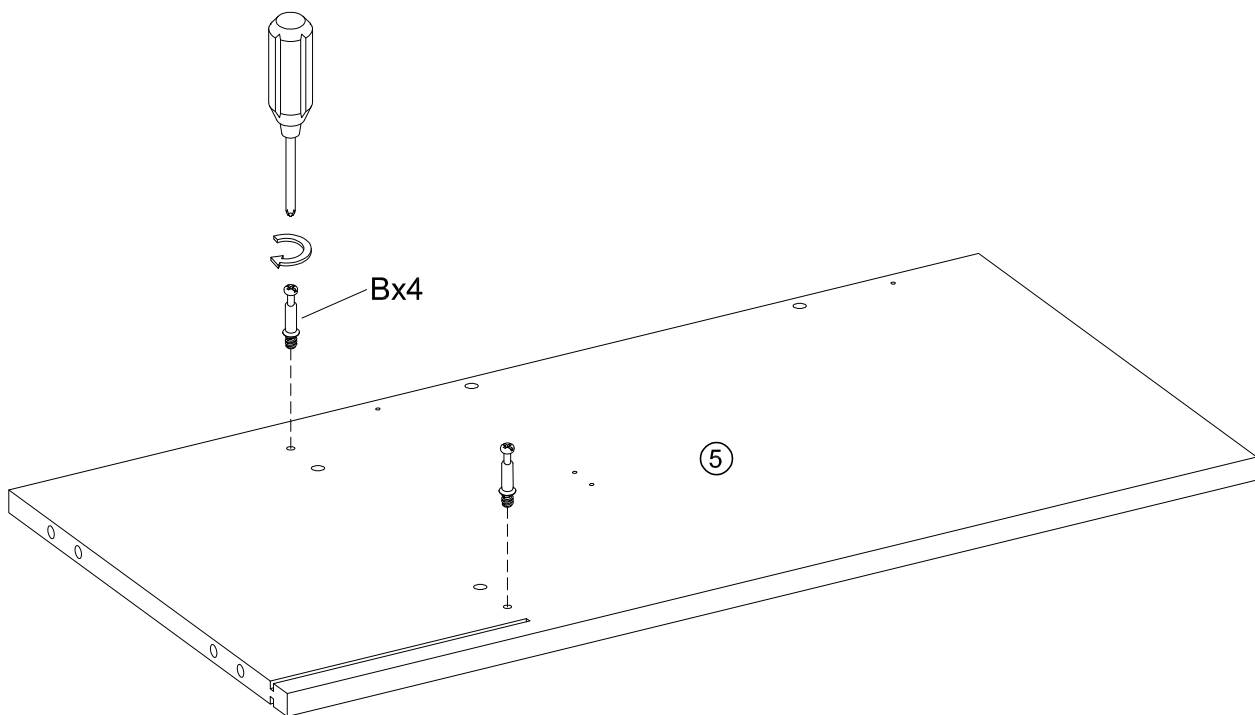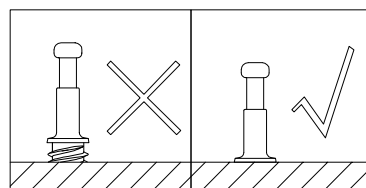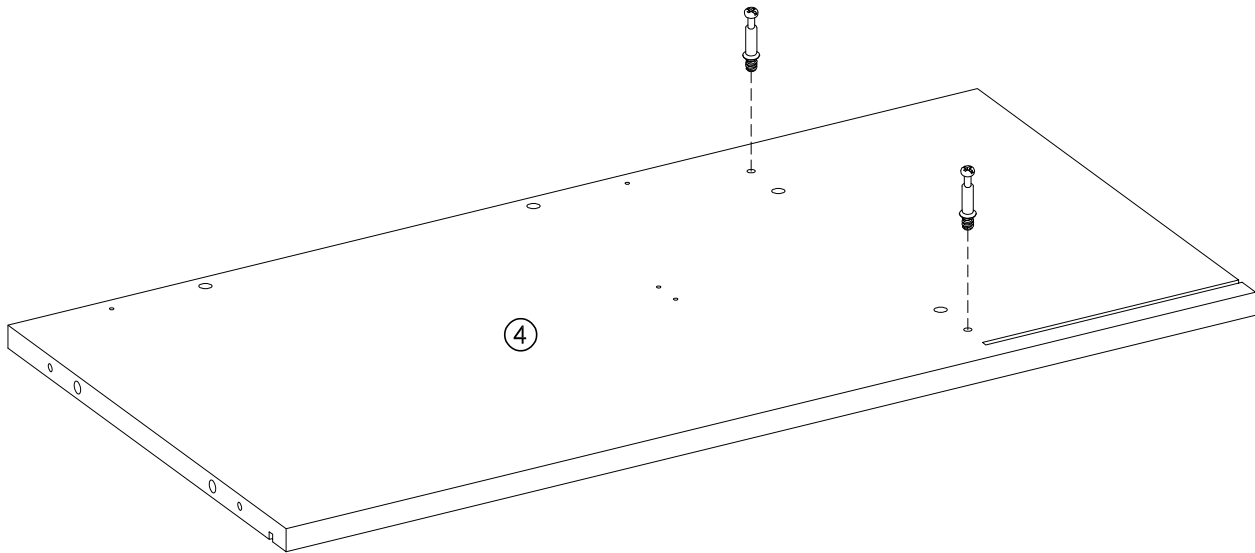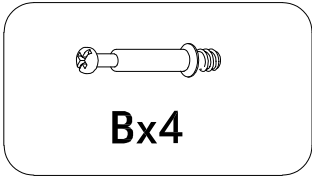





STEP 2

	
Ax4	Rx4

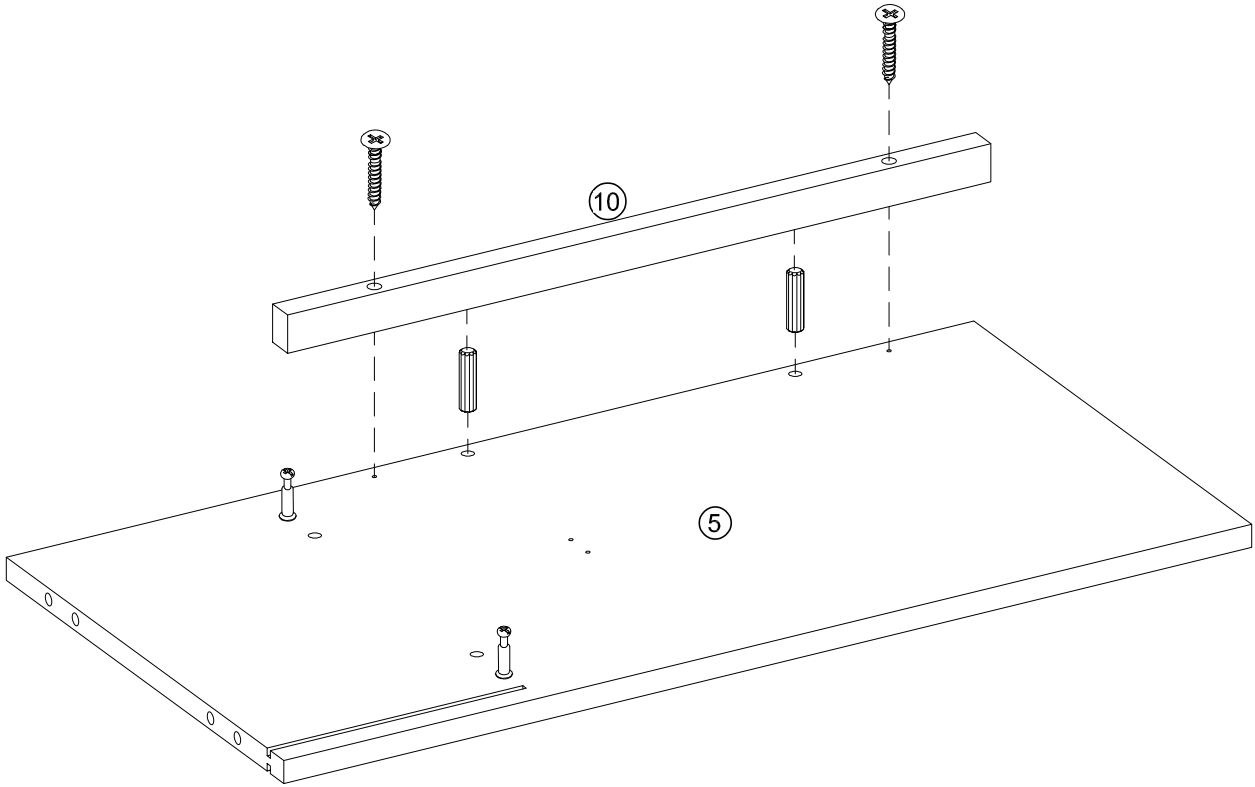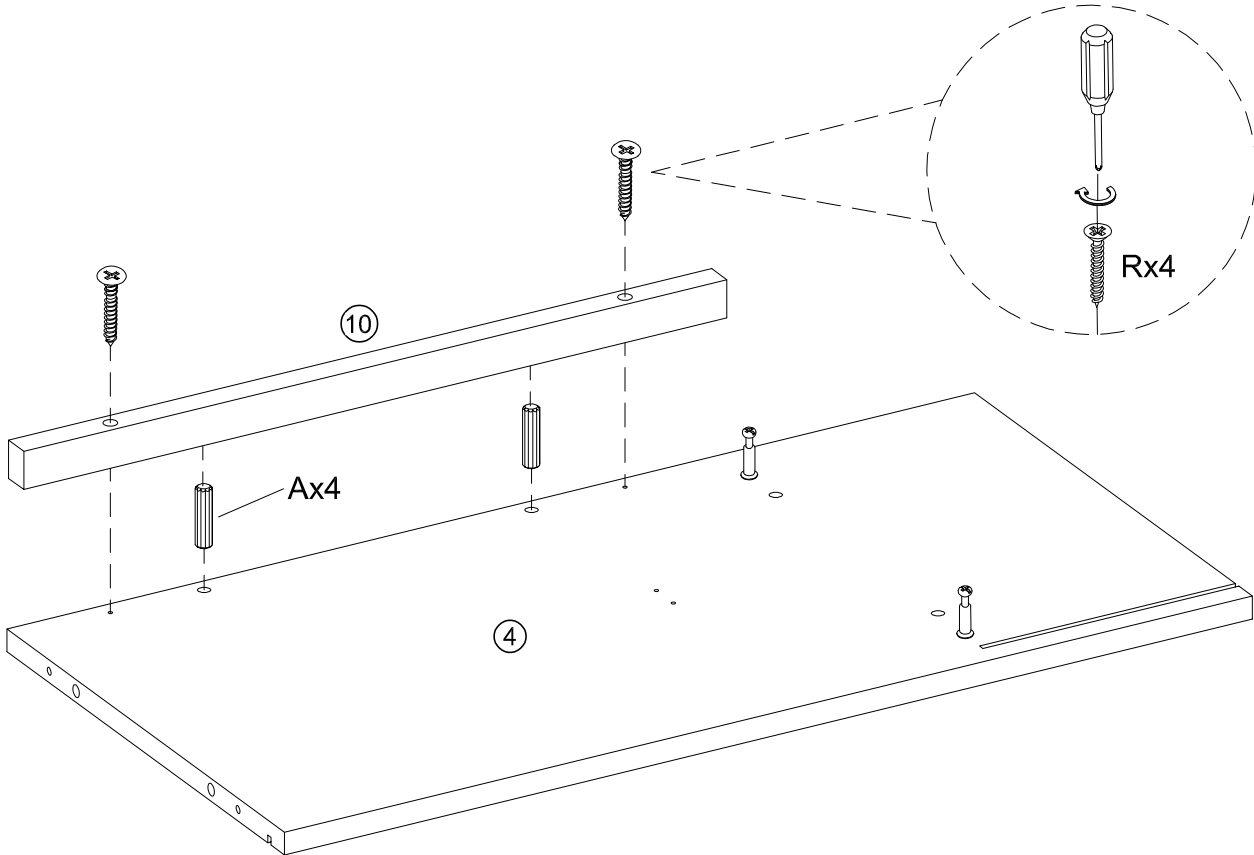      
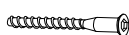



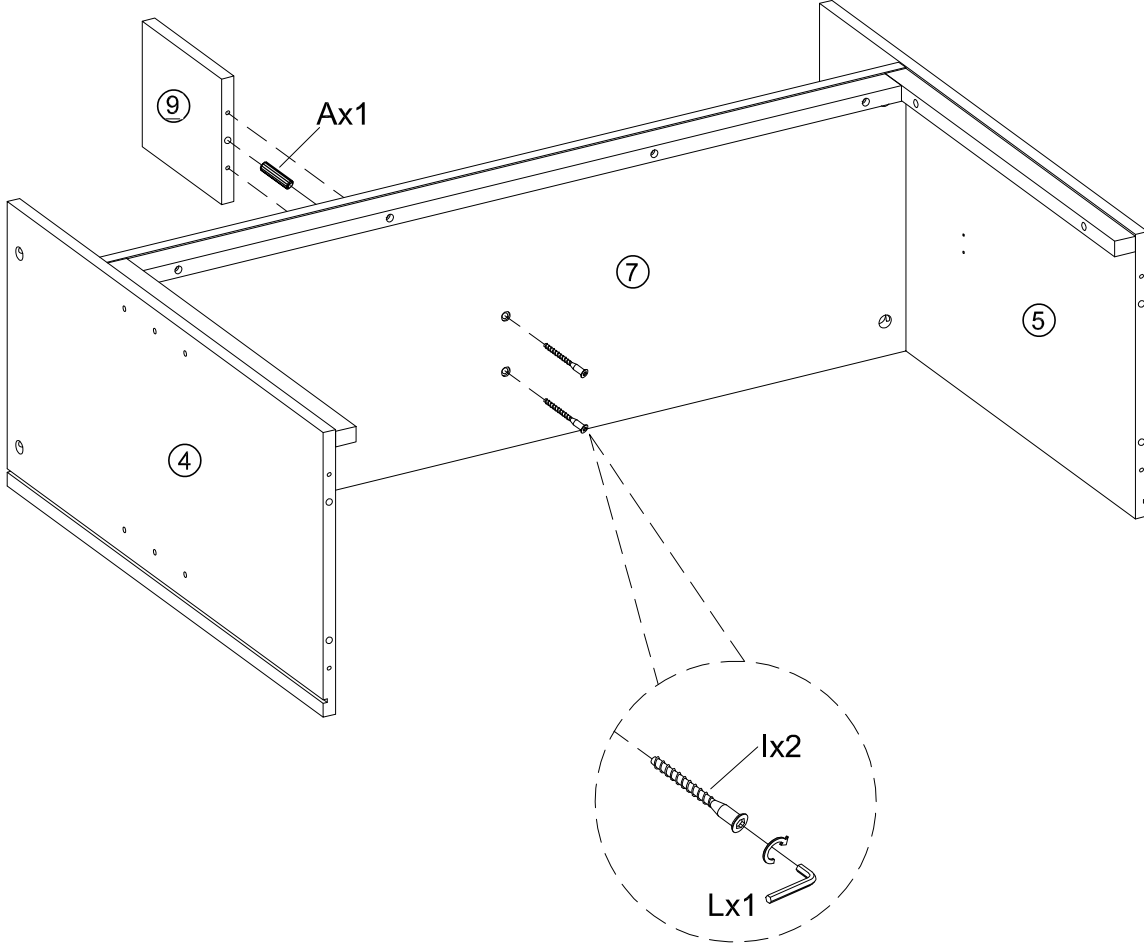 
STEP 3

Ax7 Cx4 Ox4

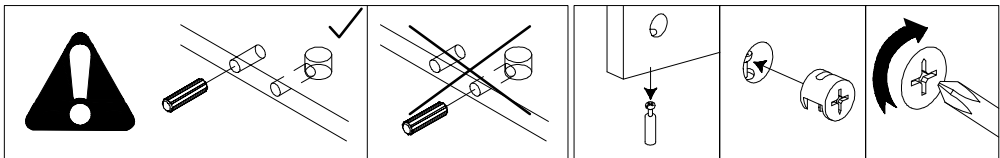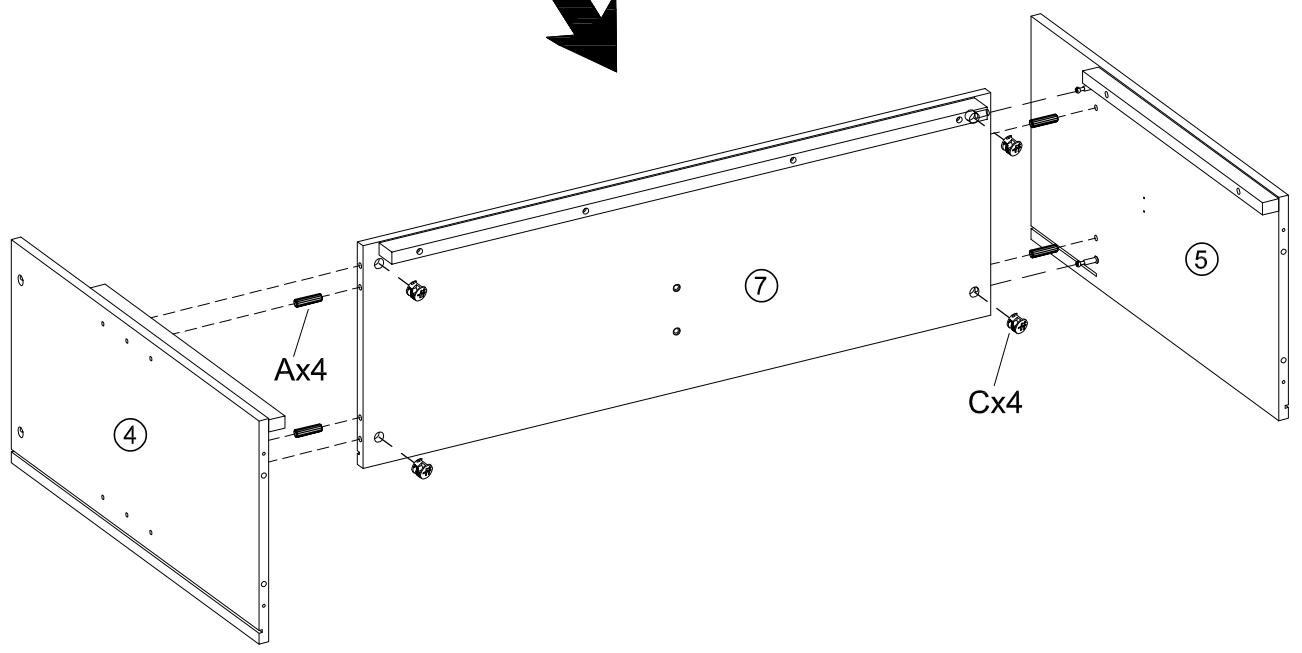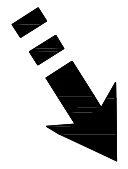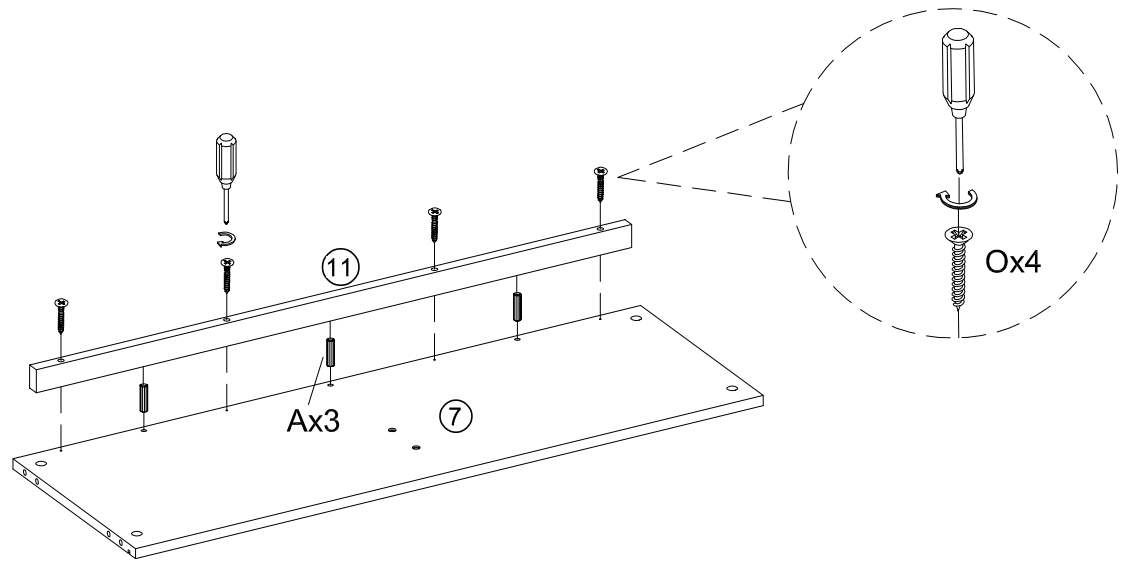

STEP 4

		
Ax1	Ix2	Lx1



STEP 5

Ax4




Bx5

Cx5

Lx1

Gx5

   
Px5

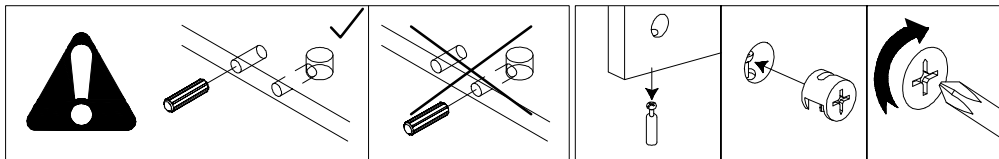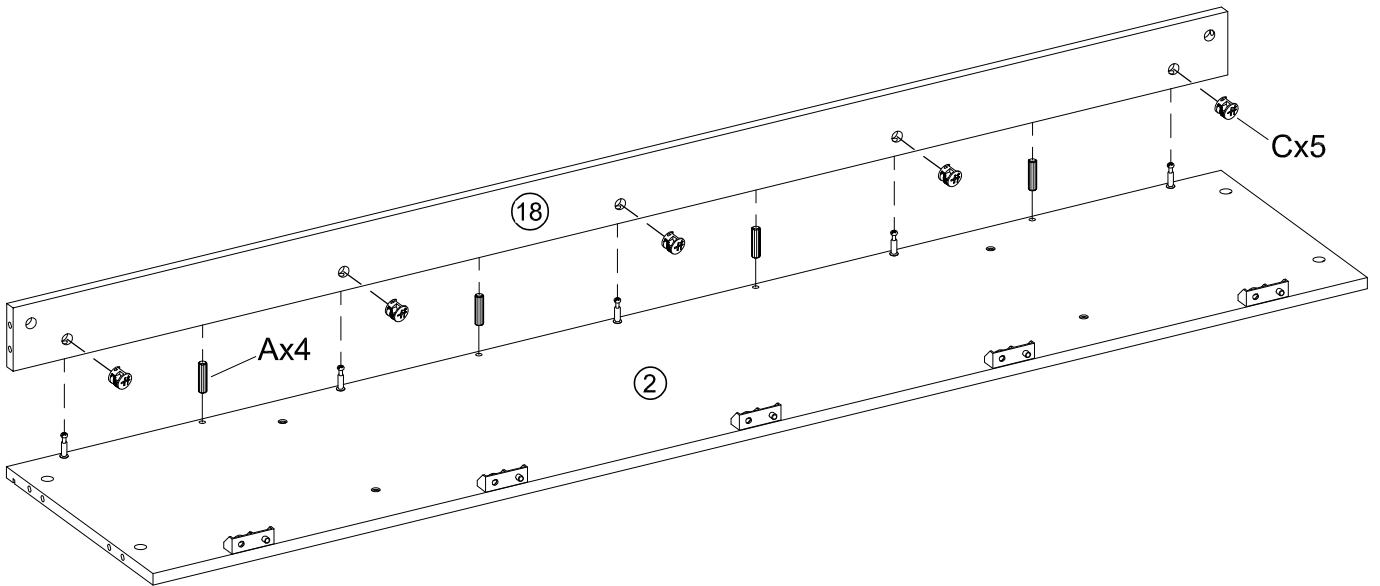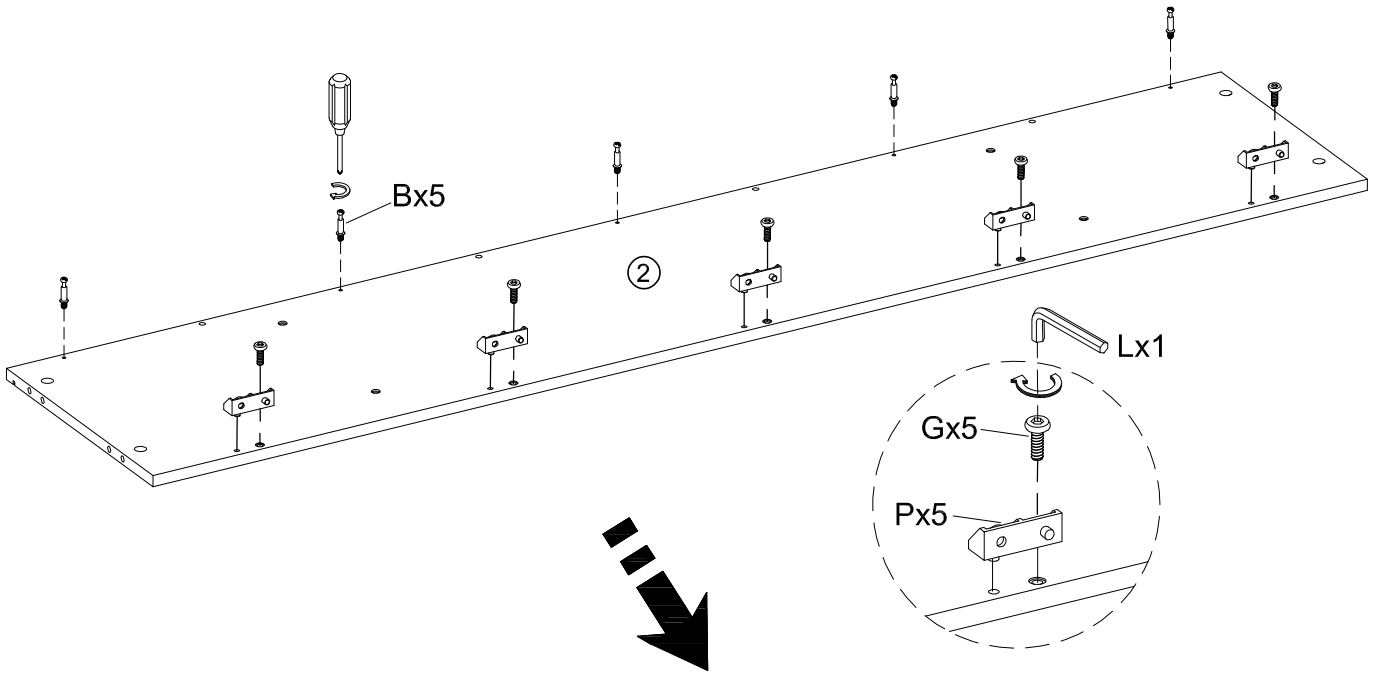

STEP 6



 
Ax4





Ix4



 
 
 
Lx1

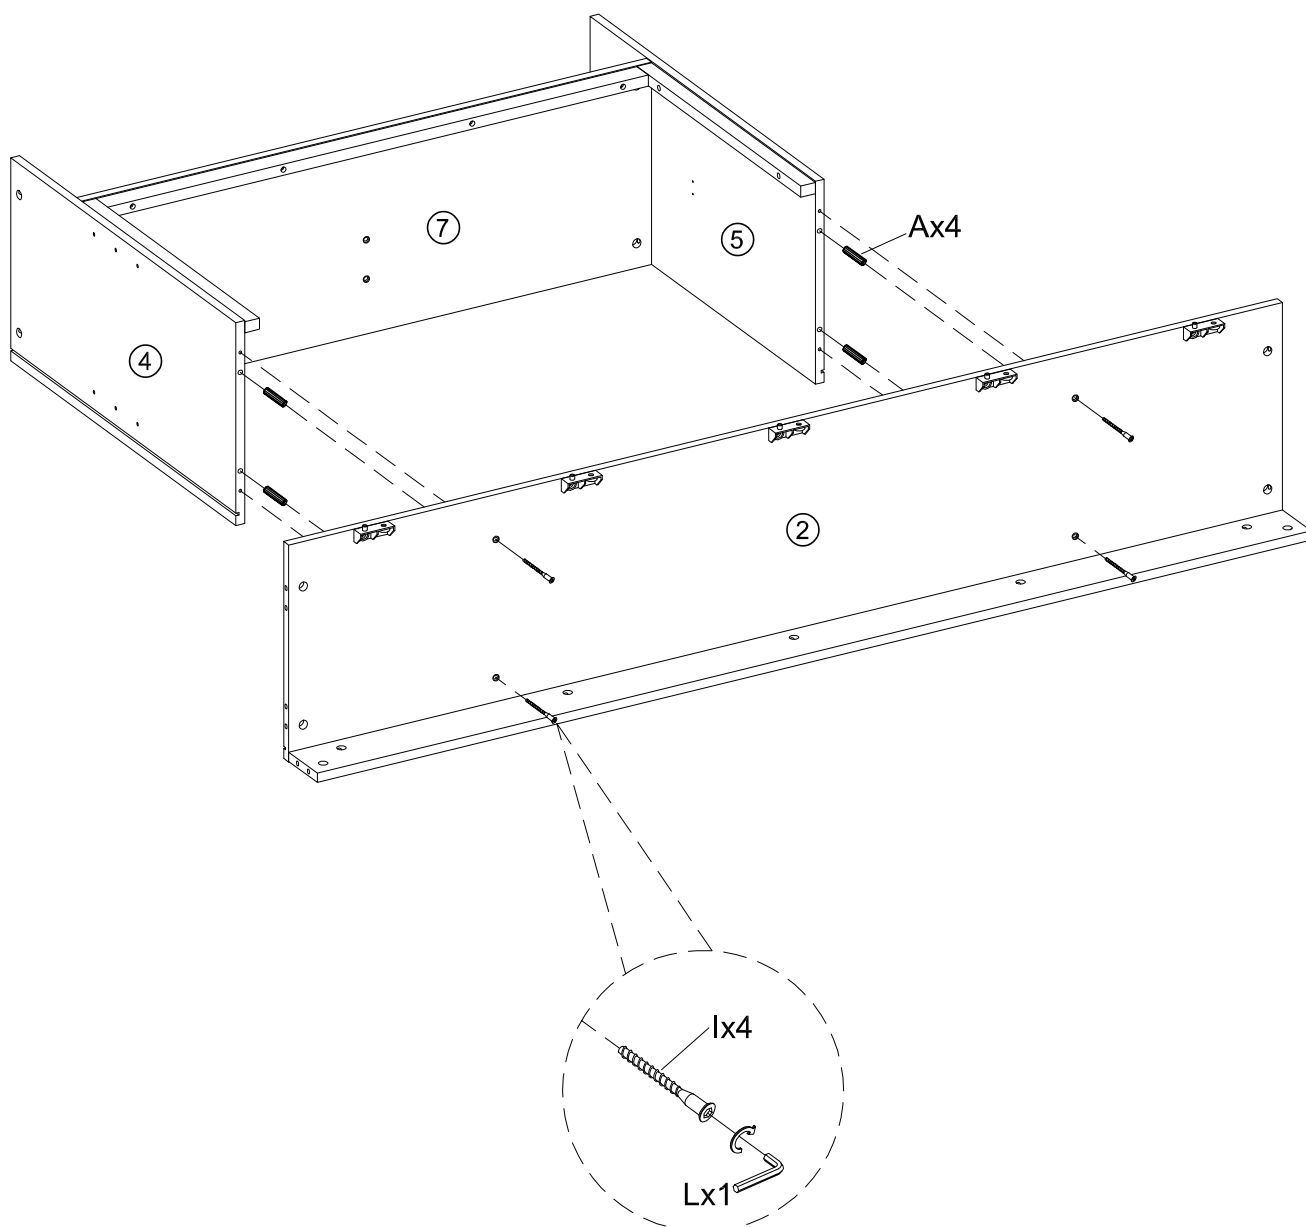

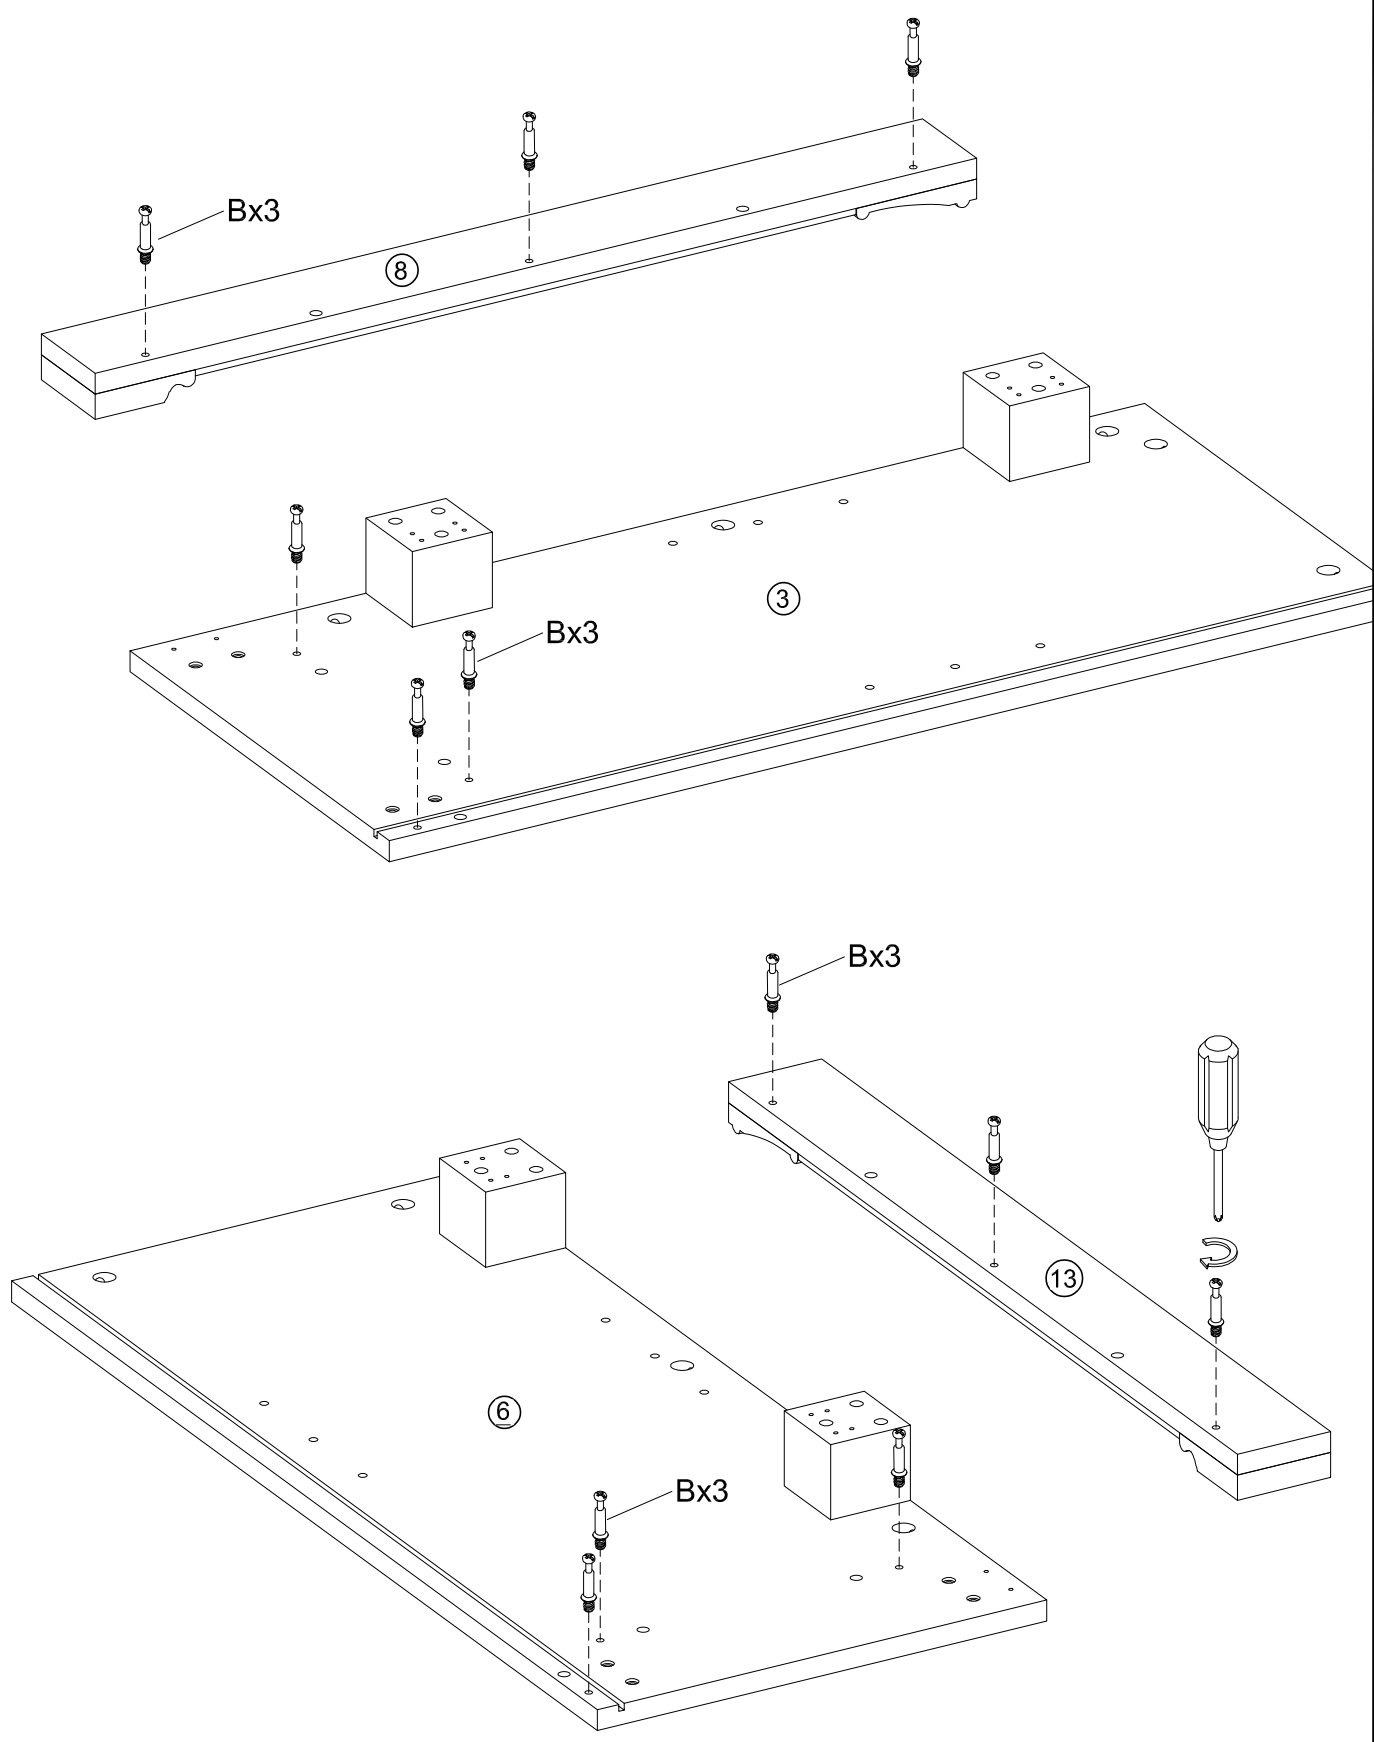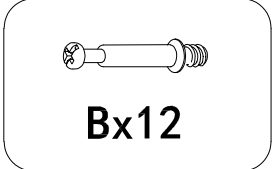

   STEP 7

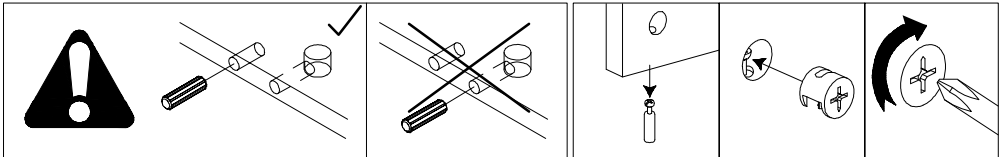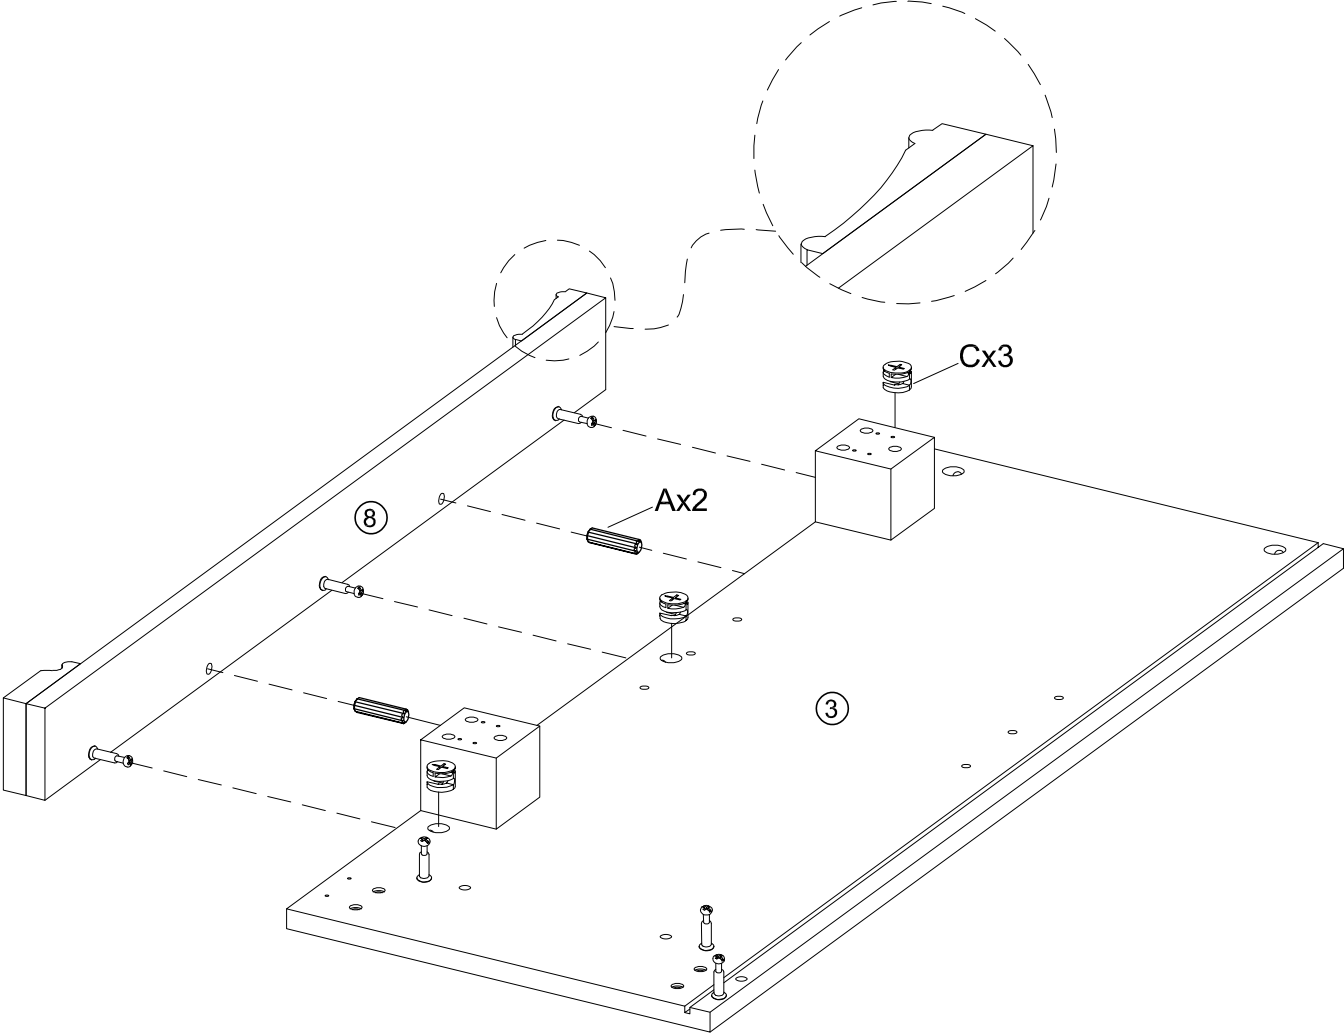
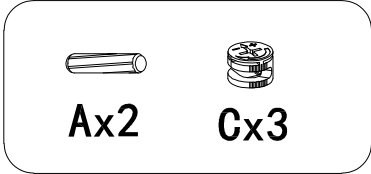


STEP 8





  
STEP 9

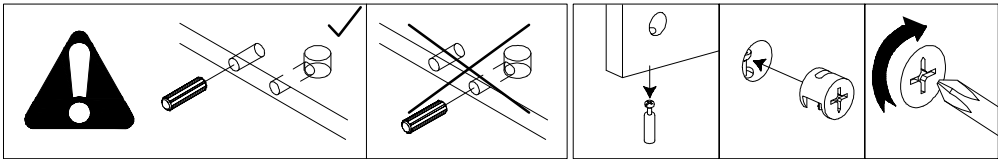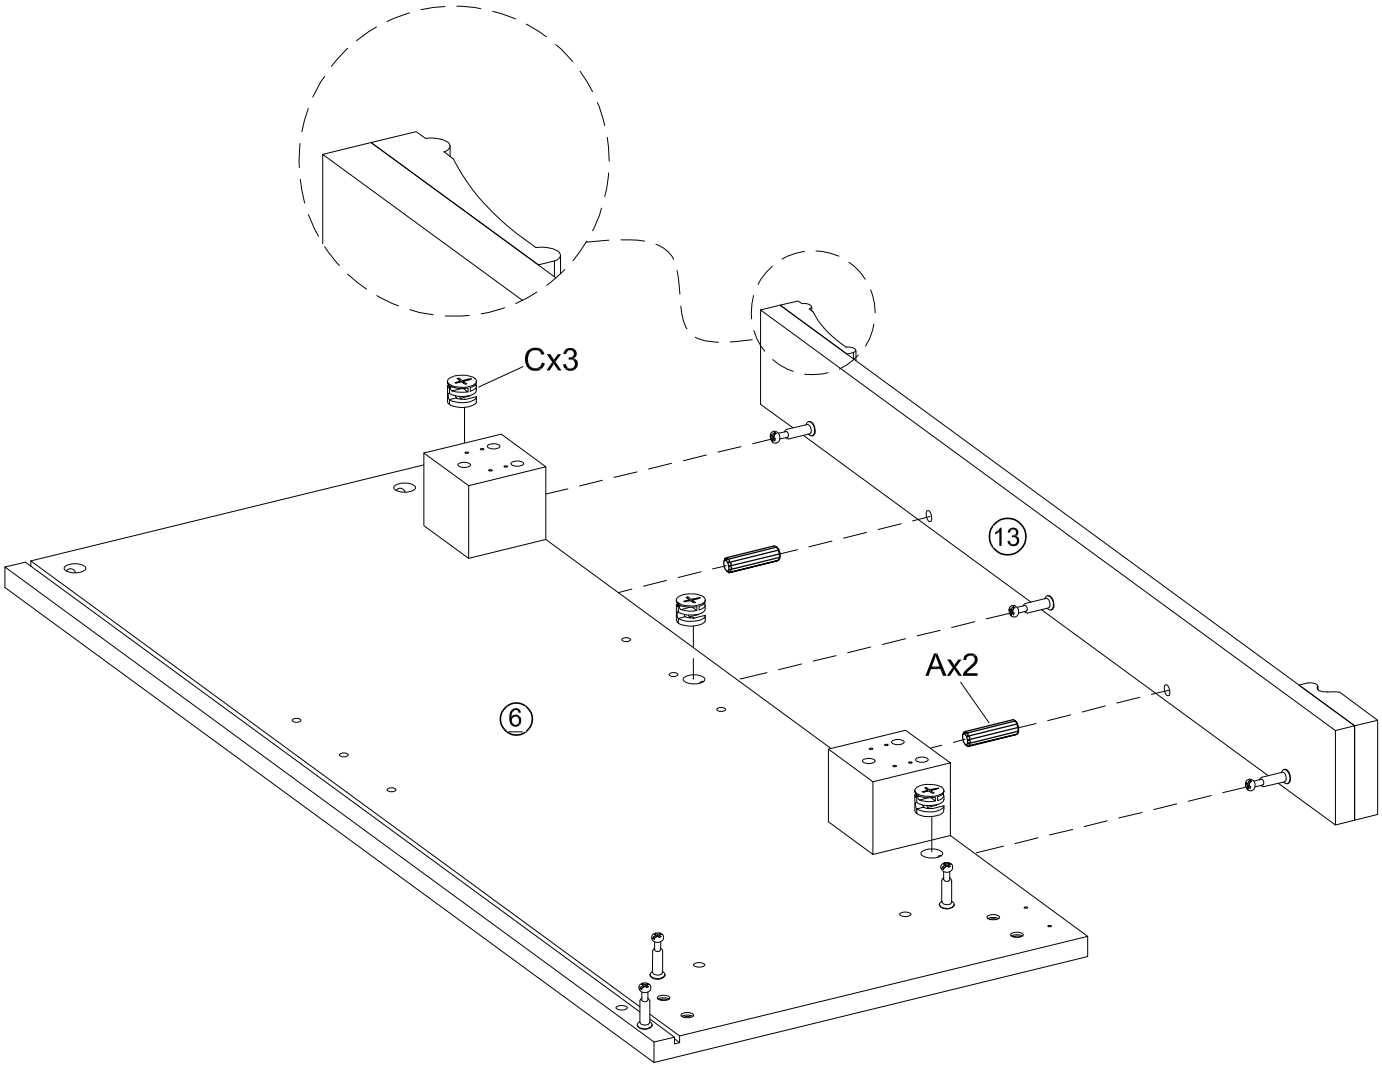 
Ax2 **Cx3**



STEP 10

	
Rx4	Ex4

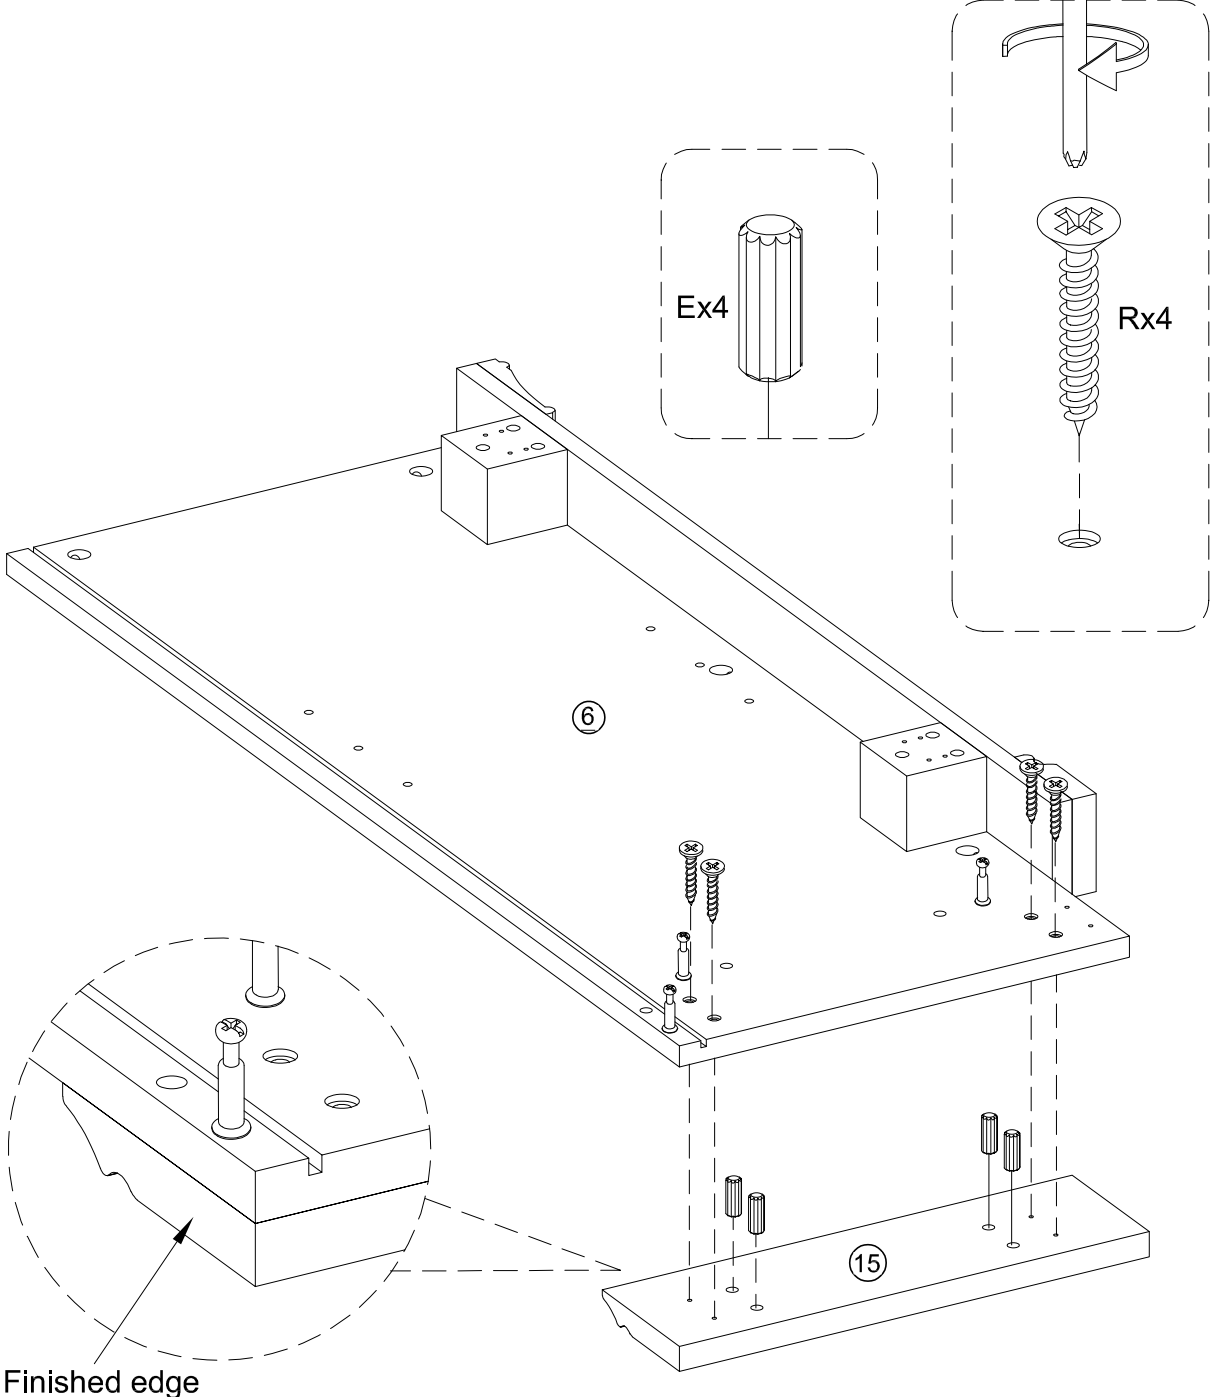 




STEP 11



Rx4





   Ex4

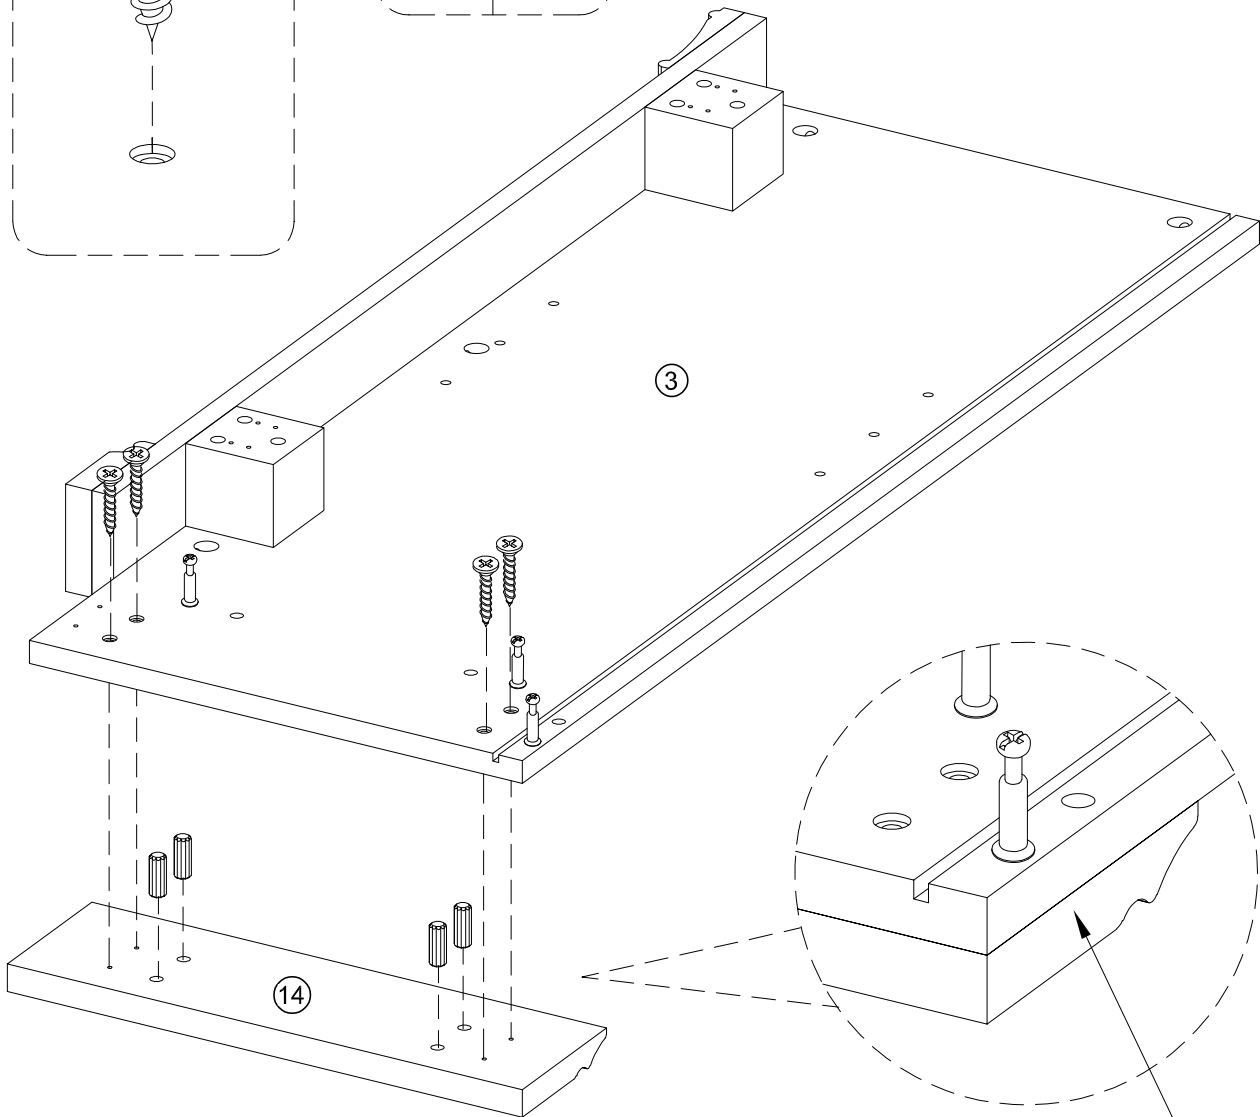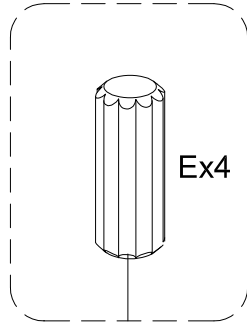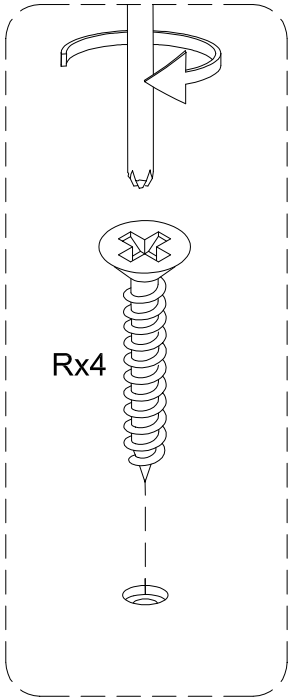


Finished edge


 
 
STEP 12

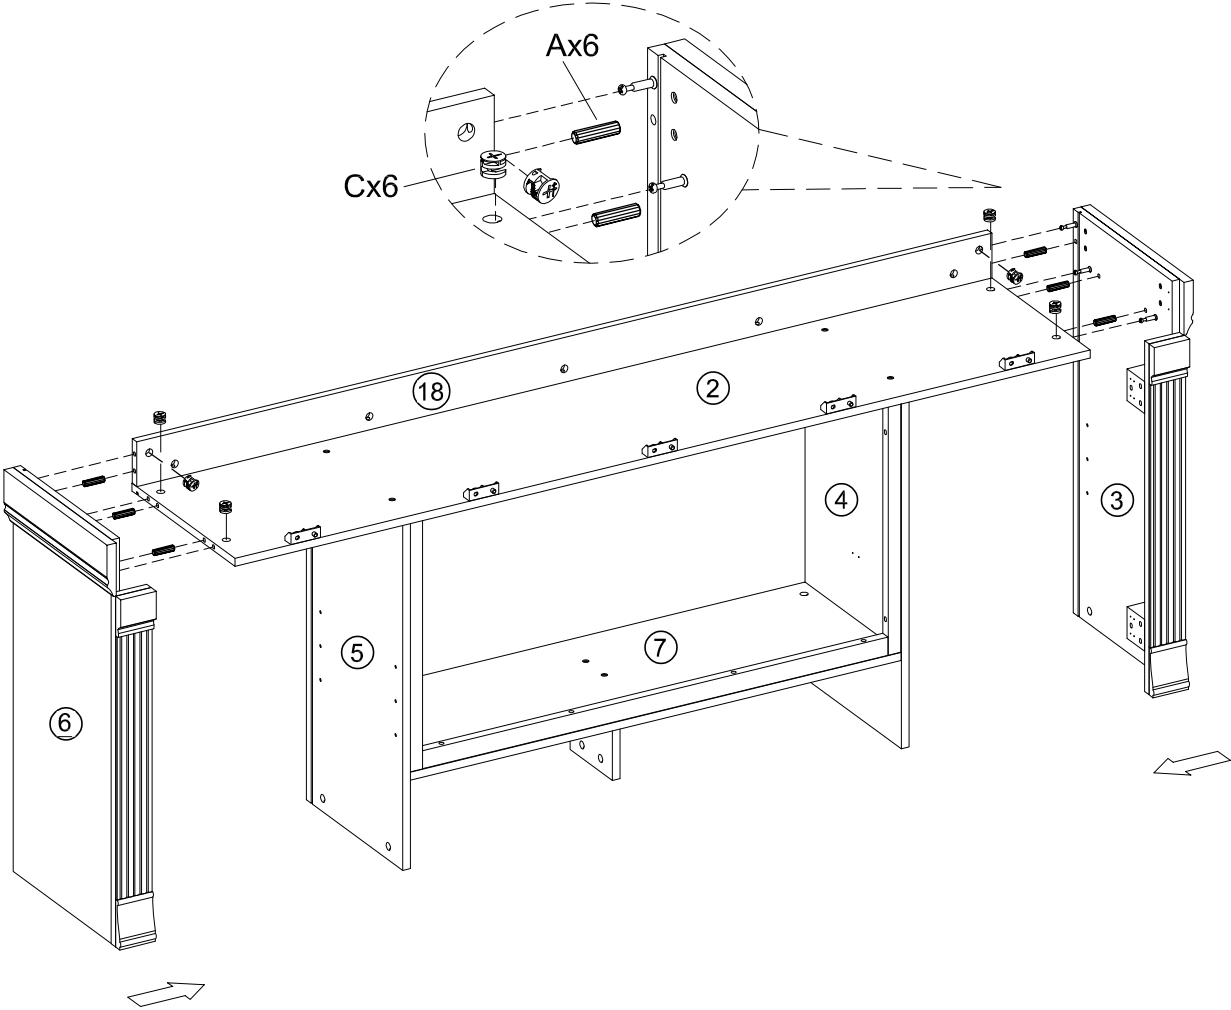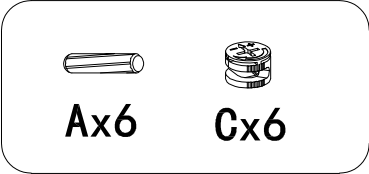

 An assistance is required with this step.

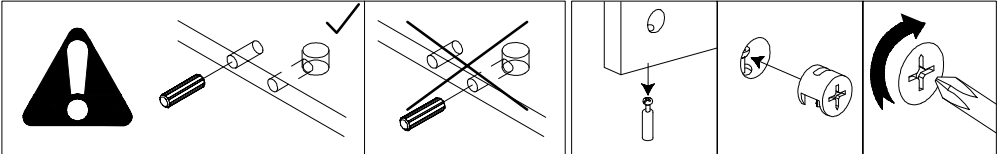


   STEP 13

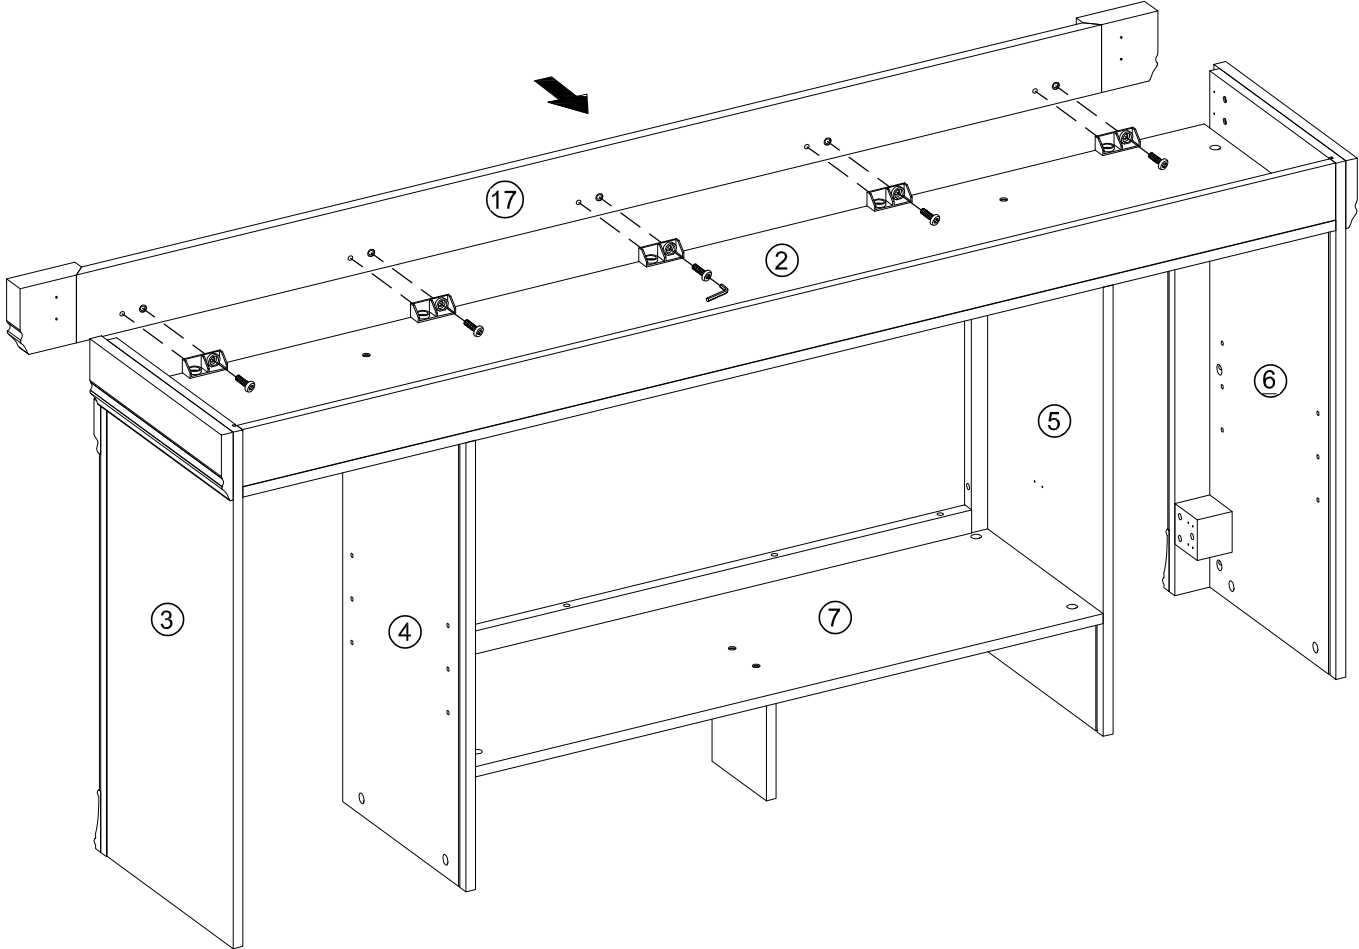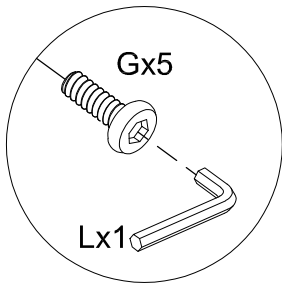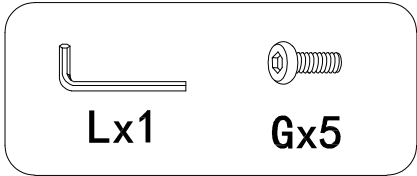

An assistance is required with this step.

 
STEP 14



Vx4



 
Xx8

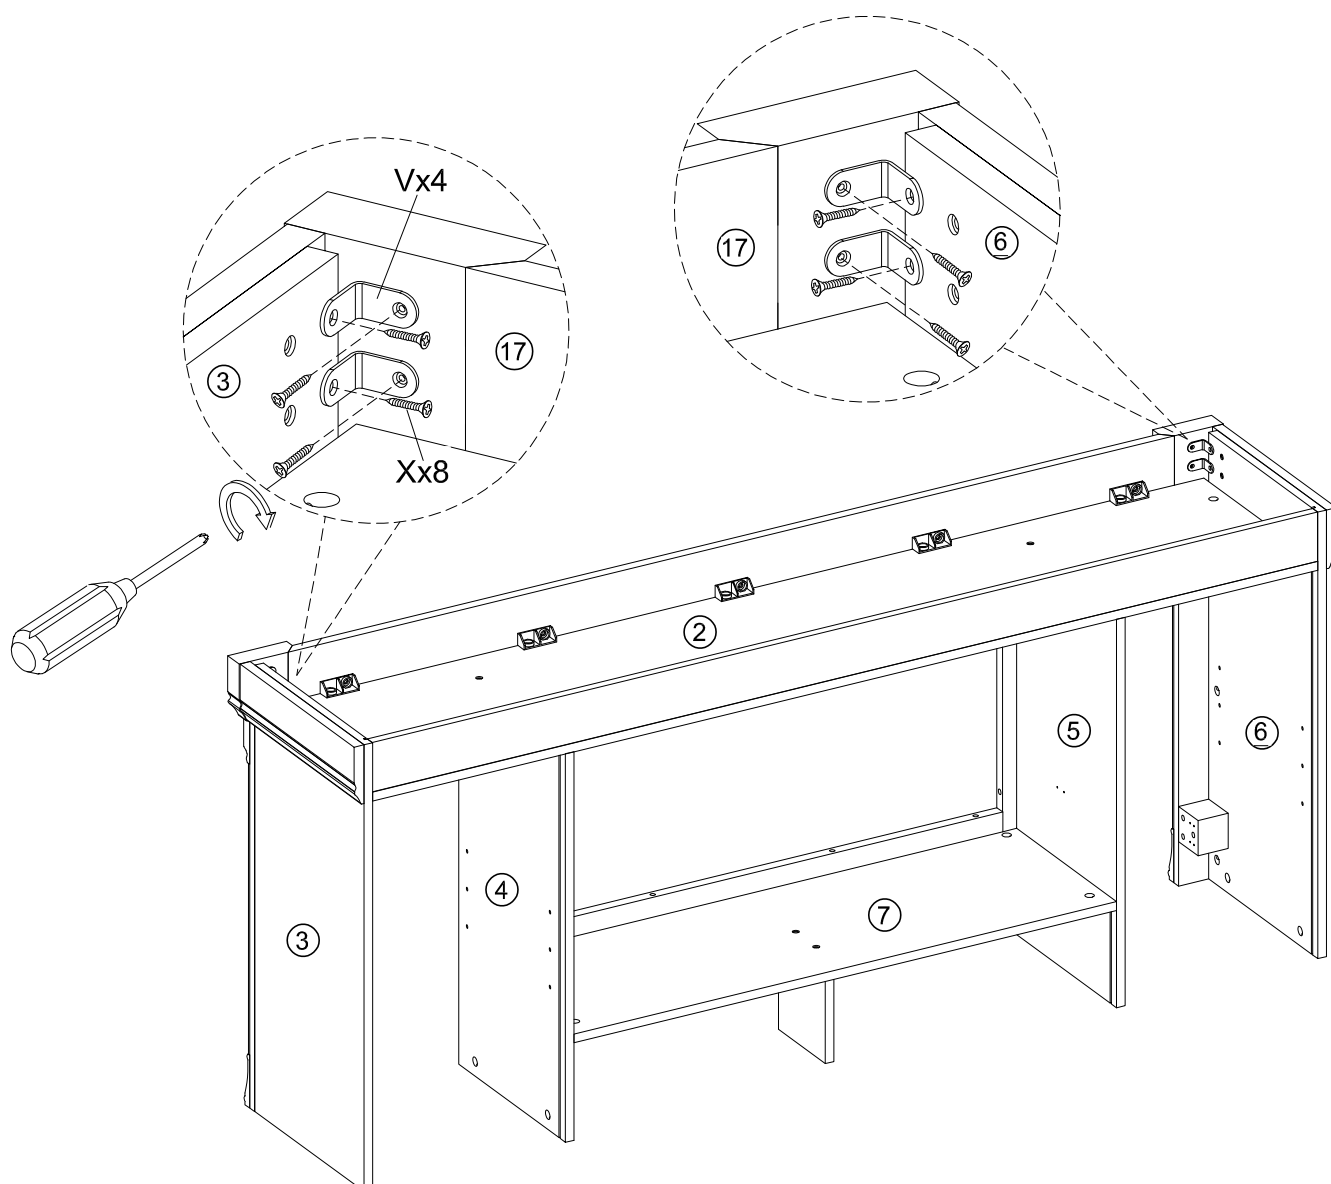


An assistance is required with this step.

STEP 15

 Note the hole direction.

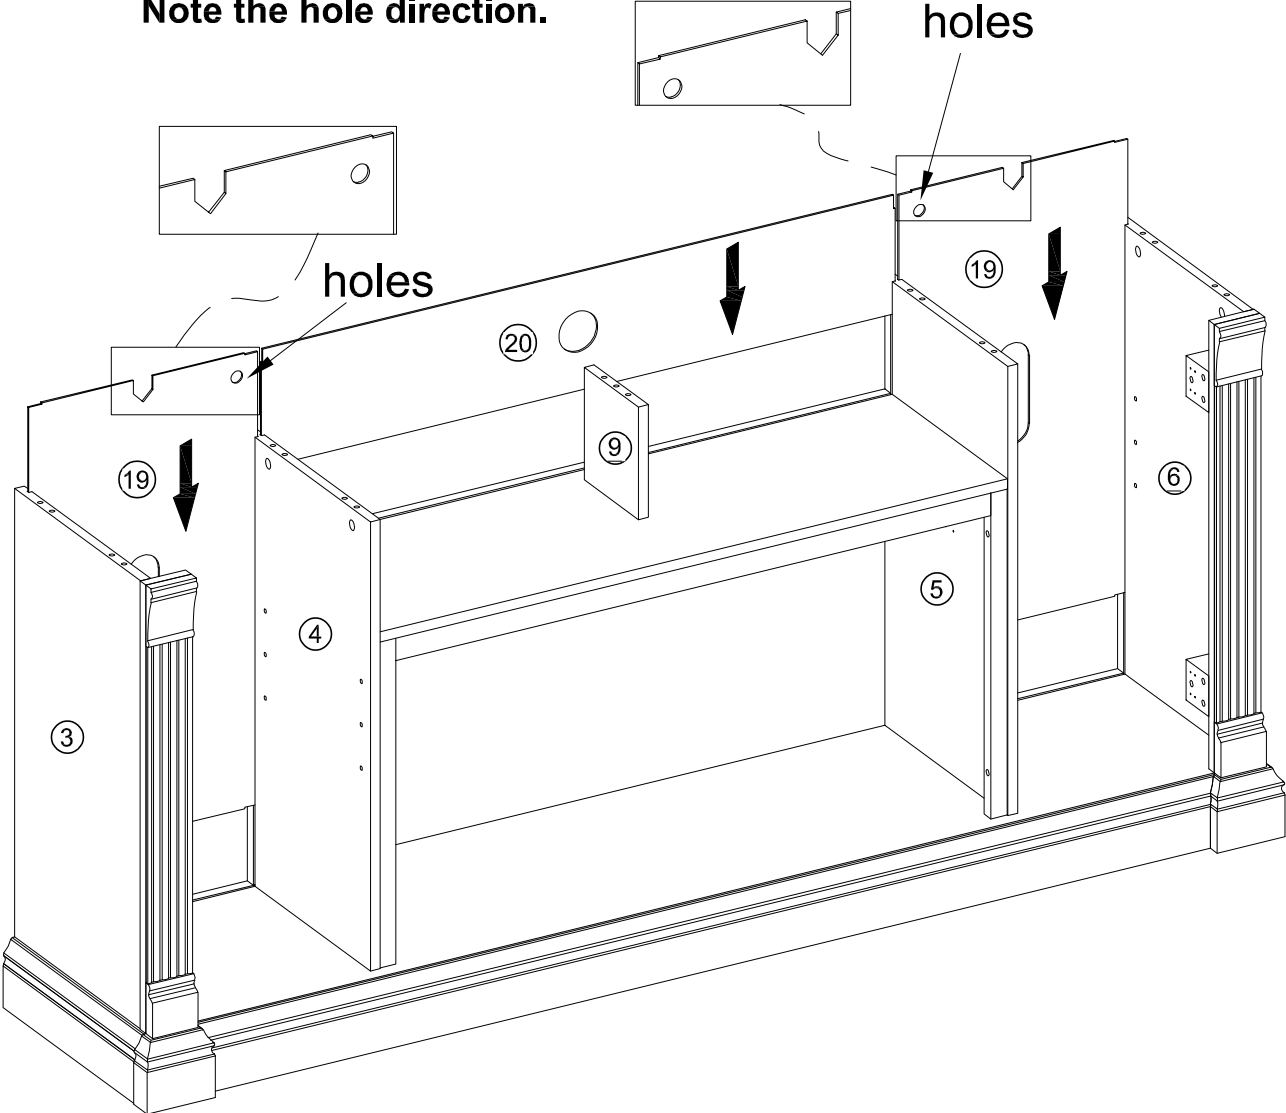

 STEP 16



Bx10




Yx2





Nx6



 
Mx12





Zx2

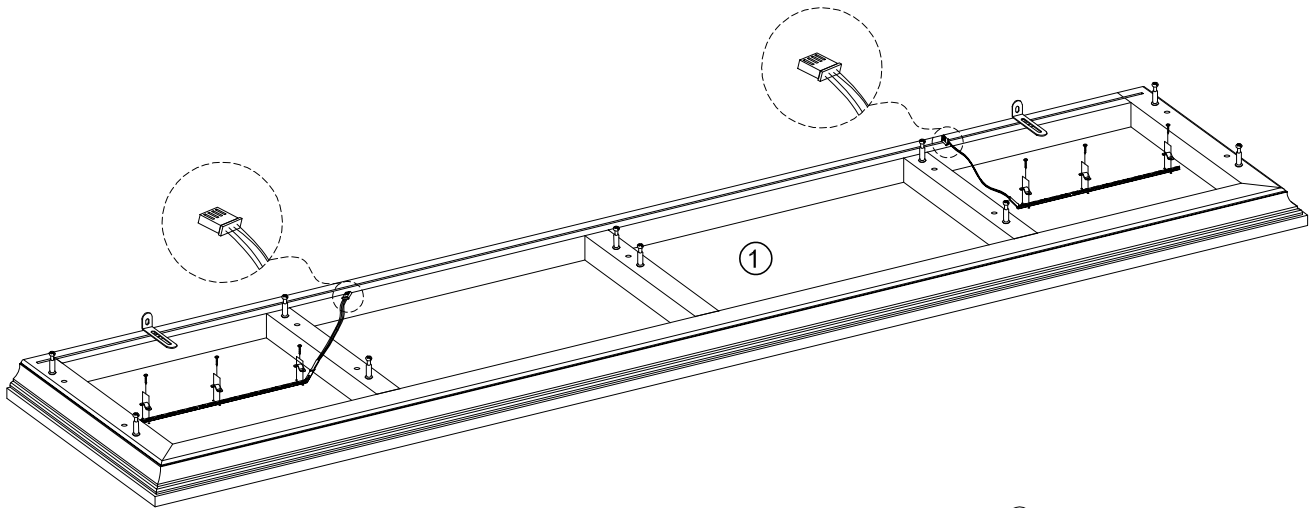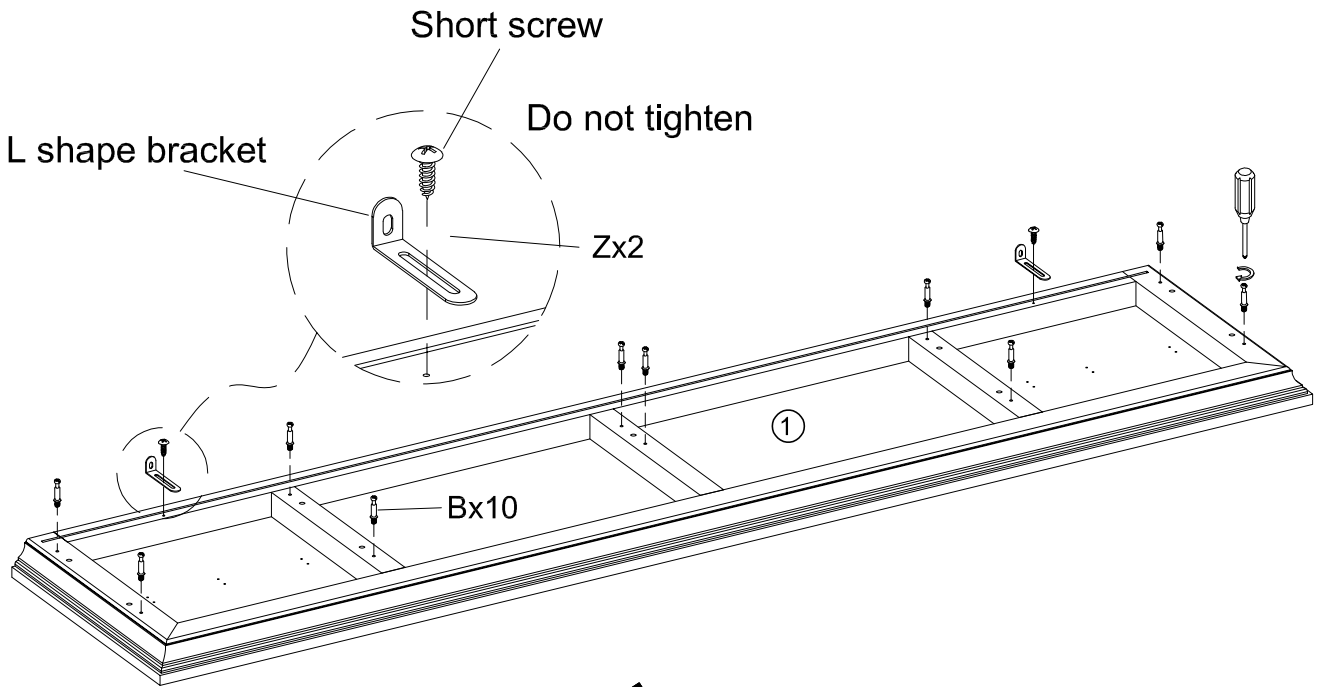  

Remove the tape

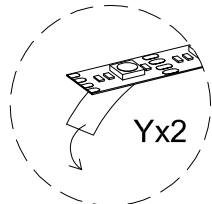 

Press

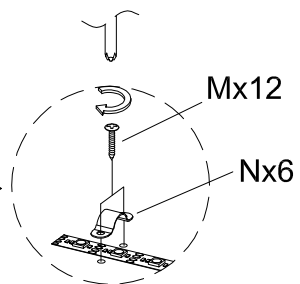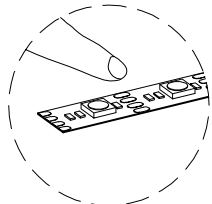  

STEP 17







Ax9



Cx10

    An assistance is required with this step.

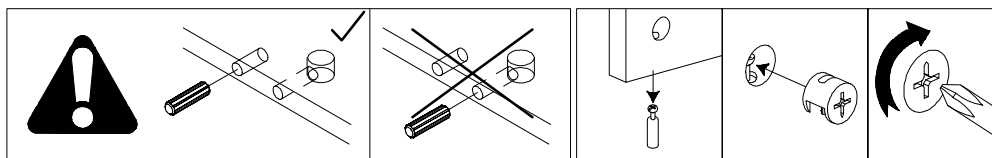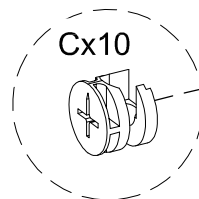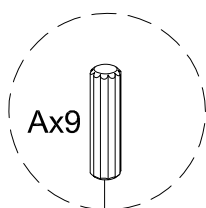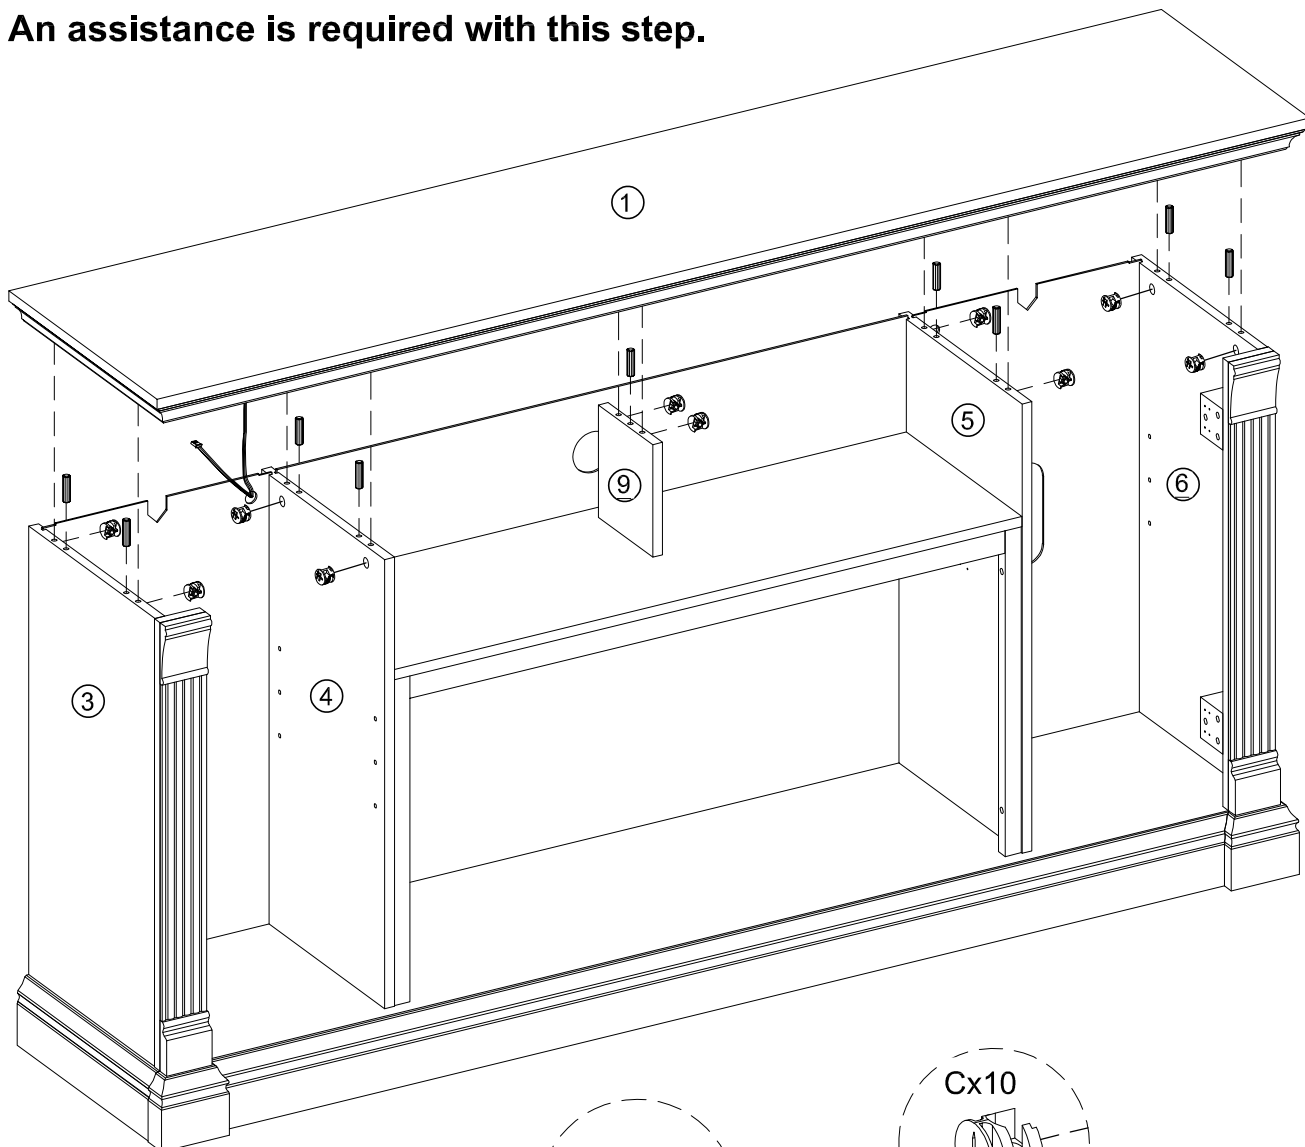


STEP 18



Jx20



 
Kx20

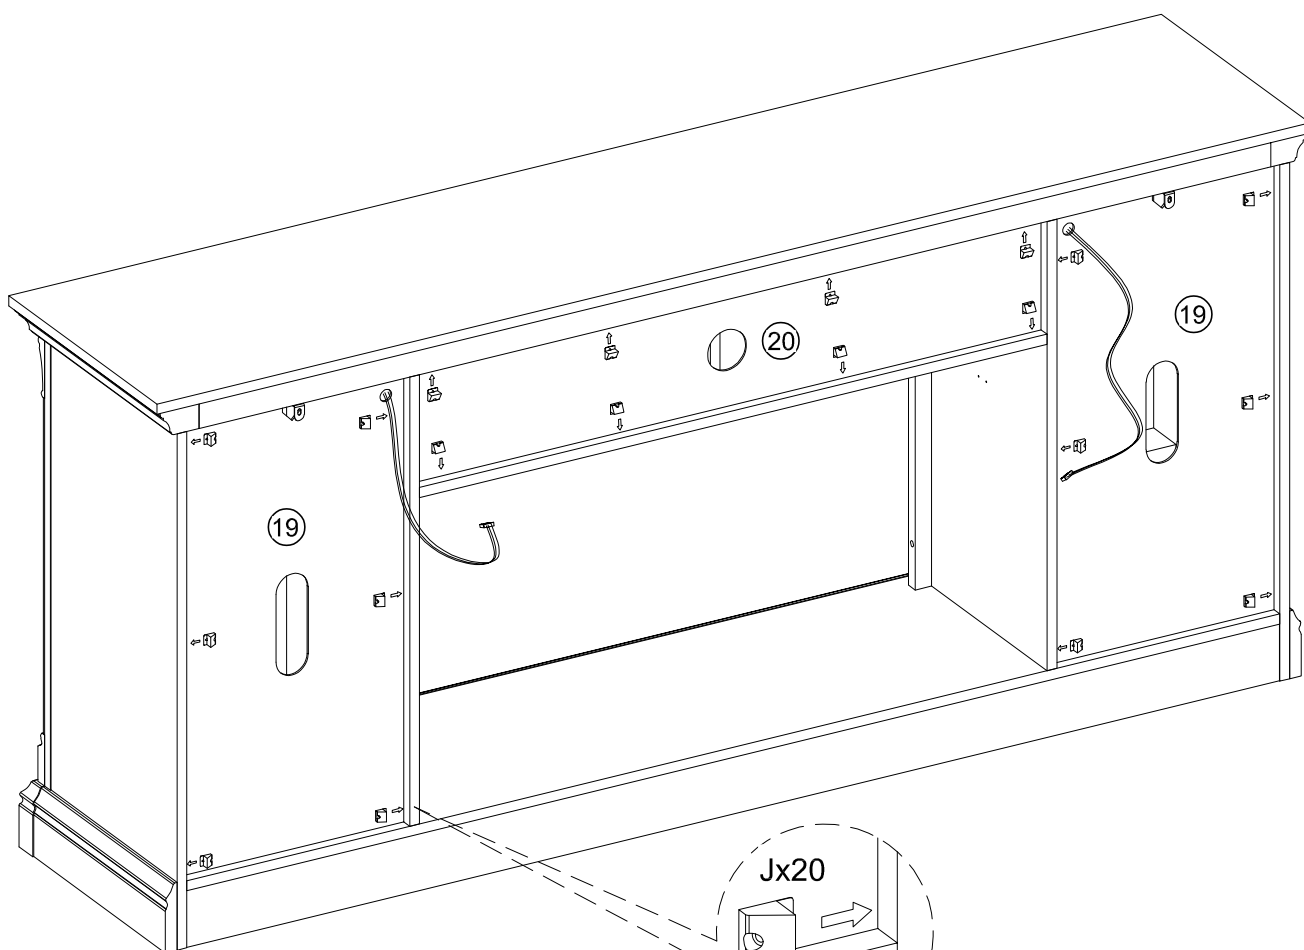



Jx20



 
Kx20



  
STEP 19

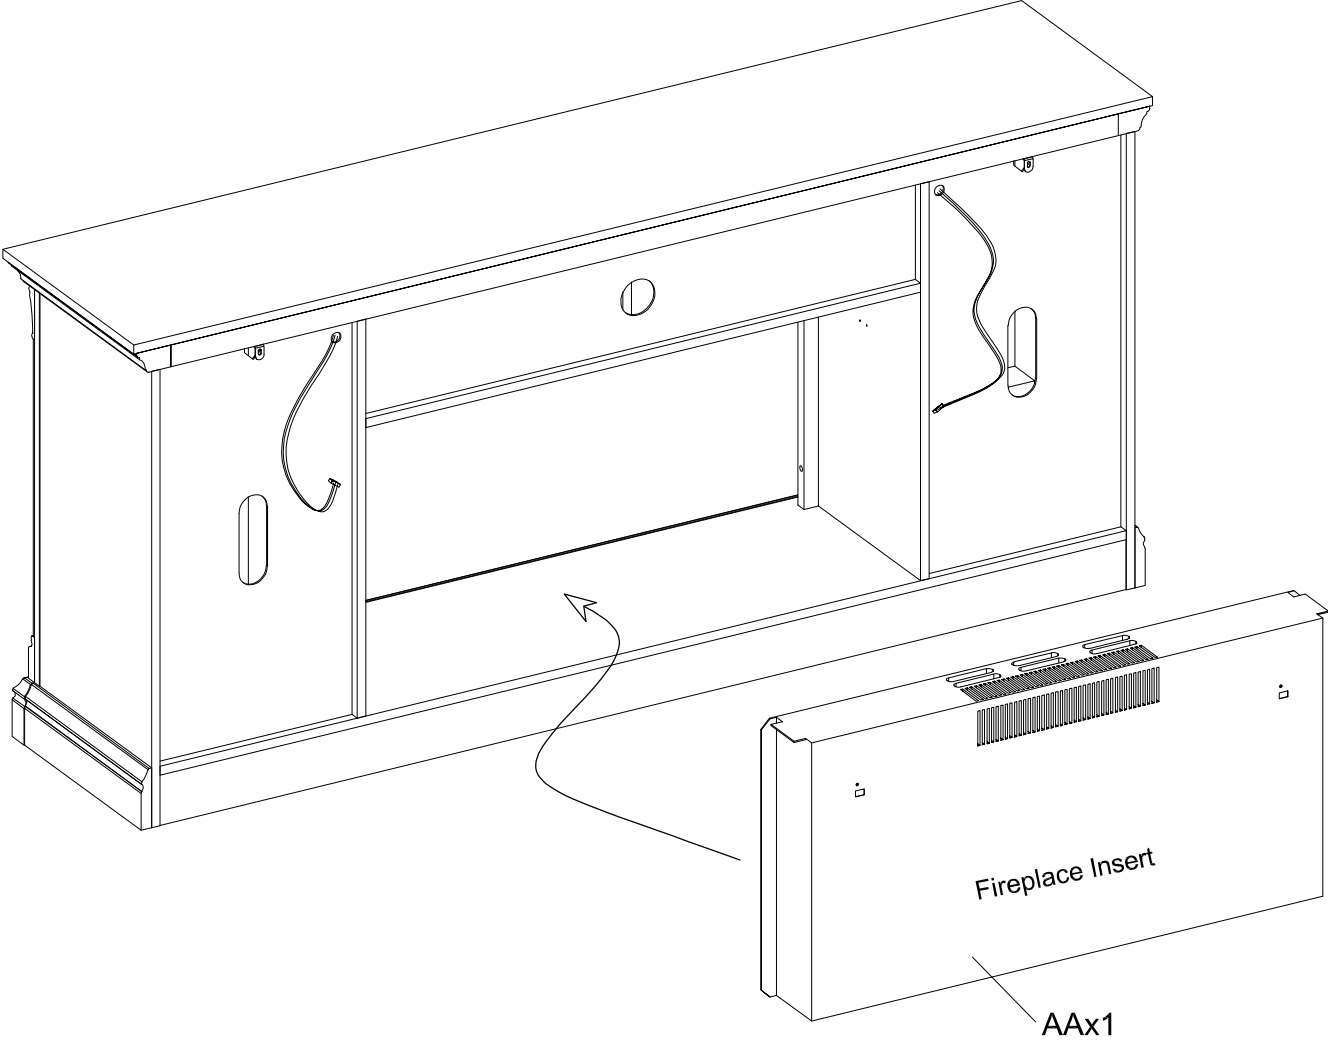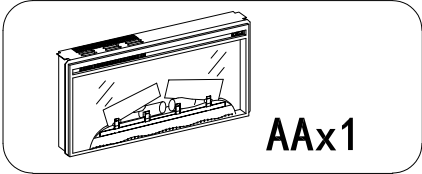

 STEP 20

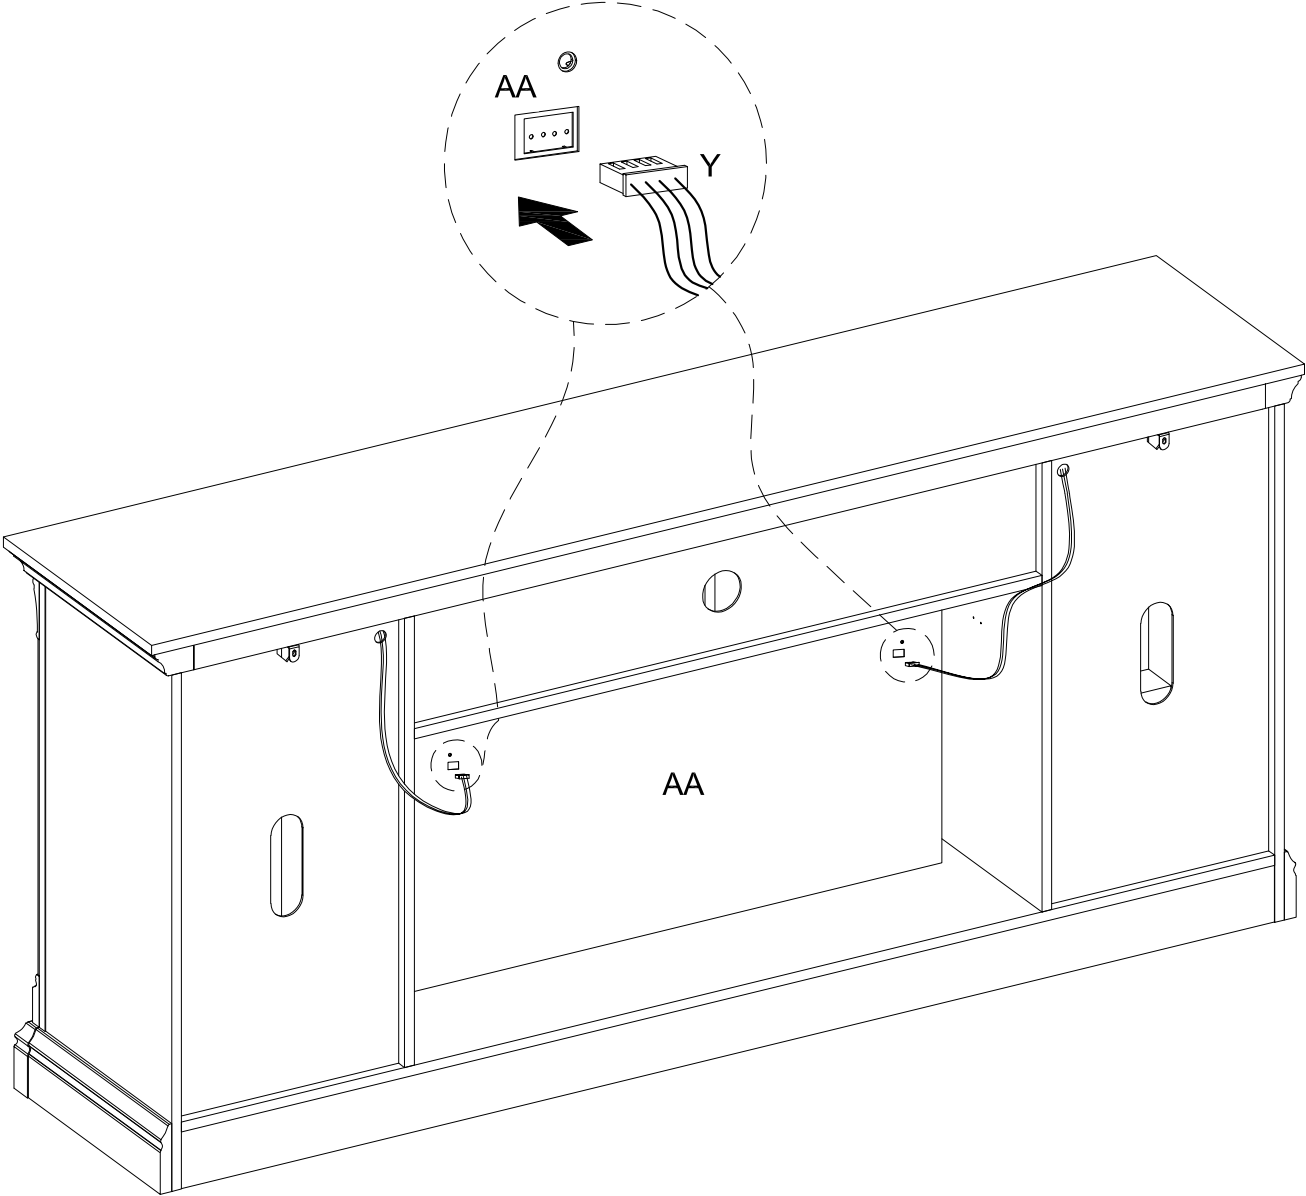


 
STEP 21




Tx2



  Ux4



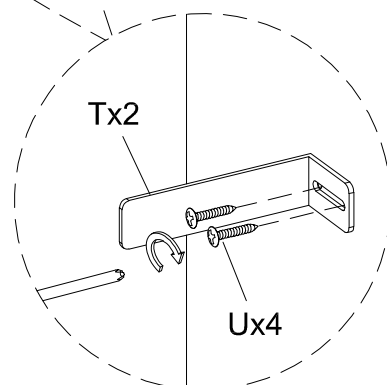
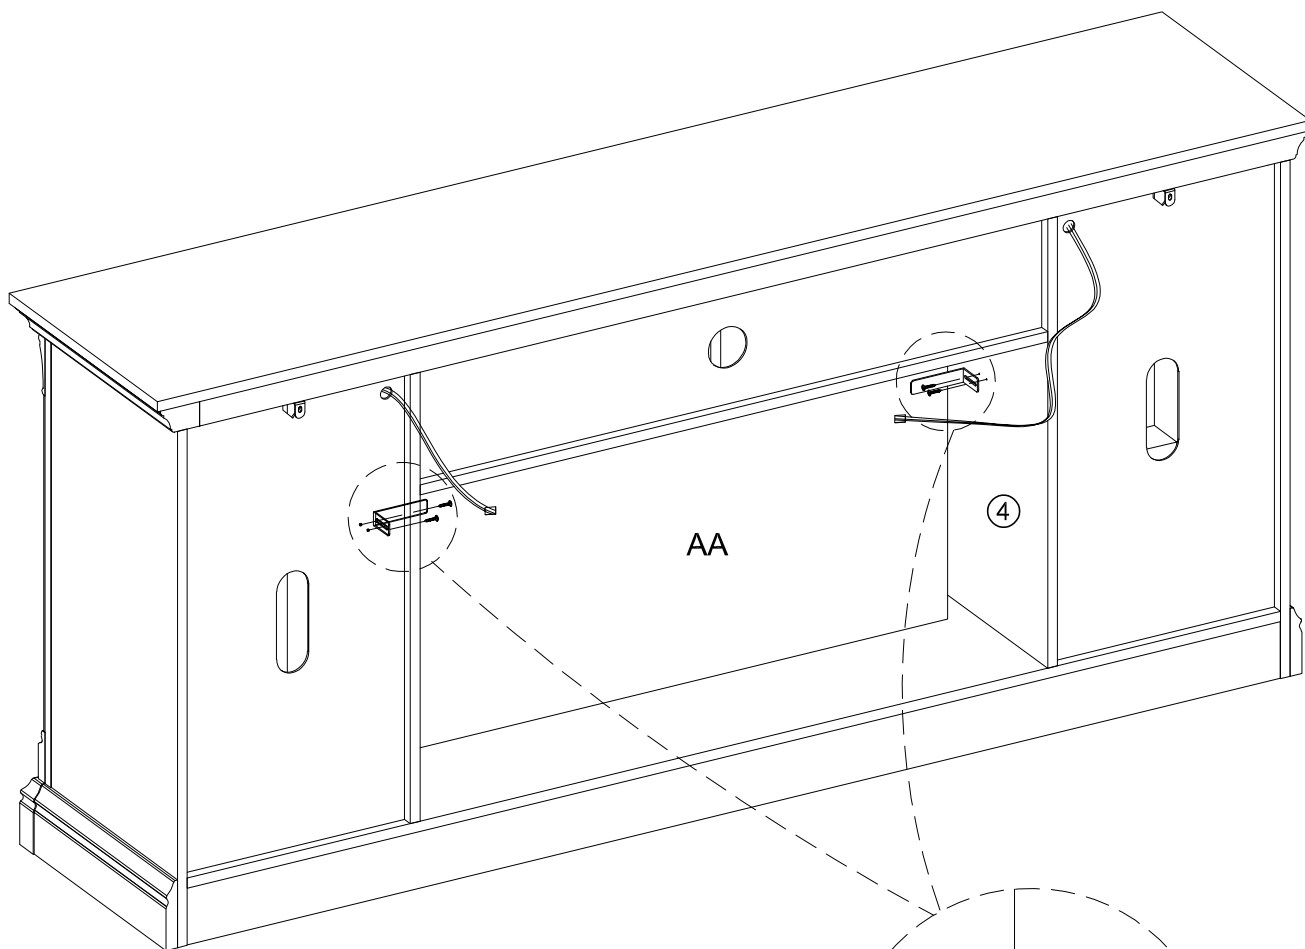


 STEP 22





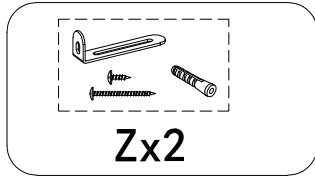


WARNING

    Serious or fatal injuries can occur from furniture tipping over. To prevent the furniture from tipping over, we recommend that it is permanently fixed to the wall. Wall anchor and hardware are included with this product. Please make sure hardware is suitable for your walls before installing, as different wall materials may require different types of anchors.

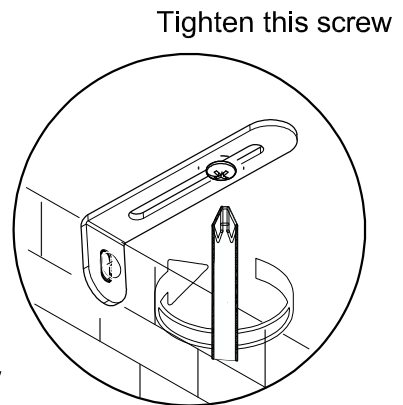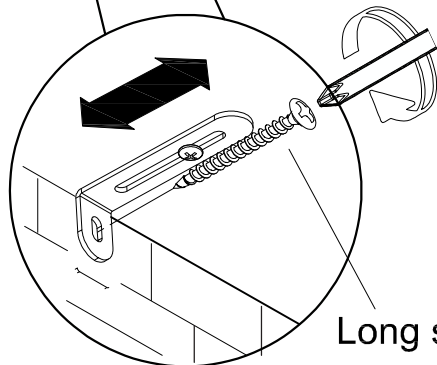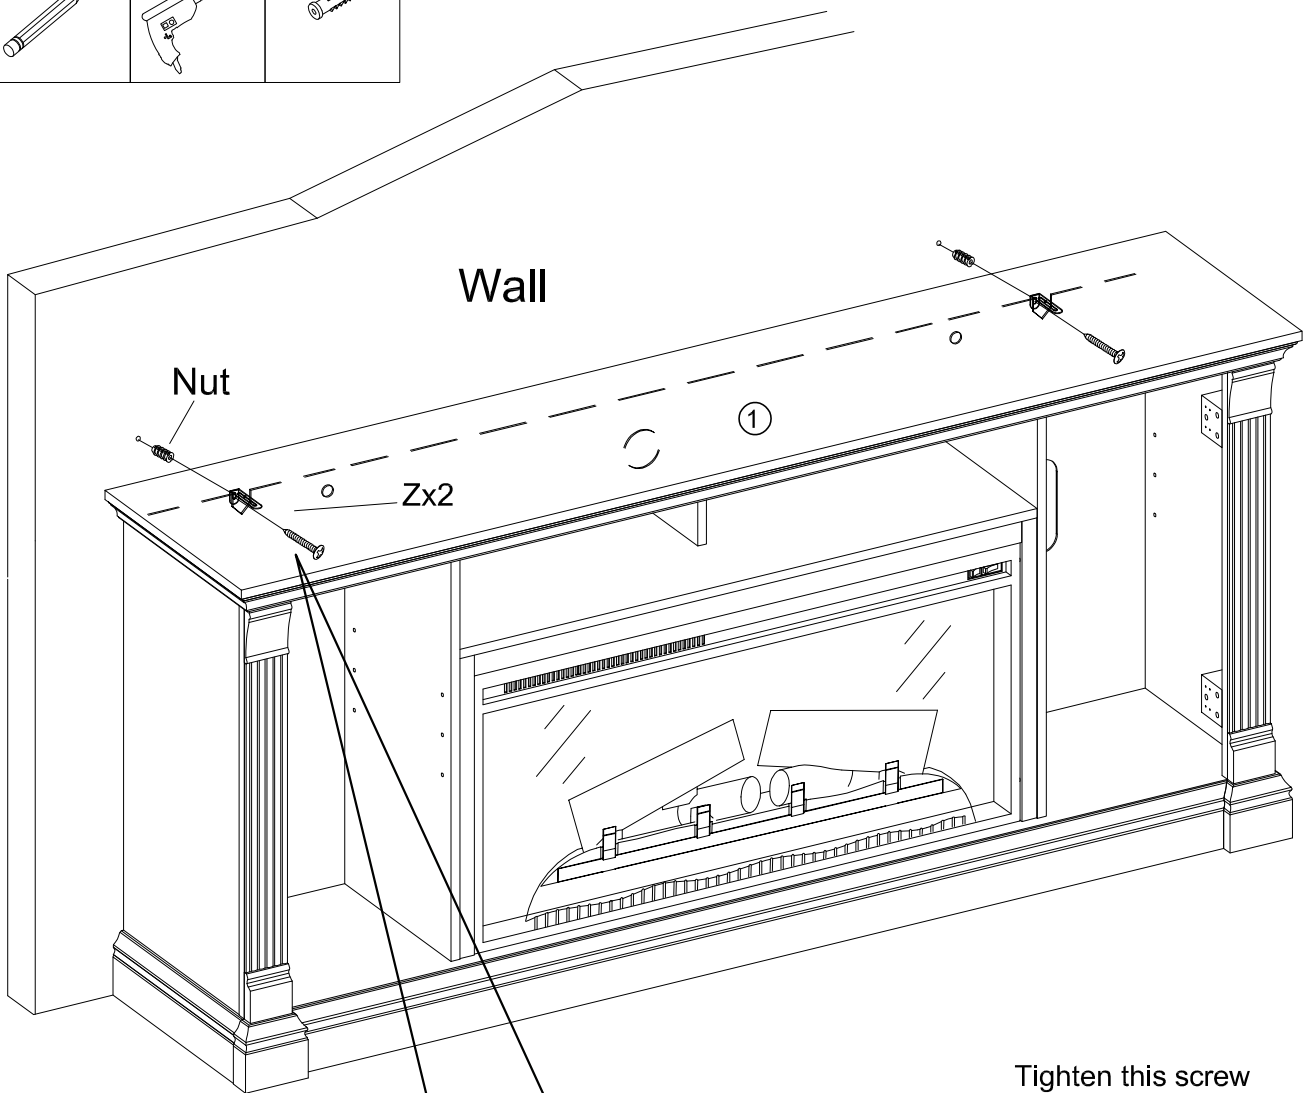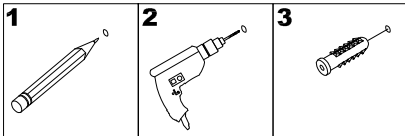

     STEP 23

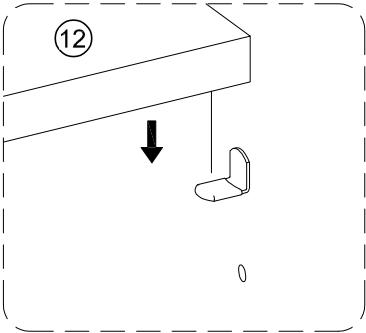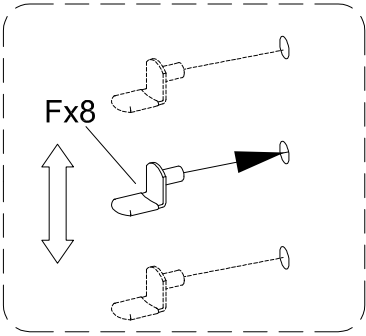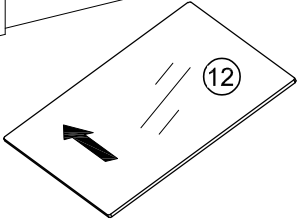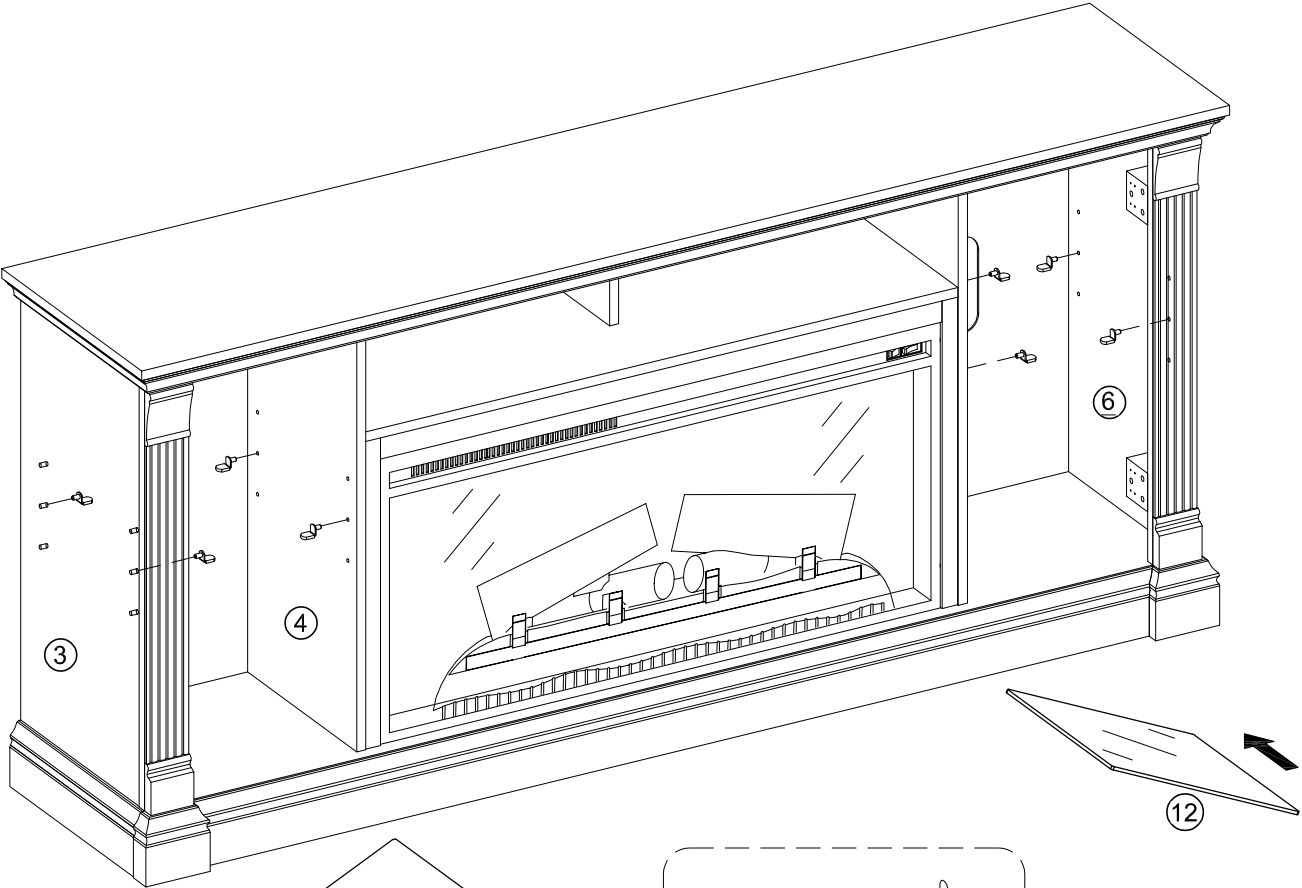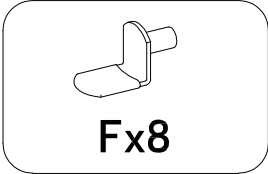

STEP 24




Sx2



Qx2





 Wx4



Xx8

 
 
Power tools should not be used to assemble and adjust the doors.

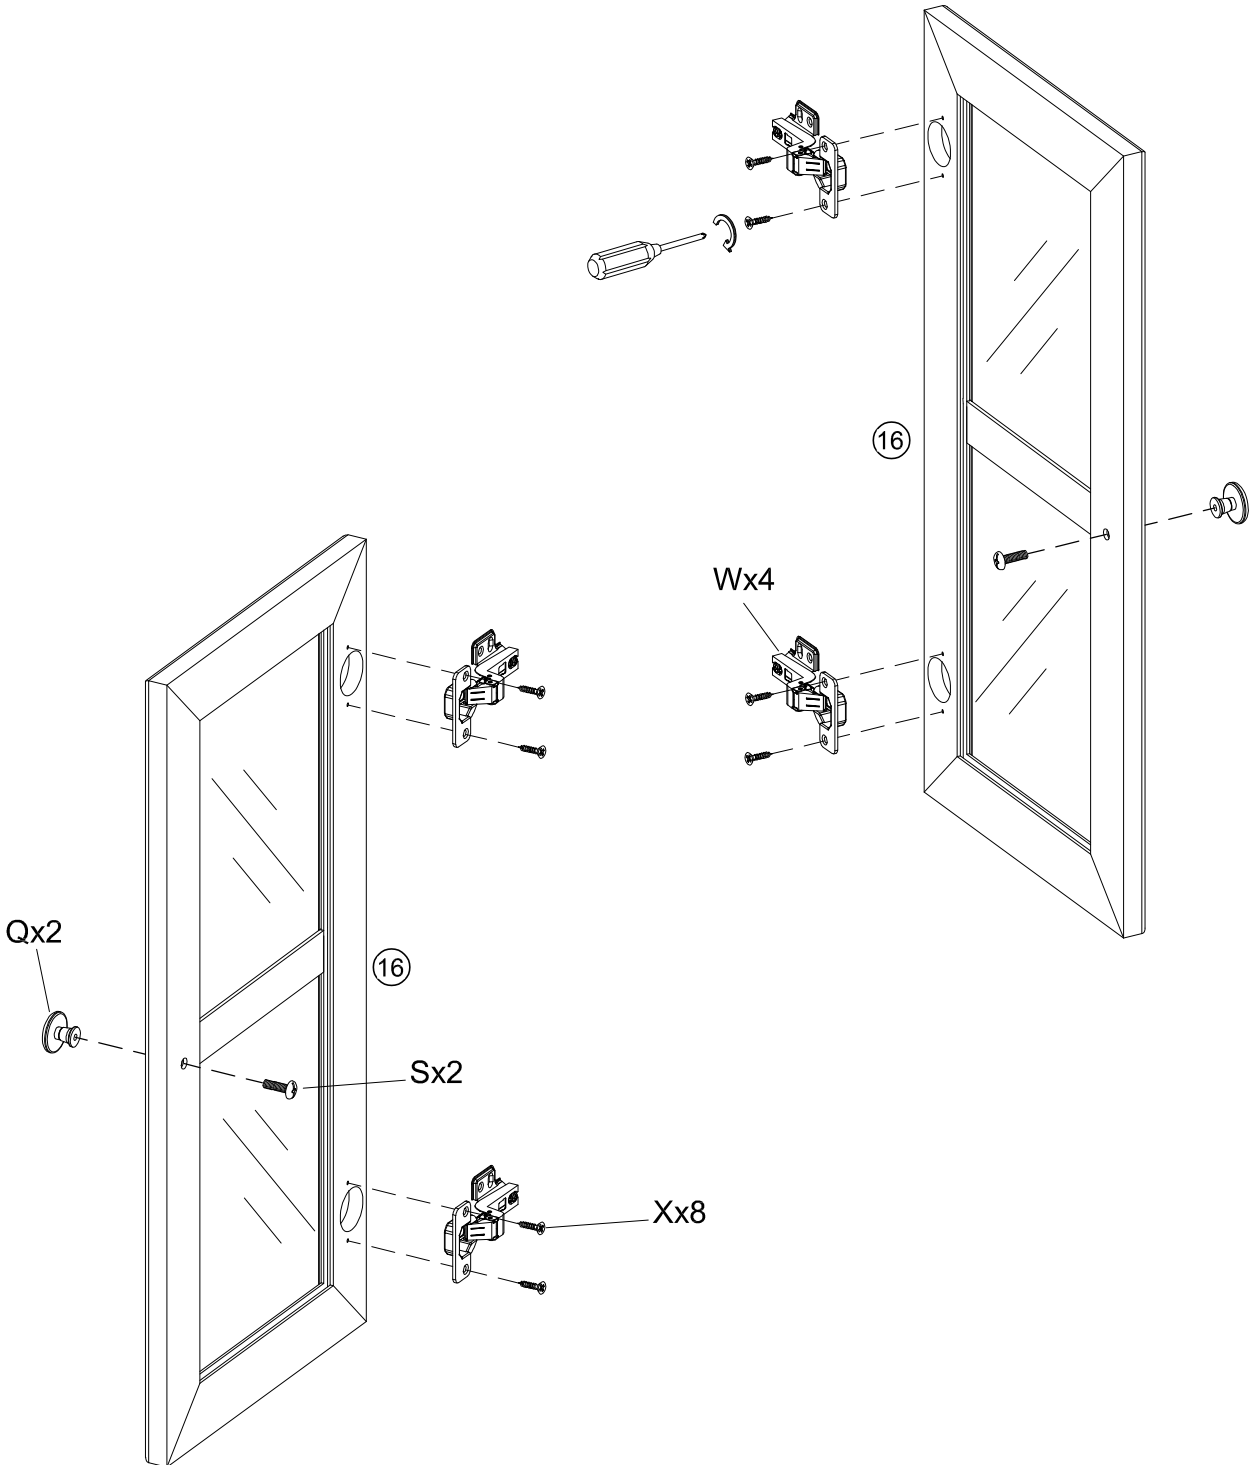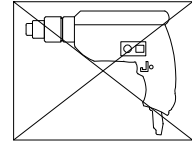


STEP 25



  
Xx16

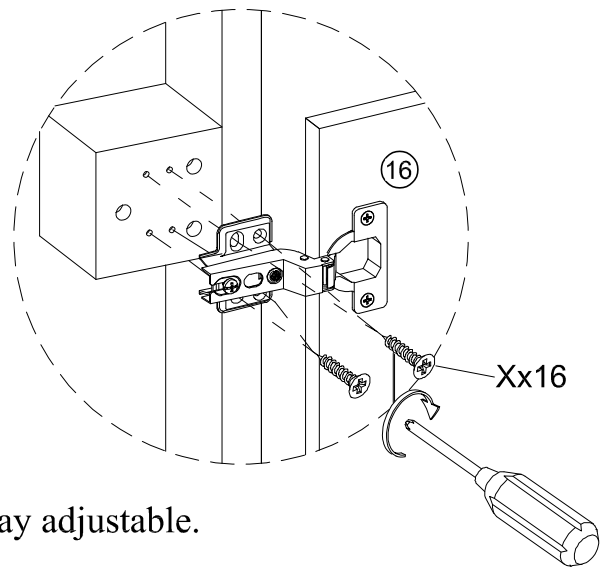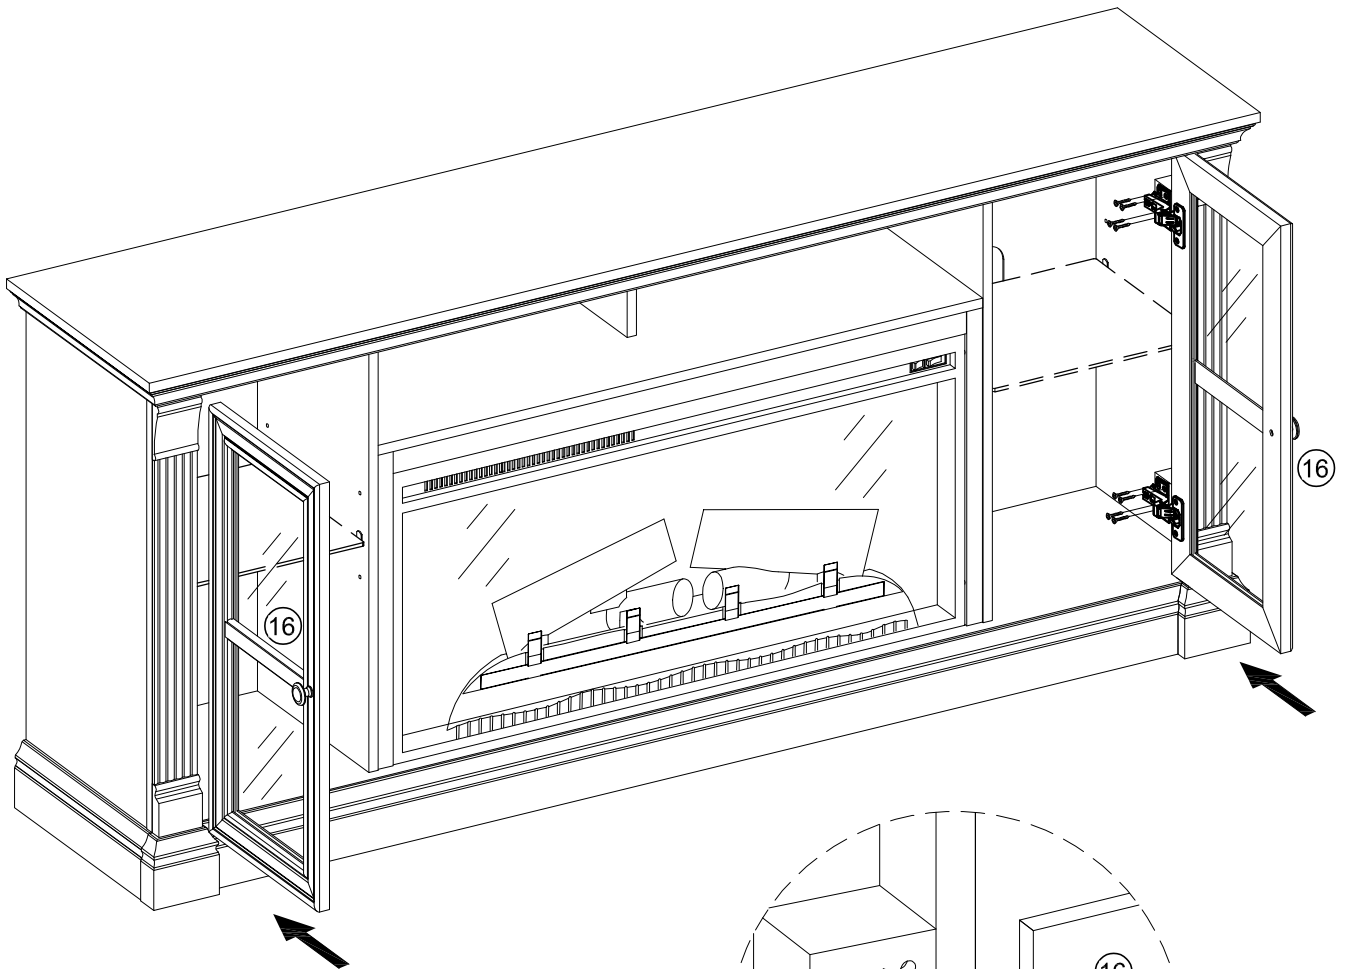

 
Concealed hinges are three-way adjustable.

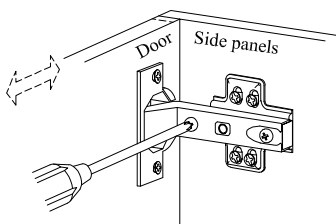

Horizontal
by screw adjustment


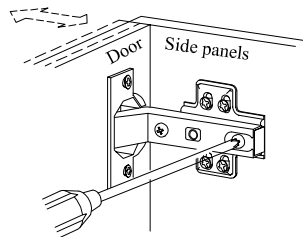 


 In-and-Out
by loosening the hinge-arm
mounting screw or via cam
adjustment

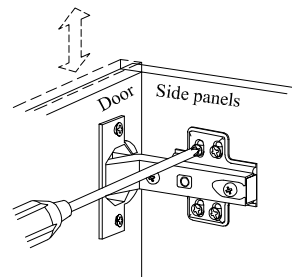


Vertical
Via slots in the mounting
plate or via cam adjustment

  STEP 26

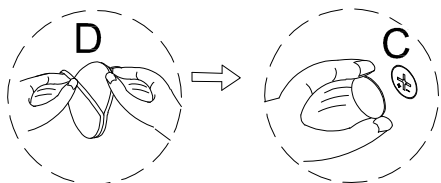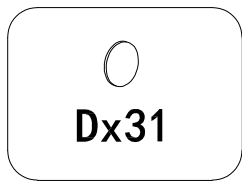

Stick stickers(D) on cam locks(C)

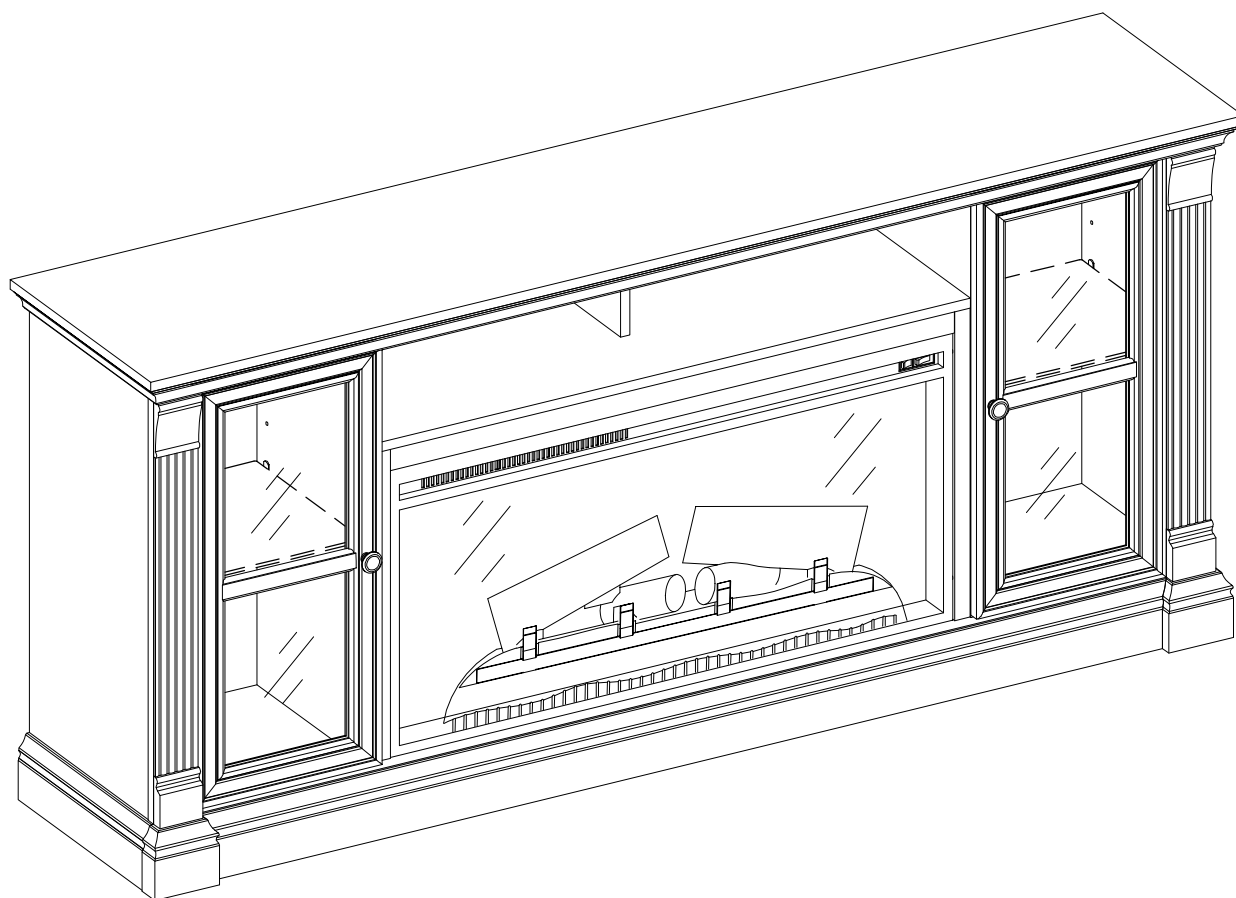 

Final Assembly