

Assembly Instructions

Caution: You must read this before you proceed

Care & Maintenance



- Not for commercial use. For residential use only.



- Furniture may scratch floors. We recommend using furniture pads to protect your floors.



- Do not put hot items directly on furniture surface.



- Do not clean furniture with harsh cleansers or polish.



- Do not place furniture under direct sunlight.



- Do not place furniture near heating or cooling vents.



- Do not write on furniture without a padded barrier to protect the surface.



- Do not place furniture outside . For indoor use only.



- Stains may be removed with mild soap solution and damp cloth.




- Children should not climb or jump on the furniture.




- Dust and pick-up spills using a clean, non-colored, lint-free cloth.

ACCENT CHAIR

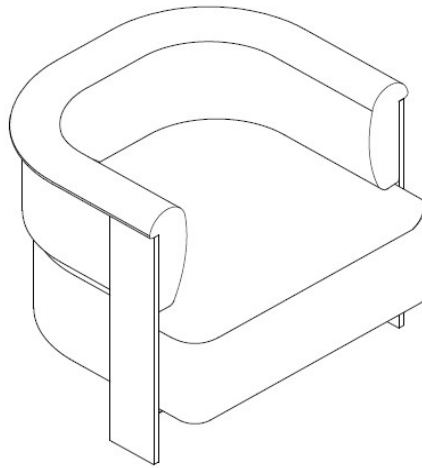

Parts List

 Label	Picture	Description	QTY
A		Seat	1
B		Backrest	1
C		Leg	3
D		Matel Support	3

Hardware

Label	Picture	Description	QTY
①		Bolt(1/4 x 40MM)	3+1
②		Bolt(1/4 x 15MM)	12+1
③		Flat Washer(1/4)	15+1
④		Washer Ring(1/4)	15+1
⑤		Allen Wrench	1

Assembly Preparation

Before
Beginning
Assembly:



 
A



B



C x 3



D x 3

①		3+1
②		12+1
③		15+1
④		15+1
⑤		1



- Read instructions, cover to cover-



- Have 2 adults on hand for assembly-



- Do not assemble on flooring or carpet-




- Assemble on a clean non-marring surface (packing foam)-



- Save all packaging until finished-

Assembly Steps


Overview

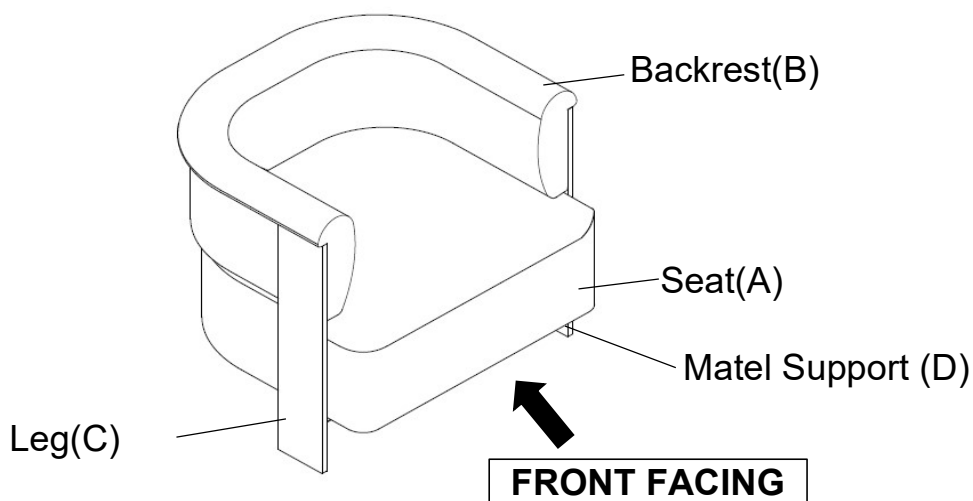

This chair has multiple parts and may require up to 30 minutes to assemble. To give you an overview of the chair parts, the above picture is to help you put the various parts into perspective. Please read through the instructions below to familiarise yourself with the parts and steps before assembly.

Step 1

 A



B



C




D



①		3+1
②		12+1
③		15+1
④		15+1
⑤		1


Place all the parts on a clean ,non-marring surface.

Step 2

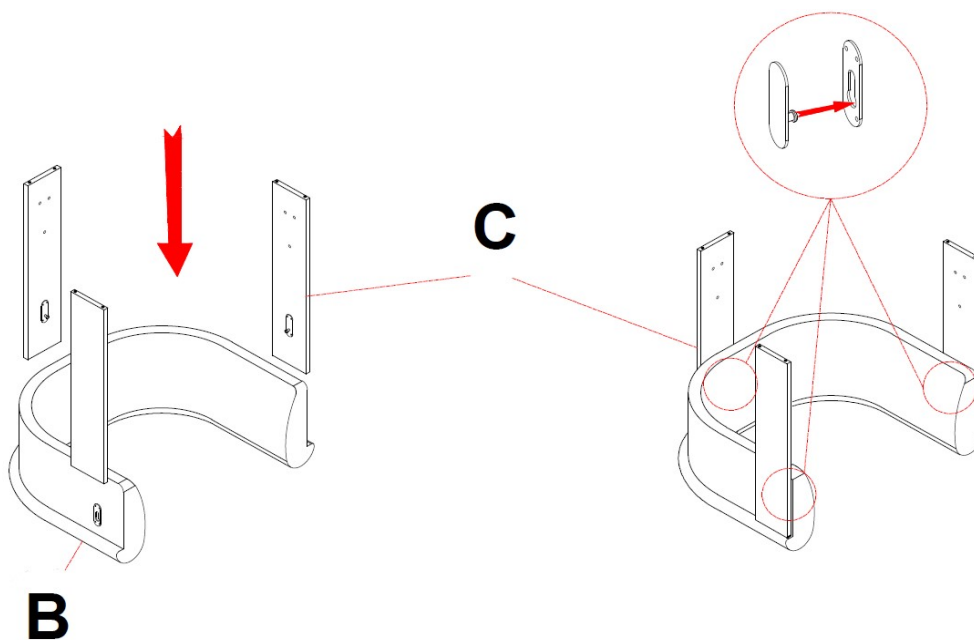



Place the Backrest (B) on the ground. Align the Leg (C) with the hole positions on the Backrest (B), then push it into place as illustrated.

Step 3

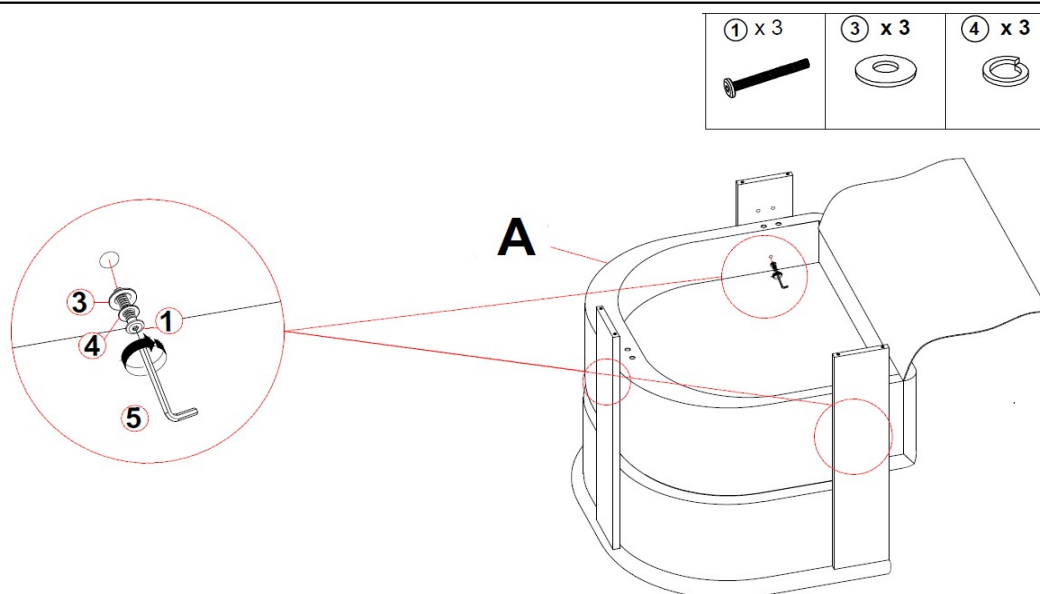


Remove the non-woven fabric cover. Place the Seat (A) onto the three legs of the Backrest (B). Align the holes in the Seat (A) with the holes in the Legs (C). Attach the Seat (A) to the Legs (C) using bolts (①), Spring Washer (④), and Flat Washer (③) with Allen Wrench (⑤).
Note: After aligning the Seat (A) correctly with the Legs (C), fully tighten all screws securing the Seat (A) to the Legs (C).

Step 4

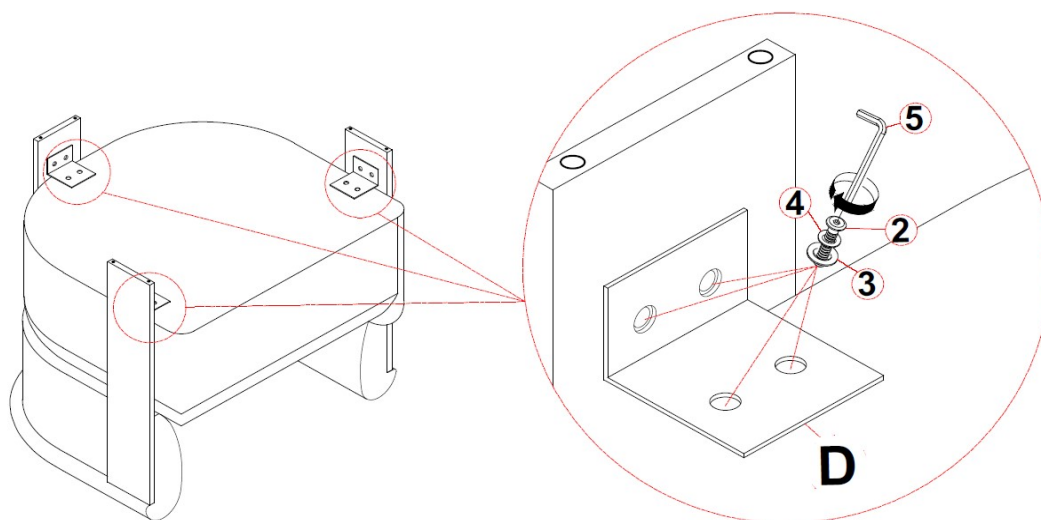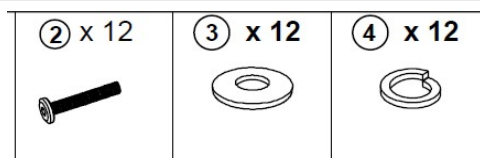


REINFORCING THE NON-WOVEN FABRIC. Place Matel Support (D) in the correct position between the Seat (A) and the Leg (C). Attach Matel Support (D) to the Seat (A) and the Leg (C) using Bolt (②), Spring Washer (④) and Flat washer (③) with Allen Wrench (⑤). Tighten clockwise to secure. AS ILLUSTRATED.

Step 5

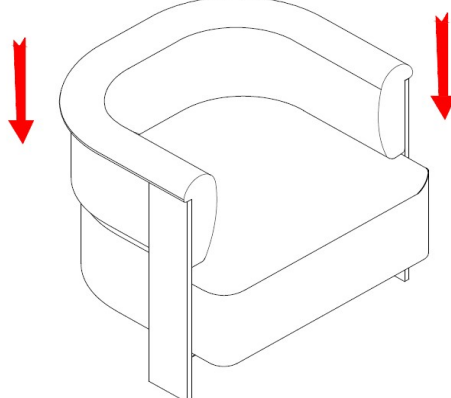

Retighten all the bolts. Place the chair on a flat surface, then apply downward pressure by hand on the Backrest (B) to firmly lock the joint at the backrest.

Step 6

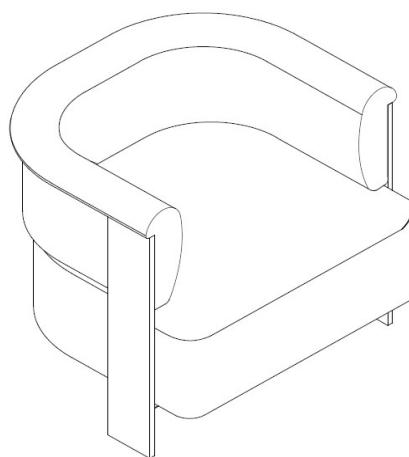

Place the chair on a flat surface. Check and ensure all parts are securely connected. This will help align all parts at the connection points.

Note 1: When tightening bolts, tighten them in sequence.

Do not fully tighten any bolt before moving on to the next.

This will cause the chair frame to warp.

If still loose, loosen the bolts and repeat the process. Do not fully tighten any bolt before moving on to the next.

WARNING!! IF THE CHAIR IS NOT STABLE, IT MAY DAMAGE THE PRODUCT. ENSURE ALL BOLT ARE TIGHTENED.

The chair is ready to use.

This chair can only be used on a flat surface.