

Purchase Date: \_\_\_\_\_ Order/Customer Reference Number: \_\_\_\_\_  
Thank you for choosing us. We Stand behind our brand and the quality of the items we sell.  
Replacement parts or products will be sent at our discretion within the 1 year warranty period. Proof of purchase, with the date of purchase as well as photos of the merchandise defect, must be provided.  
Photos are used to determine the cause of the defects and for future quality control.


If you have any questions, comments or concerns, feel free to contact us.

# FOUNTAIN WITH LIGHTS

Read the assembly instructions carefully and follow the care instructions. Save these instructions for future reference.

**Select a smooth, level surface to place the fountain.**

**Assemble components on a soft, clean surface to avoid scratching or damaging the finish.**

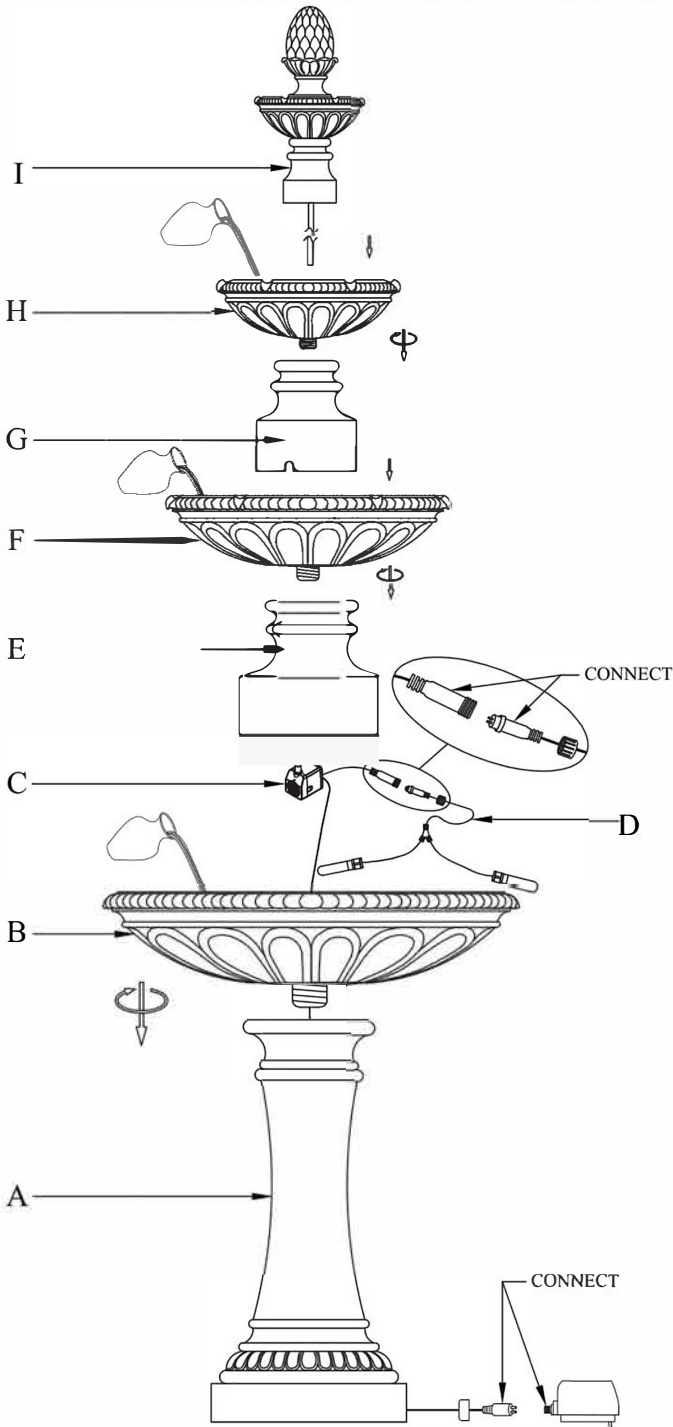

Inspect packaging to ensure all parts are accounted for before disposing of packing materials.



**2-PERSON  
ASSEMBLY  
RECOMMENDED**

No.	PARTS	QTY.
A	Pedestal	1
B	Large Tier	1
C	Electric Submersible Pump	1
D	LED Lights	1
E	Large Column	1
F	Medium Tier	1
G	Medium Column	1
H	Small Tier	1
I	Topper	1

**NOTE:** The water tubing is built into the topper. Take care when handling the water tube; detaching the water tube from the topper will damage the fountain and void the product warranty.

## ASSEMBLY

1. Place Large Tier (B) onto Pedestal (A), twist the large tier to lock it onto the pedestal.
2. Place the Electric Submersible Pump (C) into Large Tier (B). Run the power cord down tube of the large tier, through the pedestal and under the groove in the backside of the pedestal. Firmly connect the AC Adapter.
3. Connect LED Lights (D) to the Electric Submersible Pump (C) and place the lights in the clips in Large Tier (B).
4. Run the built-in water tube in Topper (I) through Small Tier (H) and twist to lock pieces together.
5. Connect Medium Column (G) to Small Tier (H), twist to lock.
6. Connect Medium Tier (F) to Medium Column (G), twist to lock.
7. Connect Large Column (E) to Medium Tier (F), twist to lock.
8. Ensuring the light cords are safely within the groove on the bottom of the large column, place the assembled tiers onto Large Tier (B), twist to lock.
9. Fill all tiers of the fountain with enough water to keep the pump fully submerged during operation.
10. Plug the power cord into a properly grounded GFCI outlet.

**Note:** When first used, there may be air in the pump. It may take several minutes for trapped air to escape, allowing water to flow.

## **IMPORTANT INFORMATION**

Over time, the paint finish may gradually mellow in color; this is part of the natural aging process.

### **USE & CARE**

- For outdoor use only.
- Check the water level frequently to ensure the pump remains fully submerged; never allow the pump to run dry as it will burn out the motor.
- Only use water in this fountain. Distilled water will help prevent mineral buildup but is not required, avoid heavily chlorinated tap water as it may damage the fountain or pump.
- Periodically change the water to reduce scale and buildup — clean the fountain and pump regularly for optimal performance and appearance.
  - DO NOT use harmful additives such as bleach, chlorine, etc.
  - DO NOT use a pressure washer or abrasive materials to wash the fountain.
- Always shut off the power supply before cleaning and maintaining the fountain and the recirculating pump.
- Take care when handling the pump; only pick it up by the body of the pump, never by the power cord.
- During freezing temperatures, drain the fountain, disconnect the pump and store indoors; allowing ice to form may crack the fountain and will damage the pump.

### **TROUBLESHOOTING**

- Ensure that the pump is fully submerged and add water to the reservoir if necessary.
- Check the pump and tubing for obstructions.
- Some splashing is normal. Check the flow control on the body of the pump; it may need to be adjusted to achieve the desired flow rate.
- If water is not flowing evenly from all tiers, the fountain may need to be leveled. Ensure the fountain is on a level surface and use shims if necessary.
- If water is not flowing within several moments of the fountain being plugged in, the pump may have trapped air which can prevent water from circulating properly. Simply unplug the power supply for a few moments and plug it back in.
- If the light is not working, ensure the adapter is fully connected and is plugged in.
- Check to make sure the power outlet is working; if in doubt about electrical connections, consult a certified electrician.

*If you are still experiencing issues, please contact our customer service team through one of the methods mentioned at the top of page 1. To expedite response time, please have the item number and order information available.*

**Any modification or failure to follow the recommended care will void the product warranty.**

## **WARNING!**

**Manufacturer and seller expressly disclaim any and all liability from personal injury, property damage or loss, whether direct or indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, or neglect of this product.**