 
 
 
 



4 FT Porch Swing Instructions

Note: Don't tighten all the screws until the last step. That will simplify your assembly.


Parts List

					 M6×50mm
A [1pc]	B [1pc]	C [4pcs]	D [1pcs]	E [1pcs]	F [18sets]
 M10×100mm	 M10×80mm				
G [2sets]	H [2sets]	I [4pcs]	J [2pcs]	K [2pcs]	Assembly Tools


Whole View

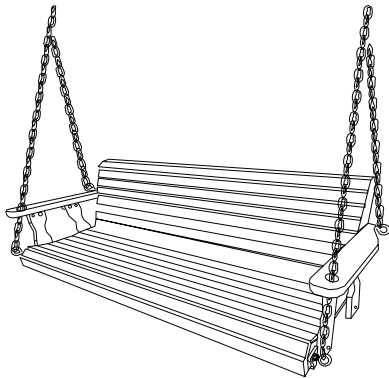

Step 1

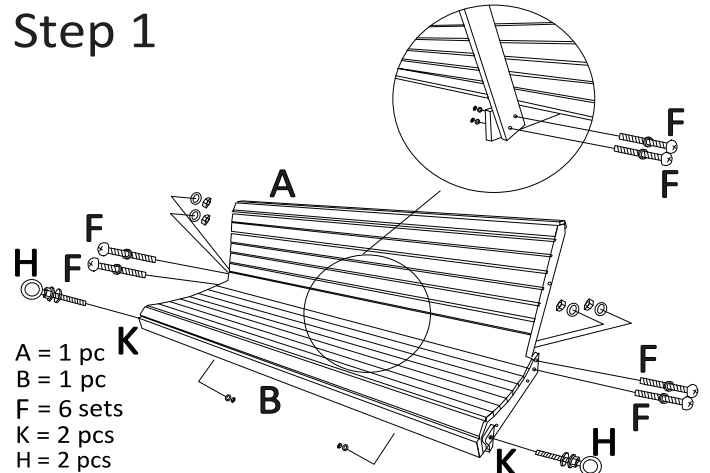


Step 2

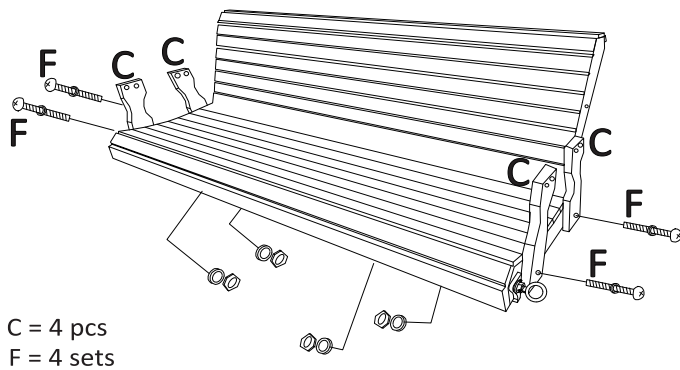


Step 3

Note: For each eyebolt, there should be one washer on the outside and one on the inside, which is quite important for load bearing.

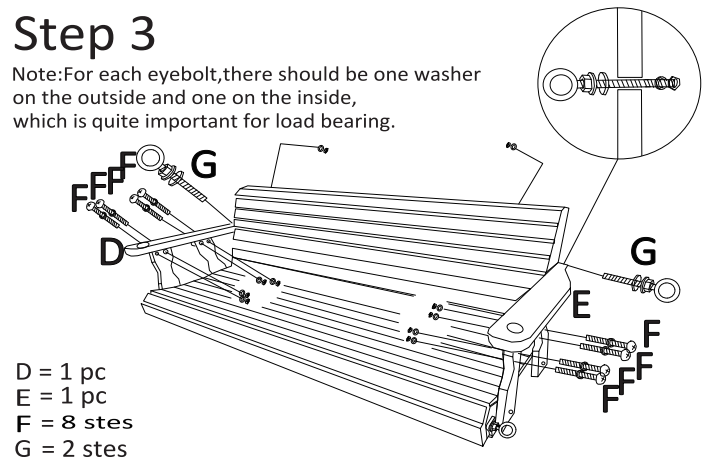

Step 4

The 2 chain segments without pre-installed part I: the longer one is the front, the shorter one is the rear.

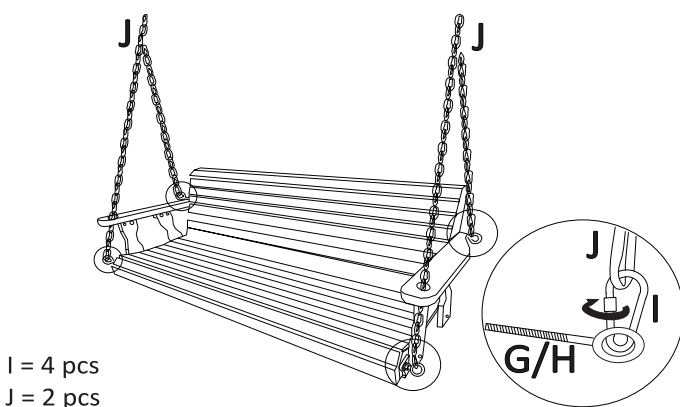

Return Policy

1. Due to material limitations and shipping distance, the product may arrive with quality issues sometimes. Please follow the steps below for resolution instead of requesting a refund or complaint immediately:

To get the prompt solution, please send detailed descriptions of the product defects to our customer service, along with photos (if visible) for clarity.

2. For non-quality issues (e.g., compatibility or installation queries), please keep all packaging and components intact, then contact our customer service for prompt assistance.

3. For returns due to non-quality reasons (e.g., 'no longer needed,' 'wrong purchase'), a shipping fee may apply upon receipt of the returned items.

PS: Contact us for prepaid return labels for convenient return process.