 


WARDROBE CLOSET

ASSEMBLY INSTRUCTION

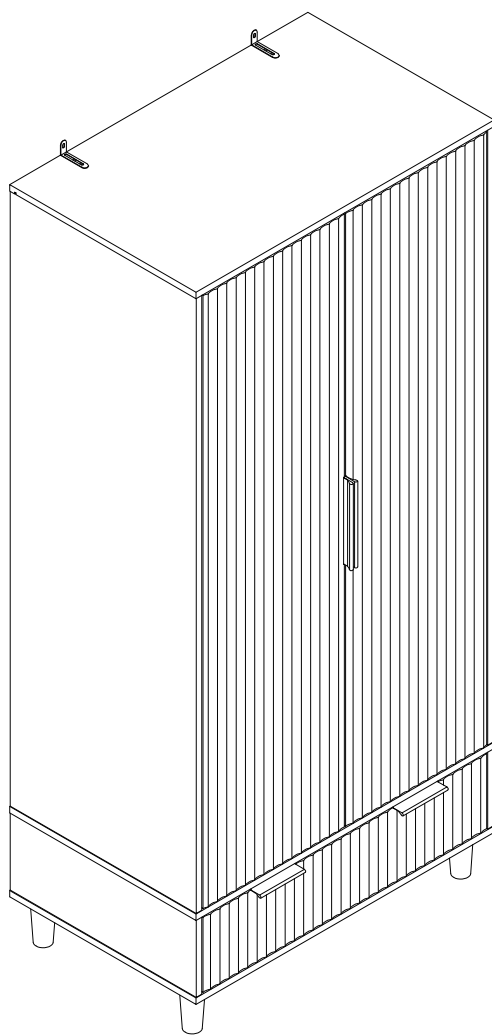

Thank you for purchasing from our product
Please contact us via email if parts are missing or damaged,
we will gladly ship your replacement parts free of charge

IMPORTANT

THIS INSTRUCTION BOOKLET CONTAINS IMPORTANT SAFETY INFORMATION.
PLEASE READ AND KEEP FOR FUTURE REFERENCE.

RETURN & WARRANTY

Thank you for choosing our product!

We would like to take this opportunity to thank you for choosing us.

We hope that you are completely satisfied with your purchase, and enjoy it for years to come.

Your satisfaction is our highest pursuit.

Return policy

We believe you will absolutely love your furniture, but if for some reason you want to return the product, please contact us directly before you decide to return your product to the retailer. Our Customer Service organization can answer most concerns and can assist you with any questions you may have about your new product.

The item must be returned in good condition, in the original box, with all original proof of purchase, parts and accessories, within the time frame specified by the retailer that/which it was purchased from.

Warranty

The company warrants this product to be free from defects in material and workmanship and agrees to remedy any such defect.

This warranty covers one year from the date of original purchase. This is solely limited to the repair or replacement of defective parts and no assembly labor is included.

This warranty does not apply to any product which has been improperly assembled, subjected to misuse or abuse, or which has been altered or repaired in any way.

For help with assembly, identifying parts, product information, or to place an order, please contact us freely.

BEFORE STARTING

Before Using Product



- ☐ Read each step carefully before starting. It is very important that each step is performed in the correct order. If these steps are not followed in sequence, assembly difficulties will occur.



- ☐ Make sure all parts are included. Most board parts are labeled or stamped on the raw edge.

 
- ☐ Prepare a flat and Philips screwdriver (not included)
A Power Screwdriver is recommended.



- ☐ Work in a spacious area and near where the unit will be used, preferably on a carpet, or use a piece of the cardboard packaging to protect your floor and product.



- ☐ For a smooth assembly process, we suggest you keep a lite tightness for all the screws during assembly. After the whole product is assembled, firmly tighten all the screws.

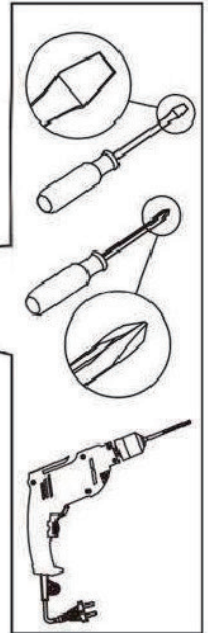

Estimated
People
for Assembly



 
2

WARNING

- Do not allow children to climb on unit.
- Serious or fatal crushing injuries can occur from furniture tip - over. To prevent this furniture from tipping over, it must be permanently fixed to the wall. Fixing devices for the wall are not included since different wall materials require different types of fixing devices. Use fixing devices suitable for the walls in your home. For advice on suitable fixing systems, contact your local specialized dealer.
- Avoid sharp objects or corrosive chemicals to prevent damage to the product.
- During assembly, keep parts and packaging materials away from children and pets as there could be potential injury and choking hazards.


IDENTIFY PARTS

One unit

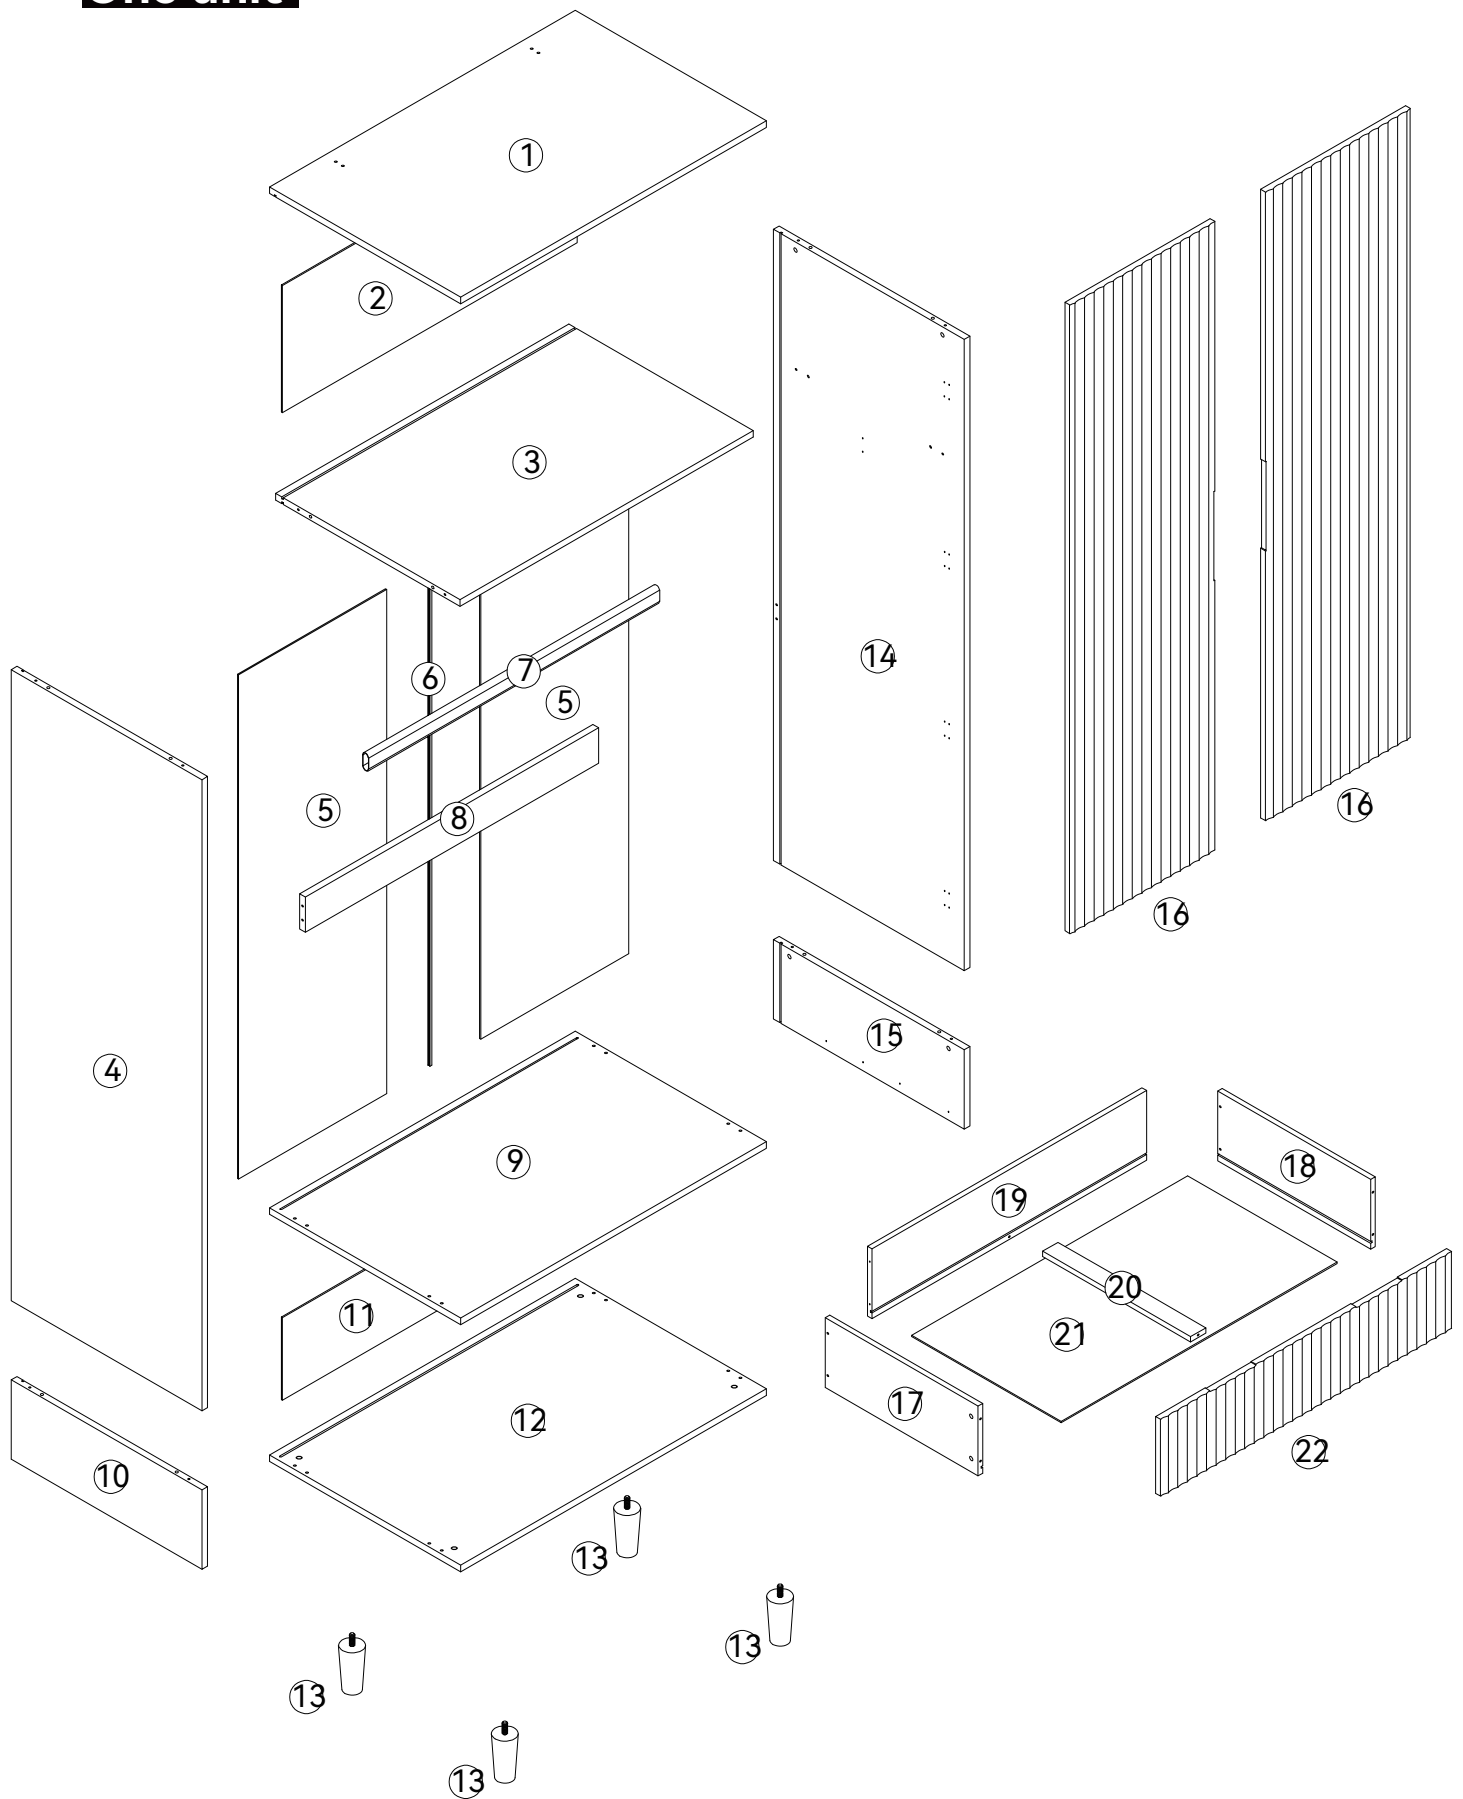

COMPONENTS

 
1

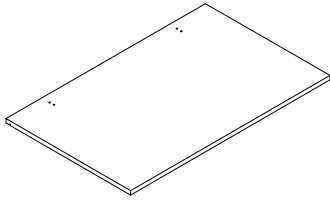

799x499x15mm

Top Panel x1

 
2

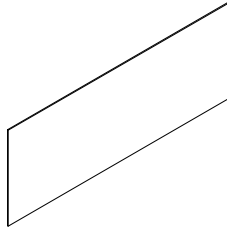

774x288mm

Upper Back Panel x1

 
3

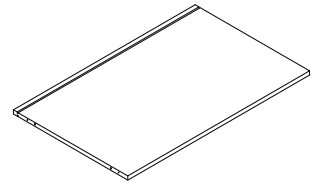

767x480x12mm

Upper Shelf x1

 4



1430x498x15mm

Upper Left Panel x1

5



1143x386mm

Middle Back Panel x2

 
6



1133mm

Plastic Strip x1


7

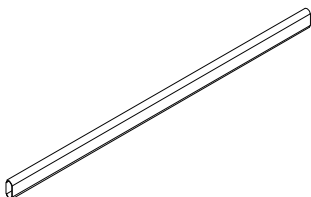

761mm

Clothes Hanging Rod x1

 
8

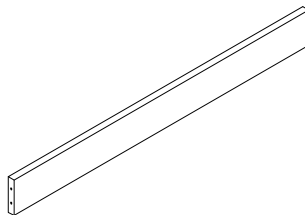

767x79x15mm

Rear Brace x1

 9

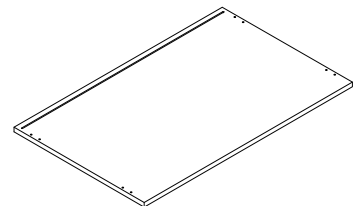


799x499x15mm

Lower Shelf x1

COMPONENTS

 
10

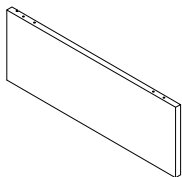

498x180x15mm

Bottom Left Panel x1

 
11

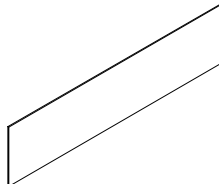

774x187mm

Lower Back Panel x1

 
12

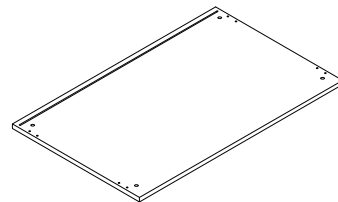

799x499x15mm

Bottom Panel x1

 13



100x50x38mm

Support Leg x4

 
14



1430x498x15mm

Upper Right Panel x1


15

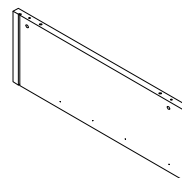

498x180x15mm

Bottom Right Panel x1

 
16



1424x380x15mm

Door Panel x2

 
17

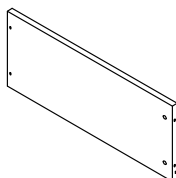

400x157x12mm

Drawer Left Panel x1

 18

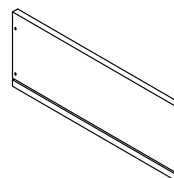


400x157x12mm

Drawer Right Panel x1

COMPONENTS

 
19

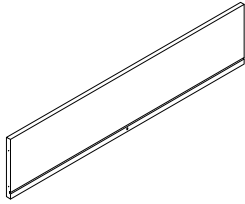

718x157x12mm

Drawer Back Panel x1

 
20

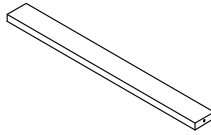

387x40x12mm

Drawer Bottom Support Bar x1

 
21

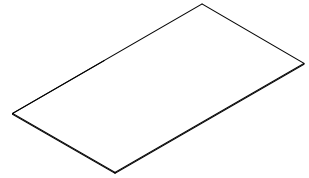

725x394mm

Drawer Bottom Panel x1

 
22

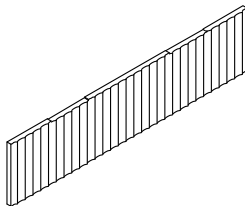

761x174x15mm


Drawer Front Panel x1

 "A & B" Hardware installation example

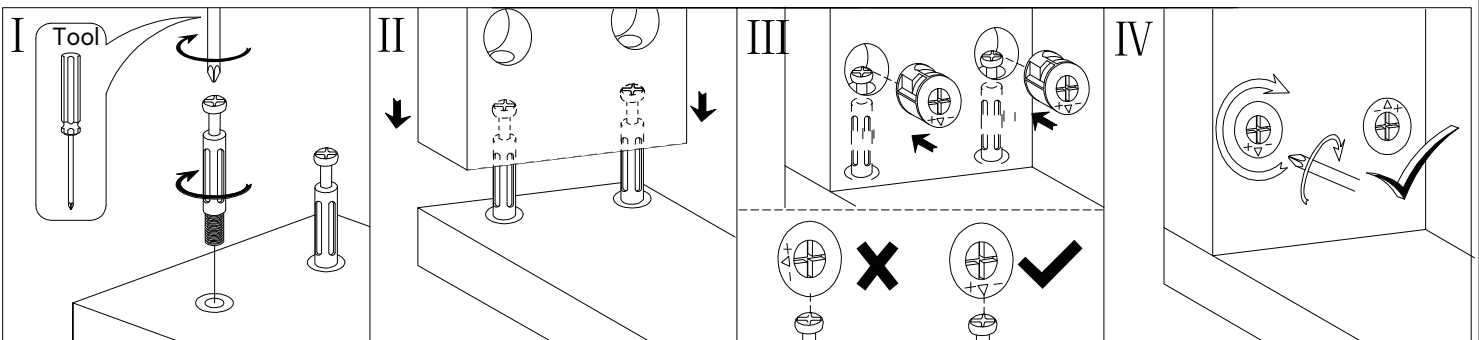

COMPONENTS

 A



+3(spare)

Φ6X35mm

Cam Bolt x21

B

 


+3(spare)

Φ15X10mm

Cam Lock x21

C



+3(spare)

Φ6X30mm

Wood Dowel x20

D

 


+1(spare)

Φ4X35mm

Screw x5

E



+3(spare)

Φ3X12mm

Screw x26

F

 


+1(spare)

Φ5X40mm


Screw x8

G



Clothes Rod Holder x2

 
H

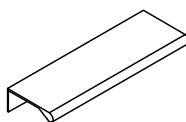

L120

Drawer Handle x2

 
I

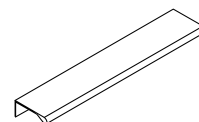

L200


Door Handle x2

 J



Hinge x8

 K



+5(spare)

Φ4X12mm

Screw x48

L



Anti-collision Sticker x2

COMPONENTS

M

M-1



M-2



+2(spare)

Φ3X16mm

Back Panel Wedge
& Screw x16

N

N-1



N-2



Φ4X12mm

Screw & Anti-tipping Kit x2

O

O-1



O-2



Φ4X45mm

Plastic Anchor & Screw x2

P



Φ8X12mm

 
Nut x4



(spare)

Plastic Embedded Part x3


CL

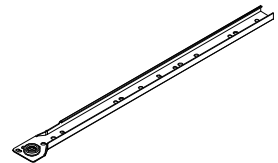

L400mm

Cabinet Left Side Rail x1

 
CR

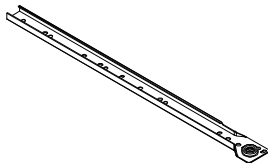

L400mm

Cabinet Right Side Rail x1

 
DL

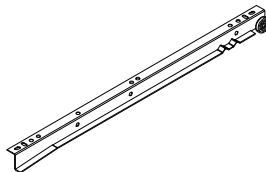

L400mm

Drawer Left Side Rail x1

 
DR

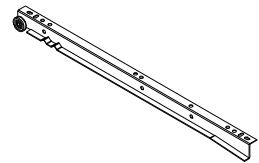

L400mm


Drawer Right Side Rail x1

 ASSEMBLY STEPS


A x 5	 $\Phi 6 \times 35 \text{mm}$	E x 8	 $\Phi 3 \times 12 \text{mm}$	H x 2		I x 2	
J x 8		K x 16	 $\Phi 4 \times 12 \text{mm}$				

STEP 1

 1. Fix the hinge (J) to the panel (16) with screw (K).
2. Fix the door handle (I) to the panel (16) with screw (E).
3. Fix the cam bolt (A) to the panel (22).
4. Fix the drawer handle (H) to the panel (22) with screw (E).

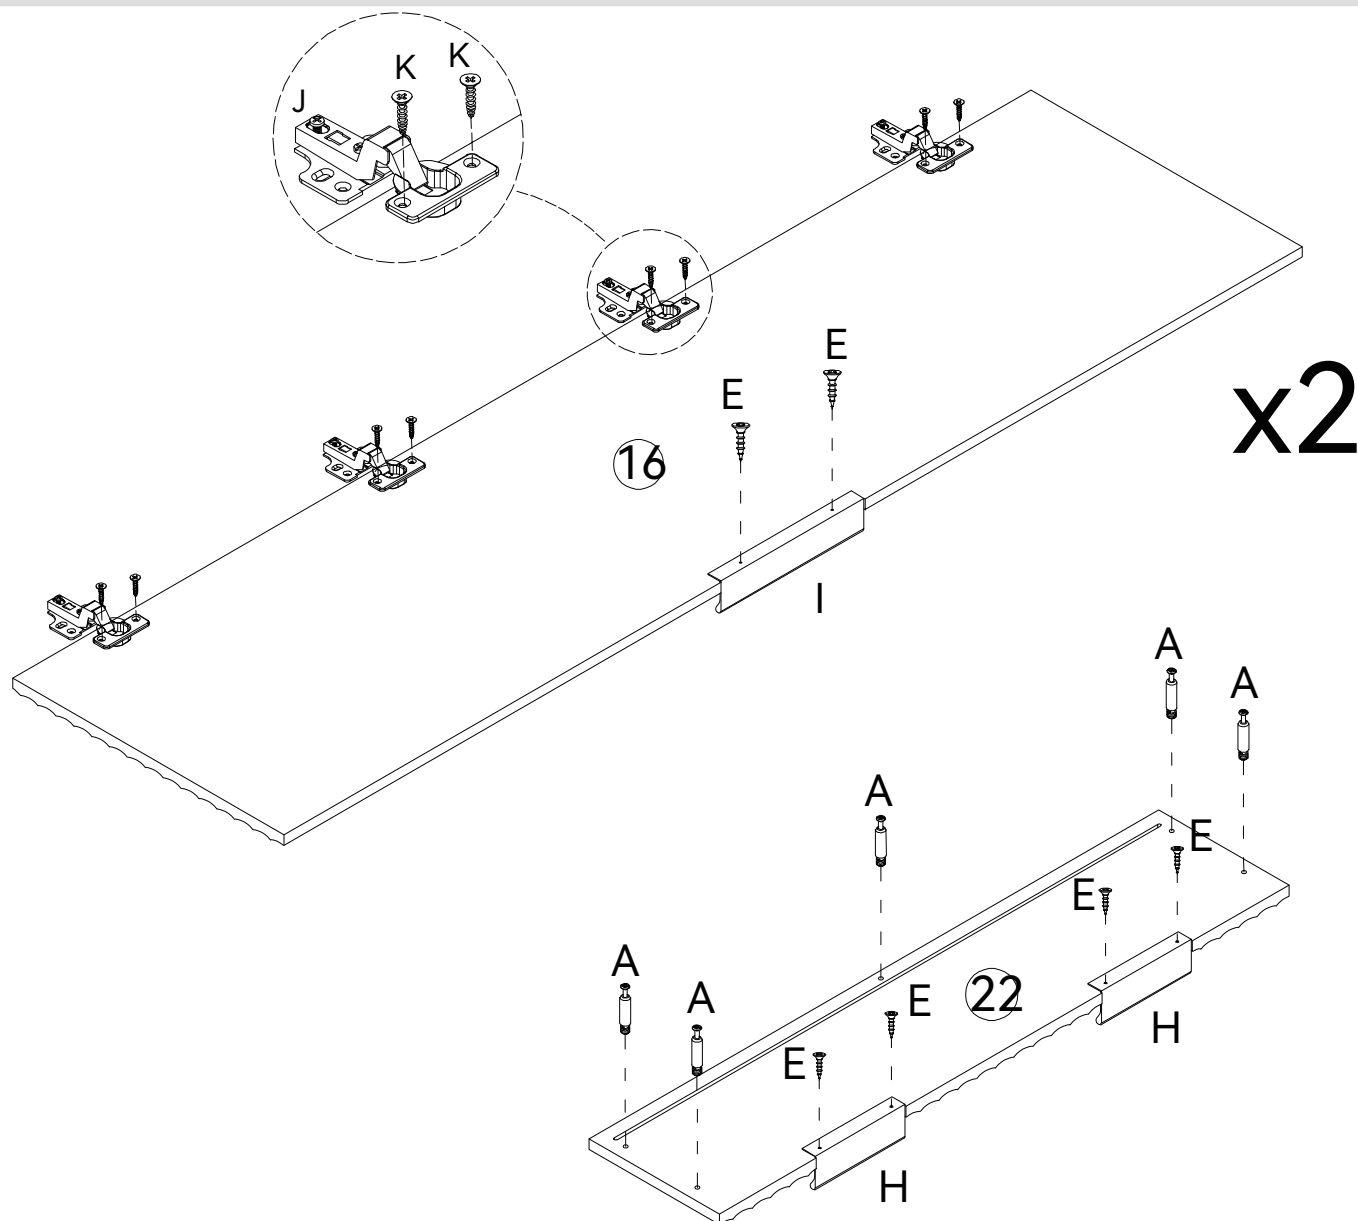


ASSEMBLY STEPS

 
A x 8	 $\Phi 6 \times 35 \text{mm}$	N x 2	N-1  $\Phi 4 \times 12 \text{mm}$	N-2 
-------	--	-------	--	---

STEP 2

 1. Fix the cam bolt (A) to panel (1) and lower shelf (9).
2. Fix anti-tipping kit (N-2) to panel (1) with screw (N-1).

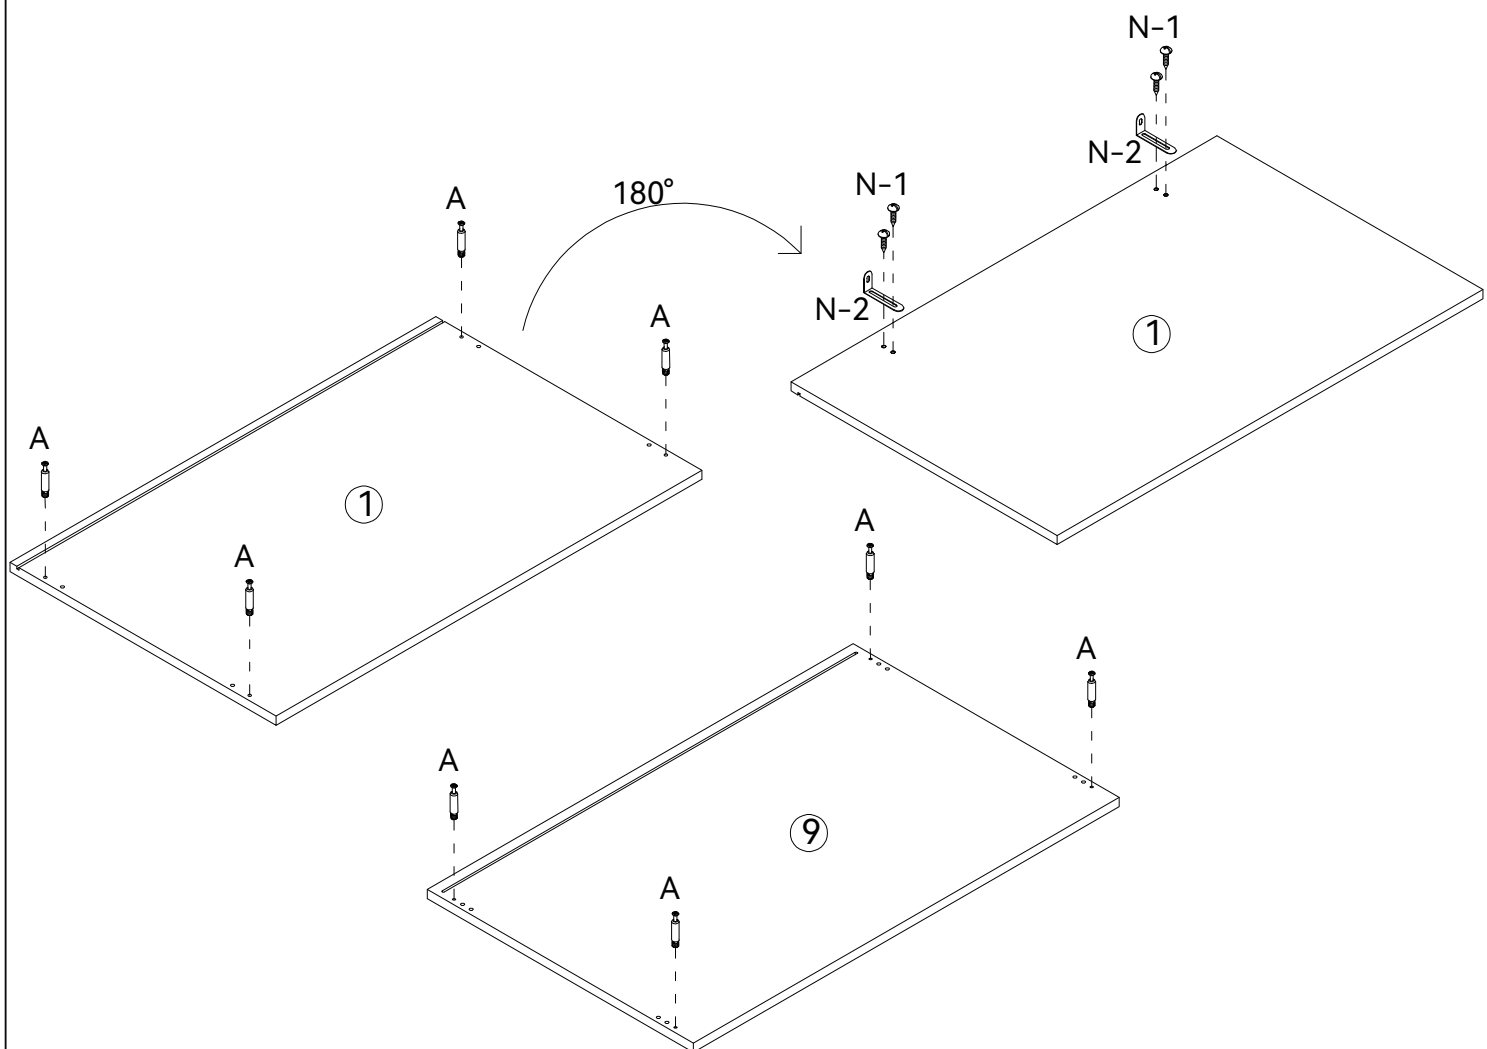


ASSEMBLY STEPS

 A x 8	$\Phi 6 \times 35 \text{mm}$ 	E x 4	$\Phi 3 \times 12 \text{mm}$ 	G x 2	
-------	---	-------	---	-------	--

STEP 3

 1. Fix clothes rod holder (G) to panels (4), (14) with screw (E).
2. Fix the cam bolt (A) into panels (4), (14).

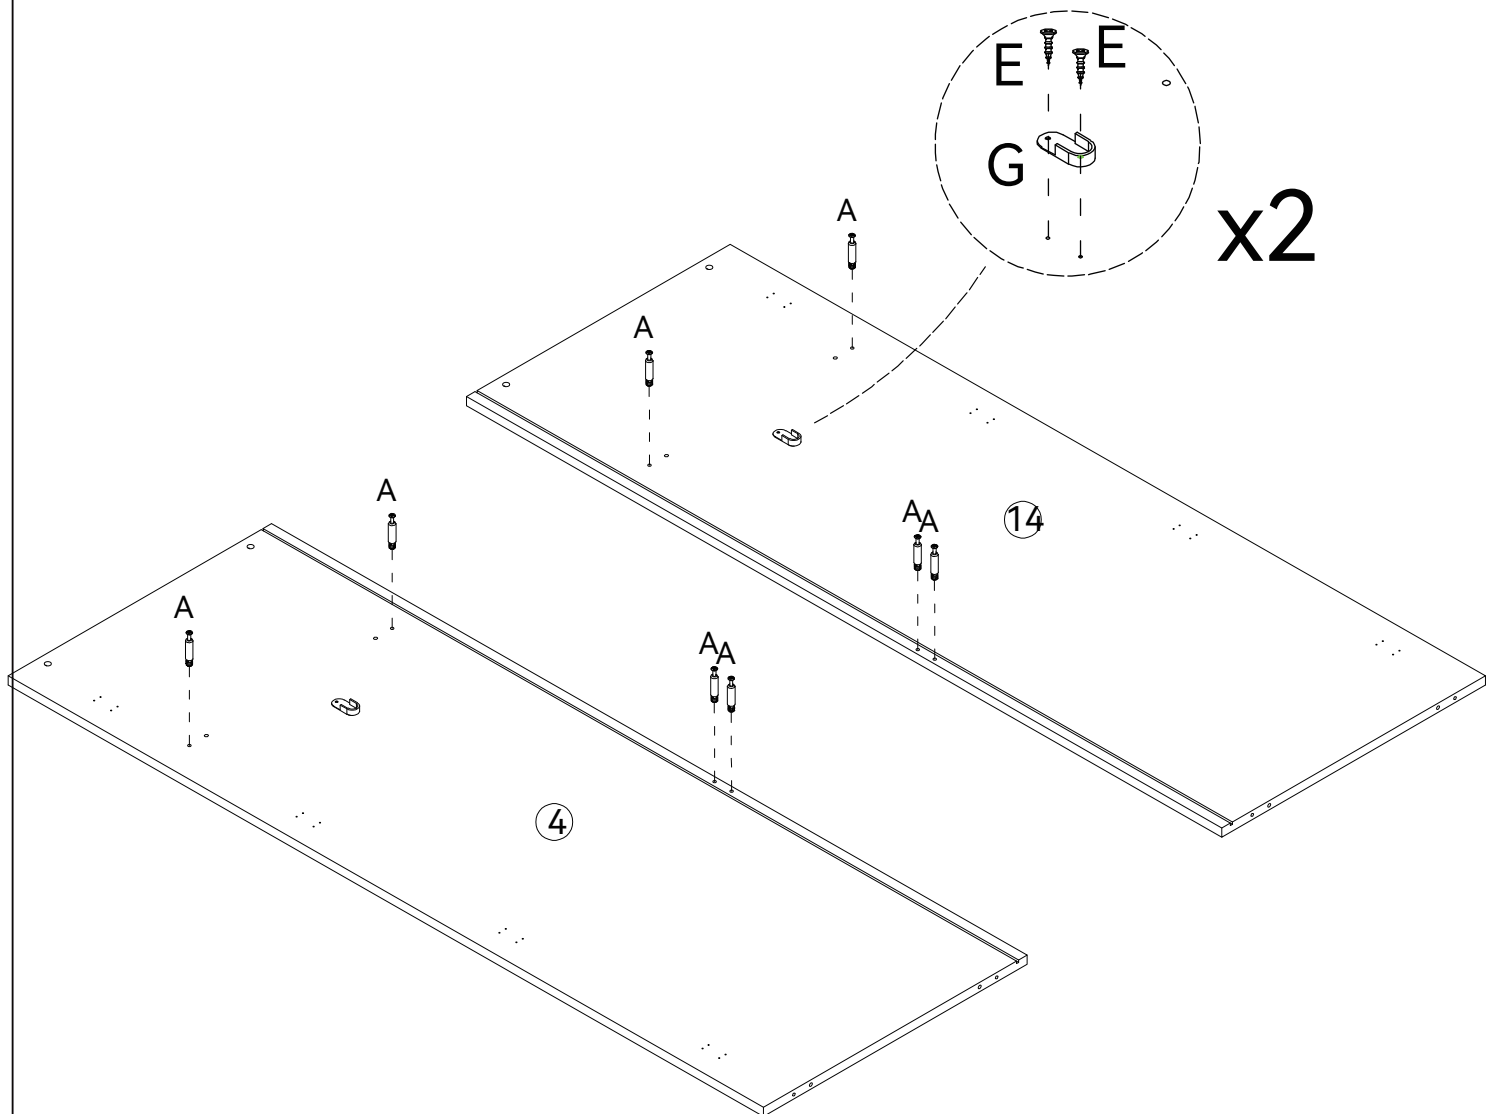


ASSEMBLY STEPS

E x 8	$\Phi 3 \times 12 \text{mm}$ 	CL x 1		CR x 1	
-------	---	--------	---	--------	--

STEP 4

 1. Fix the cabinet left side rail (CL) to panel (10) with screw (E).
2. Fix the cabinet right side rail (CR) to panel (15) with screw (E).

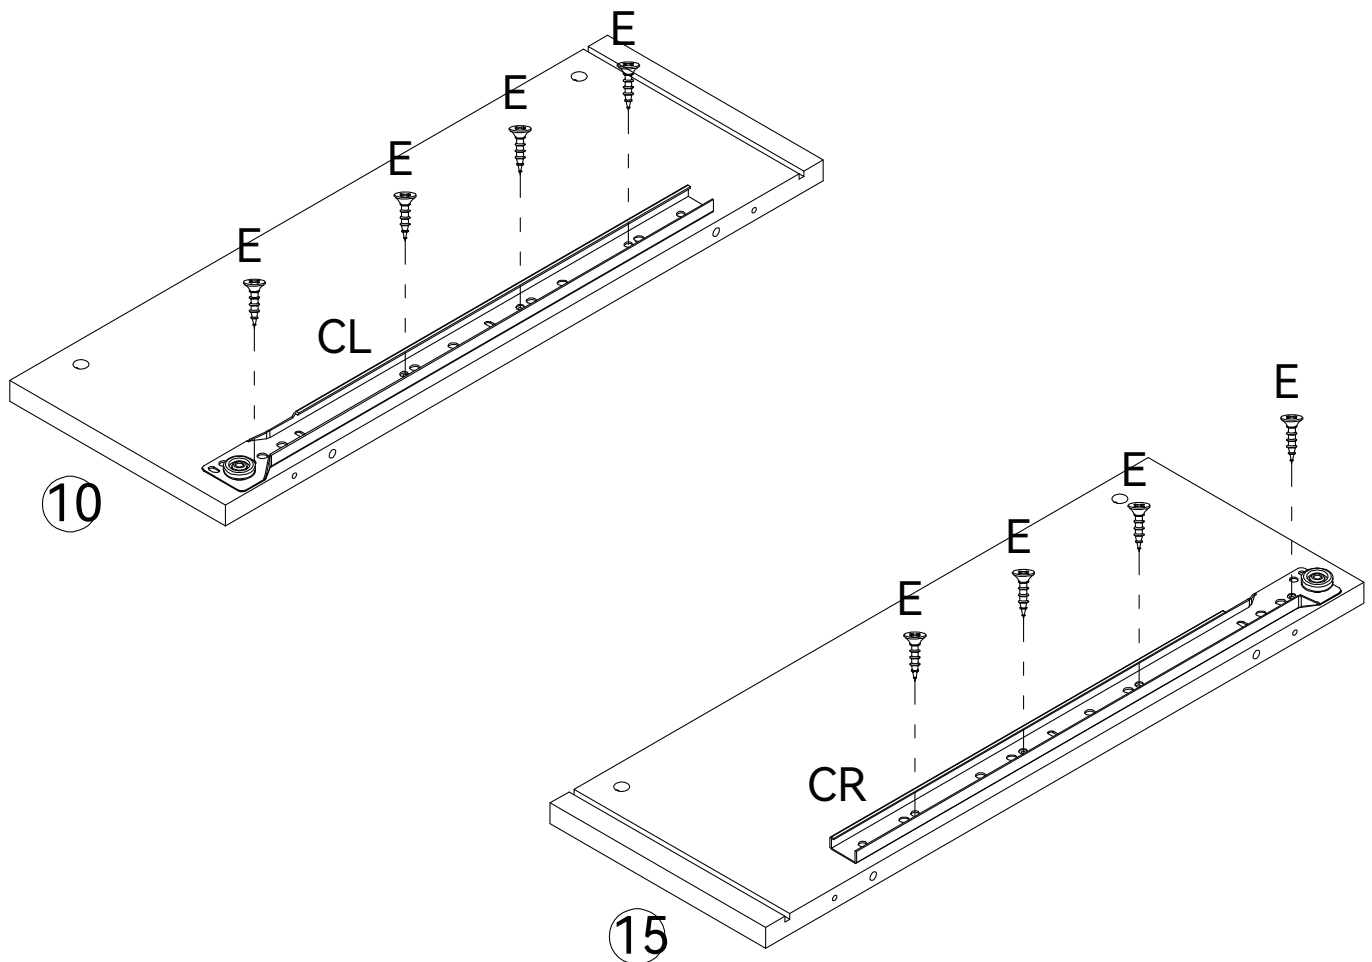



ASSEMBLY STEPS

D x 5





STEP 5

  1. Connect panels (17), (18), (19) and bar (20), then tighten them with screw (D).
2. Insert the panel (21) along the grooves of panels (17), (18).

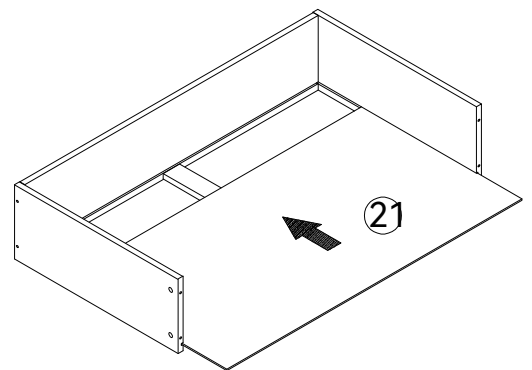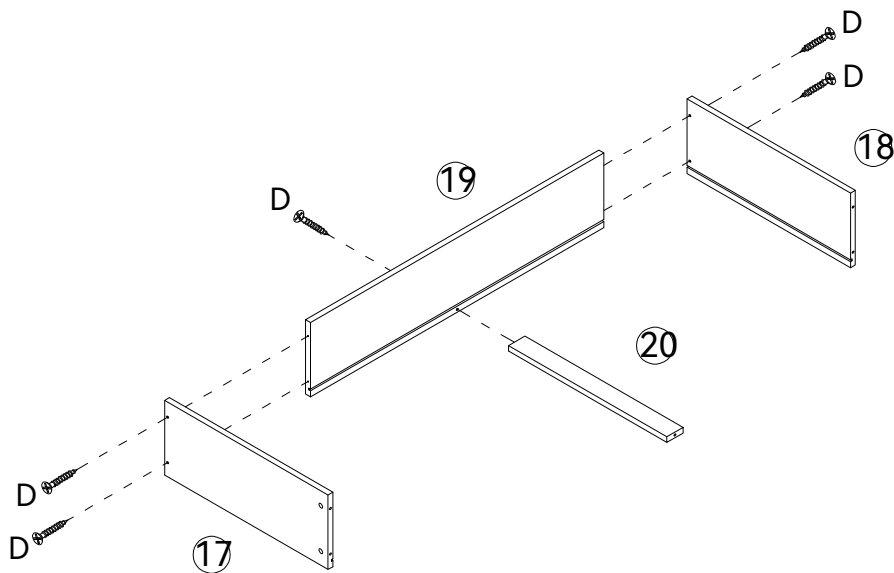


ASSEMBLY STEPS

  B x 5	 $\Phi 15 \times 10 \text{mm}$	E x 6	 $\Phi 3 \times 12 \text{mm}$	DL x 1		DR x 1	
-------	---	-------	--	--------	--	--------	---


STEP 6

 1. Connect panel (22) to the assembled frame (STEP 5) with cam lock (B).
2. Use screw (E) to fix drawer left side rail (DL) and drawer right side rail (DR) on the back of the drawer.

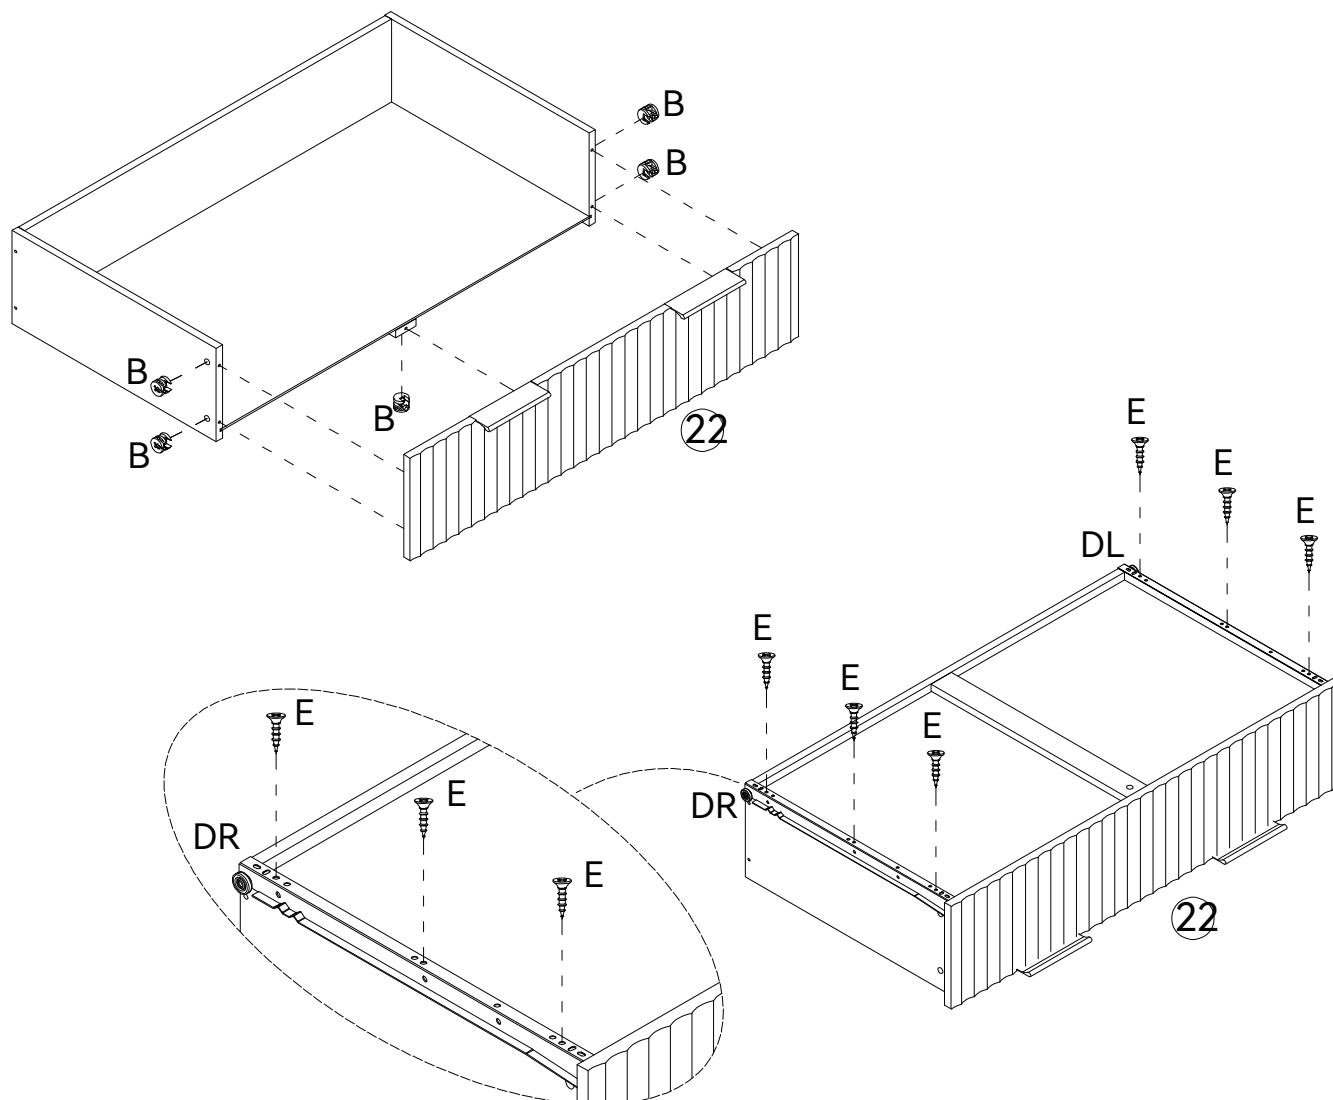


ASSEMBLY STEPS

 B x 8




C x 4

 

STEP 7

 
Connect panels (3), (4), (14) and rear brace (8) with wood dowel (C), then tighten them with cam lock (B).

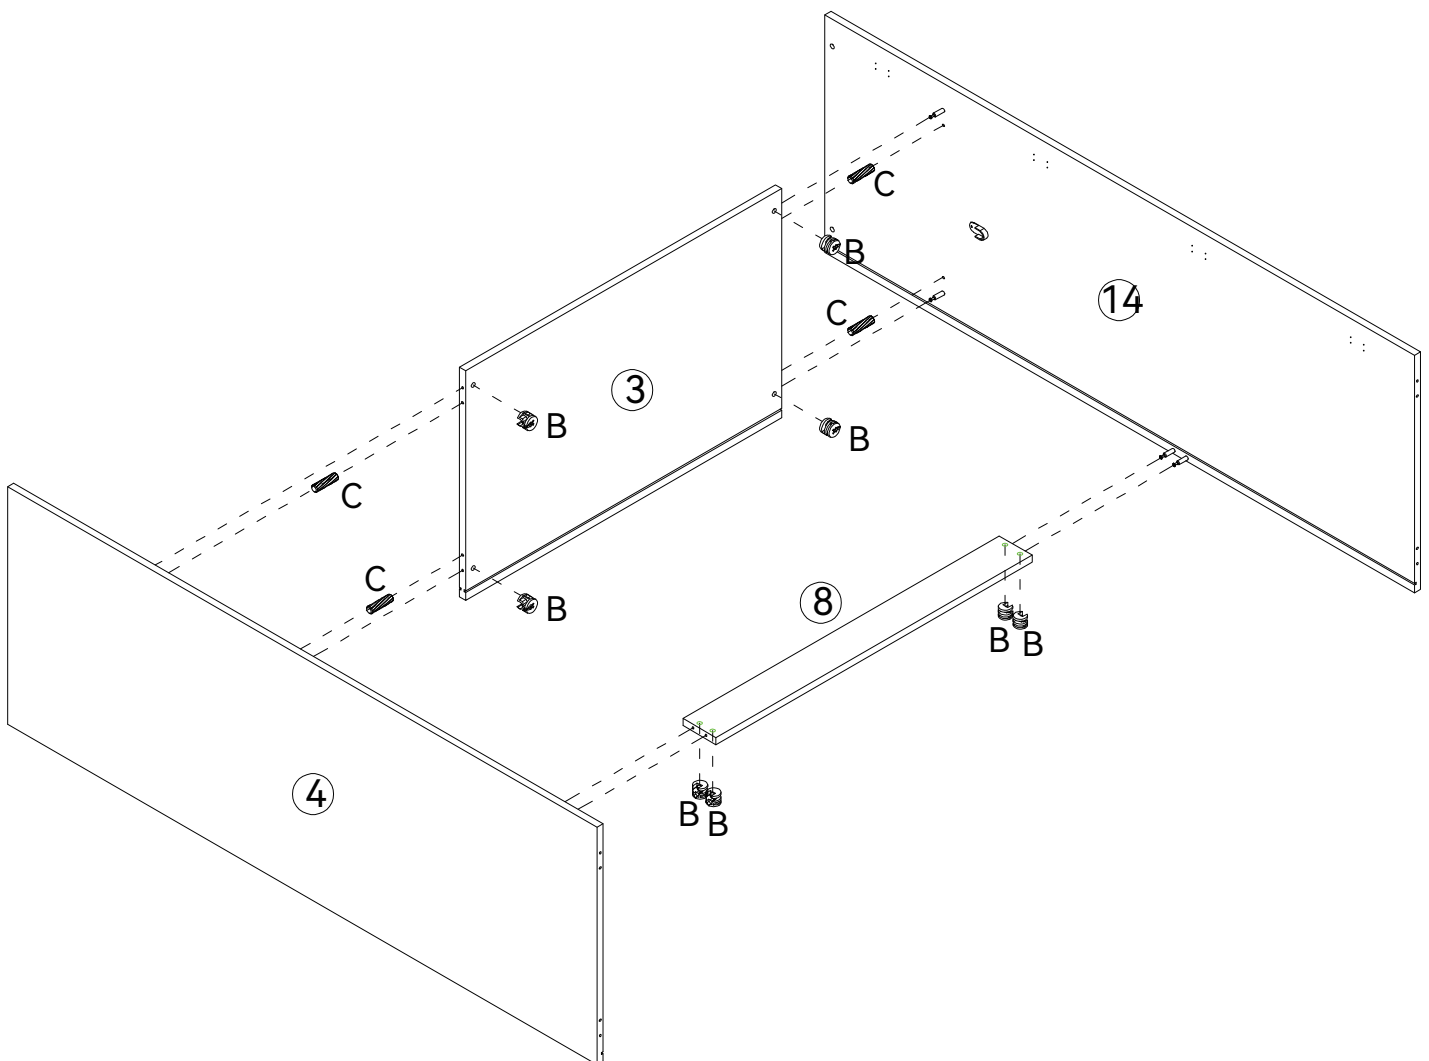

ASSEMBLY STEPS


STEP 8

 Insert panel (2) along the groove into the assembled cabinet (STEP 7).

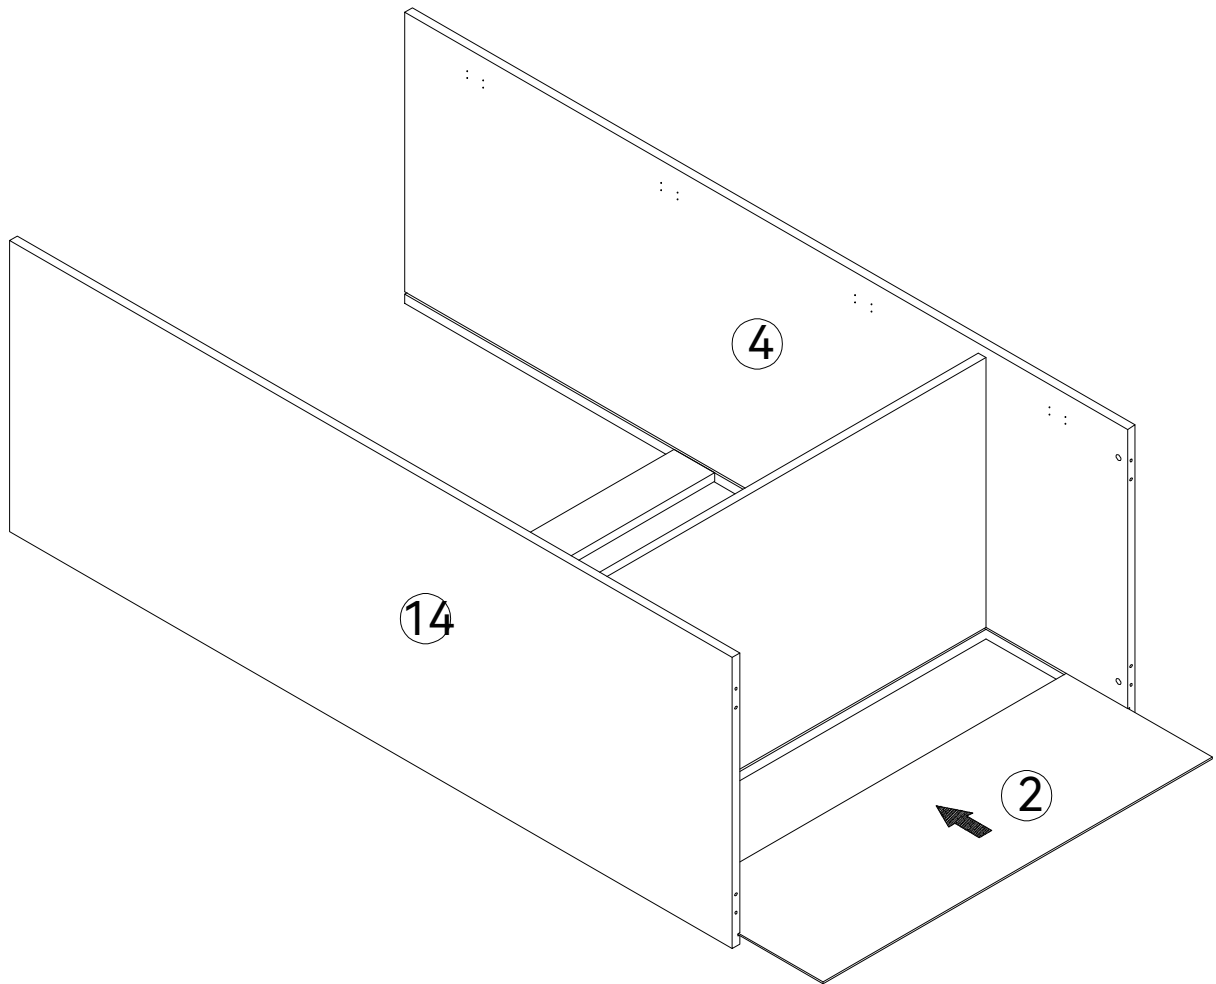


ASSEMBLY STEPS

 B x 4




C x 4

 

STEP 9

 
Connect panel (1) to the assembled cabinet (STEP 8) with wood dowel (C), then tighten them with cam lock (B).

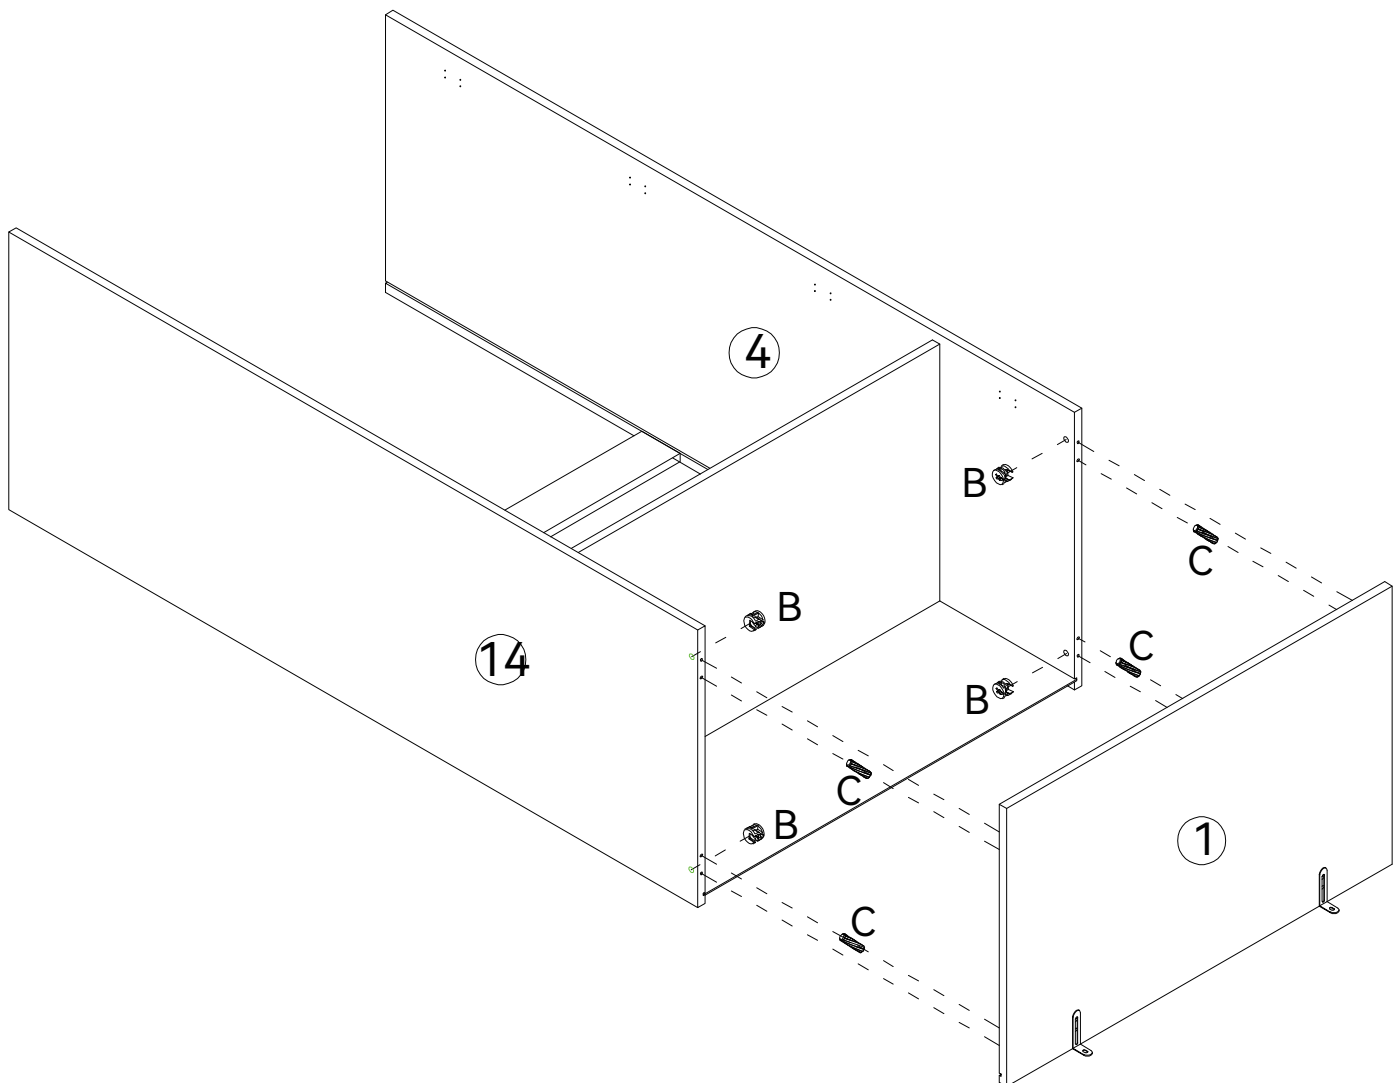

ASSEMBLY STEPS


STEP 10

 Connect the panel (5) and plastic strip (6), then insert them along the grooves of panels (4), (14).

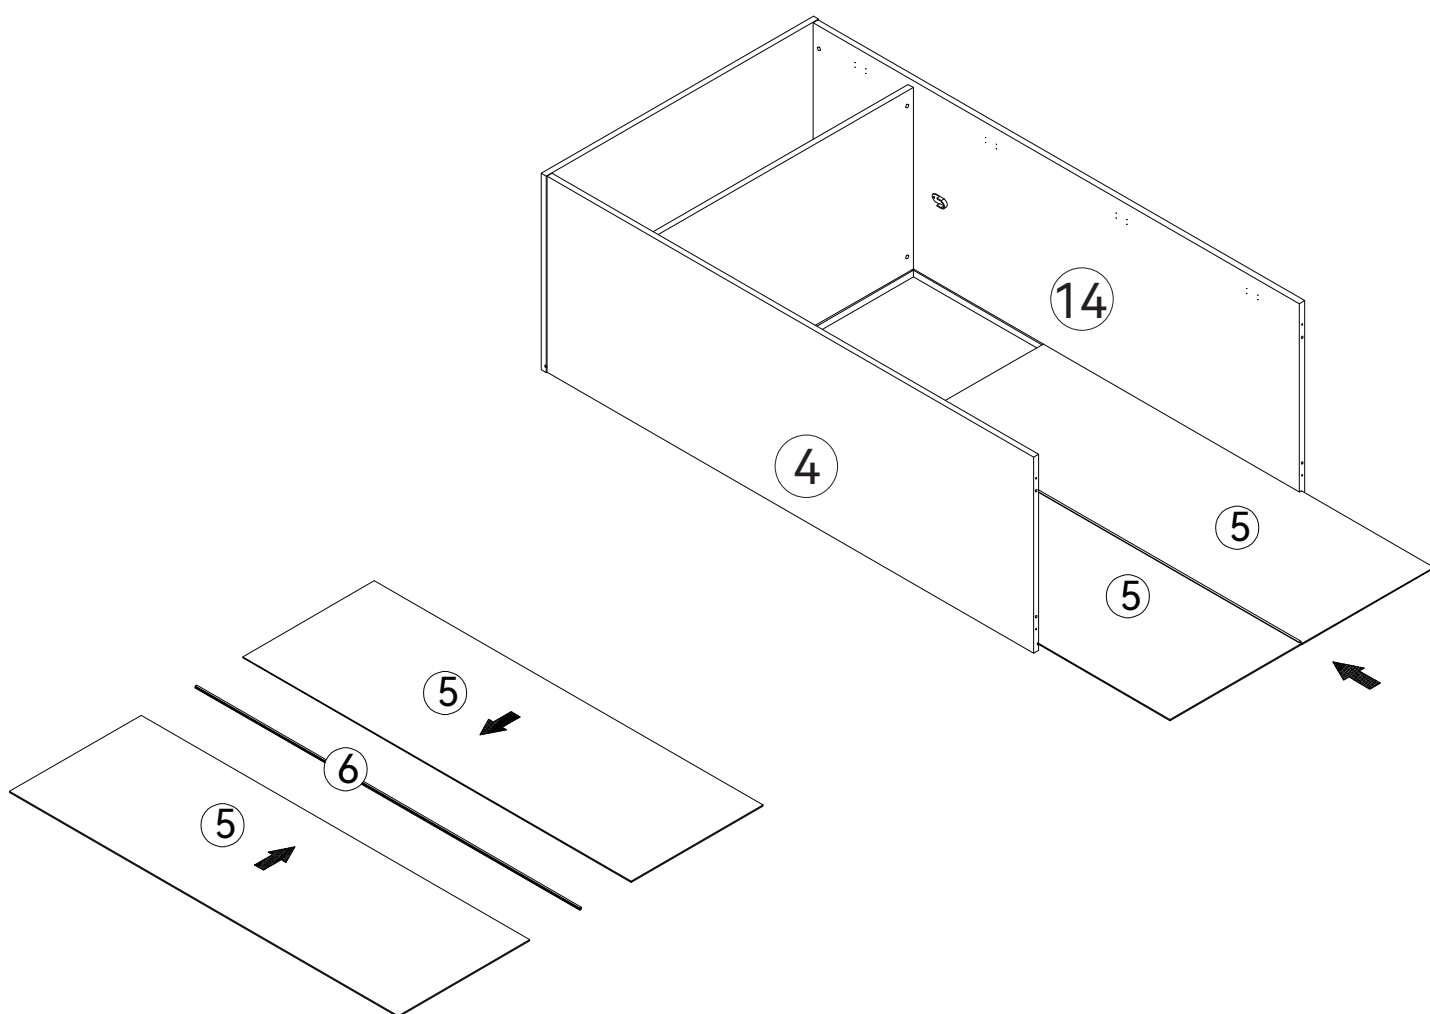

ASSEMBLY STEPS

 C x 4




F x 4



STEP 11

 Connect the lower shelf (9) to the assembled cabinet (STEP 10) with wood dowel (C), then tighten them with screw (F).

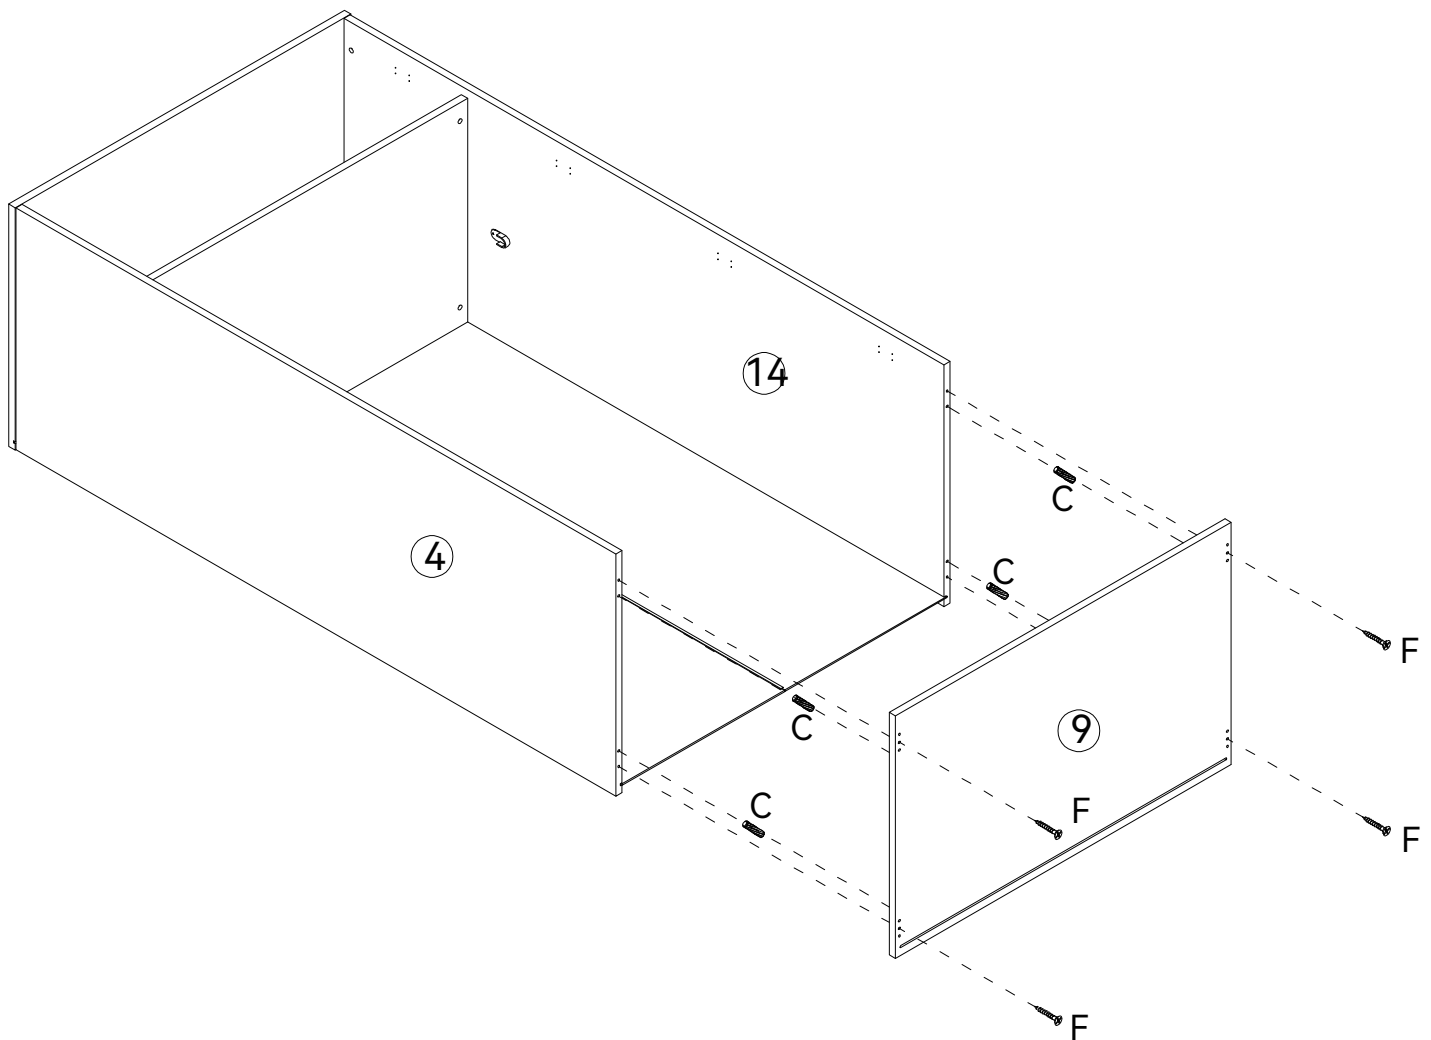


ASSEMBLY STEPS

B x 4	$\Phi 15 \times 10 \text{mm}$ 	C x 4	$\Phi 6 \times 30 \text{mm}$ 
-------	--	-------	---

STEP 12

 
Connect the panels (9), (10) and (15) with wood dowel (C), then tighten them with cam lock (B).

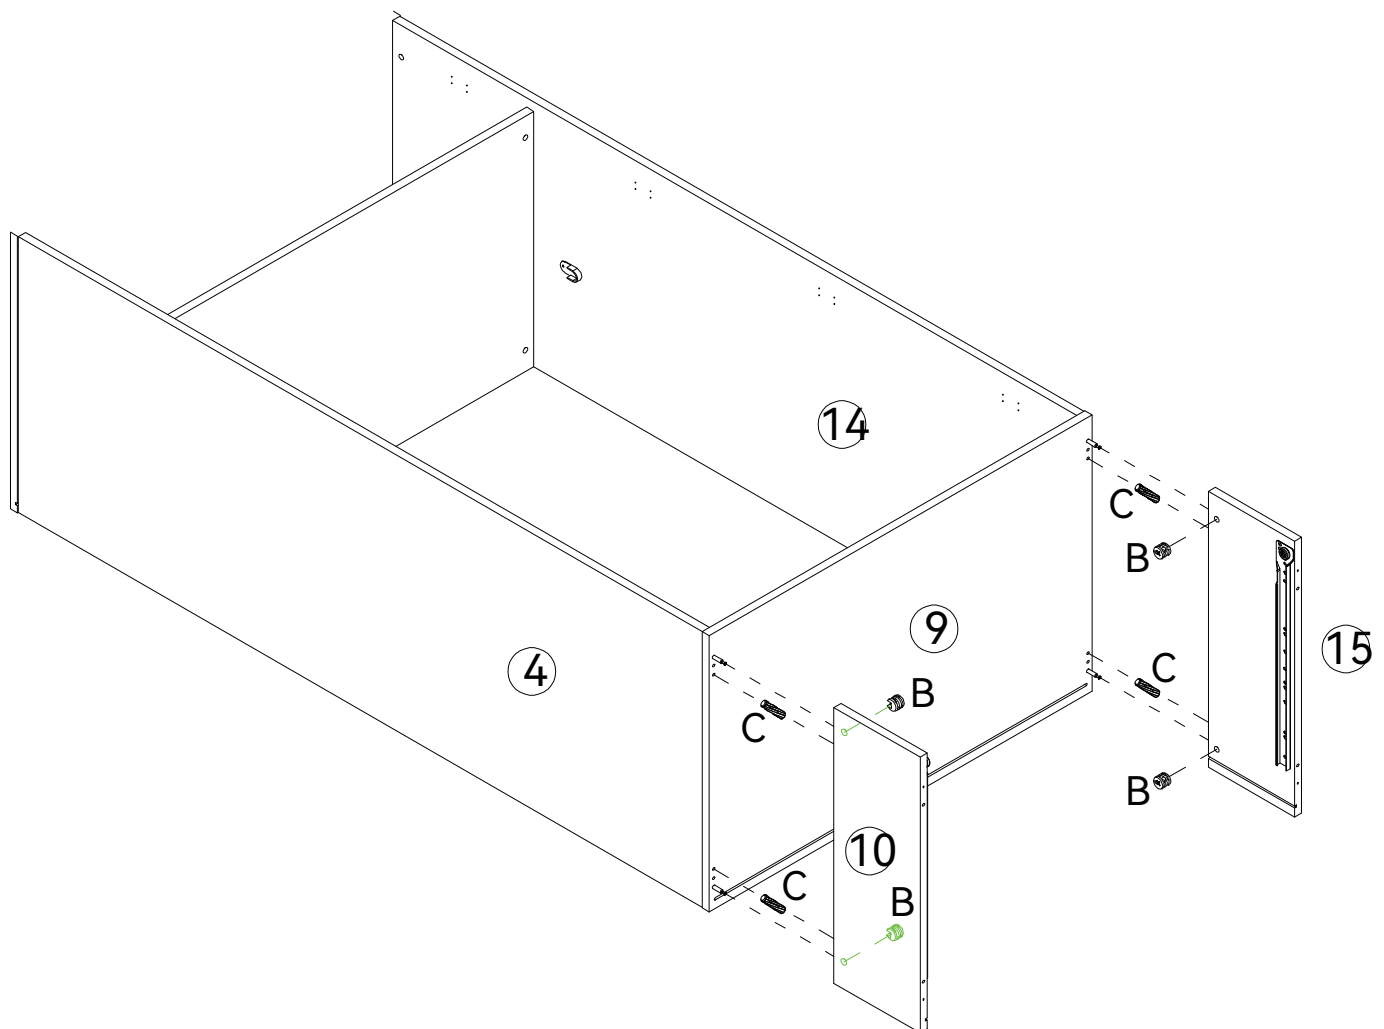

ASSEMBLY STEPS

STEP 13

 Insert panel (11) along the groove into the assembled cabinet (STEP 12).

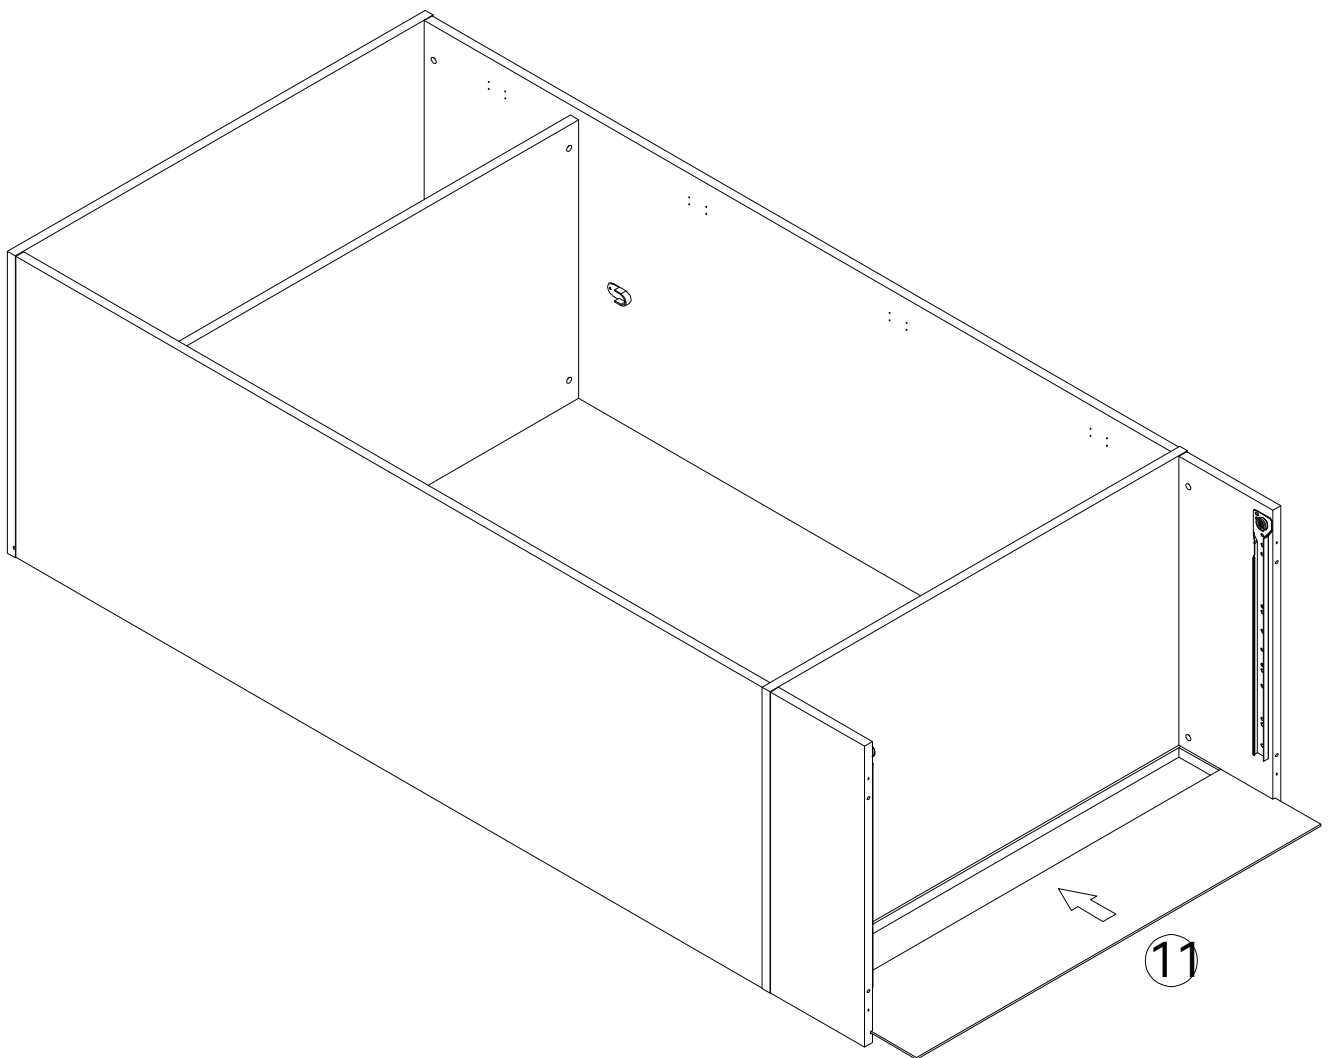


ASSEMBLY STEPS

C x 4	$\Phi 6 \times 30 \text{mm}$ 	F x 4	$\Phi 5 \times 40 \text{mm}$ 
-------	---	-------	---

STEP 14

 Connect panels (10), (12) and (15) with wood dowel (C), then tighten them with the screw (F).

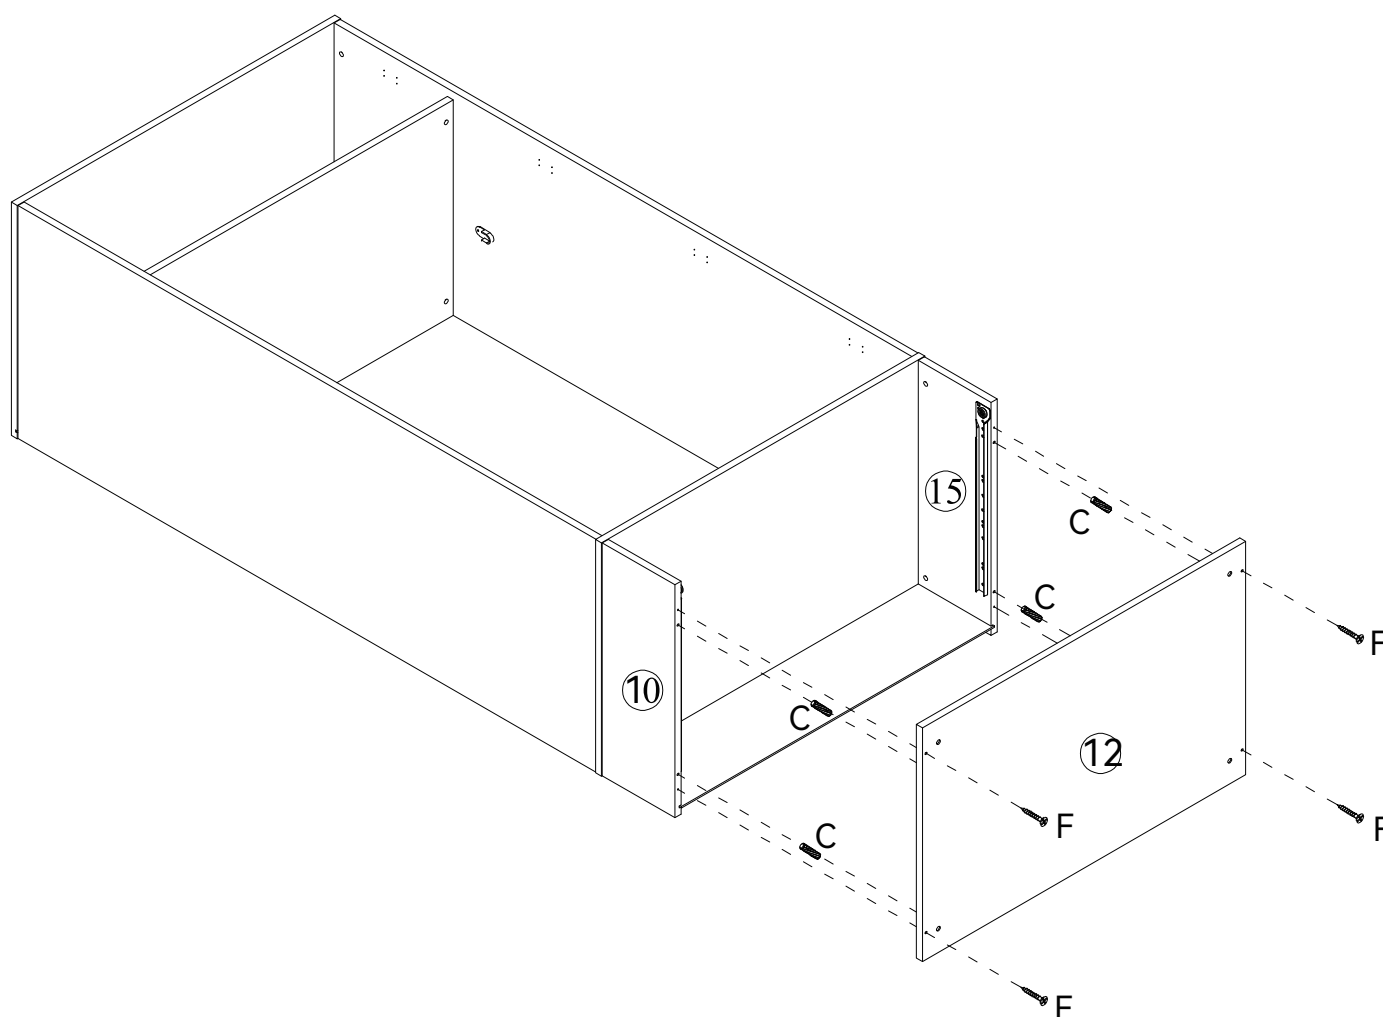

ASSEMBLY STEPS

L x 2

 


P x 4



STEP 15

1. Apply the anti-collision sticker (L) to the middle of panel (3).
2. Connect support leg (13) to the bottom of panel (12) and fix it with nut (P).


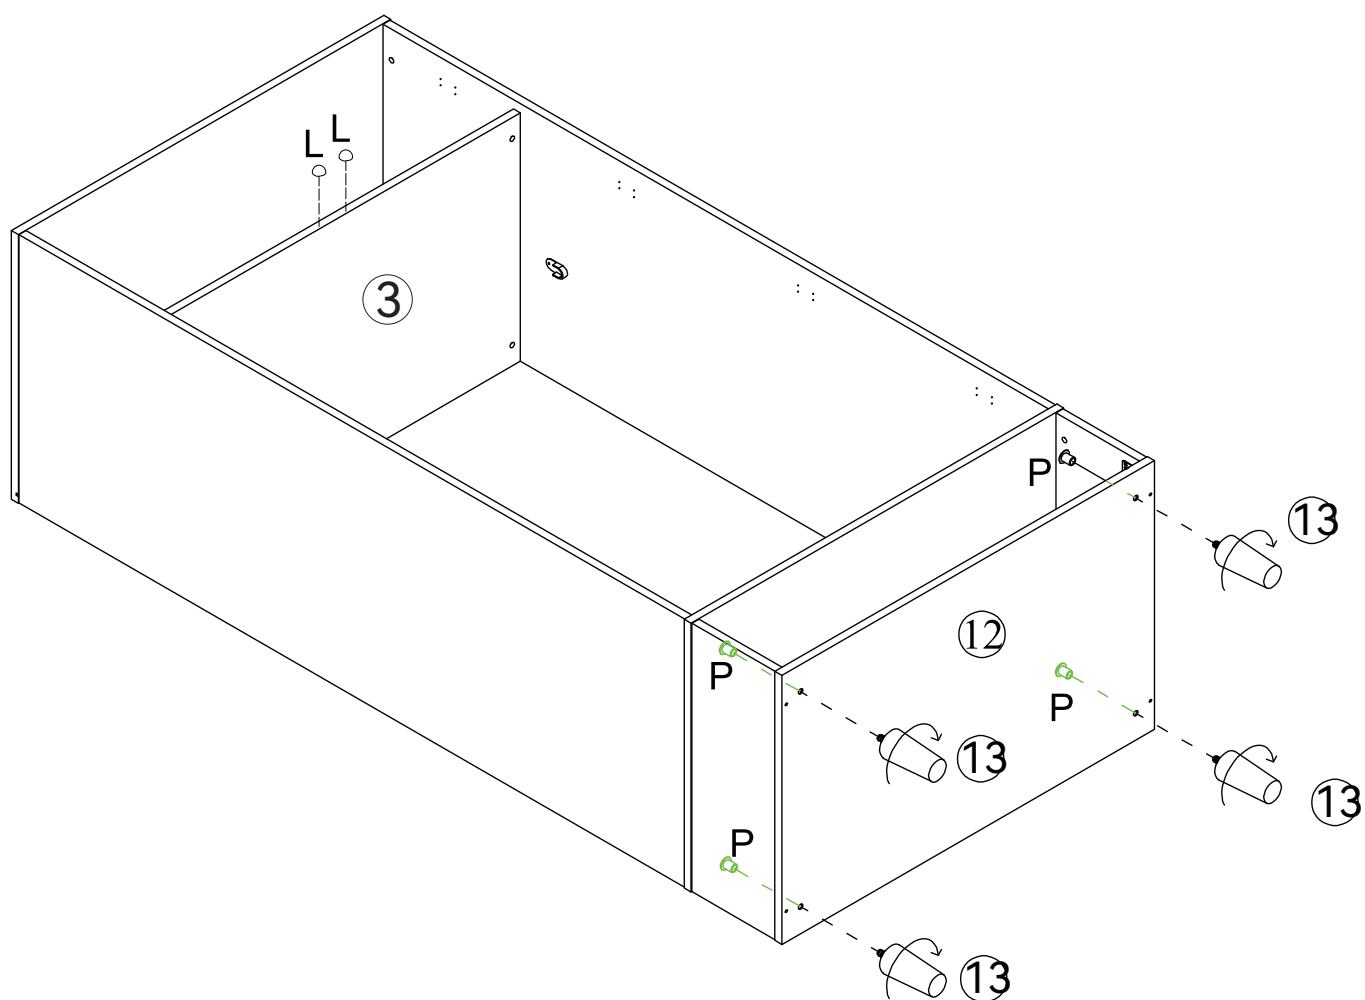


ASSEMBLY STEPS

M x 16 M-1 $\Phi 3 \times 16 \text{mm}$ M-2

STEP 16

  Insert the back panel wedge (M-1) into the gap of the back panel and tighten it with screw (M-2).

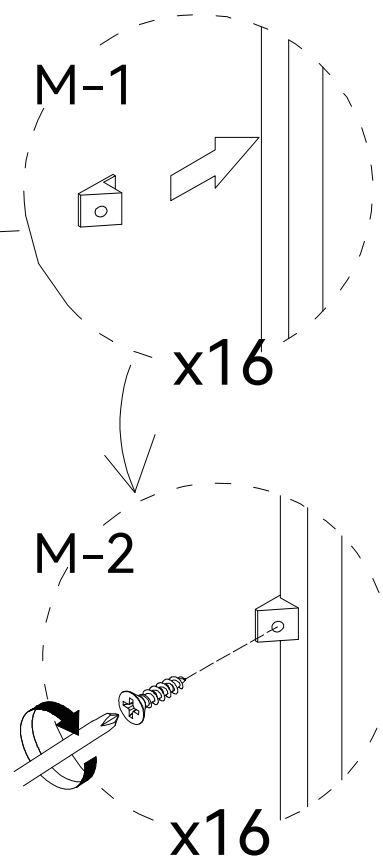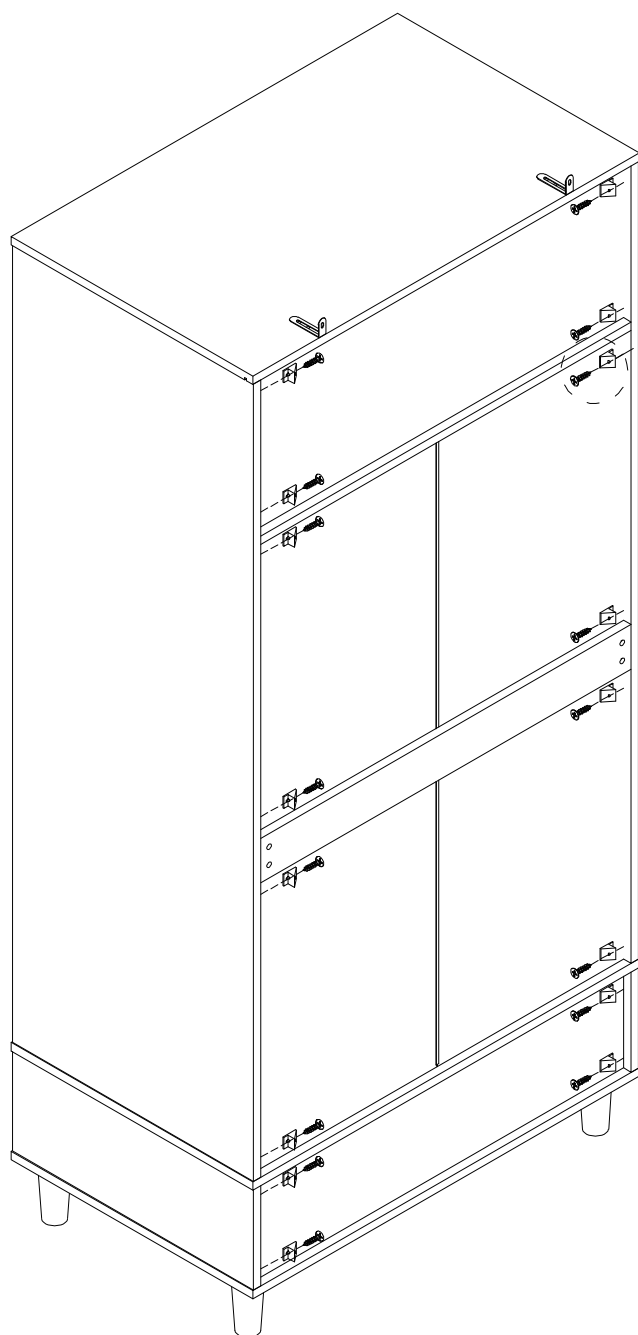

ASSEMBLY STEPS

 
K x 32

Φ4x12mm





STEP 17


1. Fix clothes hanging rod (7) into the clothes rod holder (G)
2. Align the door hinge (J) to the holes on panels (4), (14), then tighten door panels (16) to cabinet with screw (J).

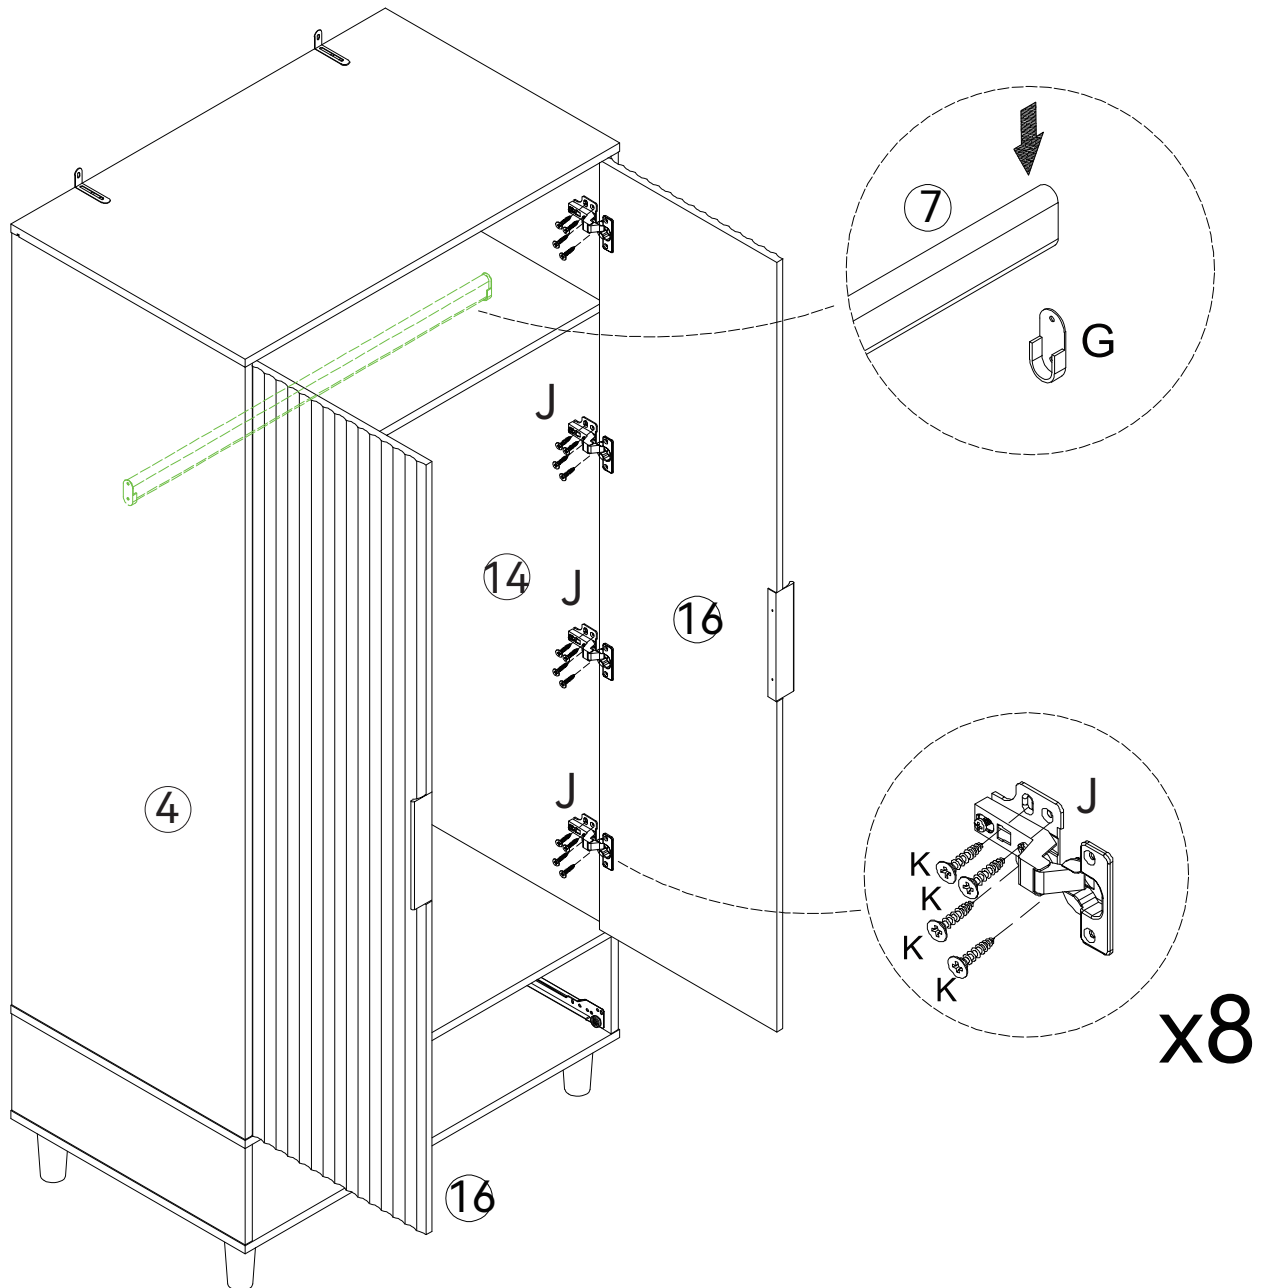


ASSEMBLY STEPS

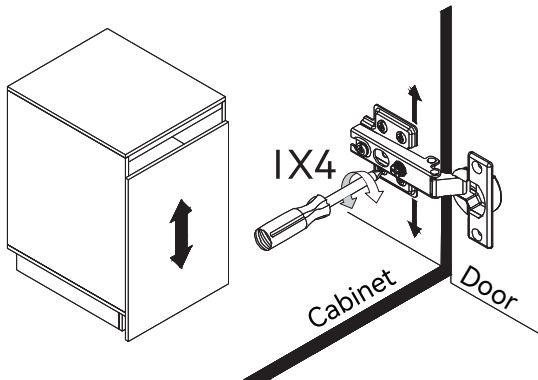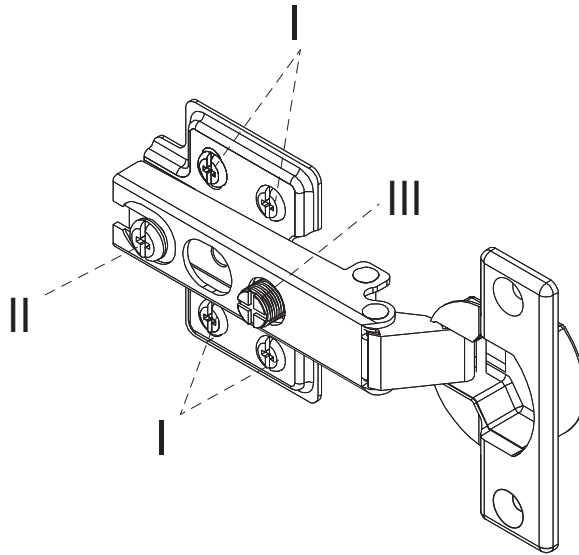  

 To adjust the vertical height.
Loosen the four screws "I" on both hinges.
Two of them are usually in slotted holes which allows you to adjust up or down by a few mm.
Then tighten back up.

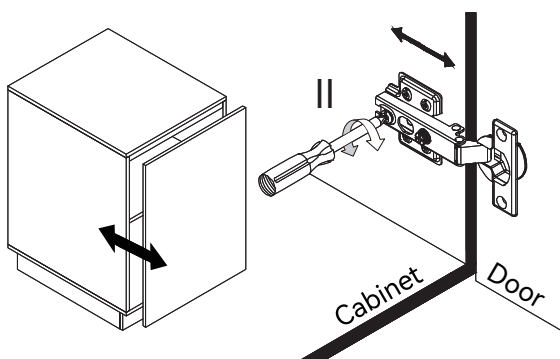

 To adjust depth.
Loosen screw "II" and adjust door, if the door cannot be adjusted, please loosen screw "III", then try again. Tighten screw "II" and "III".

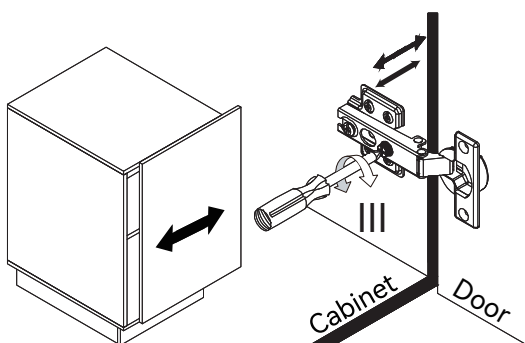


To adjust sideways.
Turning the screw "III" on both hinges on each door.

ASSEMBLY STEPS

STEP 18

 Align the slides on the drawer and cabinet, then gently push the drawer into the cabinet.


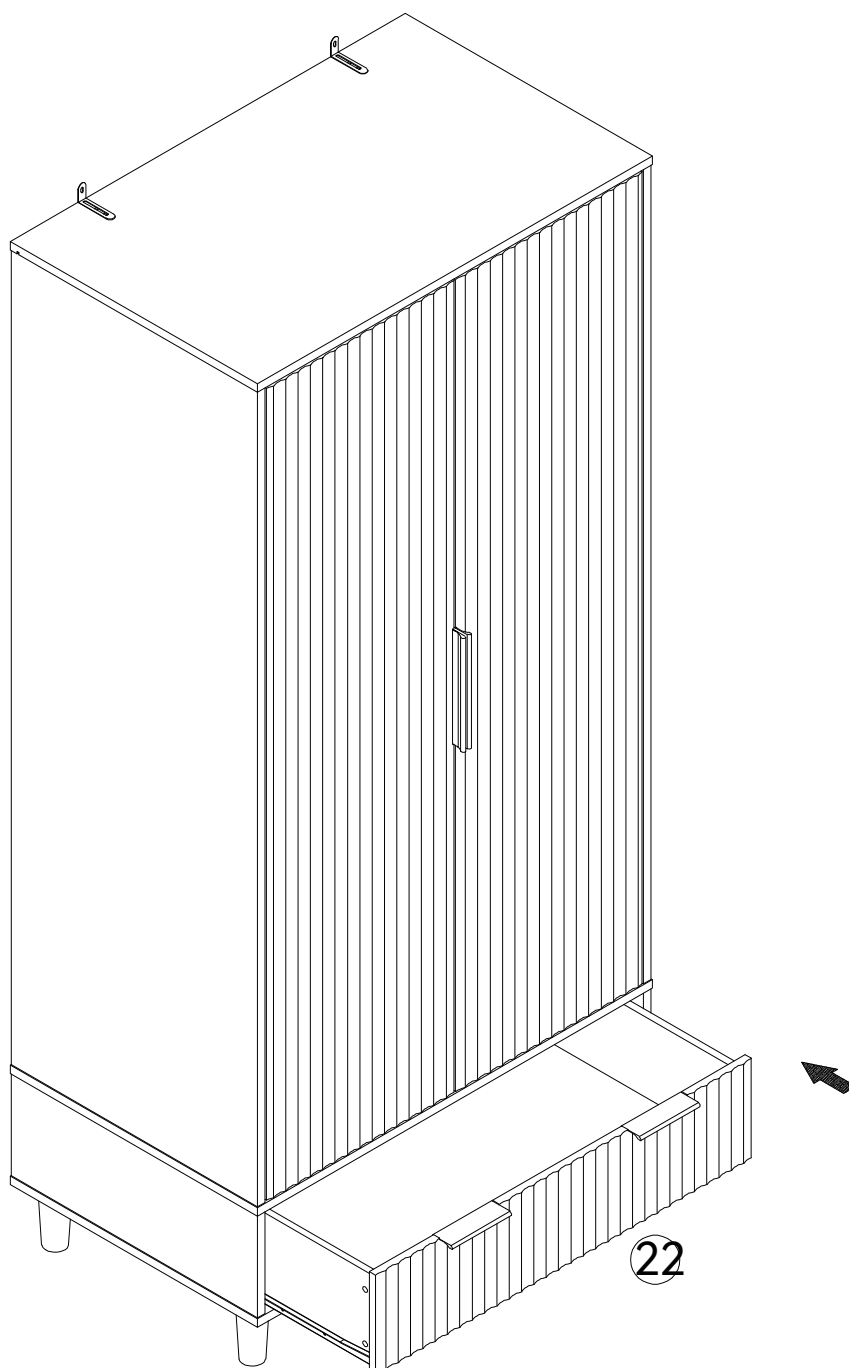


ASSEMBLY STEPS

O x 2 O-1  O-2  $\Phi 4 \times 45 \text{mm}$

STEP 19

  1. Drill two holes in the wall and insert plastic anchor (O-1) into holes.
2. Use screw (O-2) to pass through the anti-tipping kit (N-2) to fix the cabinet on the wall.

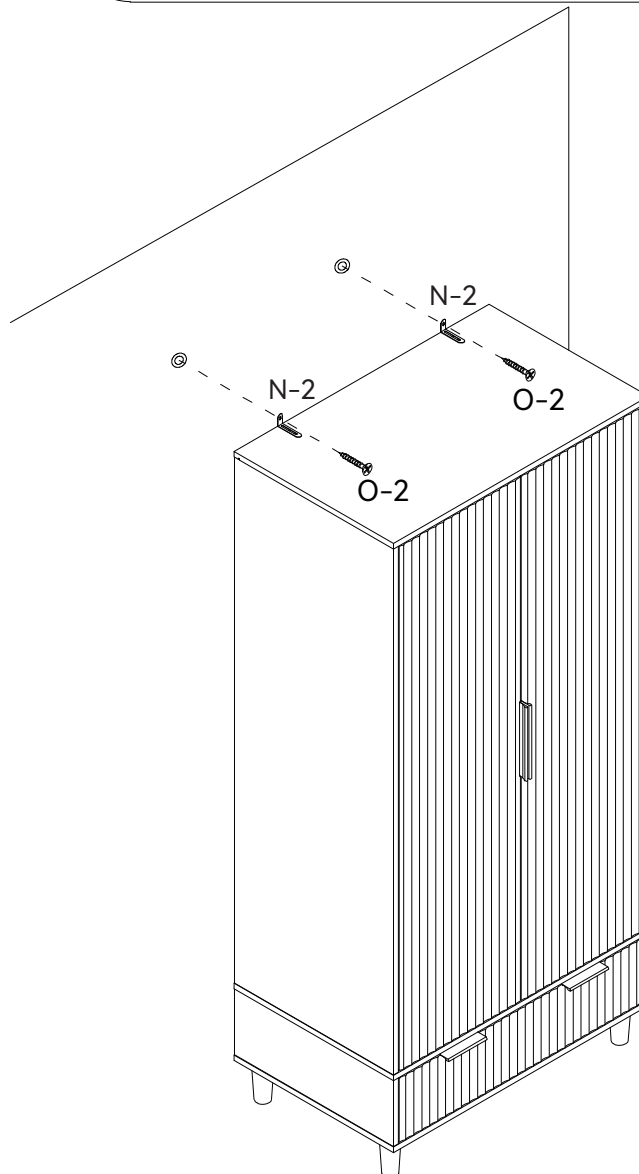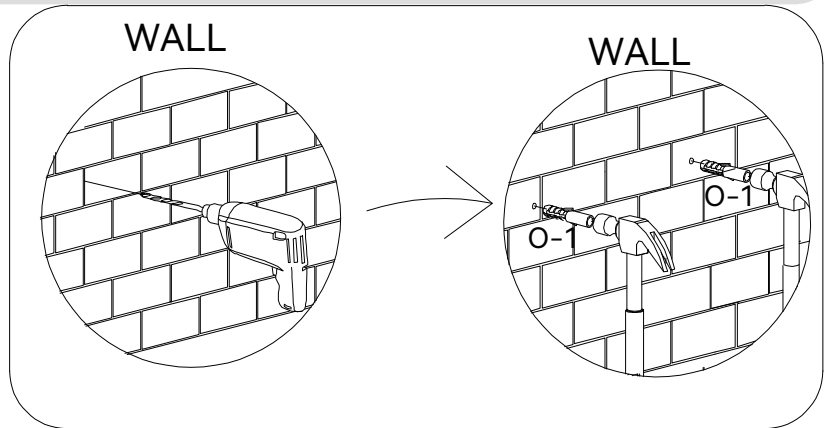

1. What should I do when I received a defected item?

Please feel free to contact VINGLI customer service via the link where you purchased this item with your order ID, pictures of the defective areas to us. We are eager to help you to make it right.

2. Is it easy to put the screws to the panels?

Yes. As long as you follow the instruction and use the correct screws and put it in correct holes, it is easy to screw it into pre-drilled holes.

3. What should I do if I have a problem with the drawers not closing flush?

The problem with the drawers not closing flush is usually caused by the assembly of the drawer slides. Here are the solutions as below:

- 1) Please check whether the slide rail is damaged, for example, the ball of the slide rail has fallen out, if so, please ask us for replacements of the drawer slides;
- 2) Refer to the assembly manual to check if the holes for the slide rail are assembled correctly. If there is no problem with the assembly, but the slide rail is stuck in the process of pushing in, please release the entire drawer as you did the first time you removed the drawer slides, and then push it back in again.

Any query, please contact us directly.

Supplementary Instructions for Safe Use

English



WARNUNG



Children have died from furniture tipover. To reduce the risk of furniture tipover:

- ALWAYS install tipover restraint provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.

- NEVER open more than one drawer at a time.

Place heaviest items in the lowest drawers.

- Do not defeat or remove the drawer interlock system.

This is a permanent label.

Do not remove!

French



WARNUNG



Des enfants sont morts du basculement des meubles. Pour réduire le risque de basculement des meubles:

- TOUJOURS installer la retenue de basculement fournie.
- NE JAMAIS mettre de téléviseur sur ce produit.
- NE JAMAIS permettre aux enfants de se tenir debout, de grimper, ou de s'accrocher à des tiroirs, des portes ou des étagères.

- N'ouvrez JAMAIS plus d'un tiroir à la fois.

- Placez les objets les plus lourds dans les tiroirs les plus bas.

- Ne désactivez pas et ne retirez pas le système de verrouillage du tiroir.

Ceci est une étiquette permanente.

Ne pas enlever!

German



WARNUNG



Kinder sind an einem Möbelkippen gestorben. So verringern Sie das Risiko eines Umkippens von Möbeln:

- Installieren Sie IMMER die mitgelieferte Kipprückhaltevorrichtung
- Stellen Sie NIEMALS einen Fernseher an dieses Produkt.
- Lassen Sie Kinder NIEMALS an Schubladen, Türen oder Regalen stehen klettern oder hängen.

- Öffnen Sie NIEMALS mehr als eine Schublade gleichzeitig.

- Legen Sie schwerste Gegenstände in die untersten Schubladen.

Besiegen oder entfernen Sie das Schubladenverriegelungssystem nicht

Dies ist ein dauerhaftes Etikett.

Nicht entfernen!

Supplementary Instructions for Safe Use



WARNING

This product can expose you to chemicals including Formaldehyde (gas), which is known to the State of California to cause cancer. For more information go to www.P65Warnings.ca.gov.