

Egg Swing Chair

 
Installation Instructions

 
 
 
 
 
 
**EASY
ASSEMBLY**

Assemble in
15 minutes
or less




Scan to get a quick assembly
guide, dedicated support,
plus member access to exclusive
perks & extended warranty.

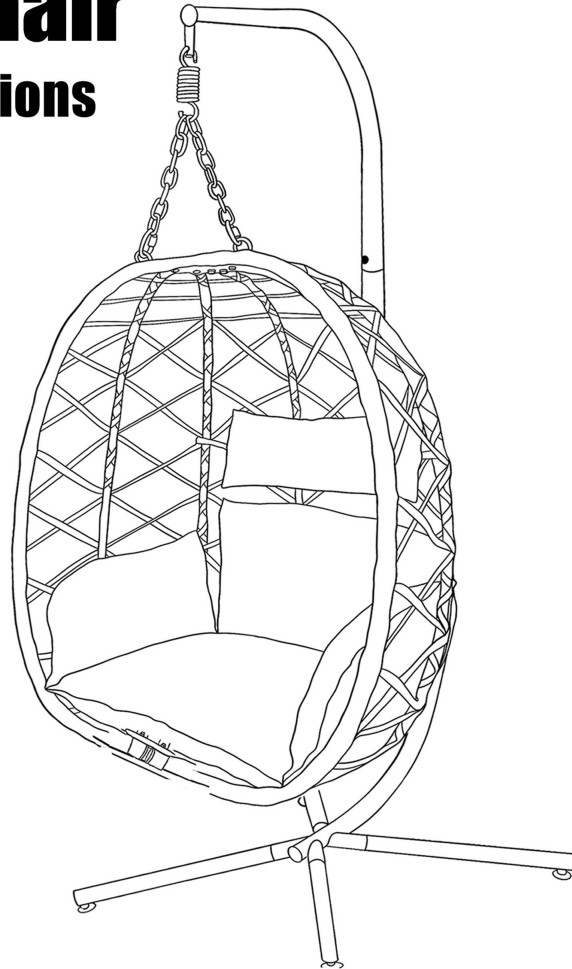

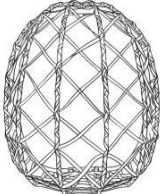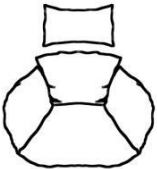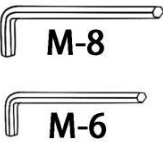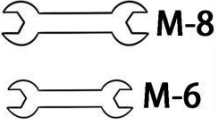							
A	1	B	1	C	4	D	1
							
E	1	F	1	G	2	H	2
		 reinforcement				 M-8 M-6	
I	1	J	4	M-8,60mm		1	Hexwrench
 M-8 M-6		 height adjuster					
Wrench		N	4	M-8,20mm		12	M-6,40mm 4



Step 1:

 Screw the 4 height adjusters (N) into the ends of the 4 support legs (C)

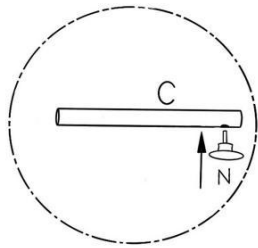


Step 2:

  Fasten the 4 support legs (C) to the base frame (A) with the reinforcements (J)

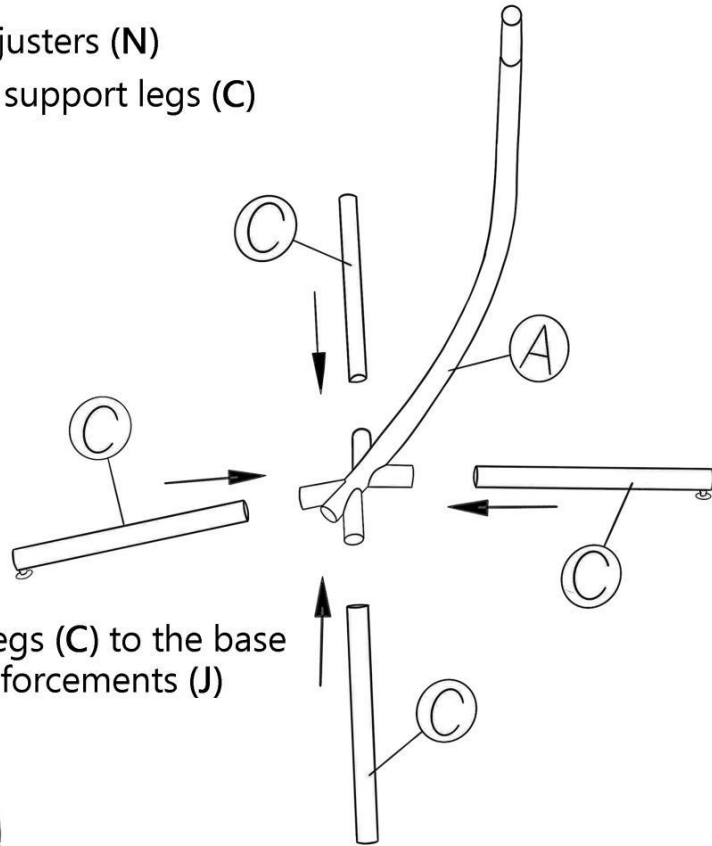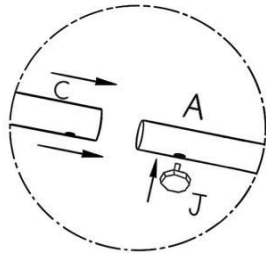


Step 3:

 Attach accessories (A) and (B) together using screw-M-8,60mm

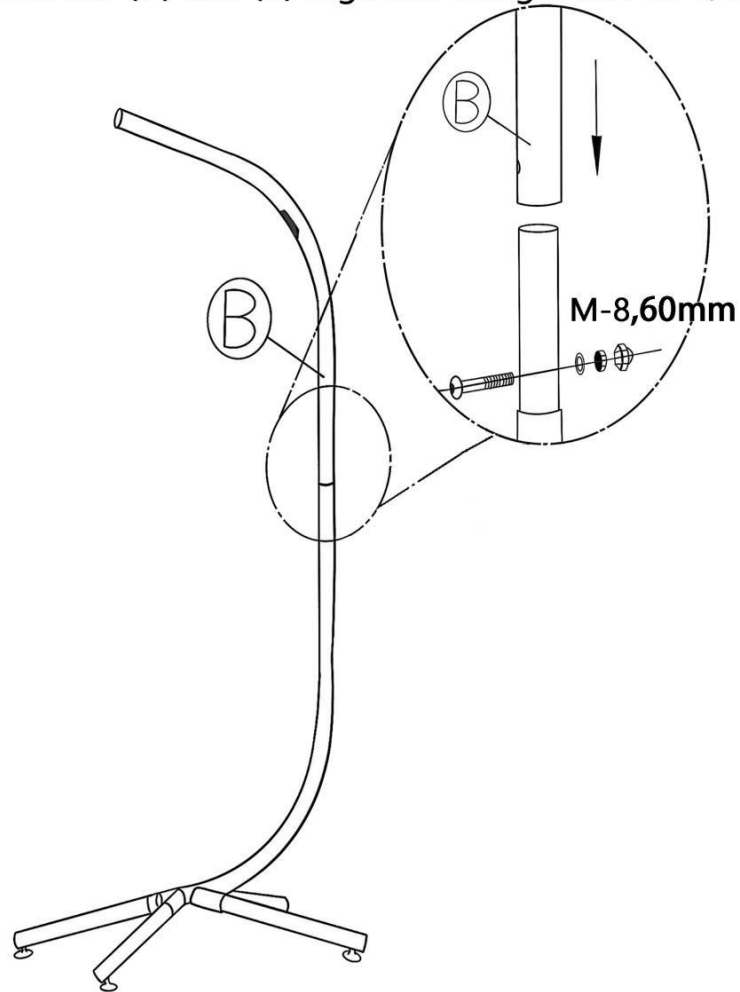

Step:4

 
Simply flip the chair base (D) over.

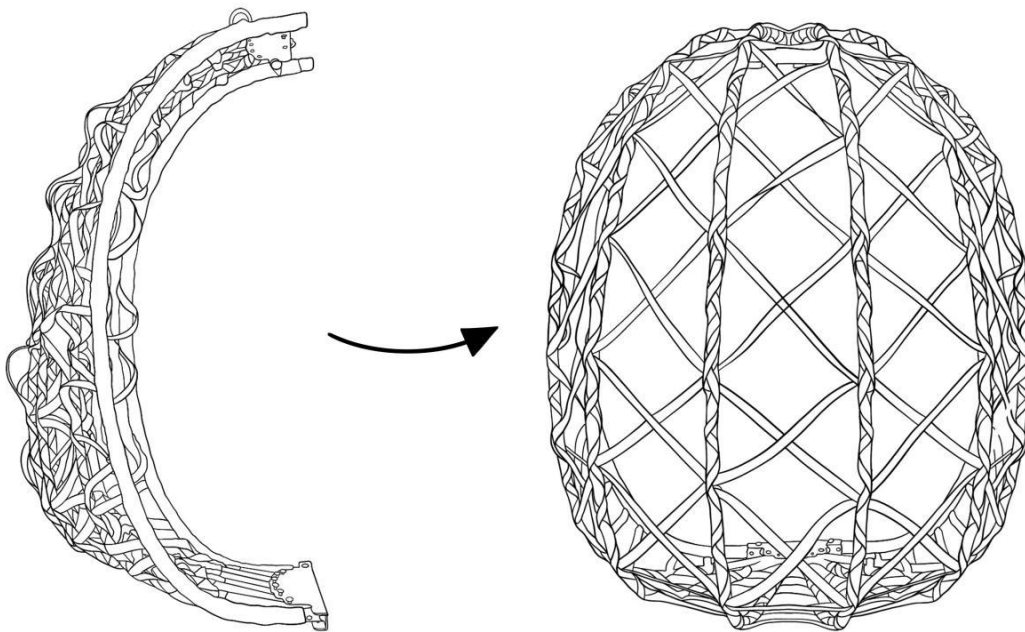

Step:5

Assemble the seat of the chair as shown

 
--6 (M-8,20mm), 2 (M-6,40mm)

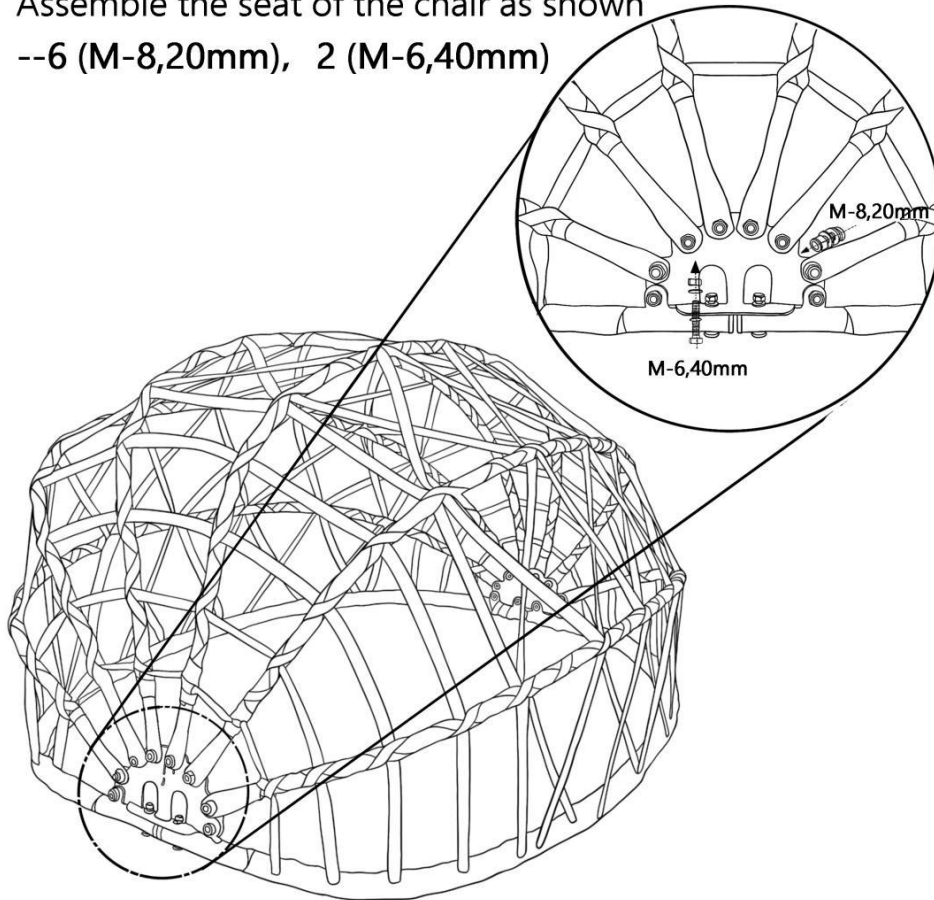


Installation advice: Install the base by placing it on the floor


Step:6

 Installation of 6 (M-8,20mm), 2 (M-6,40mm)

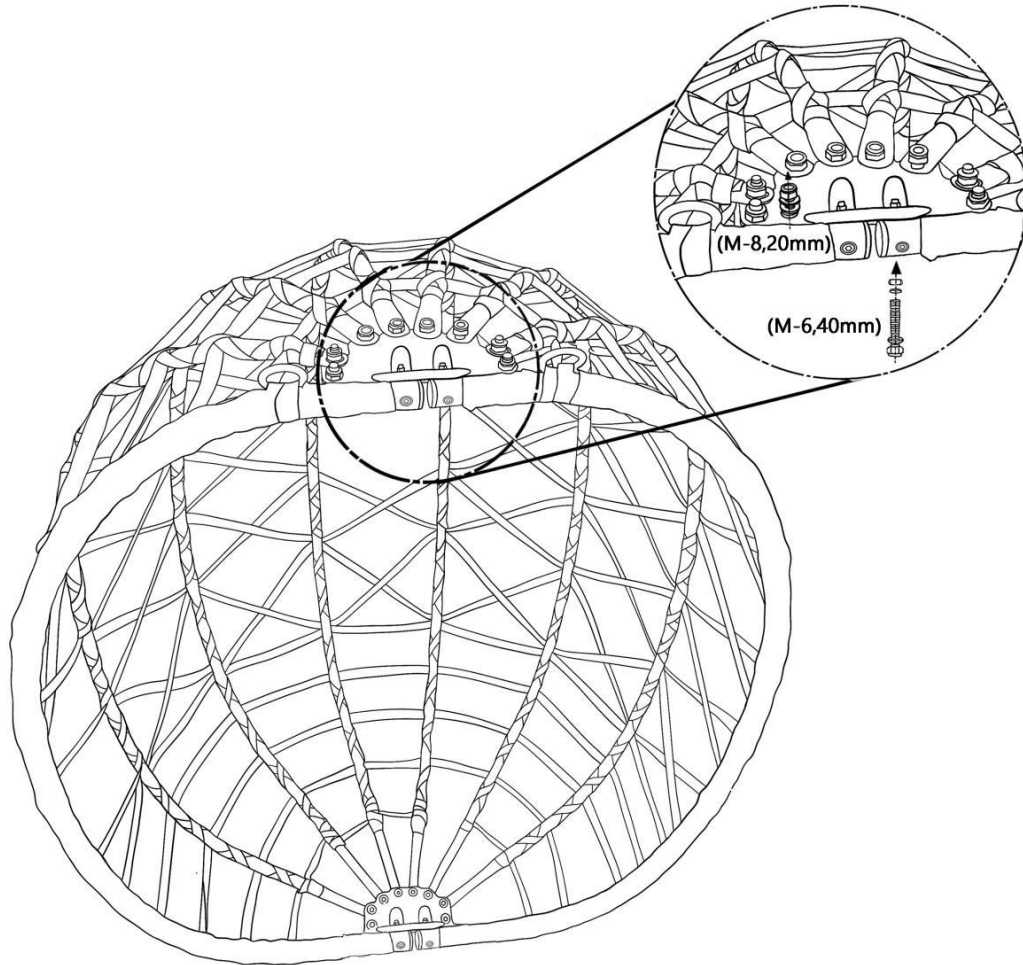


Step:7

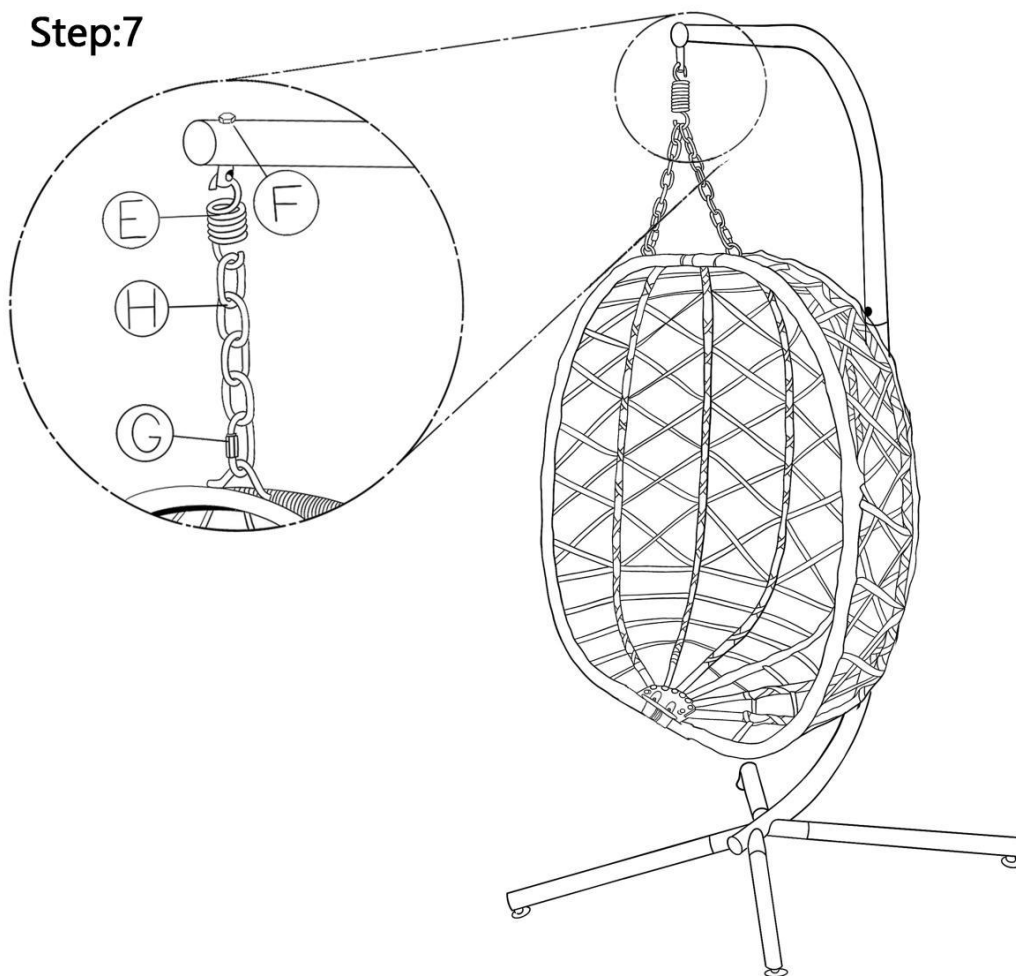 

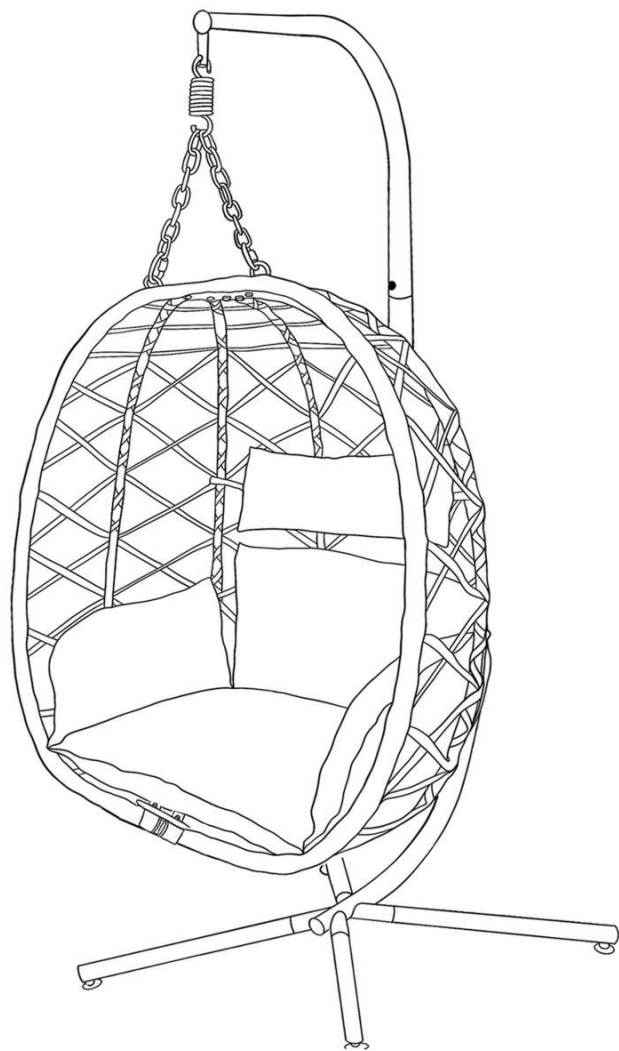 

ONLINE SUPPORT

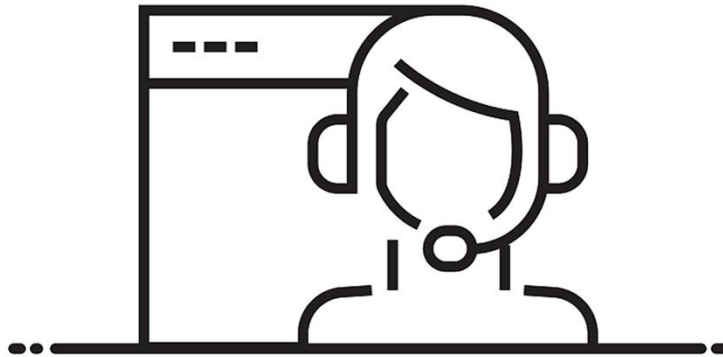 

Please read the installation guide carefully before installation

If you have any questions during the installation process
you can contact us and we will provide you a detailed guidance

Online Support: outdoorservice@kannelfurniture.com