



ASSEMBLY INSTRUCTIONS

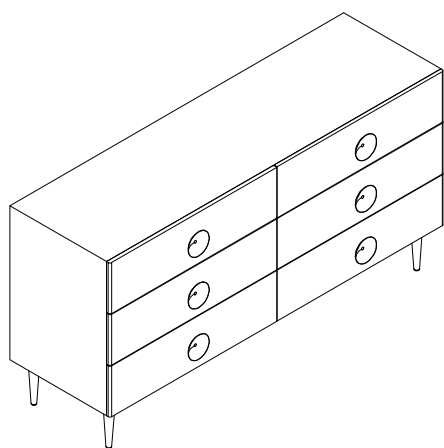

+ Do Not Use Power Tools



+ Suggested Adults

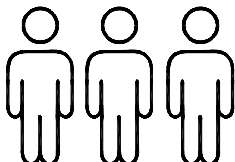

NOTE:

- 1 Read instructions cover to cover.
- 2 Save all packaging until assembly is completed

1 IMPORTANT SAFETY INFORMATION

Do not assemble the product if any of the following parts arrived damaged:

Part# - Dresser

Part# - Leg

Part# -

Do not assemble if any of the following Hardware parts are missing:

Part# -Bolt

Part# -Allen Key

Part# -


2 IMPORTANT ASSEMBLY INFORMATION

Assembly Step If loosening persists, please make sure to tighten all the bolts periodically, or use a thread locker adhesive.

+ Parts Included

① Dresser *1pcs

② Leg *5pcs

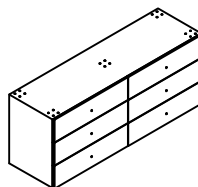

③ Handle *6pcs

④



 
 
⑤

⑥

+ Hardware Included

A Allen Wrench *1pcs

B Bolt *20pcs



C Lock Washer *20pcs

D Flat Washer *20pcs



E Small Bolt *6pcs


F



G

ASSEMBLY INSTRUCTIONS

①

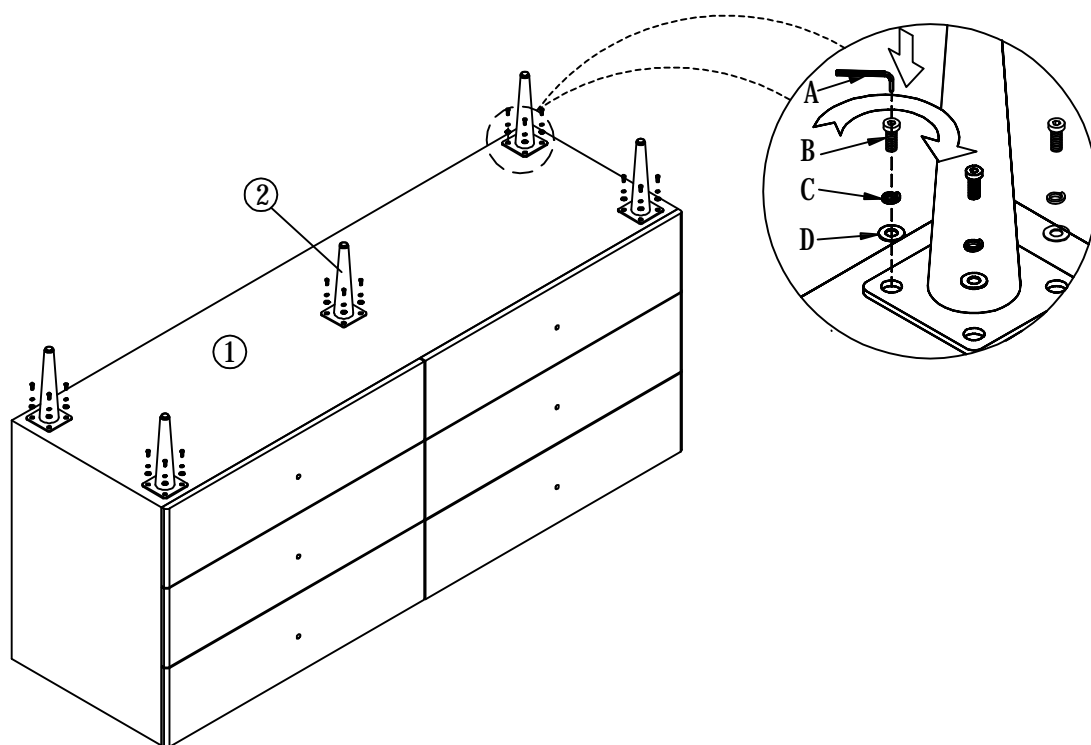

②

