



3-Tier Outdoor Umbrella

Instruction Manual

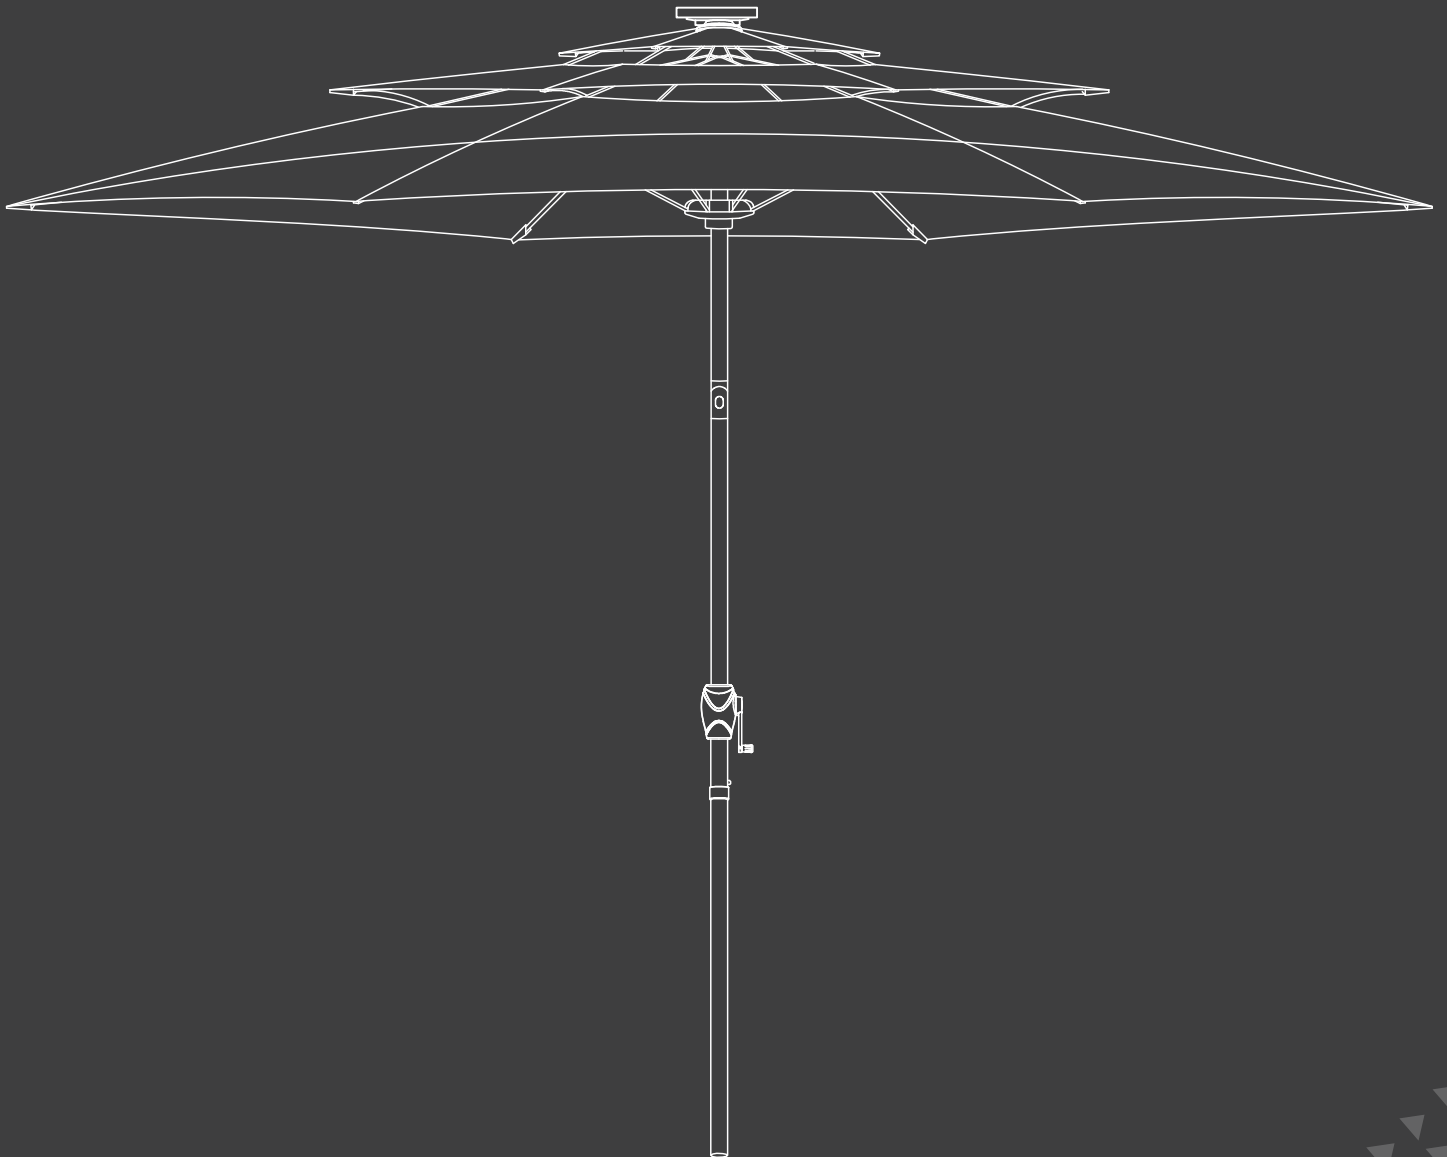

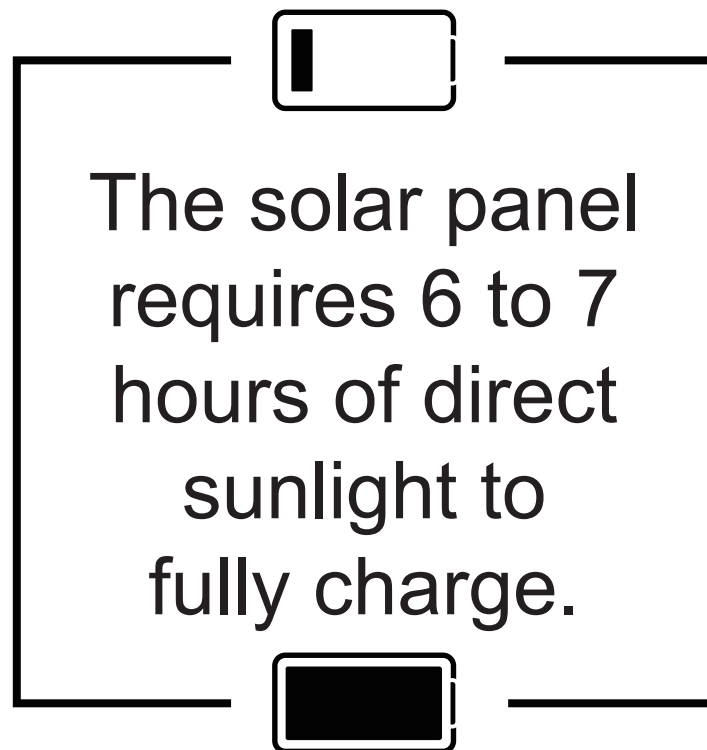

Notice

Please retain these instructions for future reference.

- The umbrella base is not included. Do not use this umbrella without an umbrella base and ensure the base is weighted down before use.
- Place the umbrella on a stable, level surface.
- Do not use the umbrella in inclement weather, such as snow, heavy rain, thunderstorms, or strong winds.
- Firmly secure all bolts, screws and knobs before use.
- Always remove the umbrella from its base when not in use.
- Fasten screws loosely during initial assembly. Do not fully tighten the screws until the item is completely assembled.
- Be aware that some parts are heavy and may have sharp edges.
- If any parts are missing, broken, damaged, or worn, stop using this product until repairs are made or factory replacement parts are installed.
- Do not use this item in any way inconsistent with the manufacturer's instructions, as this may void the product warranty.


Storage

- Close the canopy when the umbrella is not in use.
- Store it in a dry, sheltered area, away from the weather.
- If necessary, cover it with a furniture cover or tarp.

Cleaning

- Wipe clean with mild detergent, warm water, and a soft cloth.
- Do not use abrasive materials or cleaners.

Parts

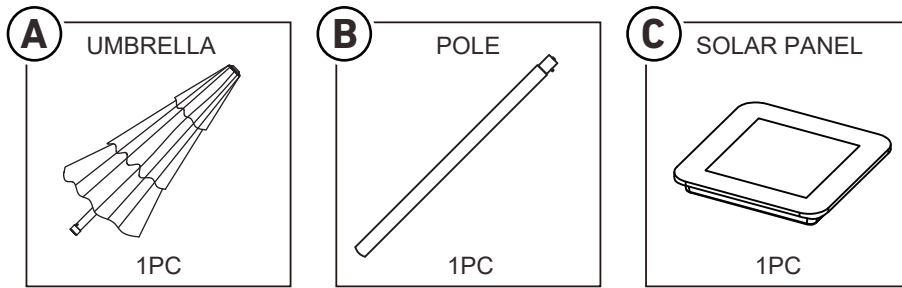

Before First Use:


- Hold umbrella A upside down and shake gently to separate the umbrella ribs. If necessary, carefully pull the ribs apart to free them.
- Slowly turn the crank to open the umbrella. Ensure that the ribs are not stuck together.

Charging the Lights


- The solar panel requires 6 to 7 hours of direct sunlight to fully charge.
- The LED lights last for 6 to 7 hours on a single charge.
- If the lights are not working, fully charge the solar panel and try again.

PRODUCT ASSEMBLY

STEP 1

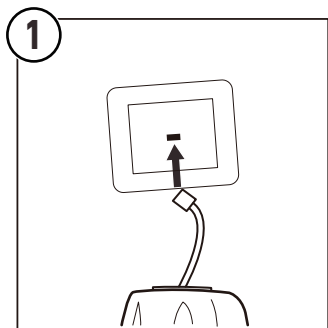


Connect the battery connector.

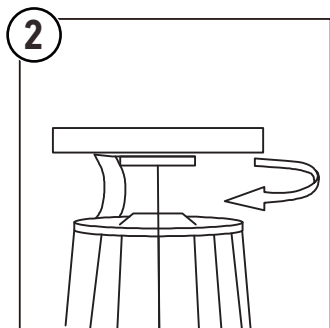


Rotate the solar panel to assemble.

STEP 2

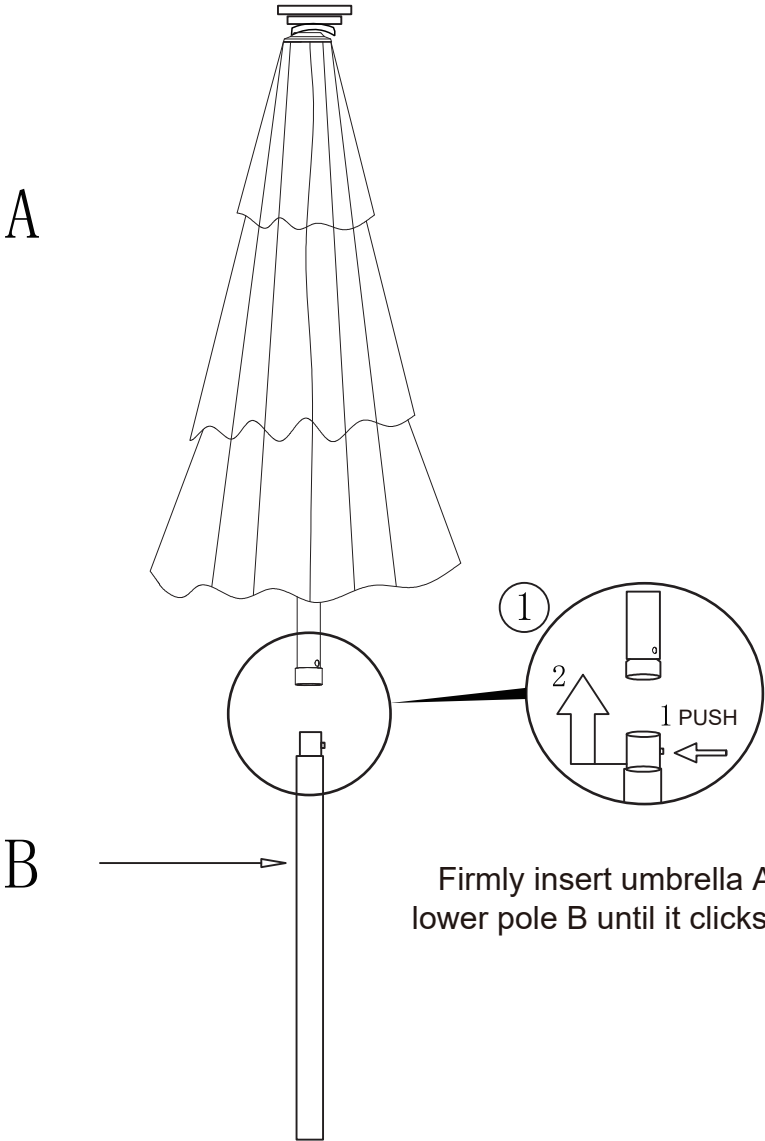

Firmly insert umbrella A into the lower pole B until it clicks into place.


STEP 3

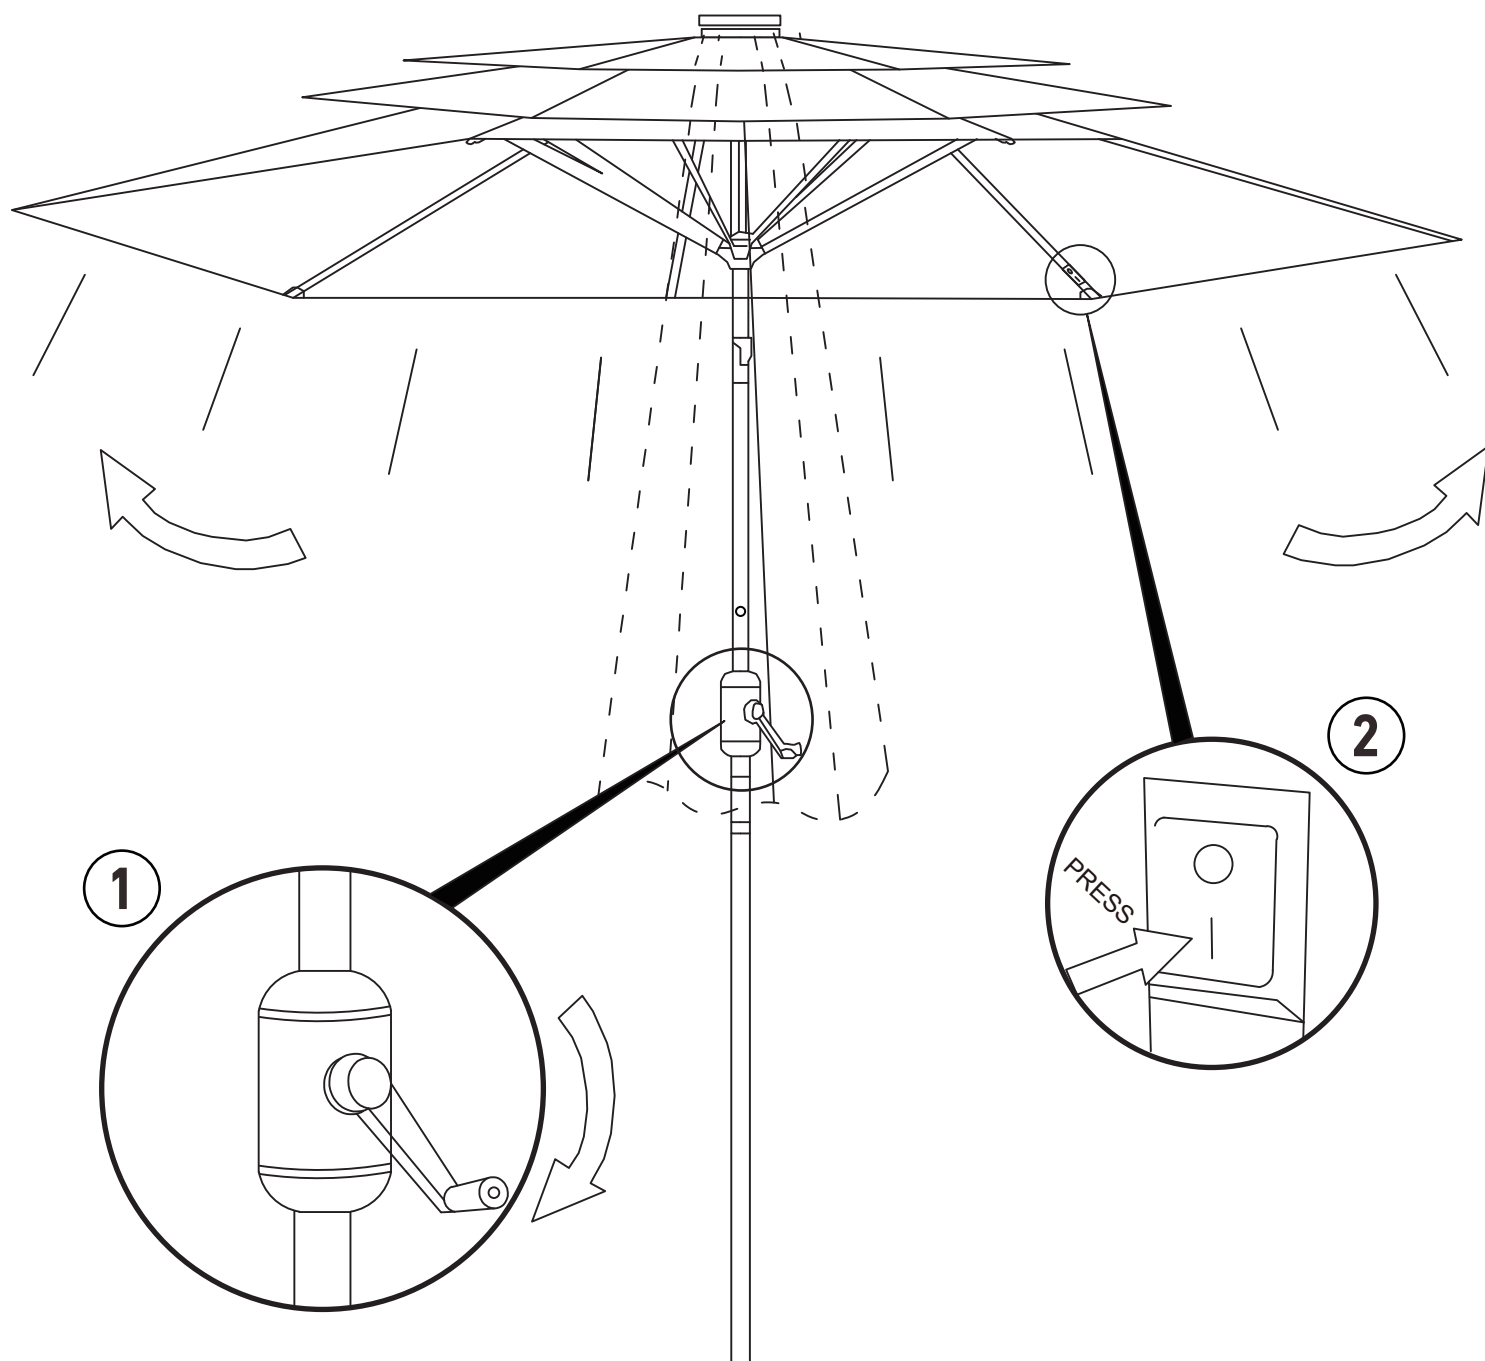


Slowly turn the crank to open the umbrella canopy. Press the power switch to turn on the LED lights.

STEP 4

Press the button to adjust the tilt direction of the umbrella canopy left and right.

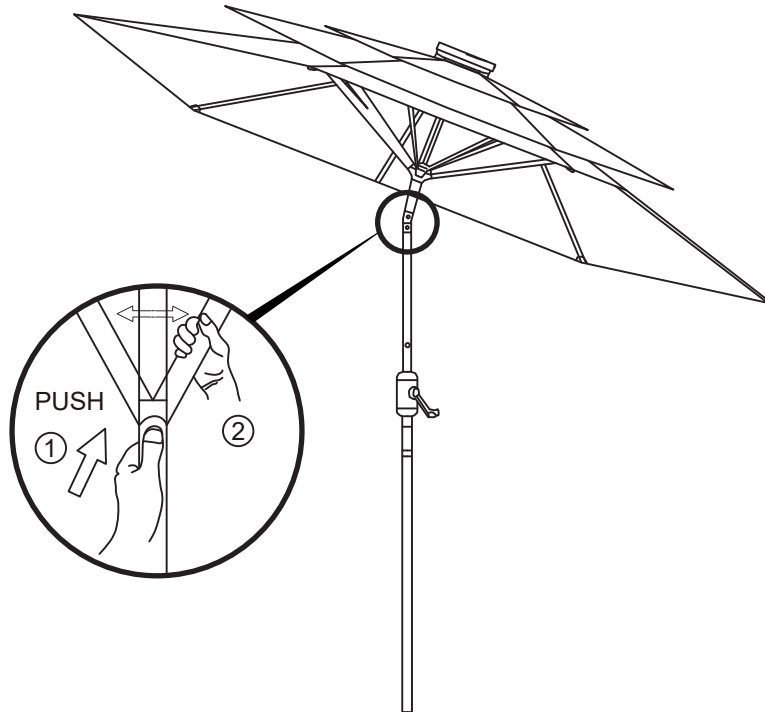

Press and hold the button again, then push the pole to upright the canopy.

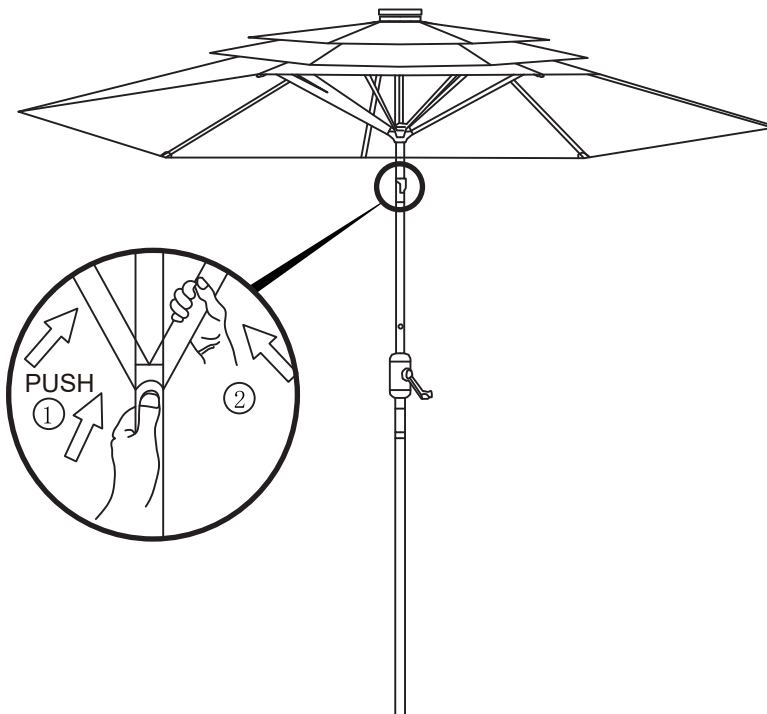

NOTE

Do not use without an umbrella base. Recommended base weight: ≥ 100 lbs.

STEP 5

Slowly turn the crank to close the umbrella canopy. Gather the ribs and secure them with the umbrella straps.

