

Assembly Instructions

IMPORTANT INFORMATION

Unwrap and remove all parts from the box. Keep the box and packing material until the product is assembled. In case of return or exchange, failure to return product in similar condition as received could result in limited reimbursement. Please save sales receipt as proof of purchase for warranty purposes. Check to ensure you have all the parts below. If you discover any parts are missing, immediately call our toll-free service helpline

PARTS IDENTIFICATION

A - Bottom Platform

B - Hardware Screws with Washers (2)

C - Platform Stand with Sisal


D - Top Platform

E - Hardware Screw with Plastic Cap

F - Dual Thread Screw with Even Threads


G - Circular Cubby Tube

H - Allen Wrench

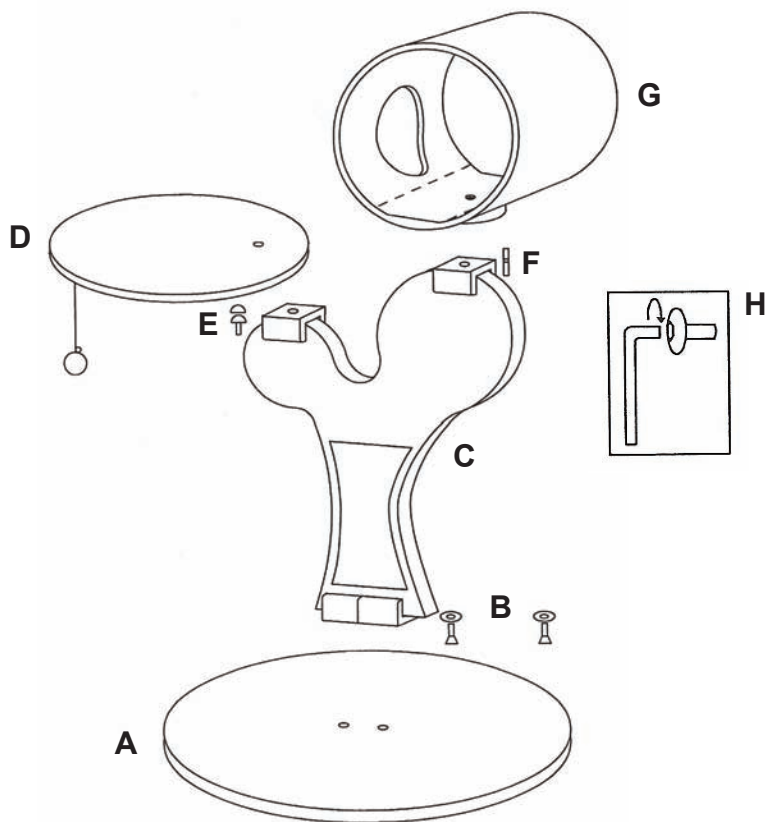


ASSEMBLY INSTRUCTIONS


1. Attach the Bottom Platform (A) to the Platform Stand with Sisal (C) using the Long Hardware Screws with Washers (B). The washer should be placed on the screw before inserting the screw up through the underside of the Bottom Platform. Use the Allen Wrench (H) to tighten.

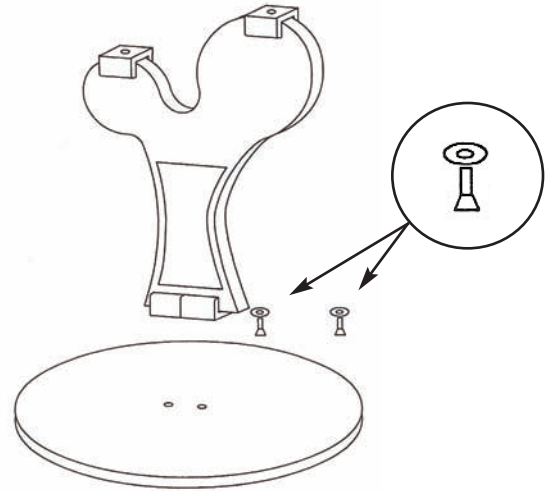

2. Use the Long Hardware Screw with Plastic Cap (E) to secure the Top Platform (D) to the Platform Stand with Sisal (C). Use the Allen Wrench (U) to tighten.

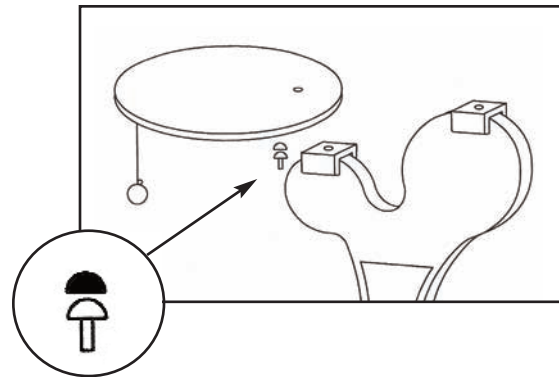

3. Use the Dual Threaded Screw (F) to secure the Circular Cubby (G) to the Platform Stand with Sisal (C). Turn the Cubby clockwise to tighten.

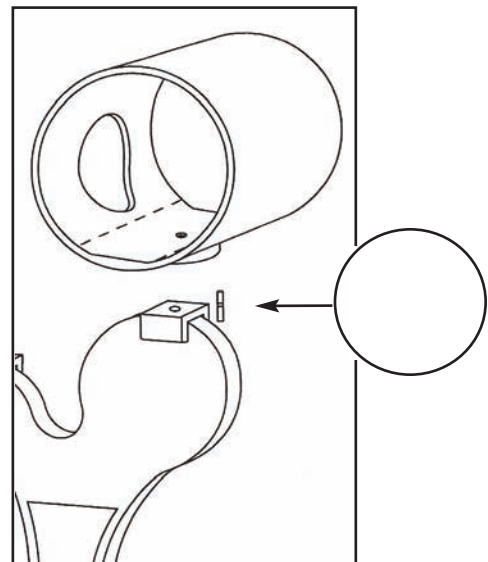

LIMITED MANUFACTURERS WARRANTY