 
 


INSTALLATION

 
 
Product Manual

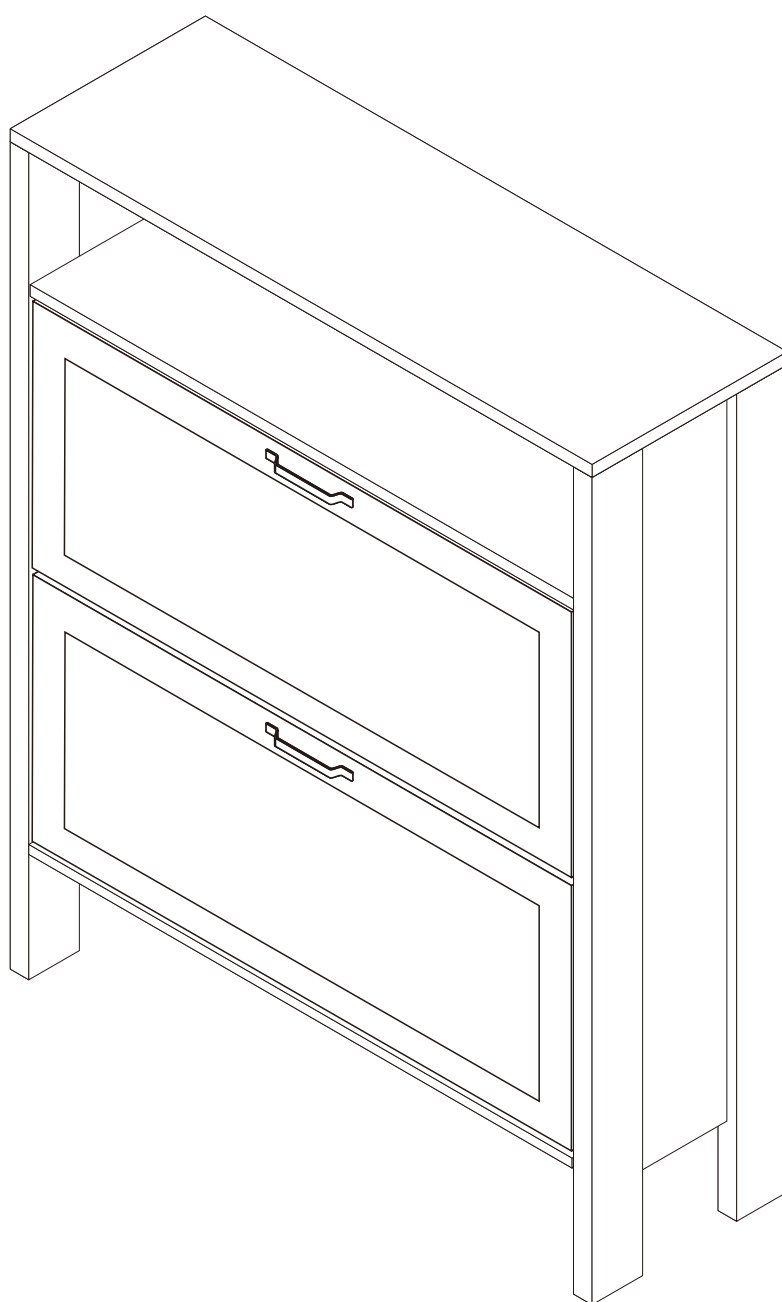

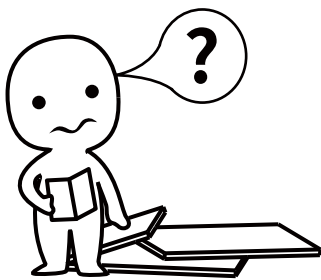


IMPORTANT INFORMATION!

please read the entire manual before starting to assemble and/or using this product. follow the manual thoroughly and keep it for further reference.

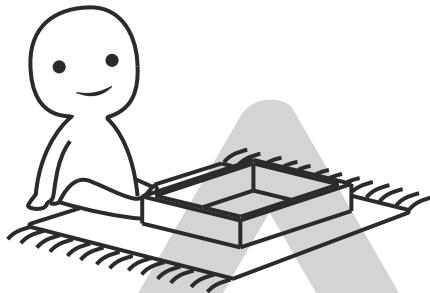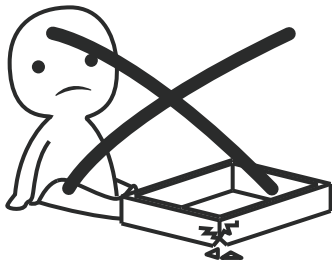



AVOID SCRATCHES!

 In order to avoid scratching this furniture should be assembled on a soft layer-could be a rug.

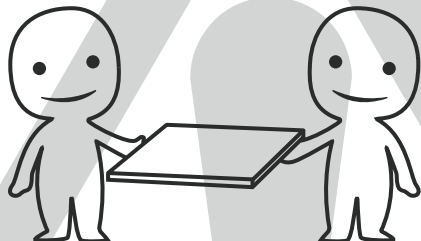

IMPROVE EFFICIENCY !

  Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.

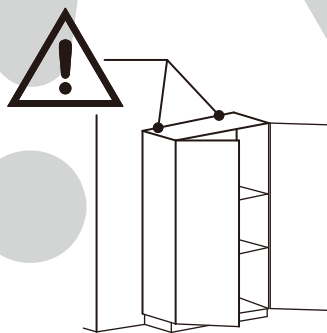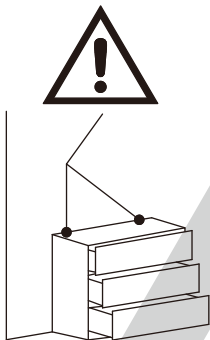

ANTI-TOPPLE WARNING !

 
Overturned furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.

 
 
 
 
 
 
 
 
 
 
 
 
IMPORTANT !





It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly, and once every 3 months - in order to assure stability through-out the lifespan of the product.

For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag. For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.


Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.

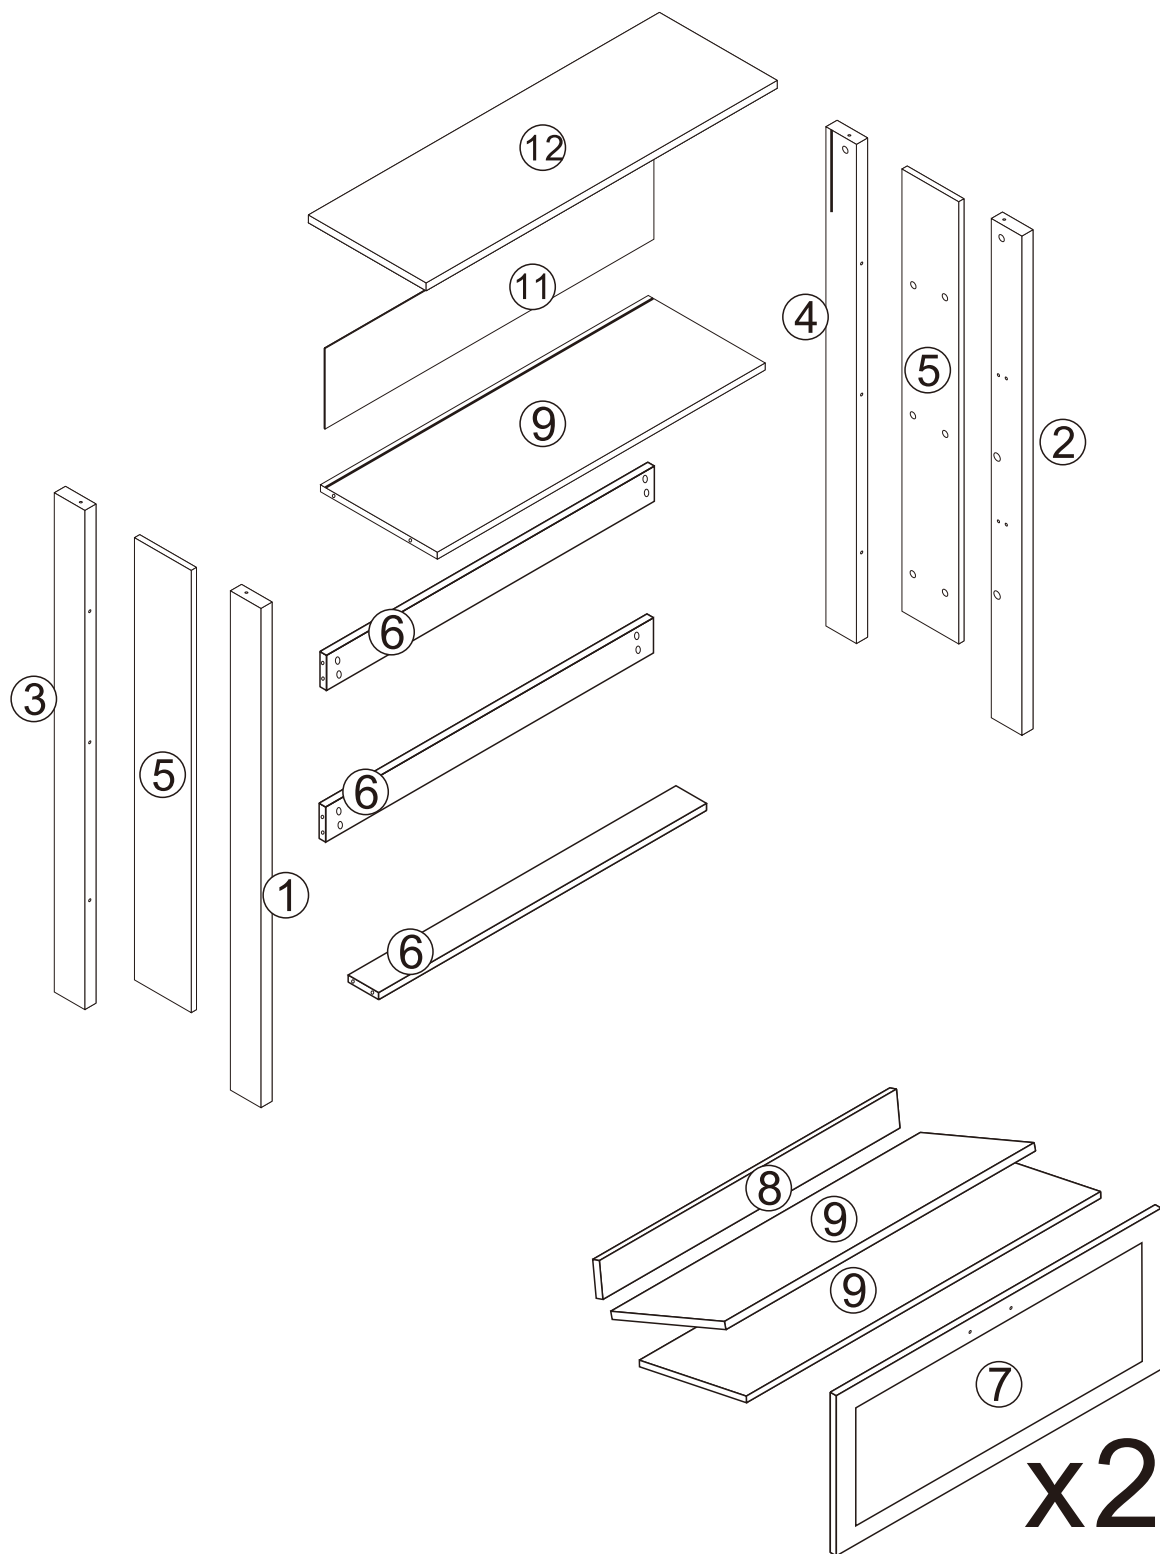

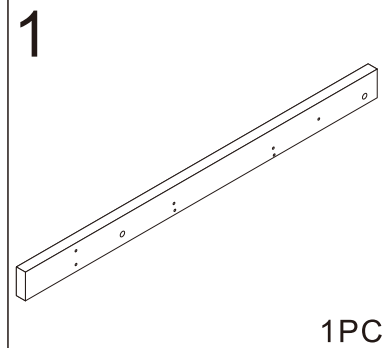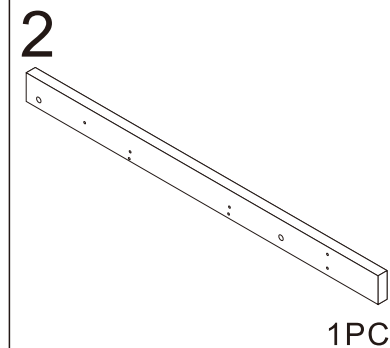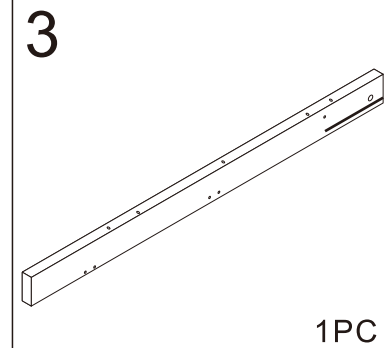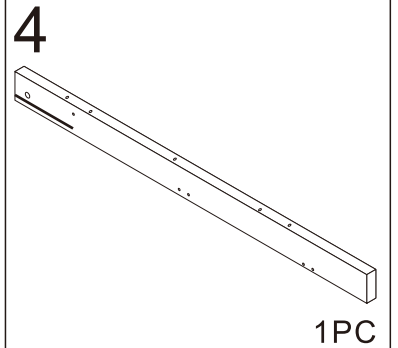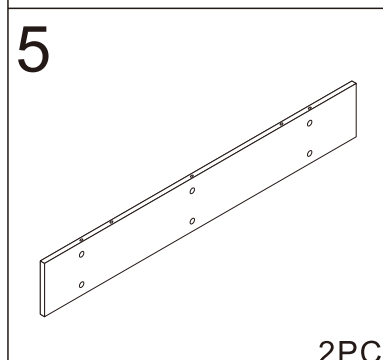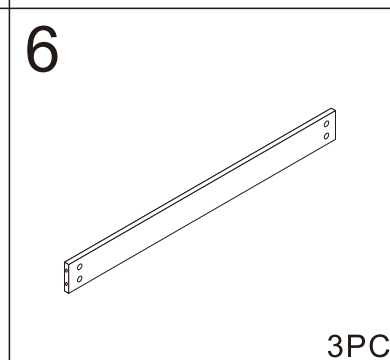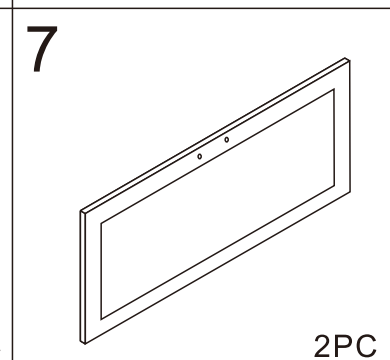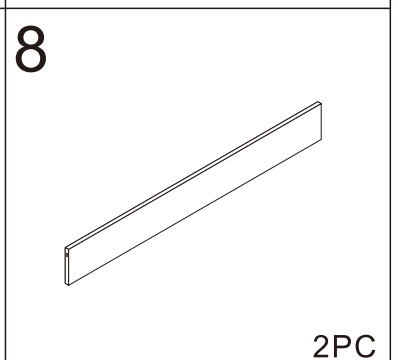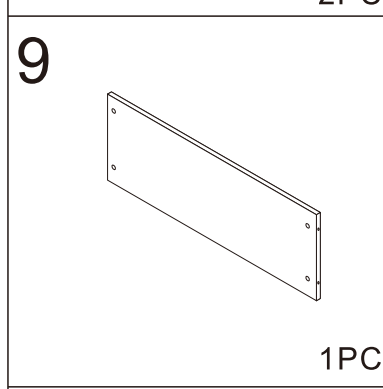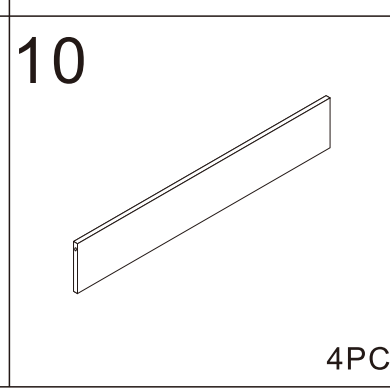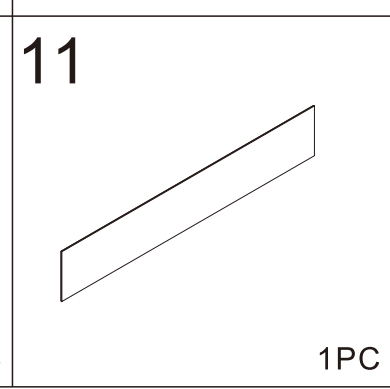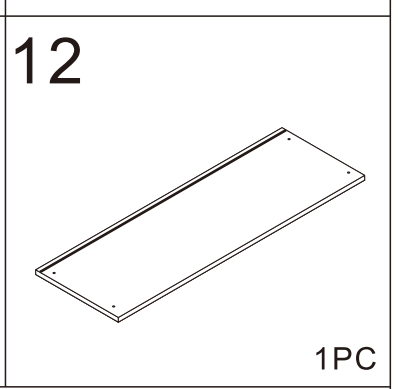
1  1PC	2  1PC	3  1PC	4  1PC
5  2PC	6  3PC	7  2PC	8  2PC
9  1PC	10  4PC	11  1PC	12  1PC

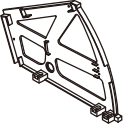     Ax34	 Bx34	 Cx 8	 Dx4
 Ex26	 Fx4	 Gx4	 Hx2
 Ix4	 Jx4	 K1  K2  K3  K4 Kx1	 Lx2
 Rx2			

 REMARK:


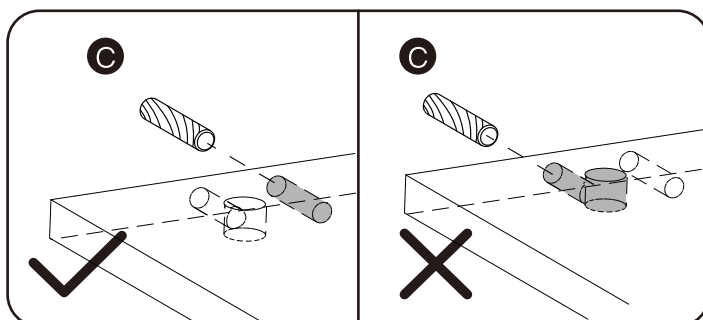


 Avoid inserting part C into wrong holes.



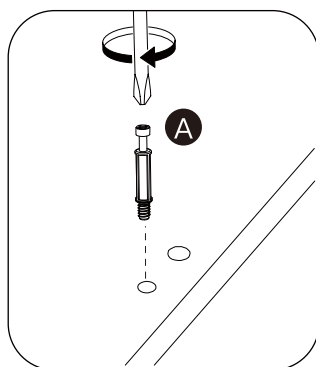


Part A must be installed into the holes with rubber nuts which are smaller than others.

 
 
When locking part B, please make sure part A is fully inserted.

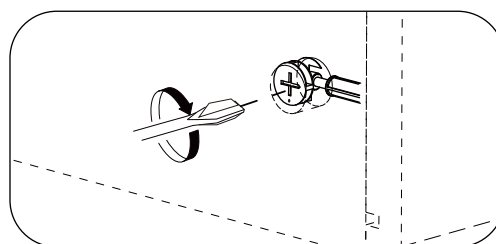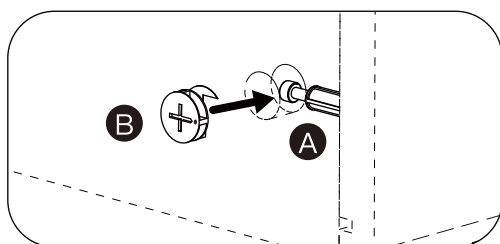


1

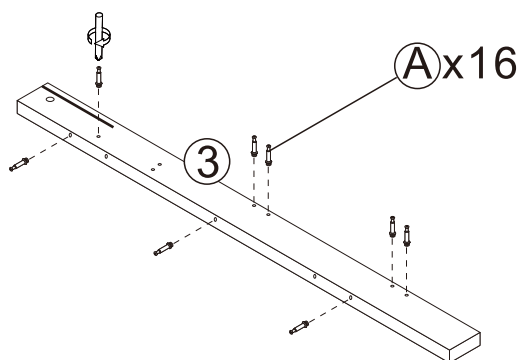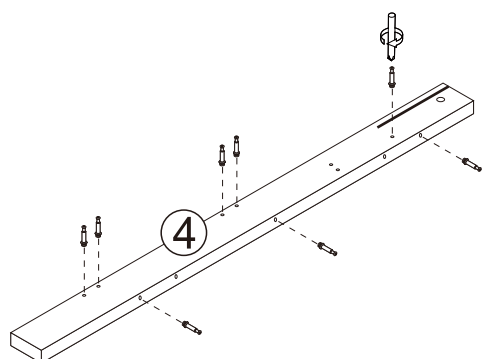   
 Ax16

  
2

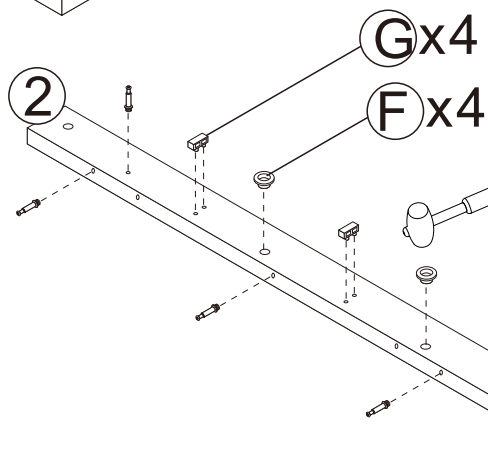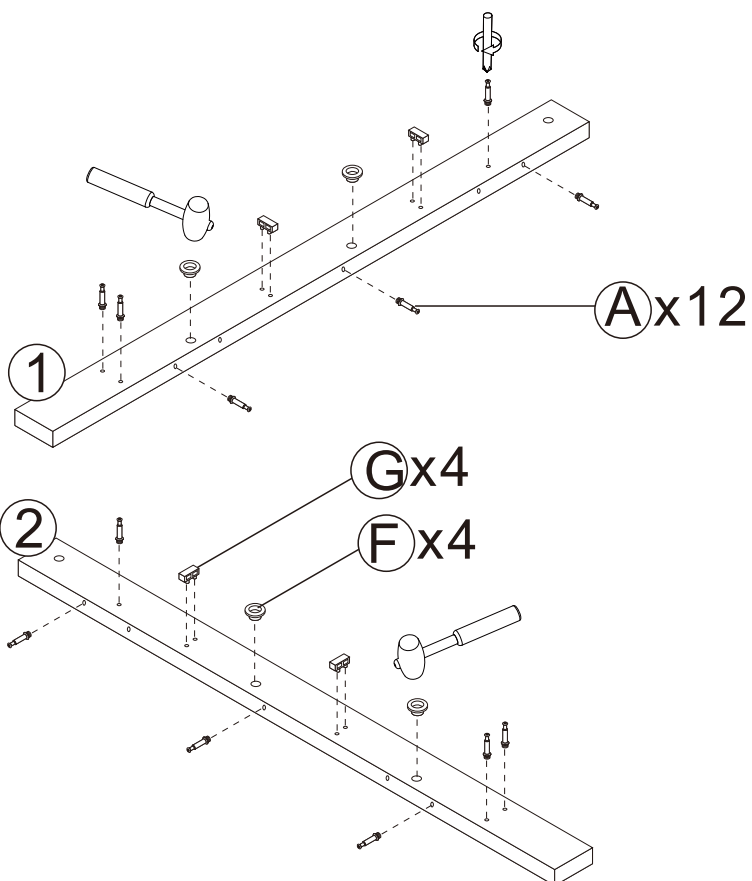
 Fx4

  Gx4

 Ax12

 3

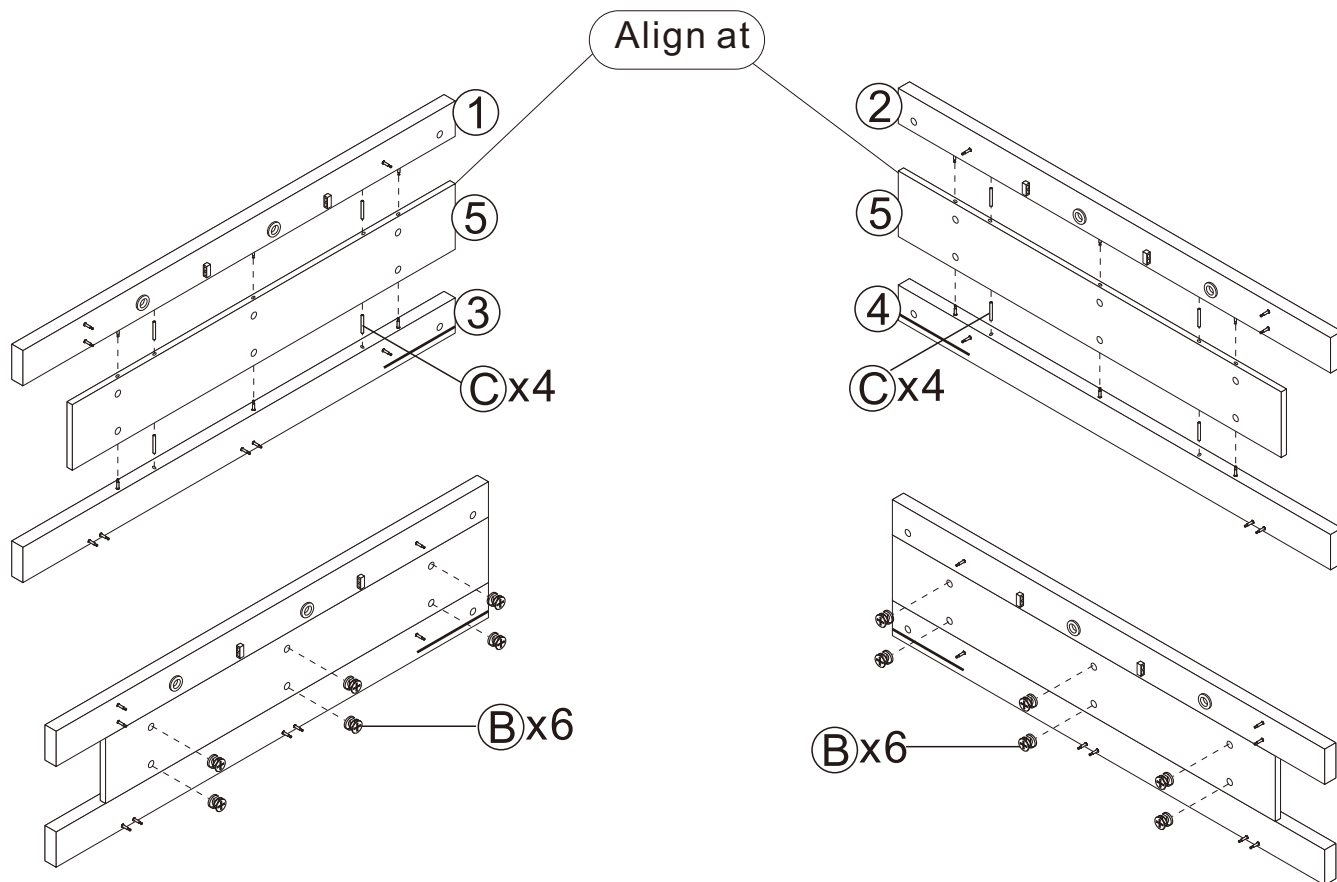


Cx 8



Bx12

 4

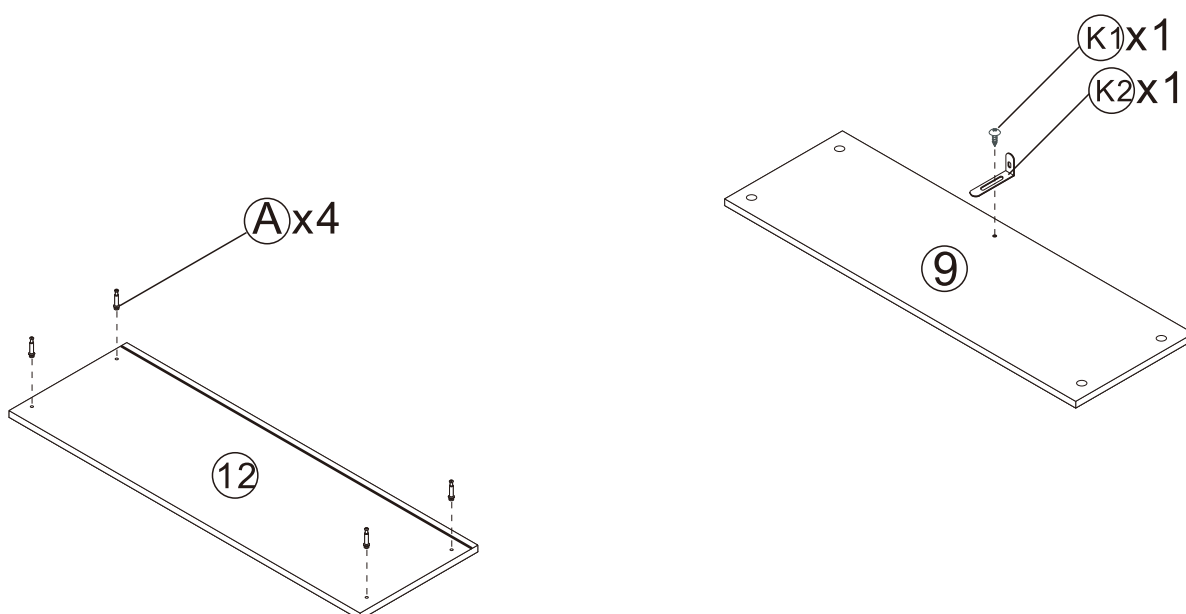


Kx1




Ax4

 5

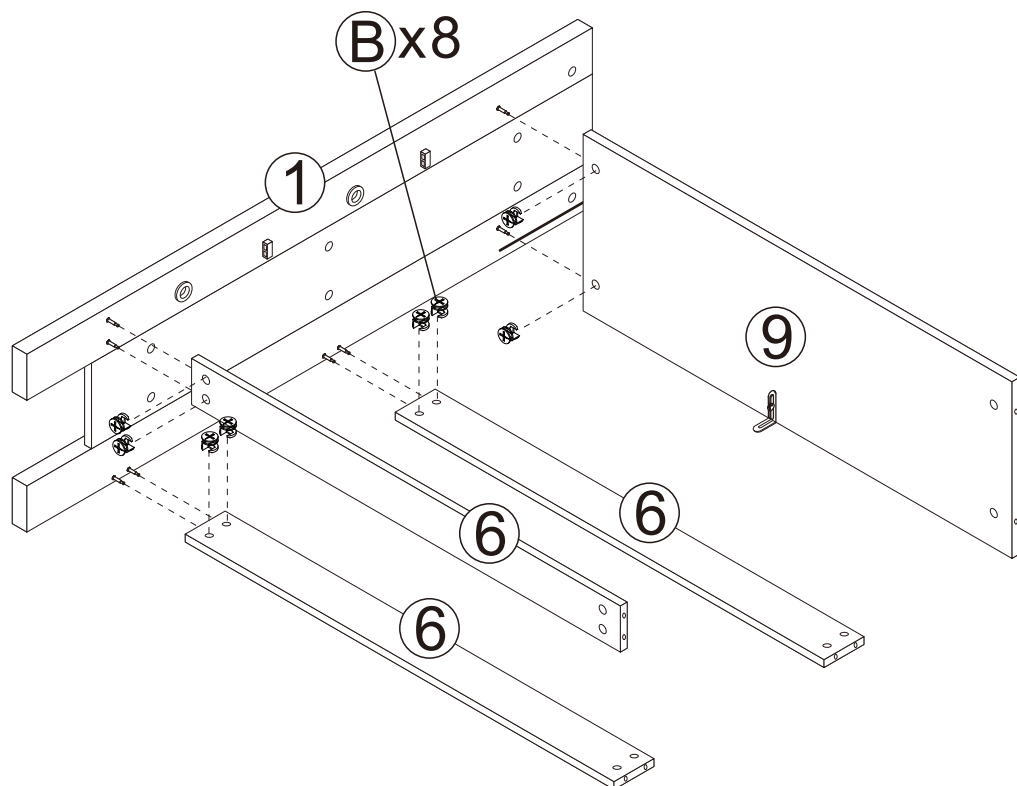


Bx8

 6

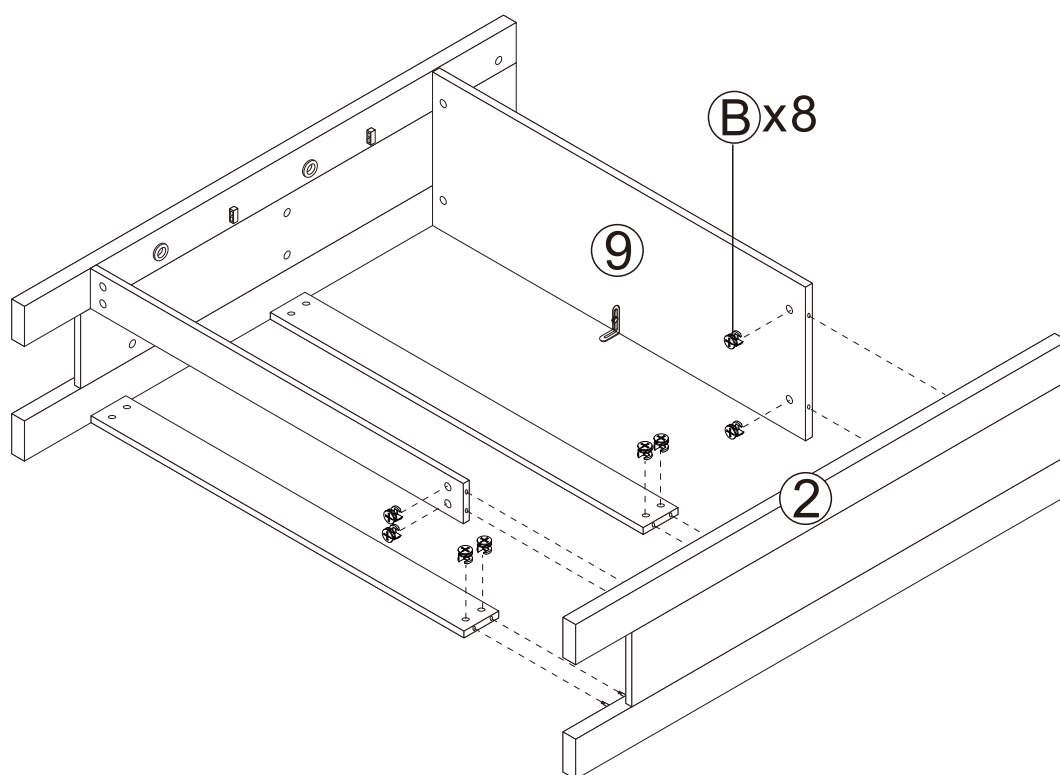


Bx8

 7

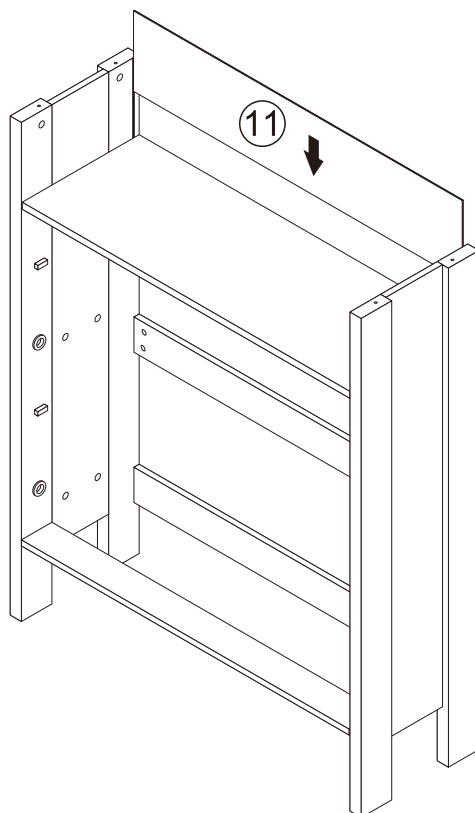





8

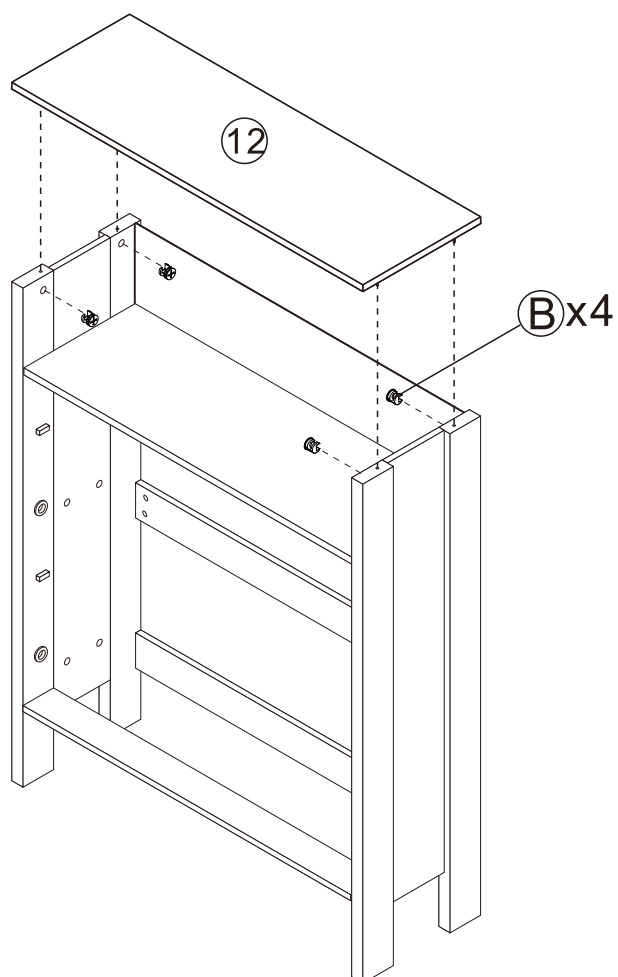 

Bx4

    
Anti-Tipping Installation Step:
Position the product, locate
the anti-tipping and wall holes.
Secure the K3 accessory with
a rubber mallet, then fasten the
product to the K3 hole with the K4 screw.

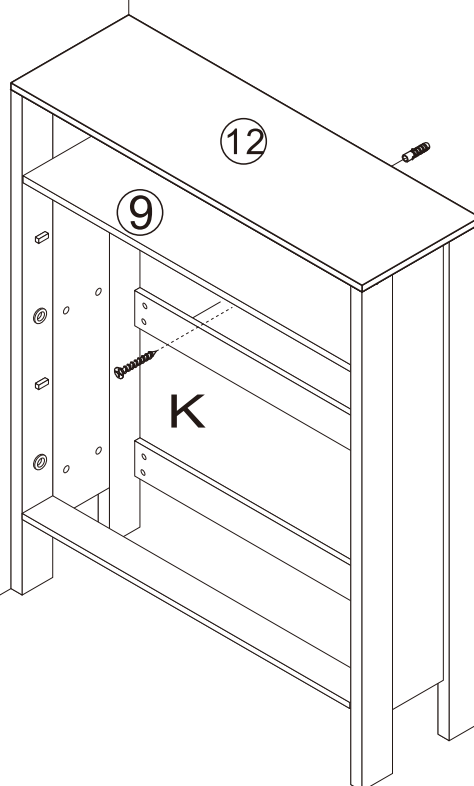

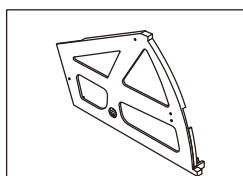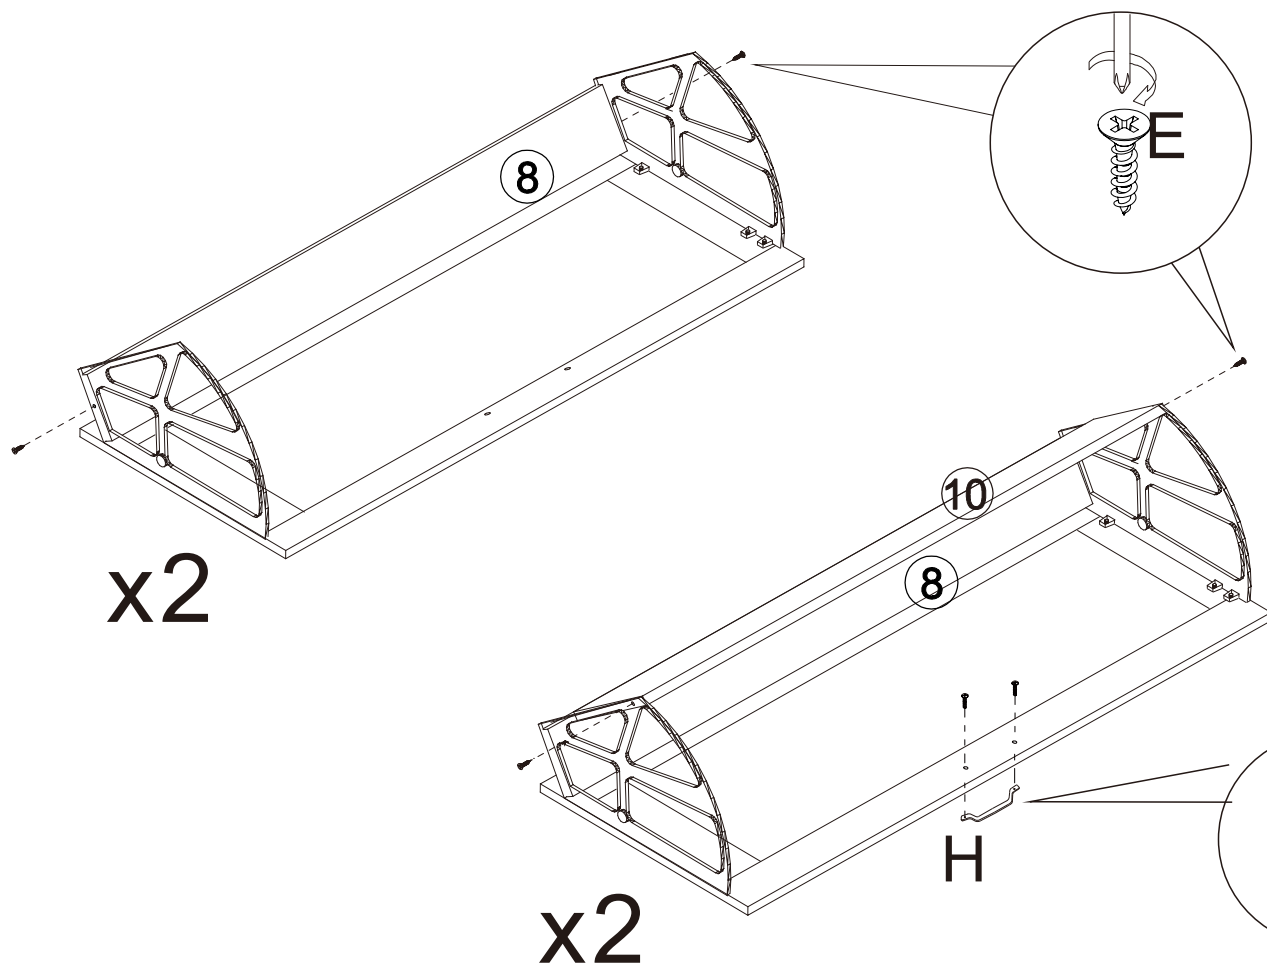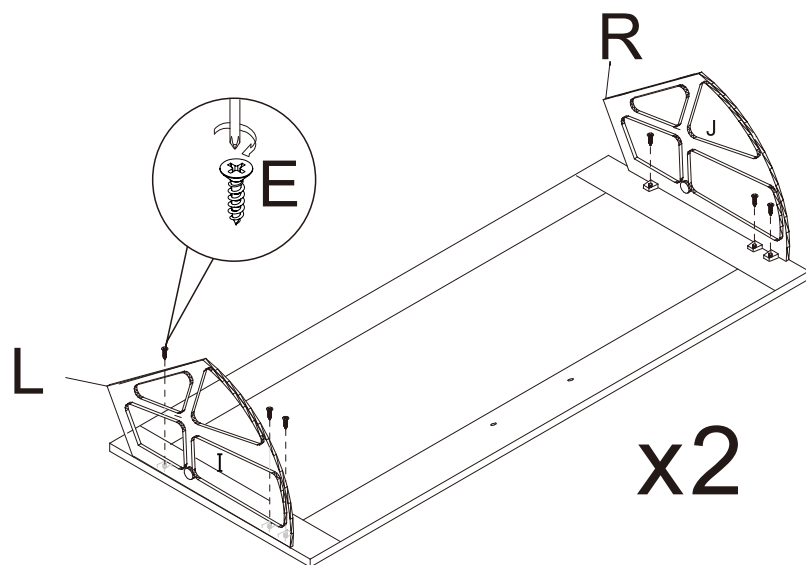


L

 x4

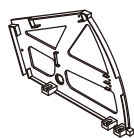

R

 x4



M3.5x14

E

x 20



H

 
x2



D

x4

12

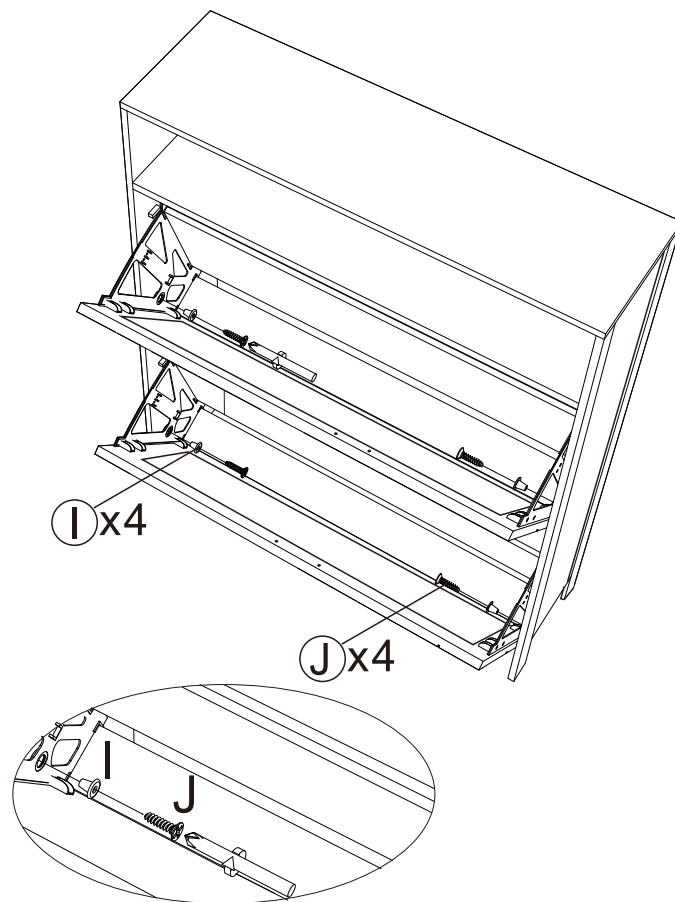

I x4

J x4

 


I x4



J x4

13

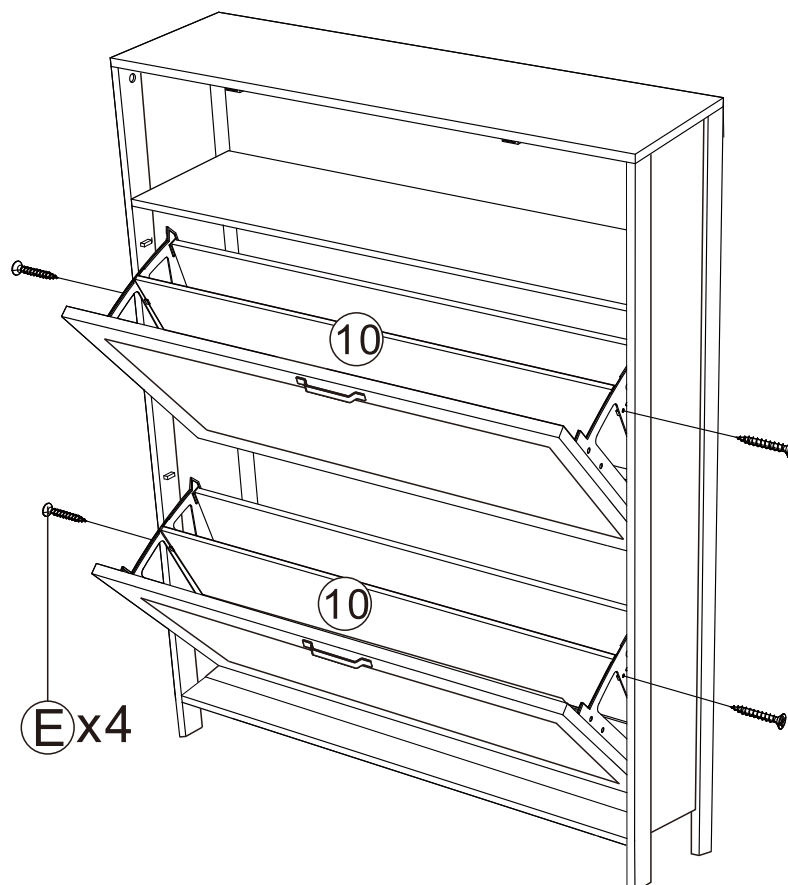

10

10

E x4



E x4

WARRANTY

WARRANTY CLAIMS

- There is a 30-day warranty for broken furniture or any other problems that do not work properly. The warranty will start from the date of purchase which must be verified by proof of purchase.
- Before making a claim, we may be able to answer your query, simply call us. Please leave your purchase order number, along with some details of the problem, if you want a replacement part. We will arrange within 48 hours. If there is out of stock, we will reply with a shipping date.
- The product must be used in accordance with the instructions provided. For health reasons.
- For other reasons, if the furniture needs to be returned, it must be cleaned and dried and operated within 30 days of receipt.

Type of Warranty Claim

- Failure to follow the furniture instructions will invalidate the warranty. Attention please.
- Does not include damage during installation, but includes damage during transportation.

Scope of responsibility

- Shall not bear any responsibility for misuse or user damage and / or loss of parts during the installation of furniture.
- After using, the damage and scratches of the furniture are not covered by the warranty.

The Warranty Relates to All Bought in The Us and Covers The Following Areas

- Sheet parts: 1 month from the date of purchase.
- Electrical parts: 1 month from the date of purchase.