






 
 
Elora Oval Dining Table

ELORA

 
 
 
 
 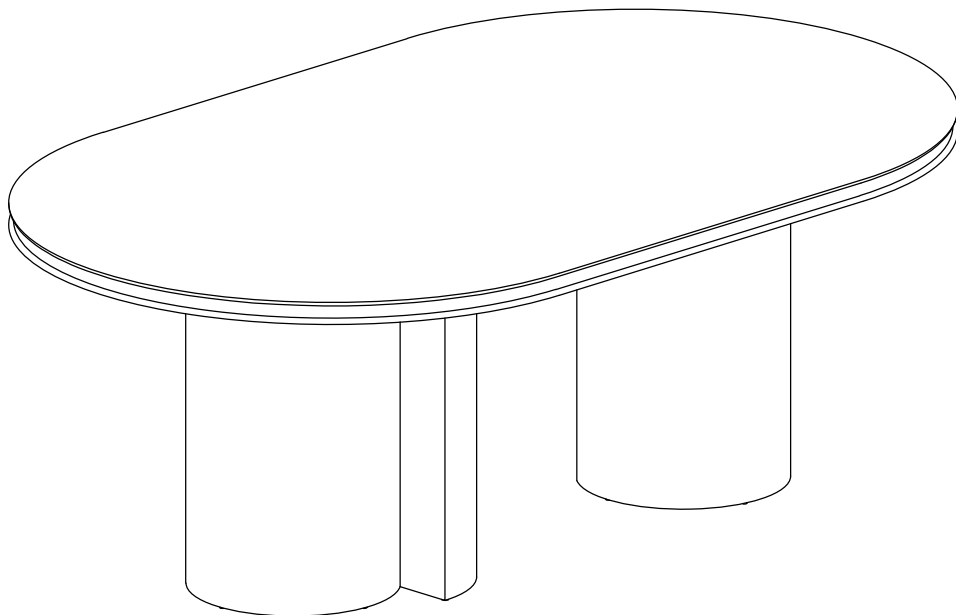


ASSEMBLY INSTRUCTIONS



PARTS LIST

LABEL	PICTURE	DESCRIPTION	QTY
A		Table top	1
B		Connecting Plate	1
C		Leg	1
D		Leg	1

HARDWARE

LABEL	PICTURE	DESCRIPTION	QTY
E		Allen Key Ø5	1
F		Allen Key Ø4	1
G		Screw M6*35	12
H		Screw M8*40	8
I		Spring Washer M8	8
J		Flat Washer Ø20-Ø8*2.0	8
K		Rubber Gasket Ø20-Ø8*1.0	8

BEFORE BEGINNING ASSEMBLY:



Read instructions cover to cover



Have two adults on hand for assembly




Do NOT assemble on flooring or carpet. Assemble on a clean non-marring surface (ex: packing foam)



Save all packaging until assembly is completed

ASSEMBLY STEPS


STEP 1

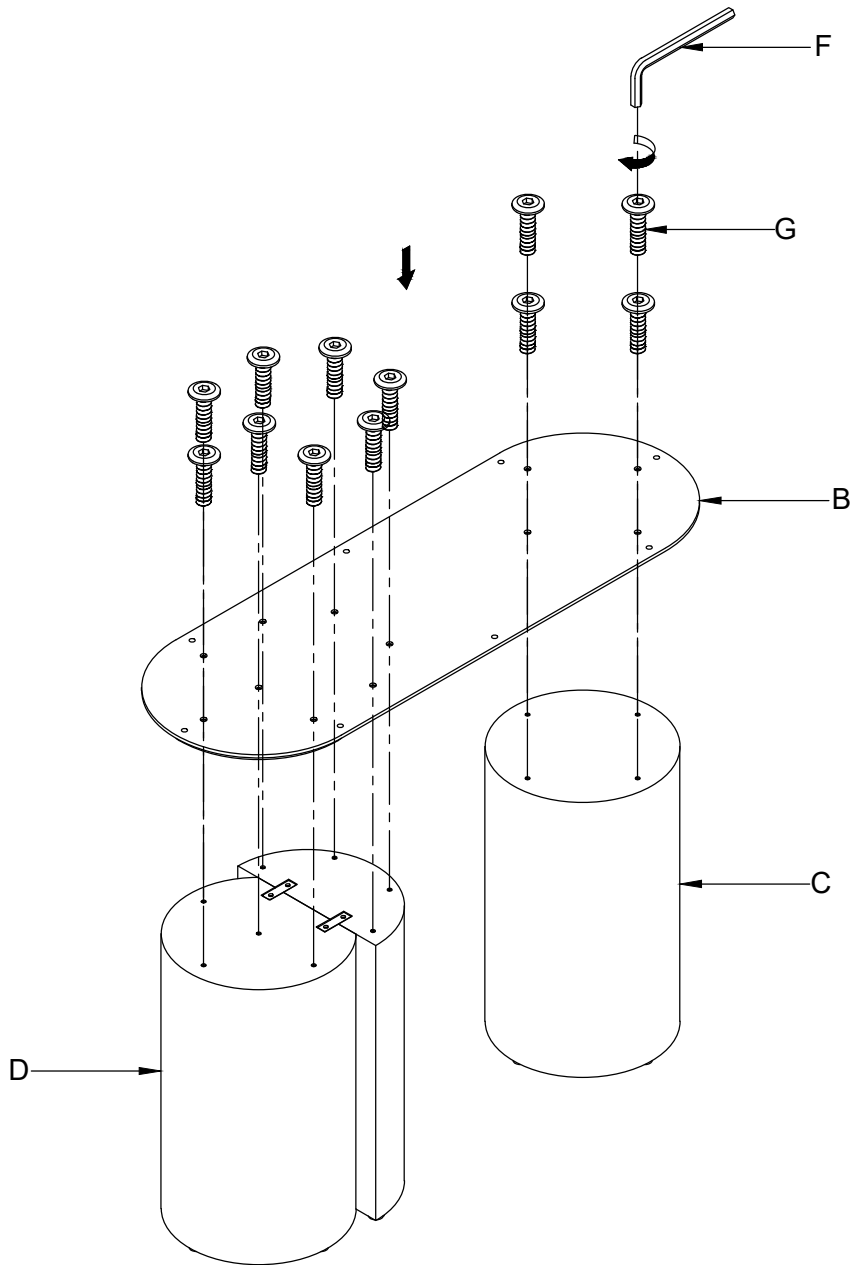

Attach Connecting Plate(B) to Leg(C) and Leg(D) with Screw(G) by Allen Key(F).

ASSEMBLY STEPS

STEP 2

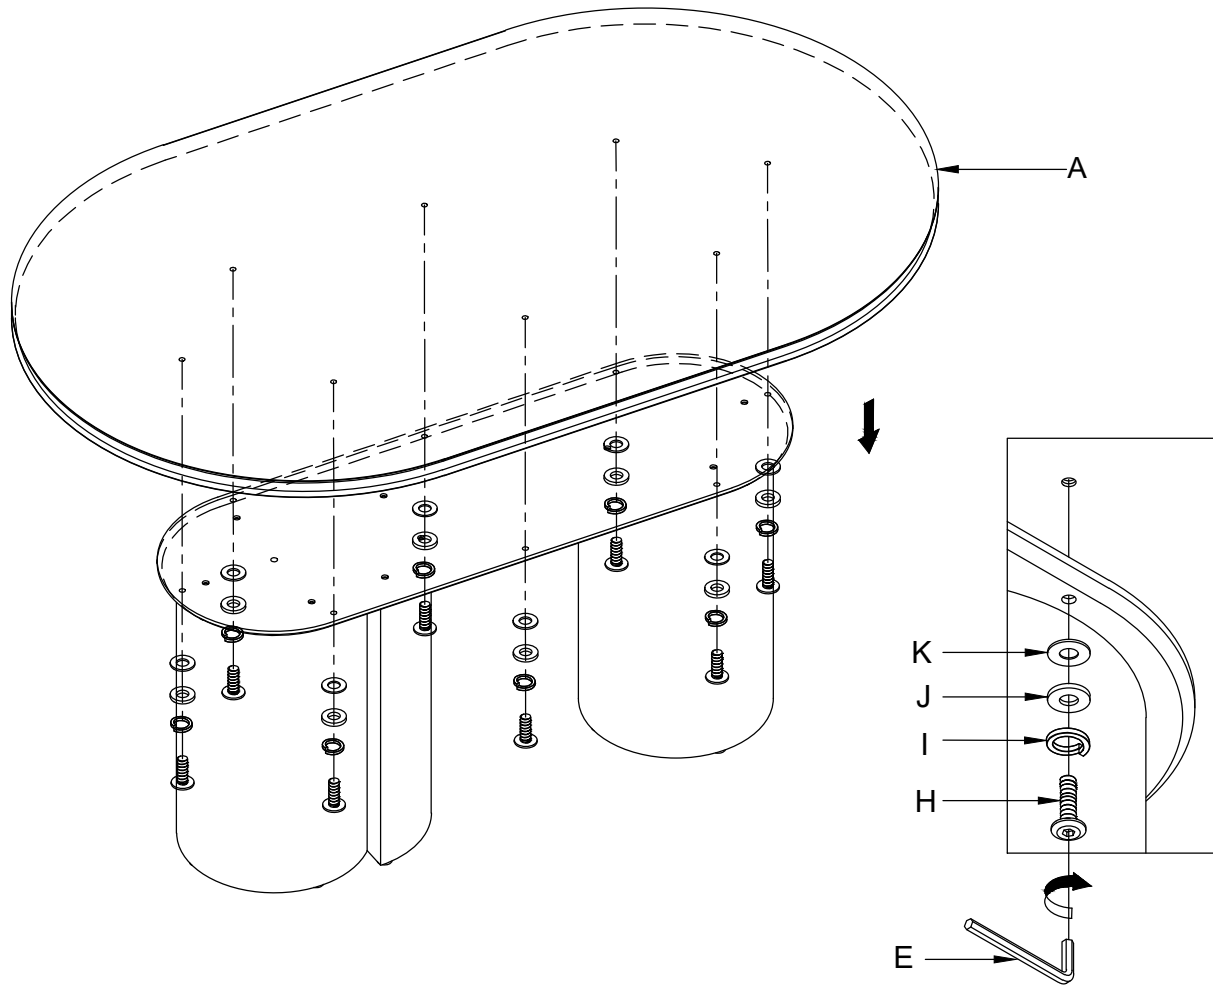

Attach Top(A) to the base with Screw(H), Spring Washer(I), Flat Washer(J) and Rubber Gasket(K) by Allen Key(E).

CARE & MAINTENANCE



Do not put hot items directly on furniture surface.



Do not clean furniture with harsh cleansers or polish.



Dust and wipe up spills using a clean, non-colored, lint-free cloth.



Stains may be removed with mild soap solution and damp cloth.



Do not place furniture under direct sunlight.



Do not place furniture near heating or cooling vents.



Do not write on furniture without a padded barrier to protect the surface.



Do not place furniture outside. For indoor use only.