


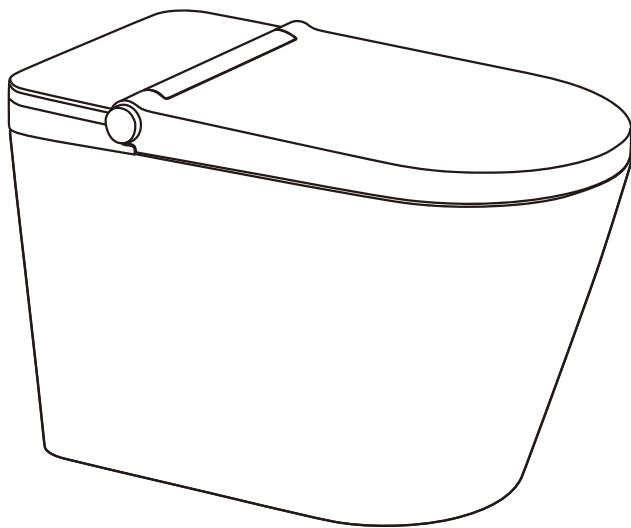

Smart Toilet

(SN-U5)

Sanoxis — Smart Hygiene, Pure Comfort.



Installation & Owner's Manual

Scan QR Code for Installation Video

- For easier and correct installation, we highly recommend watching the video before installation to avoid mistakes.

How to install



Whats app Sanoxis



- If the QR code cannot be scanned or the video is unavailable, please contact our customer service for assistance

TABLE OF CONTENTS

Safety instructions	01
Safety caution	01
Before first use	03
Pre-use checklist	03
Determination method for minimum water flow	04
Confirm dimensions of product with installation space	04
Instructions for remote control	05
Advanced remote control settings	06
Function instruction	08
Lid & seat operation modes	09
Side Knob introduction	09
Daily cleaning and maintenance	10
Troubleshooting	10
Product specifications	12
Bill of materials	13
Installation of smart toilet-	14
Water supply hose connection	17
Fragrance pad instructions	20
How to use - usage scenarios	21

Safety Instructions

Please read this manual carefully before installation and use.

WARNING: To Reduce the Risk of Electric Shock ⚠

1. Do not install or use this product where it may be exposed to direct water spray or standing water.
2. Do not drop the remote control into the water.
3. Do not spray water directly onto the toilet, power cord, or power plug.

WARNING: To Reduce the Risk of Burns, Electric Shock, Fire, or Injury ⚠

1. Children and individuals with reduced sensitivity to heat should be supervised when using this product. Set the seat temperature to a low setting or turn the seat-heating function off when necessary.
2. Use this product only for its intended purpose as described in this manual. Do not use attachments or accessories not recommended by the manufacturer.
3. Do not continue to use when the product is out of order, damaged or flooded. Please send the product to the designated repair center for repair.
4. Keep the power cord away from heated surfaces. Do not use the product if the power cord or plug is damaged.
5. Do not use this product while impaired by alcohol, medication, extreme fatigue, or any condition that may affect your judgment.
6. Do not insert foreign objects into any opening, hose, or water connection.
7. This product is intended for indoor use only.

Please be sure to observe the following

Do not allow urine, water, or cleaning liquid to enter the fragrance compartment or nozzle area.
Do not clean the seat or lid with dry paper towels, abrasive cloths, or harsh cleaning products. Do not spray or flush the product directly with water.
Unplug the unit during severe thunderstorms if it can be done safely.

Do not force the seat or lid open or closed.

- Forcing the seat or lid may cause damage or malfunction.



Protect the unit from freezing temperatures to prevent damage to internal components.



Do not place space heaters, open flames, or other heat sources near this product.

- Discoloration or malfunction
May cause discoloration or malfunction.



Safety Caution

Note: please cautiously read before using

Please read carefully before using. The cautions listed here are related to safety and please follow. ⚠

This is an electrical product. Install it in a bathroom location that is protected from direct water spray and excessive moisture. Use adequate bathroom ventilation to help reduce moisture buildup.

Electrical Requirements

Use a properly grounded 120V, 60Hz outlet protected by a GFCI (Ground-Fault Circuit Interrupter). Do not use an extension cord, power strip, or adapter unless specifically approved by the manufacturer.

⚠ This product must be connected to a properly grounded outlet. If you are unsure whether your outlet is properly grounded, contact a licensed electrician.

If you are unsure whether the outlet is properly grounded, contact a licensed electrician.

Safety Caution

Note: please cautiously read before using



Must obey

Burn Hazard

- Reduce or turn off the seat temperature if you will be seated for an extended period.
- For children, elderly users, people with disabilities, or users who may be sensitive to heat, set the seat temperature to Ambient or Low.

- Children, the elderly, the sick, the disabled, etc.
- People who are drowsy, under the influence of alcohol or medication, or extremely fatigued should use caution.

Use only a properly grounded 110–120V AC, 60Hz power supply, as specified on the product rating label.

- It may start a fire

Keep cigarettes and other fire kindling away from the product

- It may start a fire

Do not use loose and unstable power sockets

- It may cause fire or electric shock

Do not pour water or cleaning solution onto the unit, fragrance compartment, power cord, or power plug.

- May cause fire or electric shock.
- May cause product damage, leakage, or indoor water damage.

If the unit will not be used for an extended period, unplug it and shut off the water supply.

- For safety, unplug the unit.
- For re-use, please drain water for one minute before use.

Flush only human waste and toilet paper. Do not flush wipes, paper towels, feminine hygiene products, diapers, or other foreign objects.

- May cause clogging or sewage overflow.

Do not unplug the power plug with wet hands

- It may cause electric shock

Do not kink, bend, crush, or damage the water supply hose.

- It may cause a leak



Prohibit

Do not continue to use the product when it breaks down

When the following occurs, please unplug the power plug, close the water shutoff valve.

- Ceramic WC is leaking
- Cracks appear
- Abnormal sound and smell
- Fume-off
- Abnormal heating
- The toilet is clogged

- If continued under the condition of failure, it may cause fire, electric shock or problems

Do not disassemble, repair, or modify the product.

- It may cause a fire or electric shock

Do not install this product in an area exposed to direct water spray, standing water, or outdoor weather conditions.

- It may cause a fire or electric shock

Do not damage the power cord or toilet seat cable

- Don't pull
- Do not modify the cord.
- Don't heat
- Do not bend it forcibly.
- Do not place heavy objects on the power cord and toilet seat connection line.

- May cause fire, electric shock or short circuit. If the power cord is damaged, contact customer support or a qualified service technician.

Do not use an extension cord, power strip, or multi-outlet adapter.

- Do not connect wires or use extension cords, which may cause fire and electric shock.


Use clean household water only. Do not connect the product to non-potable, reclaimed, or contaminated water sources.

- May cause skin irritation and other problems

Before First Use


Note: To ensure proper operation, complete the following checks before using the toilet for the first time.

1. Plug the unit into a properly grounded 110–120V AC, 60Hz GFCI-protected outlet.
2. Confirm that the display panel powers on.
3. Confirm that the water shutoff valve is fully open.
4. Make sure the water supply hose is securely connected between the wall shutoff valve and the toilet inlet connection.

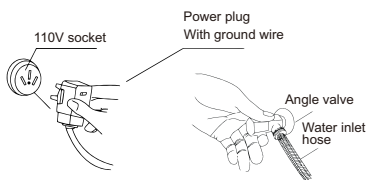

Pre-Use Checklist

1. Check the wash nozzle and water connections for leaks. Dry all parts of the water pipe and check with blotting paper.
2. Press the seat sensor area to confirm that the seat-occupancy sensor responds properly.
3. Test the wash, dryer, deodorizer, and automatic flush functions, if equipped.
4. Check that the soft-close lid and seat operate normally.

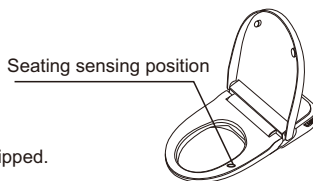

Check the functions of cleaning, drying and automatic deodorization, make sure the sensor is on. When testing the wash function, cover the nozzle area with your hand or a towel to prevent splashing.

Warning - Be sure to firmly connect ground wires

The power plug of this product is a three-phase plug (with ground wire).

There is a danger of electric shock when there is a fault or leakage of electricity.

If there is no ground plug in the socket, consult with the electrical installation company.


Do not use power supply other than AC 110V, please wiring according to relevant regulations.

Using the wrong power supply can easily cause fire

Confirmation of water pressure

The minimum dynamic operating water pressure is 25 Psi, and the maximum static water pressure is 80 Psi

Determination method for minimum water flow

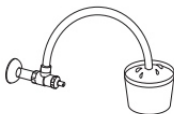


(Tools: stopwatch, measuring cup.)

Open the angle valve for water supply.
The measured water flow for 10 seconds should exceed 3L.

※If the above conditions cannot be met, the best flushing effect cannot be achieved and an additional booster pump is required to increase the pressure.

Confirm dimensions of product with installation space

Unit: inches

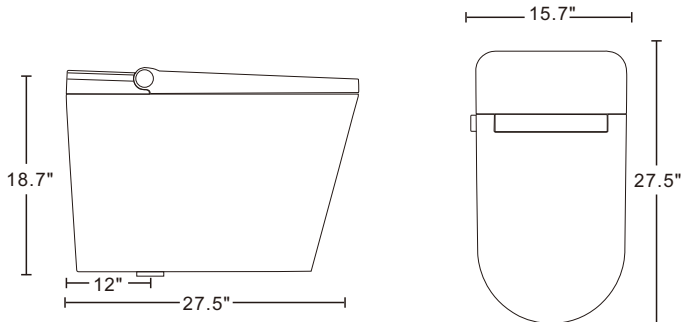

Rough-in: 12"

Automatic Lid Function

Press and hold the LID button for 5 seconds to turn automatic lid operation on or off.

Automatic Flush Function

Press and hold the FLUSH button for 5 seconds to turn automatic flushing on or off.

Flush When Lid Closes

Press the LID and FLUSH buttons at the same time to turn the lid-close flush function on or off.

Instructions for remote control

Note: Please read the following carefully before use

STOP



Press once to stop an active function. Press and hold for 3 seconds to turn the unit on or off.

SPRAY



Press while seated to start Rear Wash. The wash cycle will stop automatically after approximately 2 minutes.

BIDET



Press while seated to start Feminine Wash. The wash cycle will stop automatically after approximately 2 minutes.

DRYER



Press this button to start drying when you are seated. Warm air drying will stop automatically after 3 minutes.

PRESSURE



Use the + and – buttons to adjust wash water pressure. Choose from four pressure levels: Low, Medium, High, and Max.

NOZZLE



During Rear Wash or Feminine Wash, press the up or down button to adjust the nozzle position forward or backward.

FLUSH



Press this button and will start flushing.

LIGHT



The night light can be turned on or off in the power-on state.

CLEANING



Nozzle extended and water out for nozzle washing

WATER TEMP



Adjust the wash water temperature. Select Ambient, Low, Medium, or High. Approximate settings: Ambient, 93°F, 96°F, and 99°F.

SETA TEMP



Adjust the heated seat temperature. Select Ambient, Low, Medium, or High. Approximate settings: Ambient, 93°F, 96°F, and 99°F.

WIND TEMP



Adjust the warm air dryer temperature. Select Ambient, Low, Medium, or High. Approximate settings: Ambient, 93°F, 96°F, and 99°F.

Available only on models equipped with Pairing the Remote Control

COVER



Press once to open the lid. Press again to close the lid.


SEAT



Press once to raise the seat. Press again to lower the seat.

Pairing the Remote Control

Press and hold the control knob for approximately 3 seconds until you hear a beep. Then press any button on the remote control to complete pairing. Note: If the remote control does not respond during first use, it may need to be paired with the toilet.

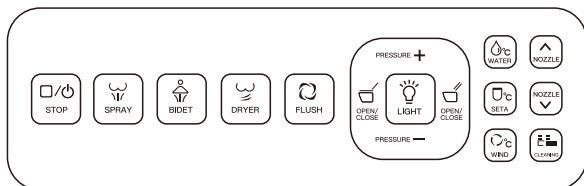

 → Auto Flush After Lid/Seat Closing

1. Press and hold 'Stop/Power' for 3 seconds to turn off the unit.
2. After power-off, press and hold 'Open Lid' for 5 seconds.
 - 2 beeps: Enable auto flush after lid/seat closing.
 - 1 beep: Disable auto flush after lid/seat closing.
3. Turn on the unit to save the setting.

 Auto Lid Opening

- Press and hold 'Open Lid' for 5 seconds to Enable/disable auto lid opening function:
- 2 beeps: Enable auto lid opening.
 - 1 beep: Disable auto lid opening.

 → → Flush Time Adjustment

 
1. Press and hold 'Stop/Power' for 3 seconds to turn off the unit.
 2. Within 3 seconds, press 'Full Flush' once to enter the Top Flush time adjustment.
 3. Press "↑" "↓" to adjust the flushing time. Each increment changes the flushing time by 0.5 seconds. The display shows a number from 5 to 12, with 5 indicating the shortest flushing time and 12 indicating the longest.
 4. After adjusting the Top Flush time, press 'Full Flush' to switch to Bottom Flush adjustment. Press 'Full Flush' again to switch to Refill adjustment.
 5. Turn on the unit to save the setting.
- Note: The first press of 'Full Flush' activates Top Flush, the second press activates Bottom Flush, and the third press activates Refill.

 → Auto Bowl Pre-Wetting

1. Press and hold 'Stop/Power' for 3 seconds to turn off the unit.
2. After power-off, press and hold Full Flush for 5 seconds.
 - 2 beeps: Enable auto bowl pre-wetting when seated.
 - 1 beep: Disable auto bowl pre-wetting.
3. Turn on the unit to save the setting.

 → → Sensor Range

1. Press and hold 'Stop/Power' for 3 seconds to turn off the unit.
2. Within 3 seconds, press 'Open Lid' to adjust.
3. Use "↑" "↓" to adjust the sensor range (Level 1-5). A higher setting provides a farther sensing range.
4. Turn on the unit to save the settings.



Lid and Seat Opening Angle Adjustment

1. Press and hold 'Stop/Power' for 3 seconds to turn off the unit.

2. Within 3 seconds, press " ^ " " v " Activate the setting mode (Level 1-14).

Note: The temperature indicator on the toilet displays the current angle level.

- Water Temp Indicator: Lid Angle (Adjust with " ^ ").

- Seat Temp Indicator: Seat Angle (Adjust with " v ").

3. Press 'Stop/Power' to turn on the unit and save the setting.



Off-seat Auto Flush

Note: Button functions may vary depending on the remote control model.

Press and hold Full Flush or Auto Flush (if applicable) for 5 seconds.

2 beeps: Enable auto flush after leaving.

1 beep: Disable auto flush after leaving.

Note: The toilet will automatically flush only if the user has been seated for more than 10 seconds.

Remote control pairing

Rotate the knob clockwise to "rear wash" for about 3 seconds till hearing a "beep" (display flashes at the same time). Then press any button on remote control to complete the pairing.

FUNCTION INSTRUCTION

Hygiene Features

Front Wash	Provides a gentle water spray for feminine cleansing. The wash cycle stops automatically after approximately 95 seconds.
Rear Wash	Provides a gentle water stream for rear cleansing. The wash cycle stops automatically after approximately 95 seconds.
Oscillating Wash	Moves the spray nozzle back and forth during washing to provide wider cleaning coverage. Available during both Front Wash and Rear Wash.
Nozzle Self-Cleaning	Automatically rinses the spray nozzle before and after each washing cycle. Manual nozzle self-cleaning runs for approximately 60 seconds.
UV Sterilization (if applicable)	Automatically activates when the lid is closed to help maintain toilet hygiene.
Fragrance Function (if applicable)	A fragrance pad releases a pleasant scent naturally to help keep the toilet area fresh.

Comfort Features

Drying	Provides warm air drying after washing with an automatic 2-minute drying cycle.
Water Temp Adjustment	Provides four water temperature settings: Ambient, 93°F, 99°F, and 104°F (Ambient, 34°C, 37°C, and 40°C).
Seat Temp Adjustment	Provides four heated seat temperature settings: Ambient, 93°F, 99°F, and 104°F (Ambient, 34°C, 37°C, and 40°C).
Dryer Temp Adjustment	Provides four dryer temperature settings: Ambient, 95°F, 113°F, and 131°F (Ambient, 35°C, 45°C, and 55°C).
Water Pressure Adjustment	Provides four levels of washing water pressure adjustment: gentle, medium, strong, extra strong.
Nozzle Position Adjustment	Allows the spray nozzle position to be adjusted through 4 levels for improved comfort.
Soft-Close Seat and Lid	The seat and lid close slowly and quietly to reduce noise and prevent sudden closing.

Smart Features

Automatic Flush	The lid automatically closes 8 seconds after the user leaves the seat, followed by automatic flushing.
Automatic Lid Opening/Closing	The lid opens and closes automatically when the user approaches or leaves.
Foot Sensor	Allows selected functions to be operated without hand contact for convenient and hygienic use.
Night Light	Provides a soft light to improve visibility in low-light conditions.
LED Display	Displays the operating status and selected settings for convenient operation.
Foam Shield (if applicable)	Creates a layer of foam on the water surface to help reduce splashing and minimize odors.

Safety & Technology Functions

Seat Sensor	The seat sensor detects when the user is seated and enables the wash and dryer functions only when the seat is occupied.
Instant Water Heating	Provides instant water heating to deliver continuous warm water during washing.
Leakage Protection	Equipped with Ground Fault Circuit Interrupter (GFCI) to help prevent electrical hazards caused by water leakage.

Energy & Power

Energy Saving Mode	Automatically enters Energy Saving Mode after 10 minutes of inactivity. The display and ambient light turn off to reduce power consumption. Press any button or use the toilet to wake the unit.
Power-Outage Flushing	A battery backup is provided for emergency flushing during power outages. Install AA batteries in the battery backup box before use. Batteries are not included. With water tank model: 10 × AA batteries. Tankless model: 4 × AA batteries.

LID & SEAT OPERATION MODES

Automatic Mode (Select Models Only)

The lid opens automatically when the sensor detects movement within the sensing range.
The lid and seat close automatically when no operation is detected for 90 seconds.
After the automatic lid opening function is activated, there is a 30-second delay before it can be activated again.

Automatic Mode notes:

- If the user moves slowly within the sensing area, the sensing distance may be reduced. If the lid does not respond, use the remote control or manually open/close the lid.
- The automatic lid opening/closing function works only when the "Lid Opening/Closing Setting" on the remote control is set to "ON".
- Movement around the toilet, such as opening/closing doors or moving curtains, may trigger the lid to open automatically.
- If false activation occurs repeatedly due to the bathroom environment, use the remote control to disable the automatic lid opening/closing function.
- When used by children, the sensor may not detect the user due to height limitations.
- Do not open or close the lid/seat manually with excessive force, as this may damage the automatic opening/closing mechanism and cause product malfunction.

Foot Sensor Mode

The foot sensor allows the lid, seat, and flushing functions to be operated without hand contact.
The following is the complete operation sequence of the foot sensor function:

- Open Lid:** Move your foot near the foot sensor to automatically open the lid.
Open Seat: Move your foot near the foot sensor to automatically open the seat.
Flush: Move your foot near the foot sensor to activate flushing.
Close Seat: Move your foot near the foot sensor to automatically close the seat.
Close Lid: Move your foot near the foot sensor to automatically close the lid.
- Note:** Please wait until the current operation is fully completed before activating another foot sensor function

Manual Opening/Closing (All Versions)

- The lid and seat can also be opened or closed manually.
- When manually opening or closing the lid/seat, always move it in the same direction as the mechanism movement.
 - Do not force the lid or seat in the opposite direction while the automatic opening/closing function is operating, as this may damage the automatic mechanism.
 - If the lid or seat encounters an obstacle during movement, it will stop automatically.

Side Knob introduction

Washing and drying can only be activated while seated.
The side knob is located on the user's right-hand side while seated.
"Clockwise" and "counter-clockwise" are defined from the viewpoint of a seated user looking at the knob from the right side.



Side Knob steps

1. Press the knob once to flush.(While not seated.)
2. Rotate the knob counter-clockwise once to start Front Wash.(While seated.)Rotate the knob again to start Oscillating Wash.
- 3.Rotate the knob clockwise once to start Rear Wash.(While seated.) Rotate the knob again to start Oscillating Wash. When Front Wash or Rear Wash is activated, the cleaning cycle will run for approximately 95 seconds and stop automatically.
- 4.Press the knob twice to start the drying function.(While seated.)The drying cycle will run for approximately 2 minutes and stop automatically, or press the knob once to stop drying.
- 5.Press the knob once to stop the active function: washing, drying, or self-cleaning. (While seated.)

Daily cleaning and maintenance

Note: During cleaning and maintenance, please be sure to unplug the power switch and power off

Smart toilet cleaning and maintenance methods

Wipe the exterior with a soft, damp cloth


- Remove stains promptly to help prevent buildup.

Wipe the exterior regularly with a soft, damp cloth.

Do not use abrasive cleaners, harsh chemicals, or dry paper towels.

- The seat may be removed for easier cleaning, if applicable to your model.

between the toilet seat and the ceramic body.

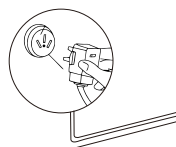


Unplug the power supply before maintenance

Nozzle Cleaning and Maintenance

If there is dirt in the nozzle. Use a soft toothbrush or soft cloth to gently clean the nozzle.

- Do not pull, twist, bend, or force the nozzle.

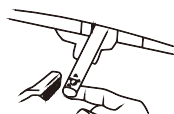


Clean the dust on the power plug regularly

When cleaning, remove the power plug and wipe with a dry cleaning cloth.

Must obey

- Poor insulation may cause a fire.

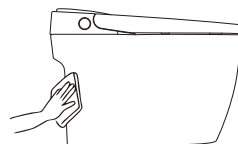

Troubleshooting

Before contacting Customer Support, check the following common issues.

Make sure:

The toilet is plugged into a working GFCI outlet.

The water shutoff valve is fully open.

The seat sensor area is clean and not blocked.

Turn off the water supply and unplug the toilet before checking any water connections.

Problem	What to Check	What to Do
1. Toilet Does Not Power On	Power outlet	Make sure the outlet has power. Test it with another device if possible.
	GFCI outlet	Press the RESET button on the GFCI outlet or leakage-protection plug.
	Still no power	Unplug the toilet for 1 minute, then plug it back in. If it still does not power on, contact Customer Support.

Problem	What to Check	What to Do
2. Bidet / Rear Wash Does Not Work	Seat sensor	Sit fully on the seat. The wash function works only when the seat sensor detects a seated user.
	Water supply	Make sure the water shutoff valve is fully open.
	Water hose	Check that the water supply hose is not kinked or bent.
	Inlet filter	Clean the inlet filter if it is clogged.
	Still no water	Contact Customer Support.
3. Weak or Incomplete Flush	Household water pressure	Make sure no shower, faucet, washing machine, or dishwasher is using water during flushing.
	Water flow	Water flow should exceed 1.3 gal (5 L) in 15 seconds. If lower, household water pressure may be insufficient.
	Shutoff valve	Make sure the water shutoff valve is fully open.
	Water hose	Straighten any kinks or bends.
	Flush remains weak	Contact Customer Support.
4. Water / Seat / Dryer Is Not Warm Enough	Temperature setting	Increase the Water, Seat, or Dryer temperature using the remote control.
	Power Saving Mode	Turn off Power Saving Mode if enabled.
	Still not warm	If it still does not feel warm, contact Customer Support.
5. Lid or Seat Does Not Open / Close Properly	Obstruction	Remove any objects around the lid or seat.
	Sensor area	Make sure the radar sensor area is clean and unobstructed.
	Temporary system issue	Unplug the toilet for 1 minute and reconnect the power.
	Still not working	Contact Customer Support.
6. Remote Control Does Not Respond	Battery	Replace the batteries.
	Power	Make sure the toilet is powered on.
	Pairing	Re-pair the remote following the instructions in this manual.
	Still not working	Contact Customer Support.
7. Seat or Lid Closes Too Quickly	Still not working	Contact Customer Support.
8. Continuous Nozzle Dripping	Small amount of dripping	A few drops after washing are normal because the nozzle performs a self-cleaning cycle.
	Continuous leaking	Contact Customer Support.
9. Weak Flush Due to Low Water Pressure	Household water pressure	Avoid using showers, faucets, washing machines, or other high water-demand appliances while flushing.
	Water flow	Check that the water supply can deliver at least 1.3 gal (5 L) in 15 seconds. Lower flow may result in reduced flushing performance.
	Shutoff valve	Make sure the water shutoff (angle) valve is fully open.
	Water hose	Check that the water supply hose is not bent, kinked, or restricted.
	Inlet filter	Clean the inlet filter if it is clogged with debris or sediment.
	Flush performance remains weak	Contact Customer Support for further assistance.


Problem	What to Check	What to Do
10. Flush Valve Failure	Water supply	Make sure the water shutoff valve is fully open and the water supply is normal.
	Power supply	Confirm the toilet is powered on and the outlet is functioning properly.
	Restart the toilet	Unplug the toilet for 1 minute, then reconnect the power and test the flush again.
	Flush still does not operate	The flush valve may require inspection or replacement. Please contact Customer Support for assistance.
Need more help? Contact US !	E-mail: bathroomdavid@163.com	Scan QR: 

Product Specifications

Rated voltage/power		Rated Voltage/Frequency: 110–120V AC, 60Hz Rated Power: 1100W.	
Cleaning	Water outlet	Rear Wash	Approx. 650 mL/min (22 fl oz/min)
		Feminine Wash	Approx. 650 mL/min (22 fl oz/min)
	Outlet water temperature		Temperature Settings: Ambient, 93°F, 96°F, and 99°F
	Water heating		Instant water heater
	Heater power		Water Heating Performance: With a 59°F inlet water temperature, the unit can provide water up to approximately 99°F at a flow rate of approximately 650 mL/min.
Seat heating	Seat temperature		Temperature Settings: Ambient, 93°F, 96°F, and 99°F.
	Heater power		40W
Warm drying	Dryer temperature		Temperature Settings: Ambient, 93°F, 96°F, and 99°F.
Spray position			Adjustable Forward and Backward
Water temperature			41–99°F
Required Water Supply Pressure (Tank Model)			The lowest pressure : 0.06 MPa the highest pressure : 0.75 MPa (static)
Required Water Supply Pressure (Tankless Model)			Keep only: Required Water Flow: At least 1.3 gal (5 L) in 15 seconds.

BILL OF MATERIALS

Confirm that all items listed below are included in the package.

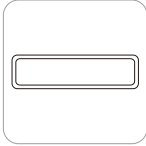

Remote Control




Wax Ring




Flange / Gasket




Angle Valve &
3/8 in. Adapter

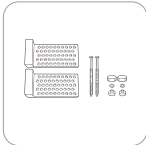


Floor Fixing Kit

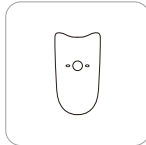


Footprint Template

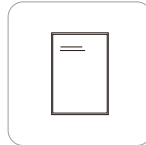

User Manual

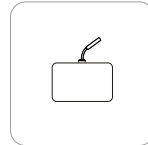

Battery Box

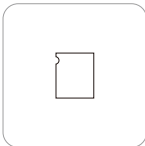

Fragrance Pad

Accessories may vary depending on the model and configuration purchased.
Please verify the contents against the selected model and features.

REQUIRED TOOLS

Please have these tools prepared prior to installation



Drill



Silicone Gun




PTFE Tape



Knife



Wrench

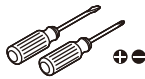

Screwdriver



Measuring Tape



Marking Pen

INSTALLATION OF SMART TOILET

Note: Please read the following instructions carefully before installation.

Installation diagram for water inlet and drain positions


NOTE: Dimensions are for reference only.

(Manual measurements; actual tolerances may vary by $\pm 3/8"$ to $\pm 3/4"$ [1 -2 cm].)




Requires a waterproof, splash-resistant 15A outlet.
Product comes equipped with a built-in GFCI safety plug

Units: cm / in.

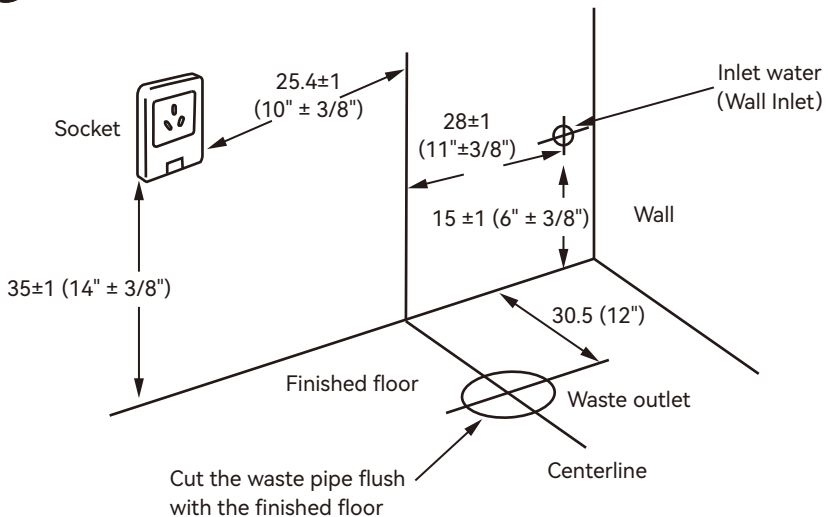


1. Unpack the toilet unit

Begin by removing all accessories from the packaging. Carefully lift the toilet unit out of the box, keeping it upright as shown in the diagram below.

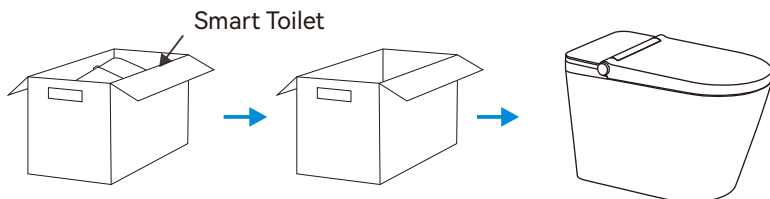


2. Mark the drain hole

Place the cardboard template on the floor, aligning it with the drain centerline. Trace the contour of the drain hole as illustrated.

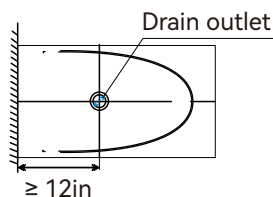


3. Install the closet flange

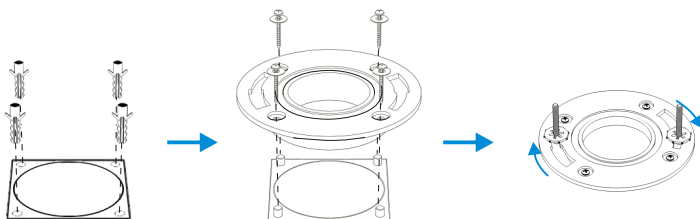


- Place the closet flange over the drain opening and mark the screw hole locations
- Remove the flange. Drill four holes at the marked locations, then insert the screws and reattach the closet flange.
- Slide the closet bolts into the side slots of the flange and rotate them as shown.


4. Install the toilet, water supply hose, and angle stop valve

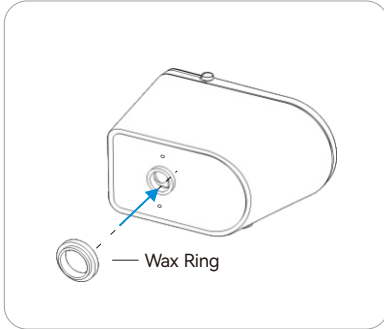


1. Place the wax ring around the toilet horn.

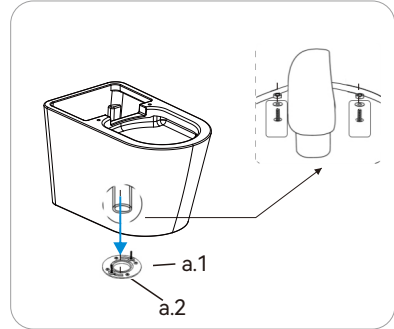

2. Lift up the smart seat assembly
a.1. Install the gasket to the floor with bolts.
a.2. Install mounting bolts onto the gasket.
b. Place the smart seat assembly onto the toilet bowl.

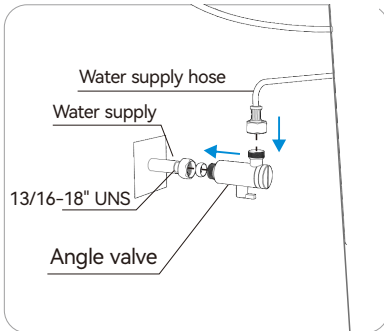

3.1 Connect the water supply hose to the provided angle valve and tighten securely. If the connection size is incompatible, use the included or contact customer service.

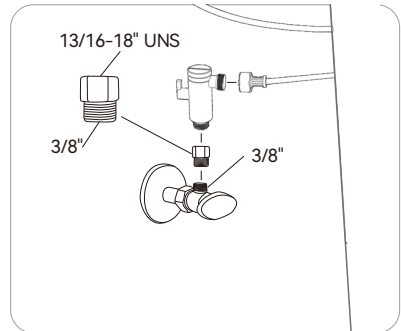


3.2 If Step 4.1 cannot be directly connected, use the included 3/8" adapter to connect the existing angle stop valve to the inlet valve..


WATER SUPPLY HOSE CONNECTION

Note: Select the appropriate water connection method based on the included accessories.

1. Without adapter: Fits 1/2-inch household water pipes

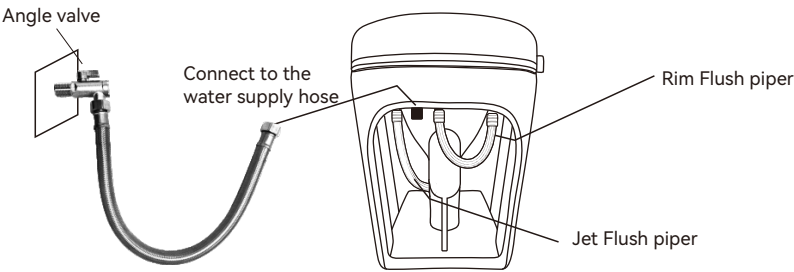


2. With adapter: Fits 3/8-inch household water pipes

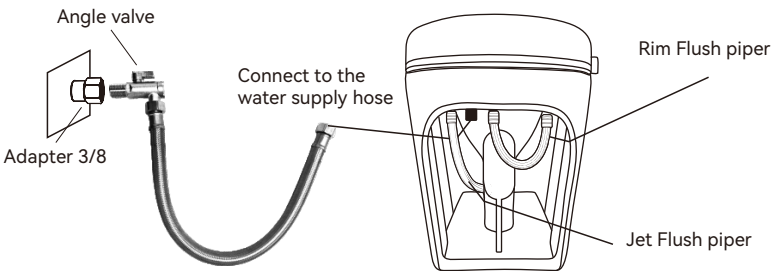



1. Verify the Installation Area, Confirm that the toilet rough-in distance is 12 in. (305 mm) from the finished wall to the center of the drain opening, unless otherwise specified for your model.

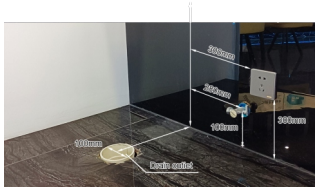

Required Water Flow: At least 1.3 gal (5 L) in 15 seconds.




2. Place the supplied floor flange over the drain opening.



3. Take off the flange ring and drill four holes for screws



4. Install the mounting screws into the predrilled holes.

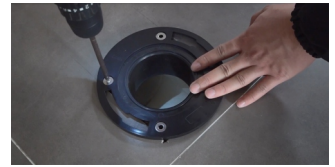

5. Put the flange ring into the drain outlet and install it



6. Install the two closet bolts in the flange slots, as shown below.



7. Unscrew the screws on the toilet seat



8. Do not disconnect internal wiring or water lines unless instructed by a qualified service technician.




9. Turn the toilet bowl over and install the flange ring as shown below



10. Apply a continuous bead of clear, mildew-resistant 100% silicone sealant around the base of the toilet after confirming proper alignment and leak-free operation. (Silicone sealant is not included and must be purchased separately.)



11. Move the toilet to the location where it will be installed

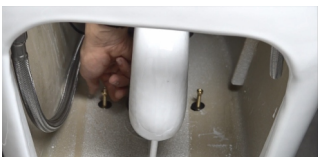

12. Make sure two holes in the bottom of the toilet align with the two long screws in the flange ring, then install it




13. Reconnect the water tube and electrical connector exactly as shown. Make sure each connection is secure before reinstalling the seat assembly.



14. Install the screws on the toilet seat and install the fixing caps.




15. Apply a continuous bead of clear, mildew-resistant 100% silicone sealant around the base of the toilet after confirming proper alignment and leak-free operation. (Silicone sealant is not included and must be purchased separately.)

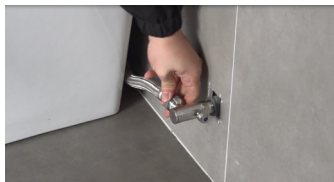


16. Connect the water supply hose to the water shutoff valve.

Attention: These installation instructions apply only to the model identified in this manual. If your product or included hardware differs from the illustrations, stop installation and contact Customer Support before proceeding.


Fragrance Pad Instructions

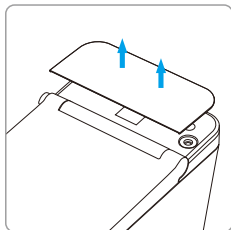

Step 1:
Lift up the magnetic rear cover.
Tear off the packaging bag and
take out the fragrance pad.

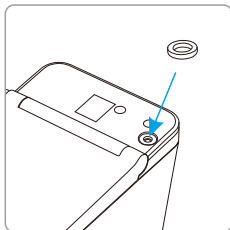

Step 2:
Insert the fragrance pad into
the aroma slot.

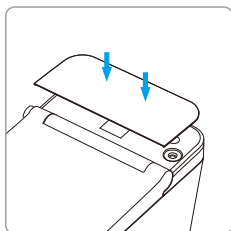

Step 3:
Put the cover back, ensure it is
securely fitted before use.



Note: If there is no fragrance, add 2–3
drops of your favorite essential oil or
fragrance to the fragrance pad.
Do not drop essential oil directly into
the toilet to avoid damage.

How to Use - Usage Scenarios

Standing Use for Men

Approach the toilet from the front.
When Auto Lid is enabled,
the sensor will open the lid automatically
as you enter the sensing range.



If the seat is still down, move your
foot near the foot sensor once
to raise the seat.



Use the toilet while standing.
Do not lean on the lid or force
the seat assembly.



After use, move your foot near
the foot sensor again to lower
the seat and trigger one automatic flush.
After the cycle is complete,
the lid will close automatically after
about 120 seconds.



How to Use - Usage Scenarios

Seated Use for Women

Approach the toilet. When Auto Lid is enabled, the sensor will open the lid automatically as you enter the sensing range.



Sit fully on the seat. When cleansing is needed, press Front Wash or Rear Wash. Adjust the nozzle position, water pressure, and water temperature as desired. Press the wash button again to switch between fixed wash and oscillating wash.



After washing, press Drying if desired. The drying cycle will run automatically, or you can press Stop at any time.



After use, stand up and leave the toilet. The toilet will flush once automatically, and the lid will close automatically about 120 seconds after you leave.



If an automatic function does not activate, use the remote control or side knob to complete the current operation first, then review the sensor or function settings in the FAQ.

LIMITED WARRANTY COVERAGE

1-YEAR LIMITED WARRANTY

Sanoxis products are made with quality materials and crafted to provide reliable, long-lasting performance. If a product is found to have a defect in materials or workmanship under normal residential use within one (1) years from the date of delivery, Sanoxis will, at its discretion, repair or replace the defective product or part at no charge.

This limited warranty applies only to the original purchaser and is non-transferable. Proof of purchase is required for all warranty claims. Scratches, cosmetic imperfections, and normal wear and tear are not covered under this warranty.

Sanoxis warrants that this product will be free from manufacturing defects during the warranty period stated above. Please retain a copy of your original invoice or order confirmation as proof of purchase.

At its sole discretion, Sanoxis may:

- 1. Repair the defective product or part;
- 2. Replace the defective product or part with the same or a comparable item; or
- 3. Issue a refund or store credit for the original purchase price of the defective product.

For refund requests, a valid request must be submitted within 30 days of the delivery date. Store credit may be applied toward the purchase of another Sanoxis product. Any applicable shipping or delivery charges may apply.

Sanoxis recommends that installation be performed by a licensed and qualified professional. Sanoxis is not responsible for any damage, product failure, removal costs, reinstallation costs, or other expenses resulting from improper installation, misuse, or installation performed by an unqualified person.

This limited warranty does not apply to products that have been damaged due to accident, negligence, misuse, abuse, improper installation, improper maintenance, use of abrasive cleaners, alcohol-based cleaners, organic solvents, or other corrosive cleaning agents. Damage caused by any contractor, service company, installer, or other third party is also excluded from warranty coverage.

Sanoxis's responsibility under this limited warranty is limited solely to the repair or replacement of defective parts or products, as determined by Sanoxis. Sanoxis shall not be liable for labor costs, installation costs, repair costs, replacement costs, removal costs, incidental damages, consequential damages, loss of use, personal injury, property damage, or any other losses arising from the use, installation, repair, or replacement of the product, except where prohibited by applicable law.

This limited warranty replaces all other warranties, whether express or implied, including but not limited to implied warranties of merchantability and fitness for a particular purpose, to the extent permitted by law.

RESPONSIBILITIES
OF OTHERS

Inspection of the product before installation is the responsibility of the installer, contractor, or other party acting on behalf of the purchaser.

The installer or building contractor is responsible for ensuring that the product is free from visible damage or defects before installation. Notices regarding this responsibility may be included on or inside the product packaging and shipping carton.

If a defect, damage, or other issue is discovered before installation, the product must not be installed.

Sanoxis is not responsible for failures, defects, or damage that could have been identified, repaired, or avoided through proper inspection and testing before installation.

Damage occurring during transit is the responsibility of the carrier. The purchaser or installer must open the carton and inspect the product for visible damage upon delivery. Any shipping damage must be reported immediately to both the seller and the carrier in writing, and an inspection should be requested when applicable.

Failure to report shipping damage promptly may affect the ability to file a freight claim. All freight claims should be submitted as soon as possible after the damage is discovered.

LIMITATIONS AND EXCLUSIONS	<p>This warranty does not cover damage or product failure resulting from:</p> <ol style="list-style-type: none"> 1, Negligence, misuse, abuse, or carelessness 2, Improper installation or maintenance 3, Accident or impact damage 4, Hard water deposits, mineral buildup, or exposure to corrosive materials 5, Alteration, modification, or unauthorized repair of the product 6, Failure to follow the installation instructions, user manual, or maintenance guidelines 7, Installation or repair performed by an unauthorized person 8, Plumbing components, accessories, or parts not supplied by Sanoxis 9, Normal wear and tear, cosmetic damage, scratches, or surface discoloration <p>This warranty becomes void if the Sanoxis product has been altered, modified, repaired, or serviced by anyone other than an authorized Sanoxis representative or service provider.</p> <p>Sanoxis shall not be liable for loss of use, inconvenience, incidental damages, consequential damages, or any other indirect losses. Some states do not allow the exclusion or limitation of incidental or consequential damages, so these limitations may not apply to every purchaser.</p>
DISCLAIMER	<p>Except as expressly stated in this limited warranty, Sanoxis makes no other warranties, whether express, implied, oral, or statutory.</p> <p>No dealer, distributor, retailer, installer, contractor, or other person is authorized to make any warranty, representation, promise, or statement on behalf of Sanoxis regarding Sanoxis products. Sanoxis shall not be responsible for any unauthorized warranties, representations, or commitments made by third parties.</p>
WARRANTY SERVICE	<p>To request warranty service, please have the following information available:</p> <ul style="list-style-type: none"> * Copy of the original invoice or proof of purchase * Date of installation * Description of the issue or defect * Clear photos and/or videos showing the issue * Product model number or product description * Shipping address and contact information, if replacement parts are required <p>To obtain warranty service or replacement parts, please contact Sanoxis Customer Service. After reviewing the information provided, Sanoxis will determine whether the product or part should be repaired, replaced, refunded, or credited.</p>



Smart Hygiene, Pure Comfort.

How to install



Whats app



NOTE: Product images may differ slightly from the actual product in appearance or color due to ongoing product improvements. Please refer to the actual product.