

封面300G铜版纸

此页不印刷

成品尺寸：140*140mm/四色印/175g铜版纸 骑马钉

技术要求：印刷清晰，不得错印，露底不得有污迹

HIGH SPEED BLENDER

USER MANUAL



Model:HS-206D

- ◆ Thank You for Choosing Our Product!
- ◆ We sincerely appreciate your trust and support.
- ◆ Please read this manual carefully before use to ensure proper operation. Retain it for future reference.

Table of Contents

Product Introduction	1
Product Information	2
Safety Instructions	3-4
Overheat Protection	5
Operating Instructions	6
Usage Notes	7-8
Cleaning and Maintenance	9
Troubleshooting	10

Classic & Simple Operation

User-friendly design

- **SPEED LEVEL**

Min-Max

- **PULSE**

Pulse Mode

- **POWER**

Off/On

- **Time Setting**

1-5 Min




*When not using the Timer, please turn the timer knob to 'START' for normal operation. (The blender will not work if the timer is set to '0')

Product Introduction

Thank You for Choosing Our High-Speed Blender!

We are committed to providing you with excellent service and support.

To ensure proper and effective use of this machine, please take a moment to read this manual carefully before use.

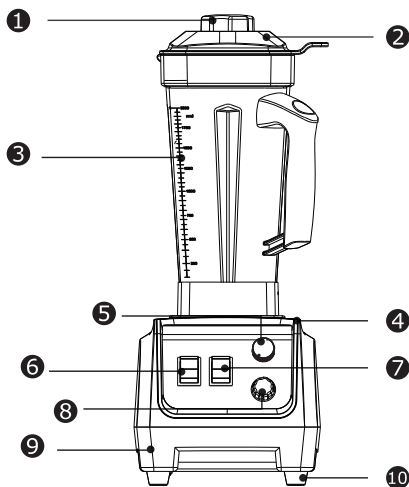

① Steam cap

④ Cup mat

⑦ Pulse switch

⑩ Rubber feet

② Cup cap

⑤ Speed control knob

⑧ Timer(optional)

③ Mixing cup

⑥ Start switch

⑨ Base bottom

Product Information

Parameter	Details
Rated Voltage	110V-120V
Power	1400W (1800W Peak)
Rated Capacity	70 oz
Weight	9 lbs
Speed	Up to 28,000 RPM
Material	BPA-Free and Dishwasher Safe

Safety Instructions

◆ **Unplug During Long Inactivity**

Always unplug the device when not in use for extended periods or when leaving the premises. Standby power may cause insulation issues or electrical leakage, leading to fire hazards.

◆ **Avoid Spraying Volatile Substances**

Do not spray oils, paints, or insecticides on the product, as they can cause electric shocks or fire hazards.

◆ **Proper Unplugging**

Always unplug by holding the plug, not the cord, to prevent damage. Ensure the plug fits tightly into the socket without looseness.

◆ **Protect the Power Cord**

Do not step on, twist, or damage the power cord. Replace damaged cords immediately through the manufacturer or a qualified technician to avoid risks.

◆ **Turn Off and Unplug When Unattended**

Switch off the power and unplug the device before sleeping or leaving home to prevent fire hazards and save energy.

Safety Instructions

◆ **Keep Away from Combustibles**

Do not place the device near flammable materials or areas with floating mechanical oils to avoid cracks, odors, or fire hazards.

◆ **Avoid Wet Environments**

Do not use the device in bathrooms or other wet areas to prevent electrical leakage and malfunctions.

◆ **Inspect Power Cords and Plugs**

Avoid using damaged cords or plugs as they can lead to electric shocks, short circuits, or fires.

◆ **Avoid Overloading Outlets**

Do not use multiple-socket adapters or extension cords, which may overheat and cause fire hazards.

◆ **Dry Hands Before Unplugging**

Never unplug the device with wet hands to avoid electric shocks.

Overheat Protection

Your blender motor is equipped with an overheat protection system. If the motor shuts off unexpectedly, follow these steps to resolve the issue:



1.Reduce the Ingredient Quantity

- ◆ Ensure the container is not overloaded with ingredients.

2.Reset the Motor

- ◆ Press the overheat protection reset button located under the motor base.
- ◆ Turn off the blender and let it cool for up to 20 minutes.
- ◆ Note: Reset time may be longer in high room temperatures.

3.Speed Up the Cooling Process

- ◆ Unplug the machine, remove the jug, and use a fan or a hair dryer on a cool setting to blow air into the bottom center section.

! Tips to Prevent Overheating

- ◆ Blending at higher speeds to prevent overheating.
- ◆ Blending at low or medium speeds for extended periods can cause the motor to overheat.

Operating Instructions

◆ Start Switch

Preset to "OFF" before delivery.

Turn to "ON" to start operation.

Turn back to "OFF" to stop the blender.

◆ Pulse Switch

Preset to "OFF" before delivery.

Turn to "ON" for full-speed operation. Release the switch to stop operation.

◆ Low/High Speed Switch

Preset to "Low Speed" before delivery.

Select "Low Speed" for gentle blending or "High Speed" for heavy-duty tasks.

◆ Timer Switch

Preset to "Stop" before delivery.

Turn to "Start" to activate the timer. The blender will automatically stop after the set time.

Usage Notes

◆ **Avoid Metal Objects in the Cup**

Do not place knives, forks, spoons, or other metal objects into the cup.

◆ **Cleaning Precautions**

Do not touch the blade directly with your hands when cleaning. Use appropriate cleaning tools and handle with care.

Always separate the frame from the cup before cleaning. Ensure the plug is removed before cleaning.

Do not immerse the motor base in water or place it in a dishwasher.

◆ **Cup Usage Guidelines**

Do not overfill the cup; ensure the contents do not exceed two-thirds of its capacity.

Always close the lid securely before use.

Before starting, ensure the cup is firmly fixed on the motor base.

◆ **During Operation**

Due to the high power, hold the cup gently while blending.

When using the stirring bar, ensure the cup is securely covered, whether on the base or on a table.

Do not attempt to retrieve food from the cup with your hands as the blades are sharp.

Usage Notes

◆ **Post-Operation Precautions**

Do not open the lid until the blades have fully stopped rotating.
Always unplug the machine when not in use.

◆ **Handling the Power Cord**

Keep children at a safe distance from the blender during operation to avoid

◆ **Pouring and Cleaning**

Remove the cup from the base before pouring out contents.
Exercise caution when handling cutting blades, particularly when removing them from the cup, emptying the cup, or during cleaning.

◆ **General Safety Notes**

Be careful when operating the switch, especially before and after starting the machine.
Utensils should not be immersed in water.

Cleaning and Maintenance

◆ **Unplug Before Cleaning**

Always unplug the blender before starting any cleaning process.

◆ **Container and Lid**

Use a sponge or soft cloth to clean the container and lid.

Dry thoroughly after cleaning.

The jar (glass) is dishwasher-safe and can also be cleaned using the blender's Pulse function (self-cleaning) .

◆ **Blade Safety**

Avoid placing your hand inside the container to clean the blade.

Use appropriate cleaning tools to ensure safety.

◆ **Motor Base**

Wipe the motor base and shaft with a dry or slightly damp cloth.

Do not immerse the motor base or any of its parts in water.

◆ **Stubborn Stains**

For tough stains, use a neutral detergent and clean gently.

Dry thoroughly with a clean cloth to prevent residue.

Troubleshooting

Fault	Possible Cause	Solution
Blender is not powering on	Power cord is not plugged in.	Ensure the power cord is securely connected.
	Components not assembled correctly.	Verify the cup and base are properly aligned.
Blender powers on but doesn't work	Motor overheating protection activated.	Allow the motor to cool for up to 1 hour.
	Internal fault.	Contact after-sales service.

For unresolved issues, contact customer service or visit an authorized service center.
Do not attempt self-repair.

**Thank you for choosing our High-Speed Blender. For further assistance, contact our customer service team.
We are committed to providing you with excellent service.**

Customer Support

If you have any questions or concerns about your new product,
please contact our helpful customer support team.

magetangblender@outlook.com



