 
 


Assembly Manual

SKU:6090-PIPE-BT11

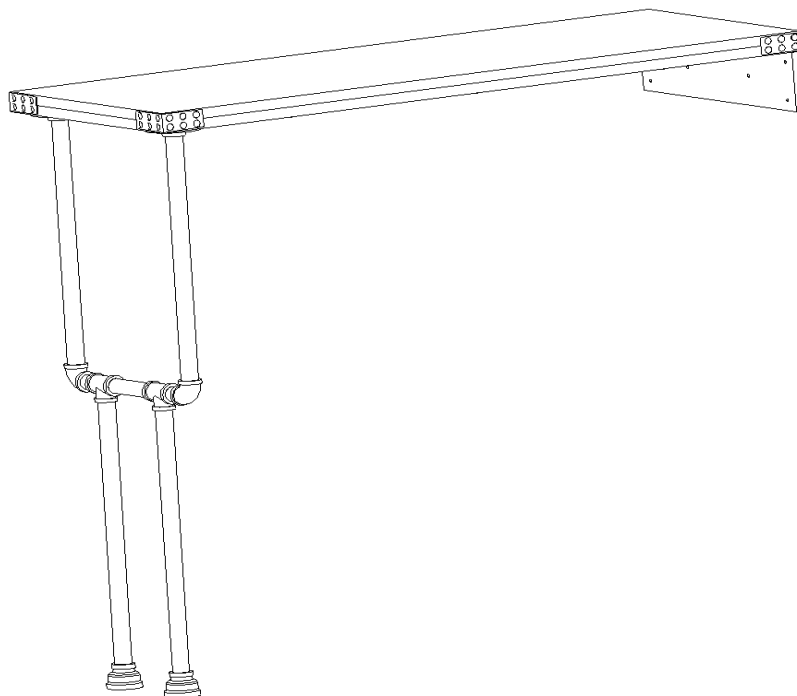

1

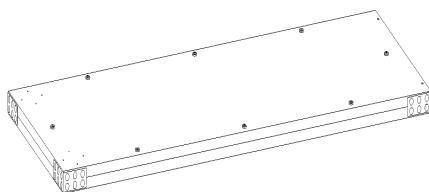

 
1pc

2



1pc

3



1pc

4



2pcs

5



2pcs

6



"16.9"

2pcs

7




"18.1"

2pcs

Assembly Manual


SKU:6090-PIPE-BT11

Hardware Accessories								
NO.	PICTURE	SIZE	QTY		NO.	PICTURE	SIZE	QTY
A		Ø50*T2mm	2		B		M6 * L40mm	2
C		Ø15*H10mm	2		D		M3.5 * H14mm	8
E			6		F		M4 * L40mm	6
G			1					

 SPARE								
NO.	PICTURE	SIZE	QTY		NO.	PICTURE	SIZE	QTY
A		Ø50*T2mm	1		B		M6 * L40mm	1
C		Ø15*H10mm	1		D		M3.5 * H14mm	1
E			1		F		M4 * L40mm	1


Before assembly, please put all parts on a neat and clean sheet

 Exploded View

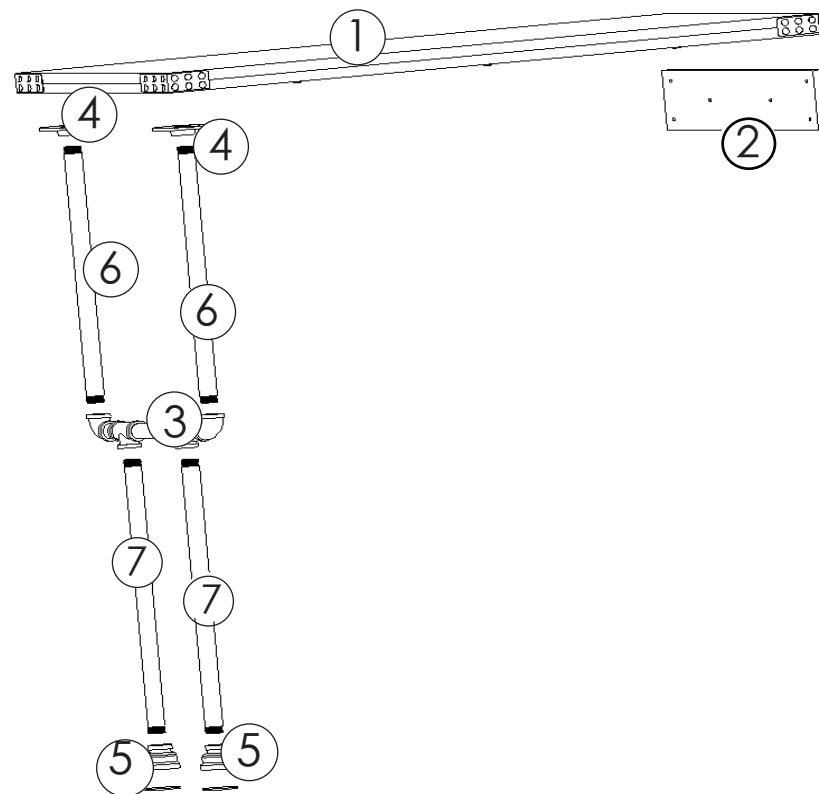


Installation procedures

 step 1

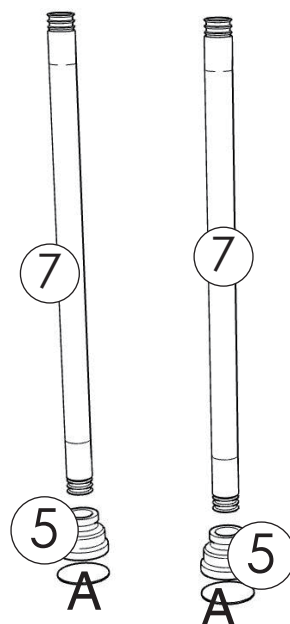


$$A = 2X$$

 
step 2

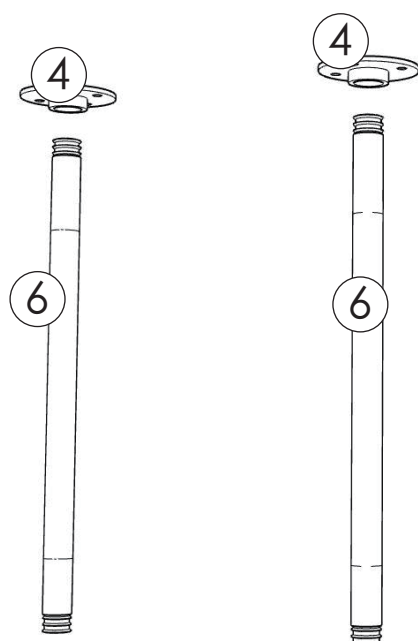



 
step 3

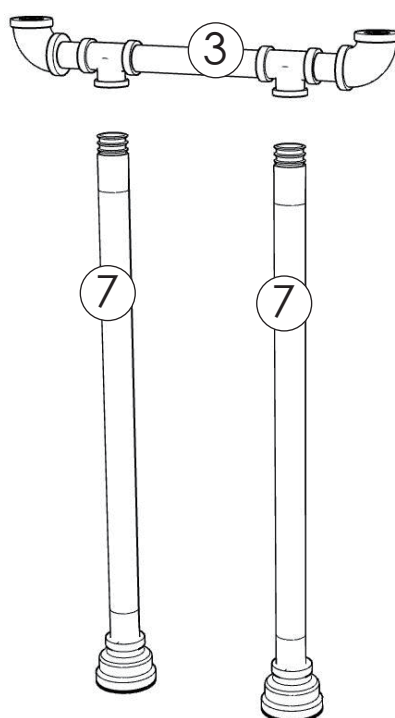

 
step 4

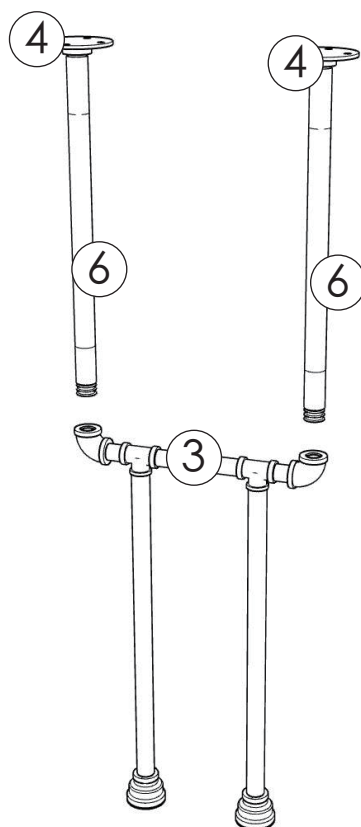

  
 
step 5

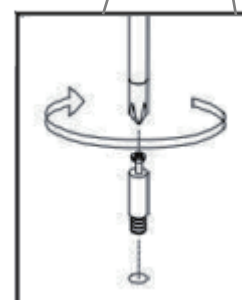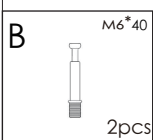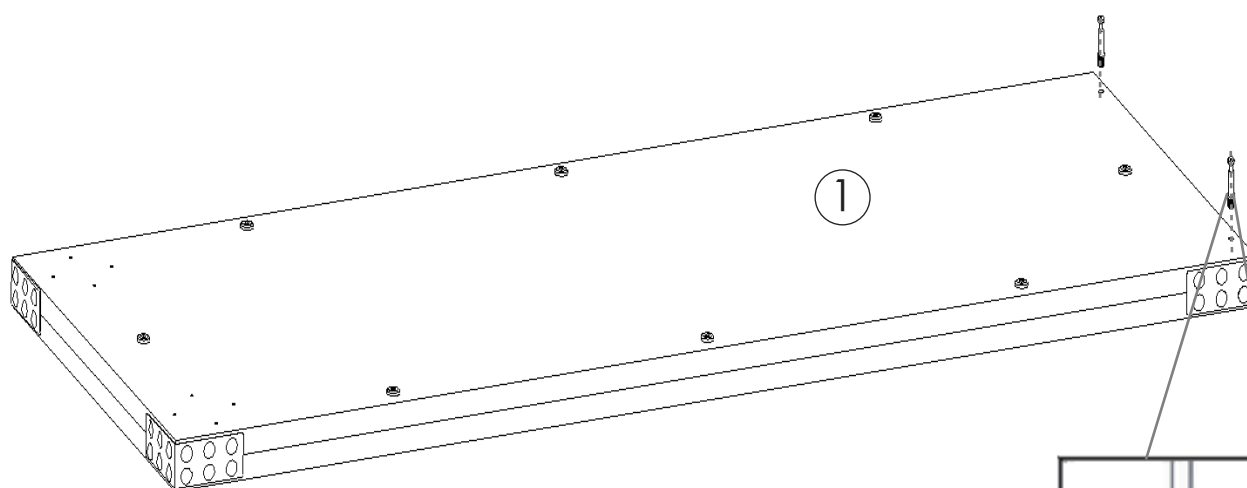

 
step 6

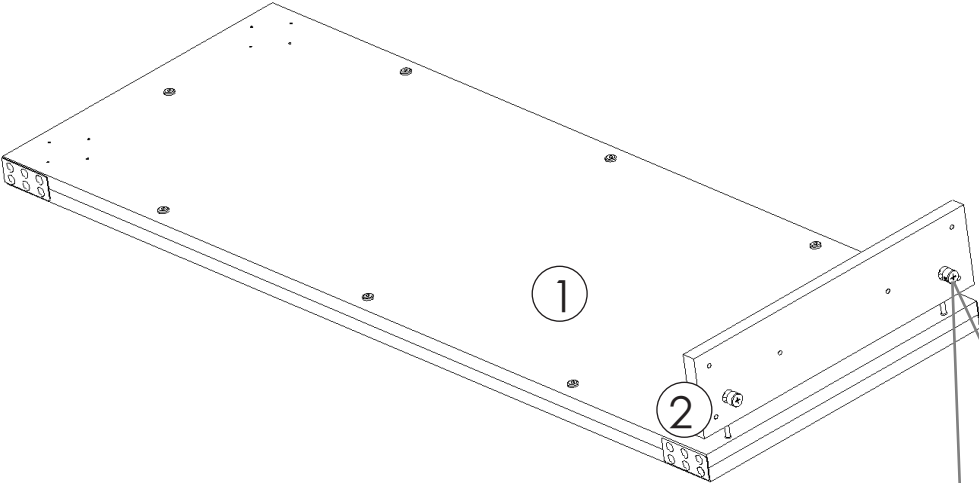


C = 2X

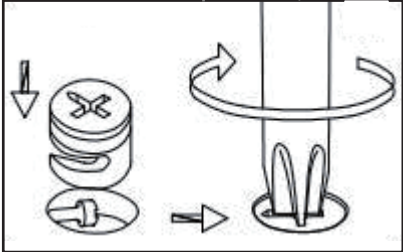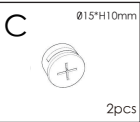  

 step 7

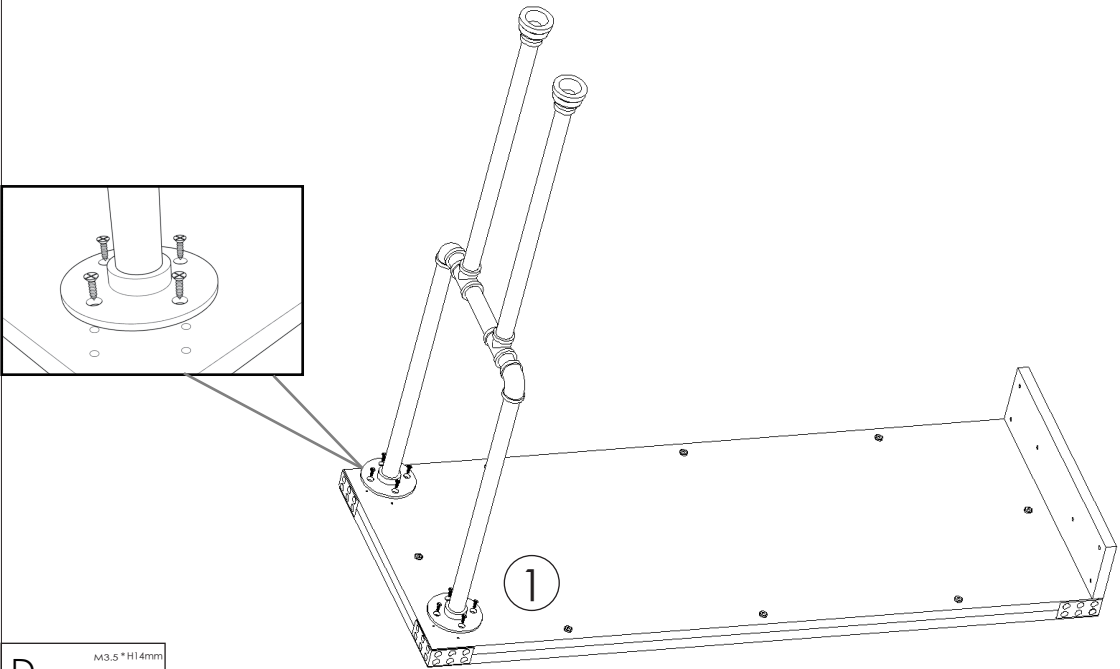

D = 8X

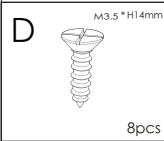 


step 8



E = 6X

 F = 6X

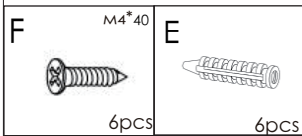

First punch E into the hole made in the wall, then F pass through No. 2 and lock it in E

COMPLETED DRAWING

