

88 5523 41

 
Chest

IMPORTANT NOTE


Carefully remove all the parts from the carton and put them individually on a soft cloth to prevent scratches or other damage occuring to the parts.

We have taken great care in the design of this product and request that you carefully and strictly follow our assembly instructions to ensure a completed product as it was designed.


Home
Styles

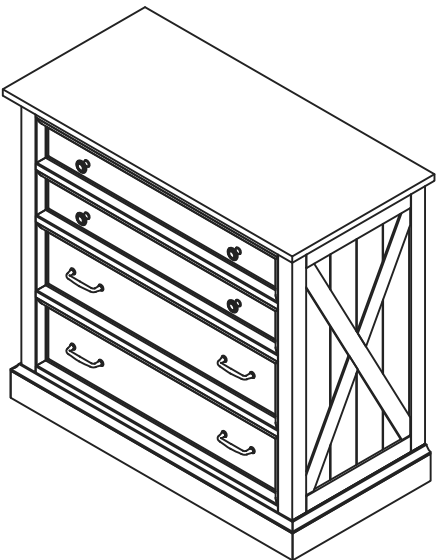

Part List

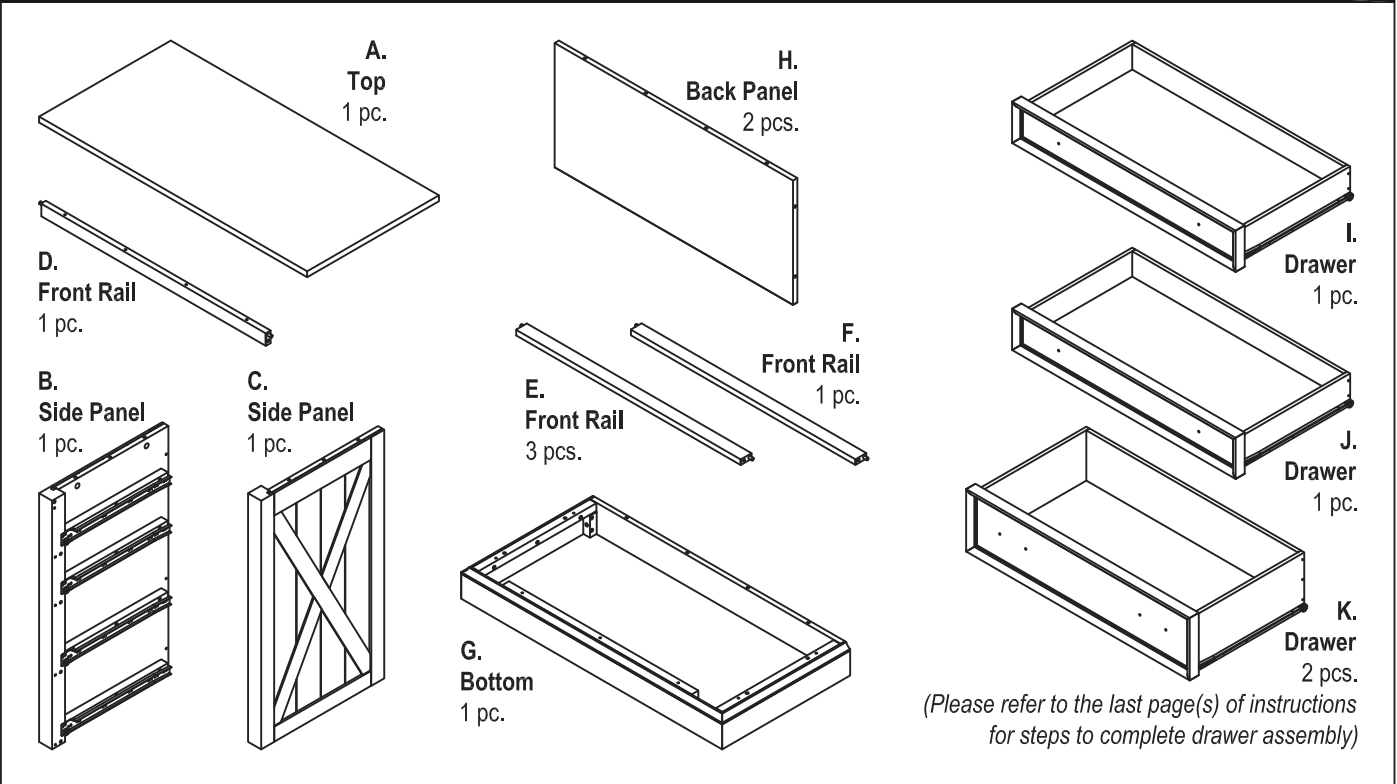 

Hardware List

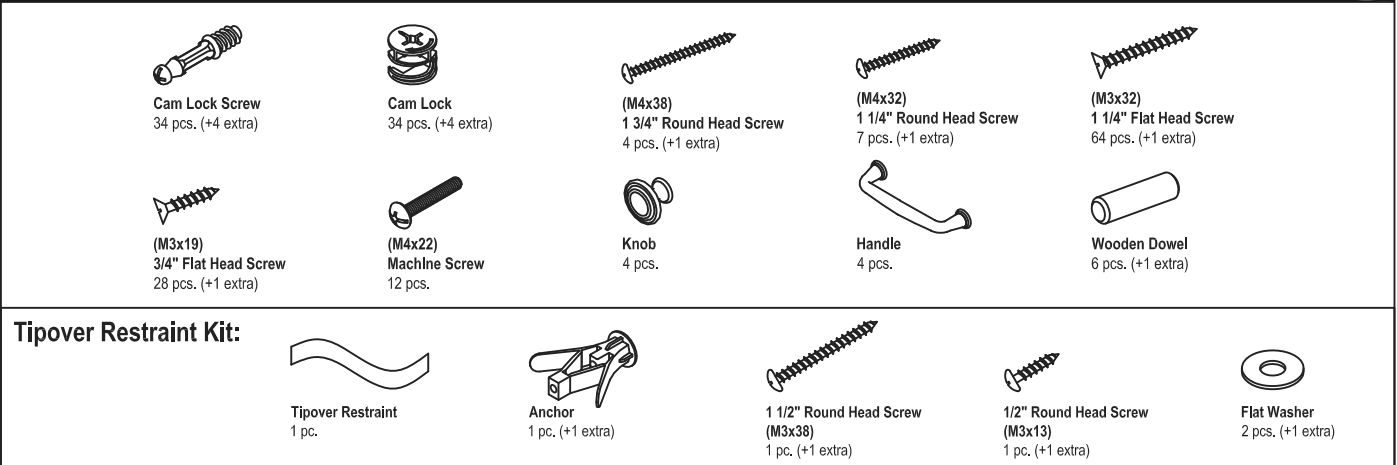 

Tools Required For Assembly : Phillips screwdriver, Drill, 3/8" Drill Bit, Level

 
Home Styles Consumer Assistance: www.homestyles-furniture.com,
servicedesk@homestyles-furniture.com, 888-680-7460, 877-831-0319

IMPORTANT

- * Do not tighten up all the screws until each part is properly assembled.
- * Use a soft cloth between these parts and the floor.
- * After assembly, item must be level to work properly.
Use the included adjustable levelers to level.

STEP 1

Insert Cam Lock Screws into the pre-drilled holes of Top (A), Side Panels (B) and (C) and Back Panels (H).

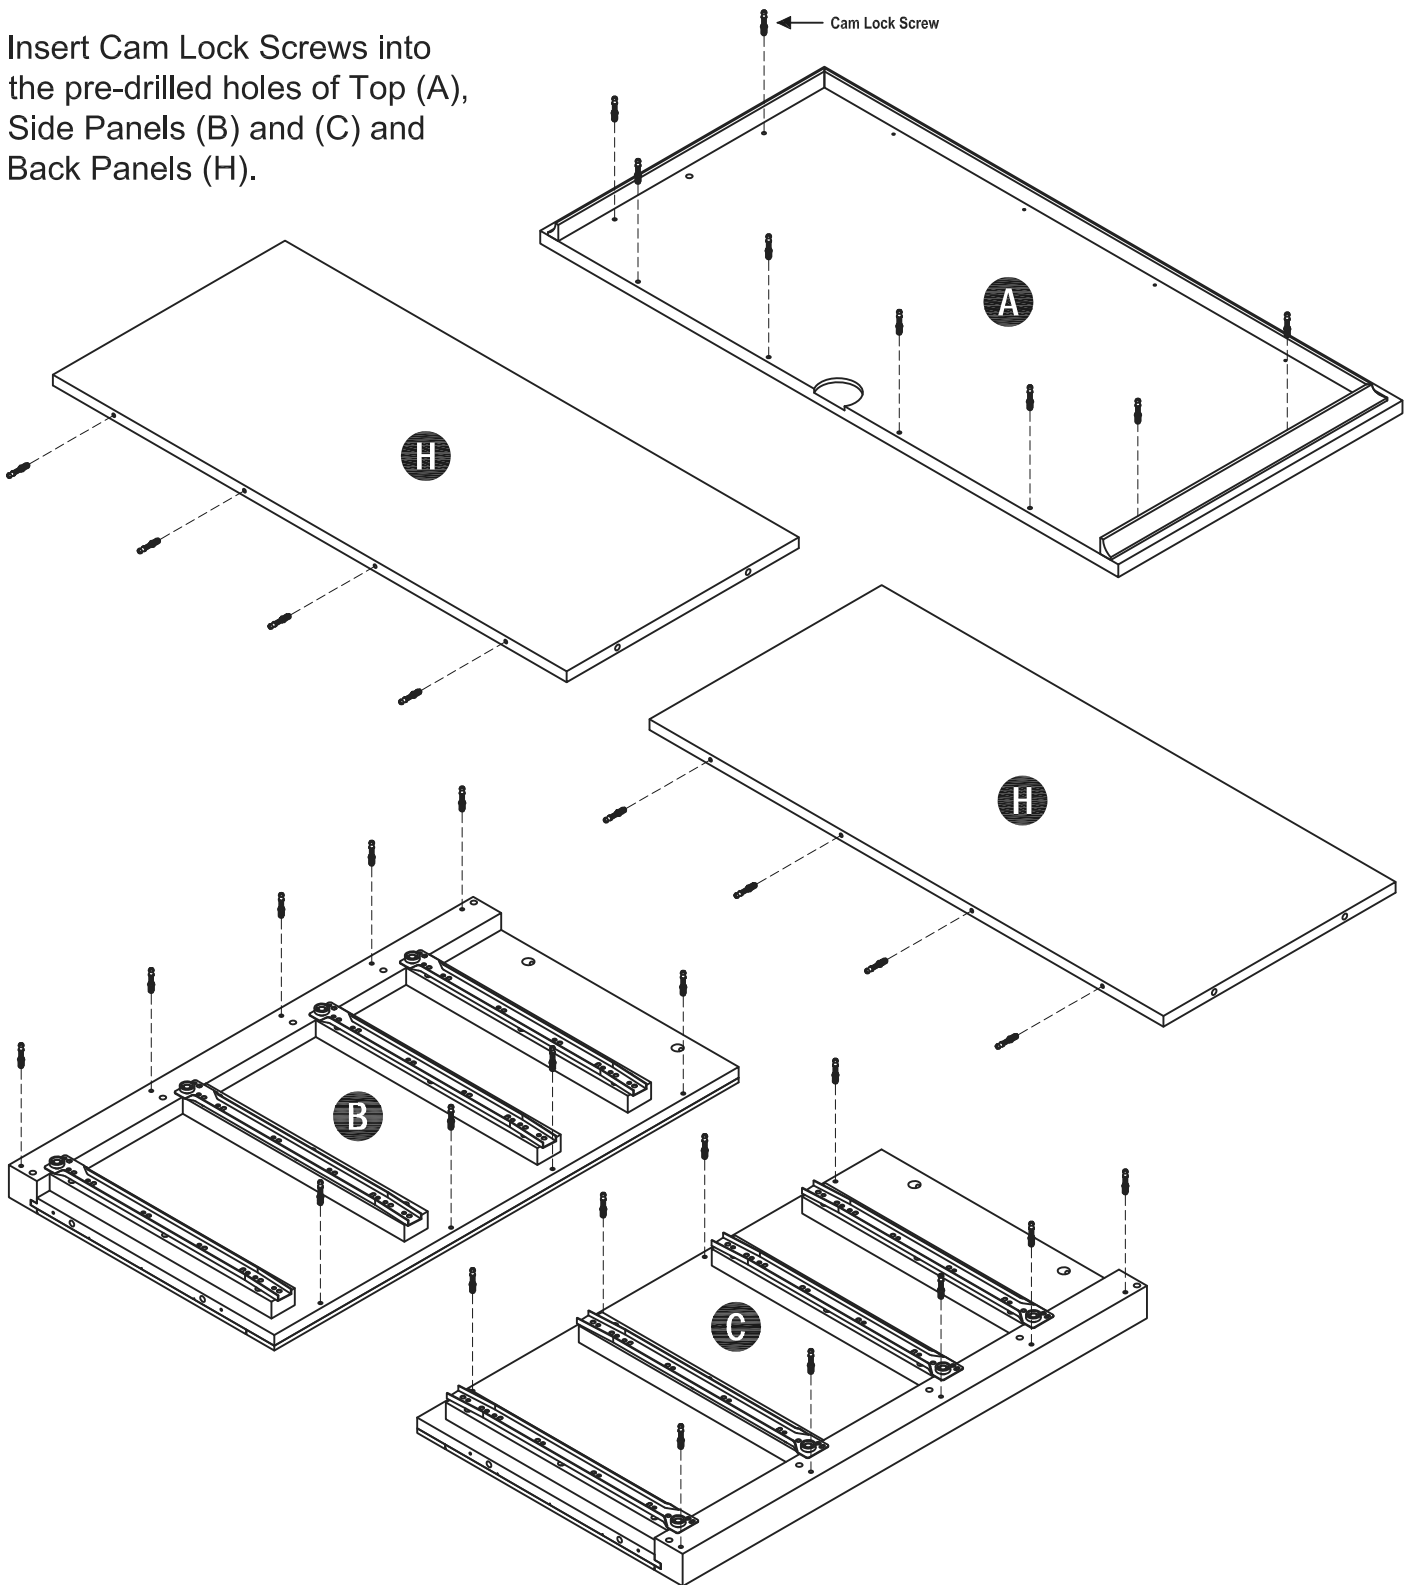

STEP 2

Assemble Back Panels (H) with Cam Locks. (See Figure 1)


 
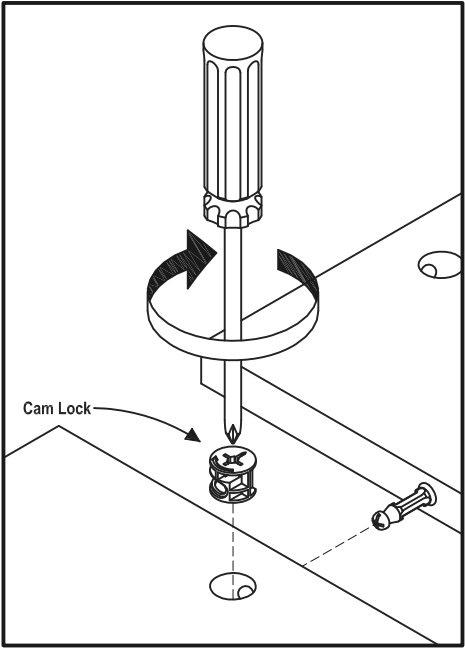 


Figure 1

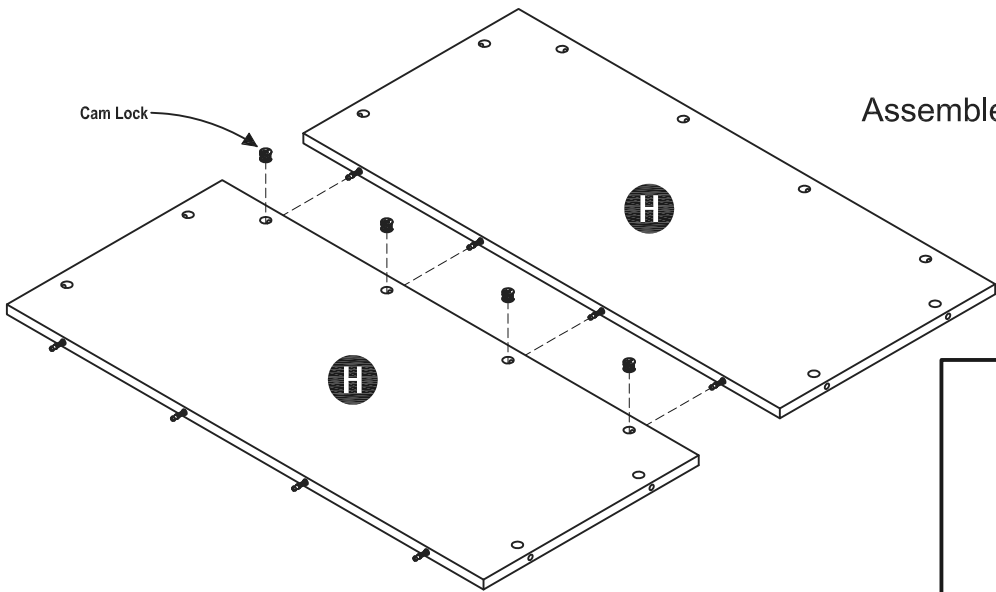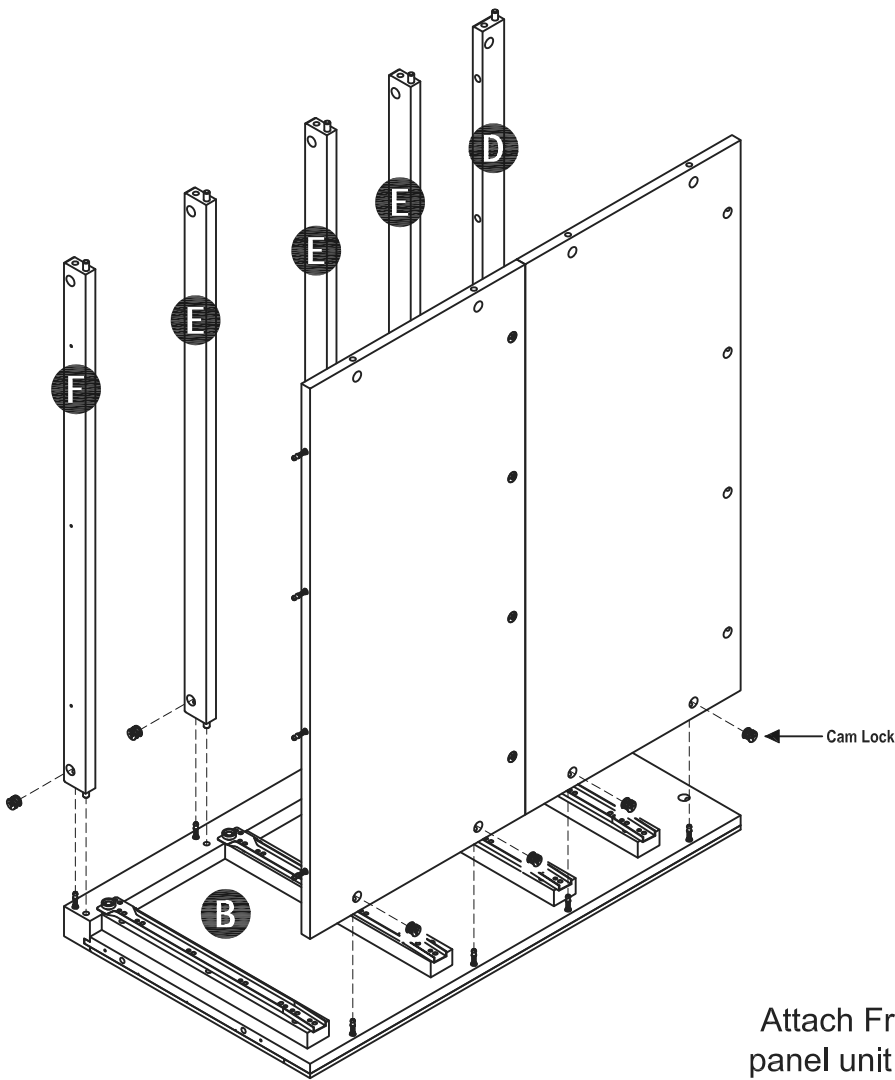 


STEP 3

Attach Front Rails (D), (E) and (F) and back panel unit to Side Panel (B) with Cam Locks.

STEP 4

 Attach Side Panel (C) to unit with Cam Locks. (See Figure 1)

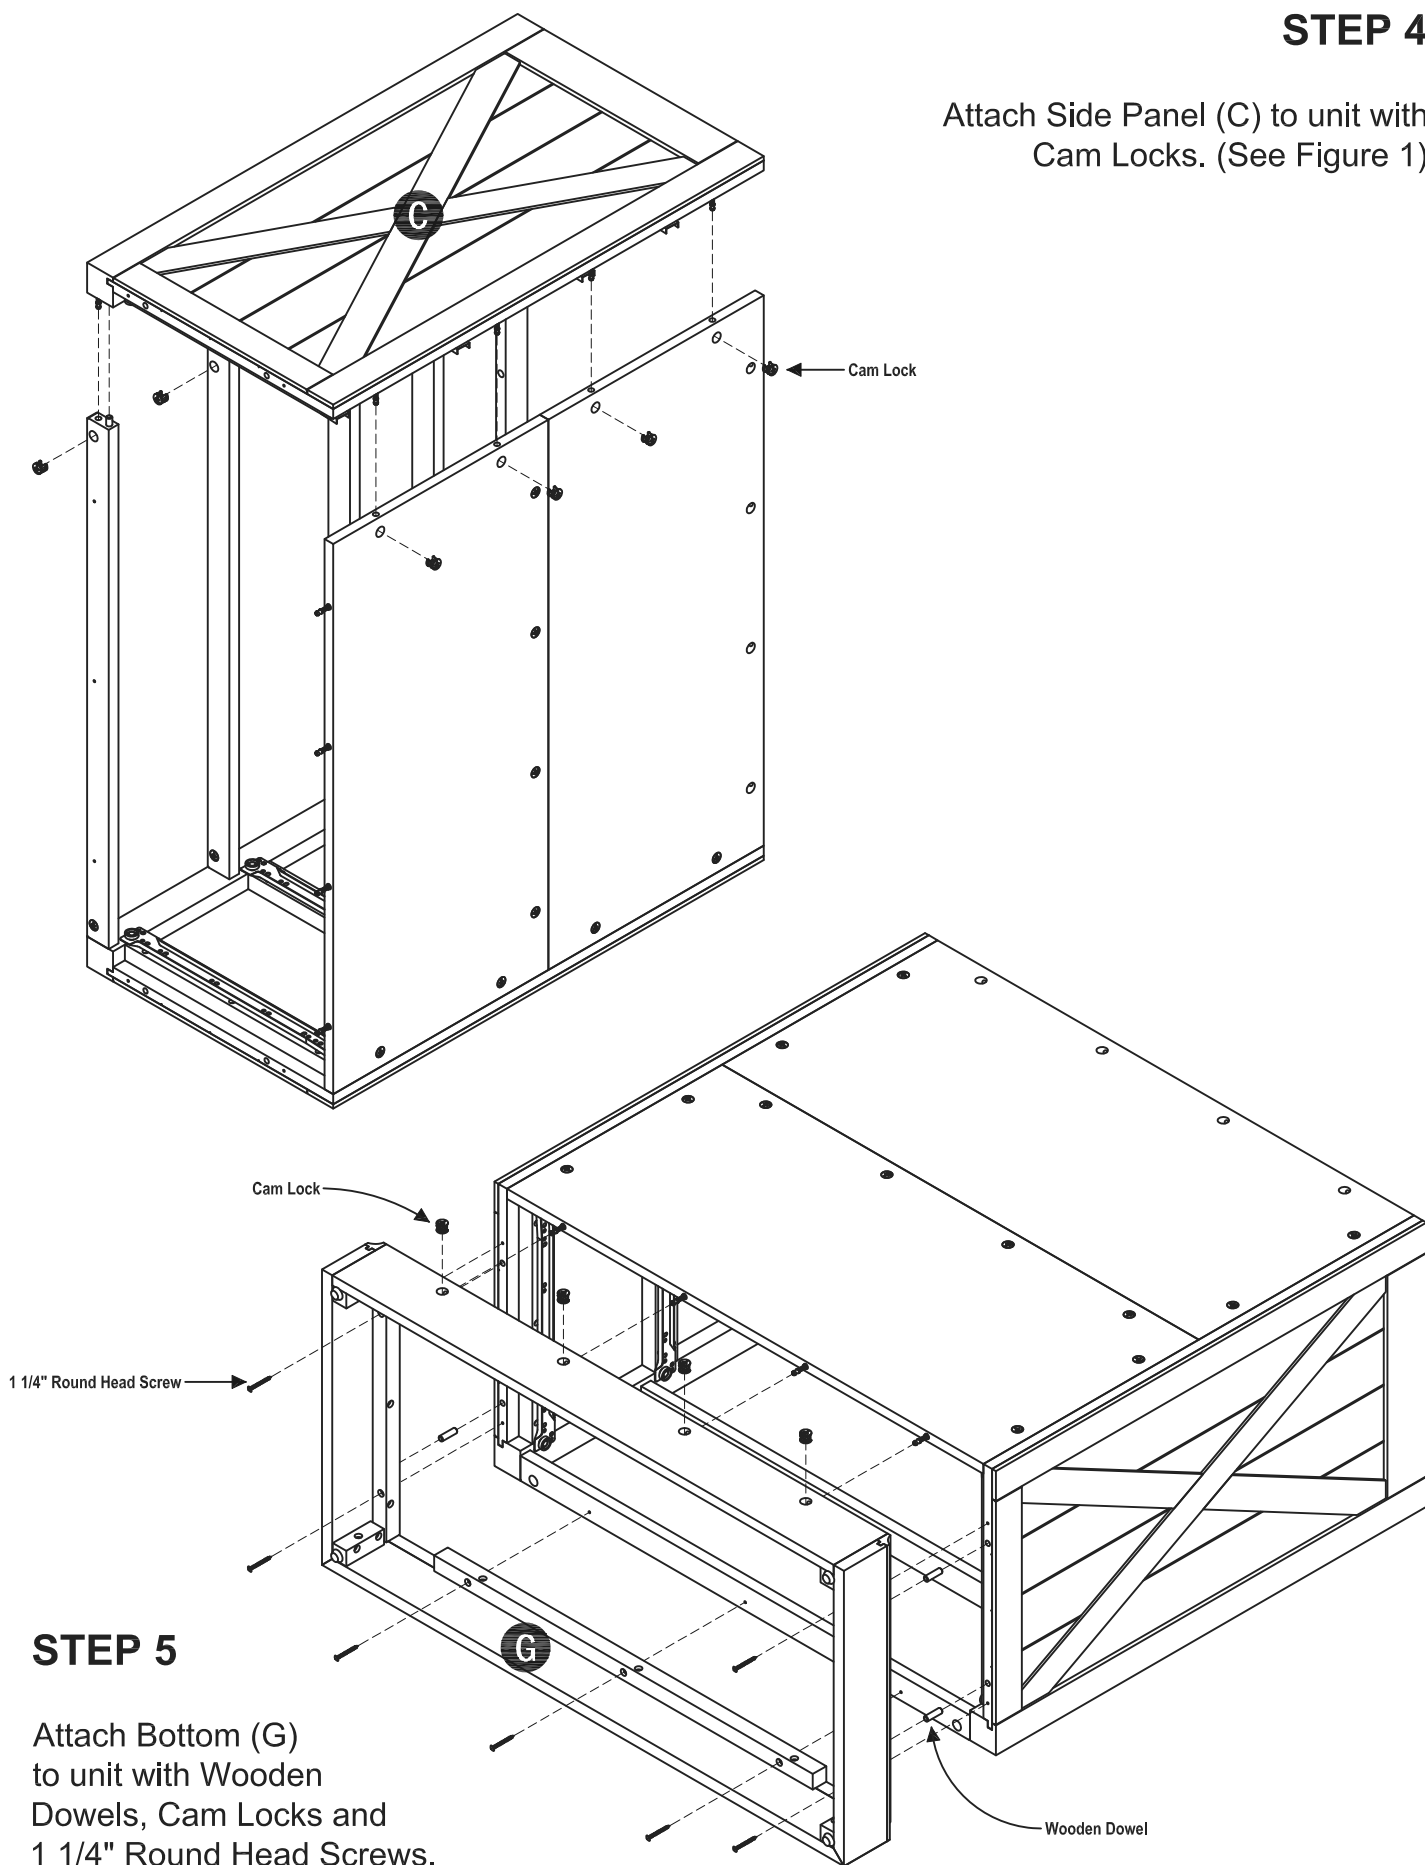

STEP 5

Attach Bottom (G) to unit with Wooden Dowels, Cam Locks and 1 1/4" Round Head Screws.

STEP 6

Attach Top (A) to unit with Wooden Dowels, Cam Lock and 1 3/4" Round Head Screws.

Note: A Philips screwdriver 5" or less in length is recommended.

To level the unit, adjust the adjustable levelers on the bottom of the legs. (See Figure 2)

Note: Unit must be level to work properly.

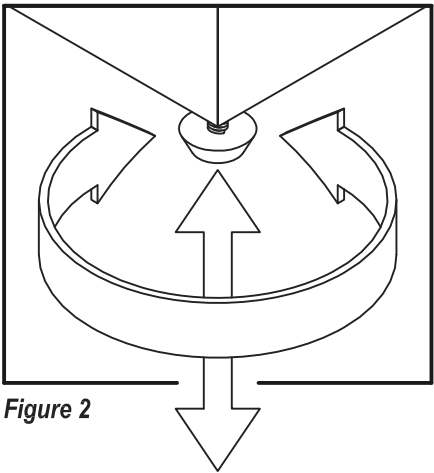 
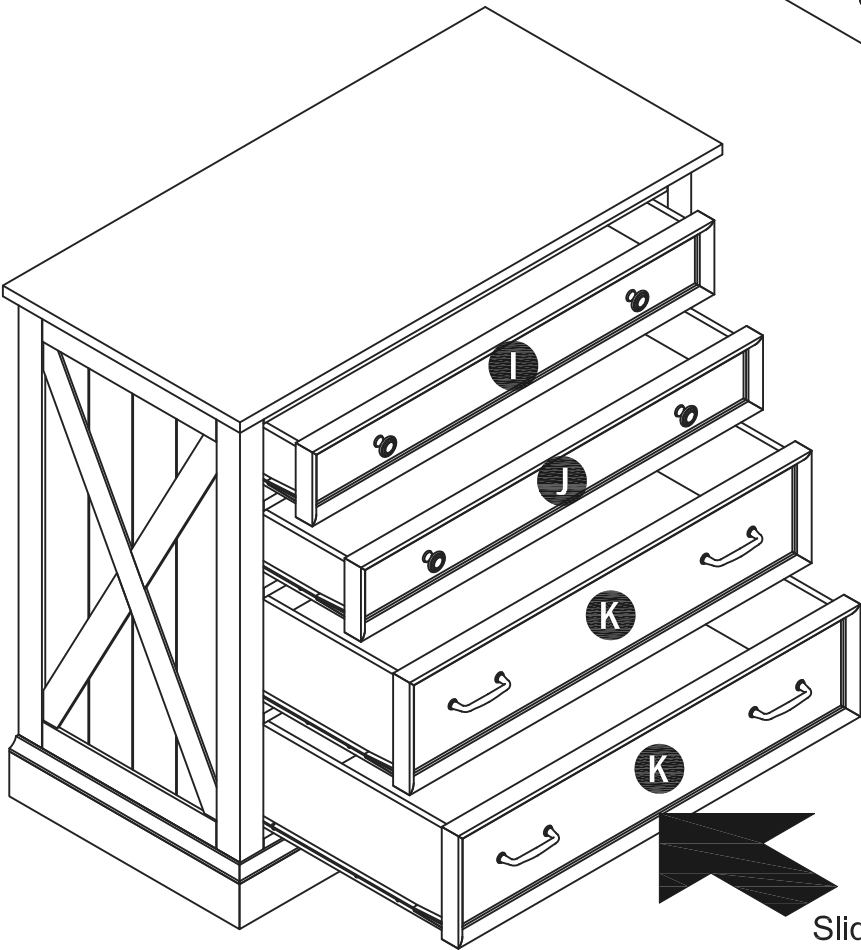 
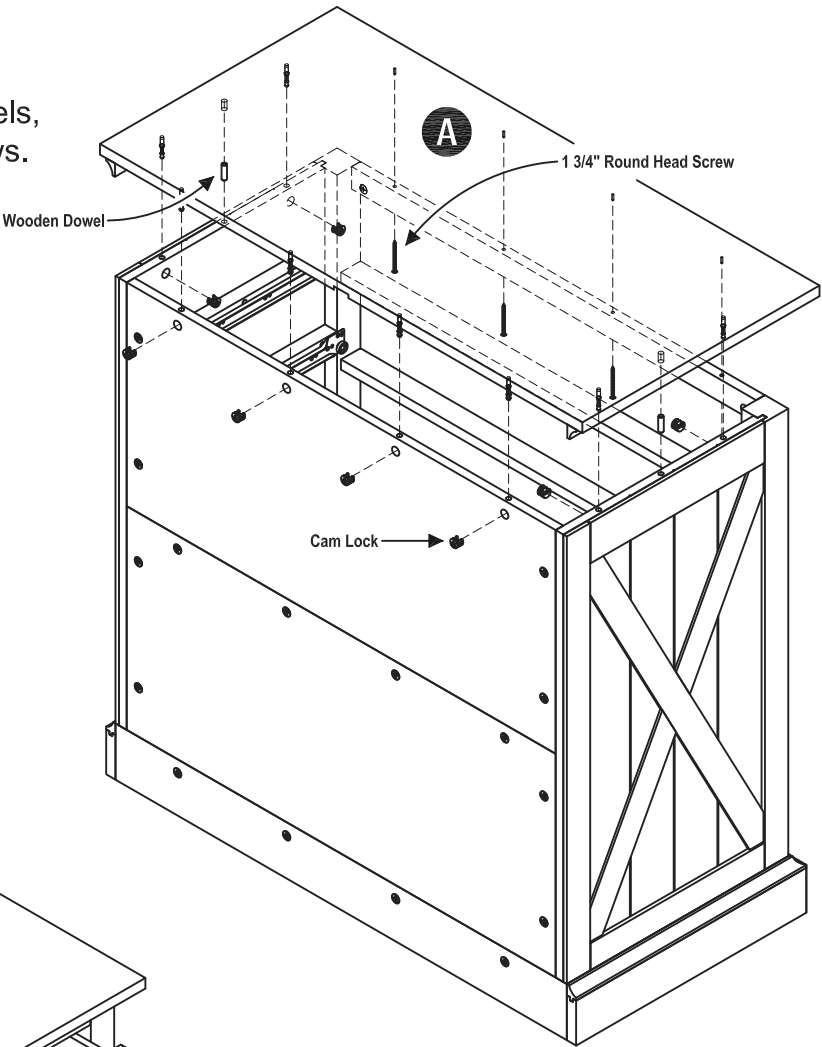 


Figure 2

 
 
STEP 7

Slide Drawers (I), (J) and (K) into place.

Note: Follow the steps on the next page to use 3/4" Flat Head Screws to complete drawer assembly.

STEP 8

Loosen slightly the screws pre-installed on the back of the drawer fronts.

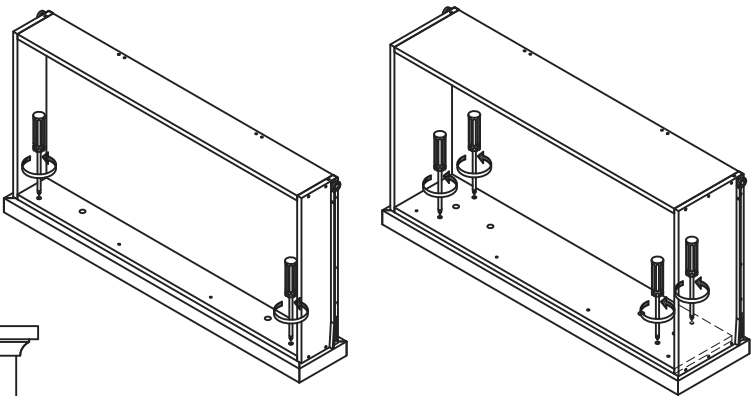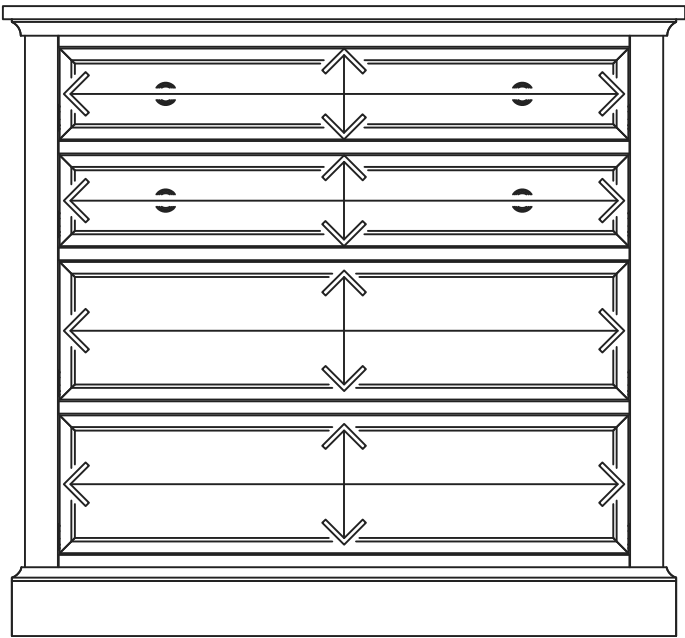


STEP 9

Insert the drawer into the unit, then adjust the drawer front panel left or right and up or down until the drawer gaps look proportional.

STEP 10

 
Pull the drawer open slowly and re-tighten the screws from Step 8. Make sure the front panel does not move and lock the drawer front panel into position with 3/4" Flat Head Screws.

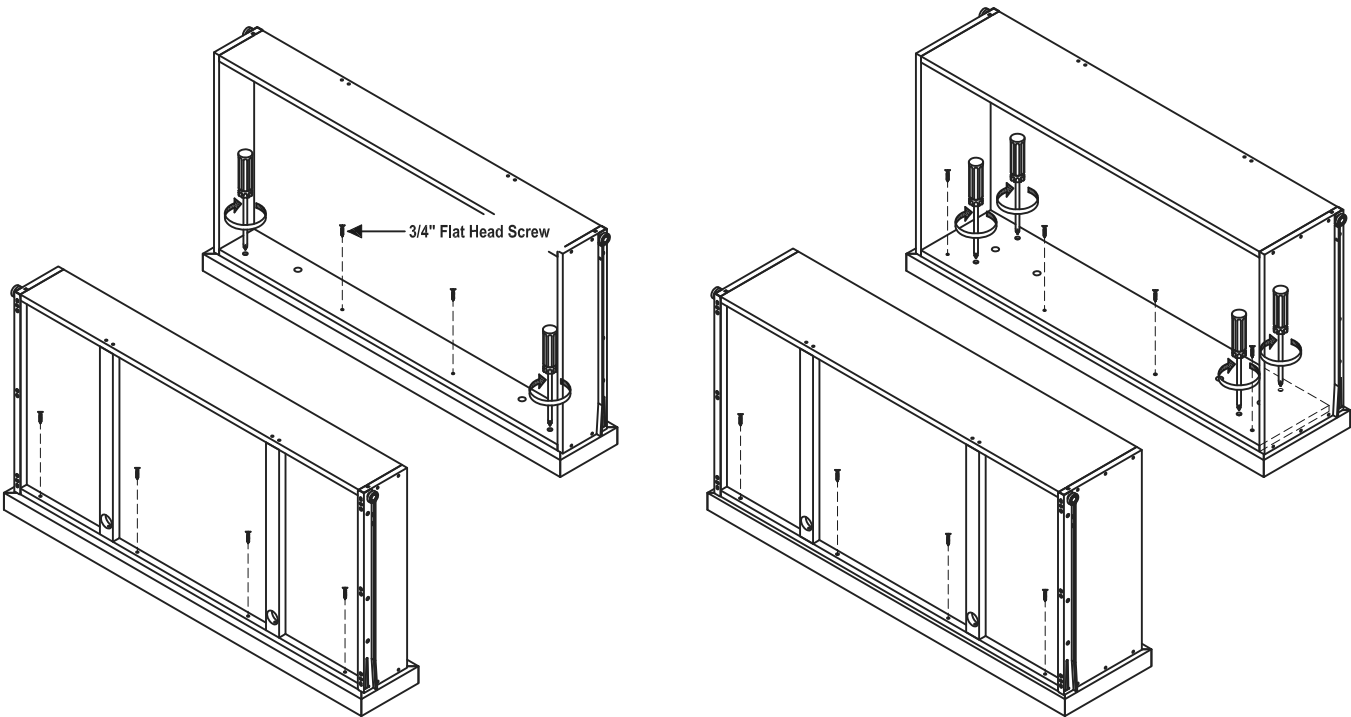


Note: These 3/4" Flat Head Screws on this page must be installed to complete the drawer assembly.

ATTENTION!


 
To help reduce the risk of the unit tipping over, the Tipover Restraint must be installed following these instructions exactly!

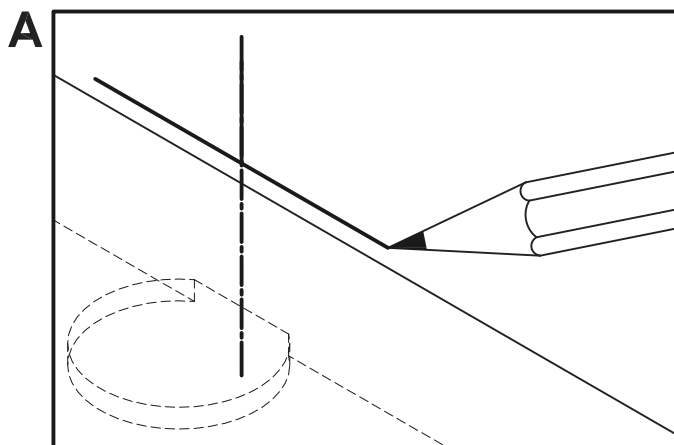

 
- Place the unit at desired location.
- Remove Drawers (L,M) from unit.
- Mark wall with pencil to show position of hole in Top (A).
- Move unit.

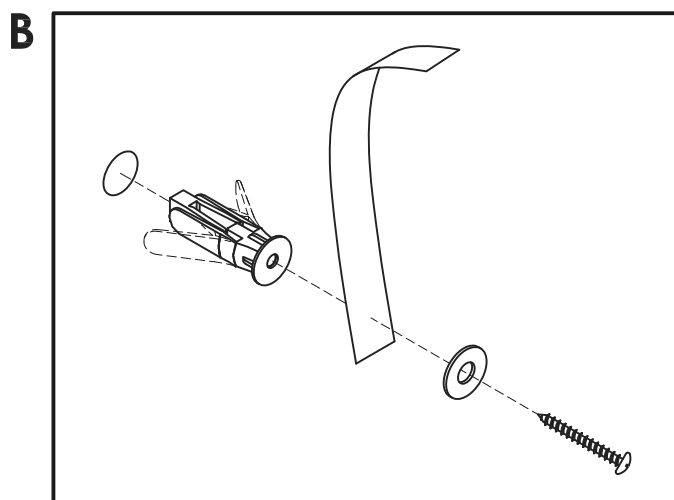

  - Drill a 3/8" hole in wall 1 1/2" below mark.
- Insert Anchor into the wall hole.
- Attach Tipover Restraint to Anchor with 1 1/2" Round Head Screw and Flat Washer.

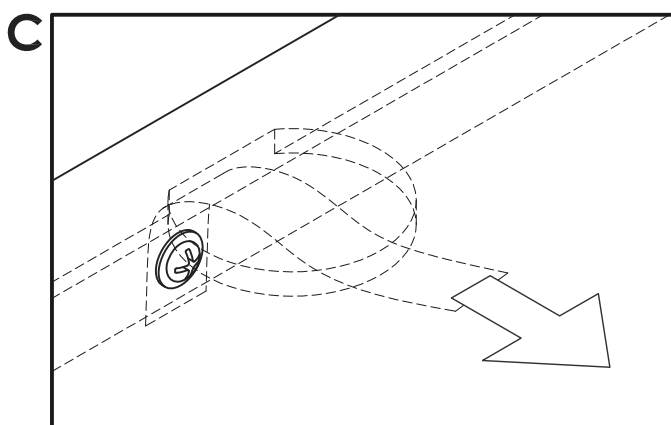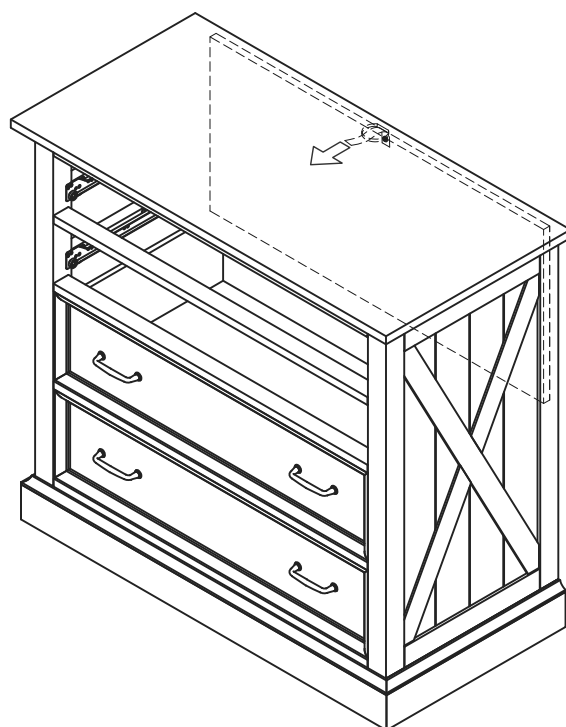


 - Move unit back into place.
- Insert Tipover Restraint into unit through hole in Top (A).

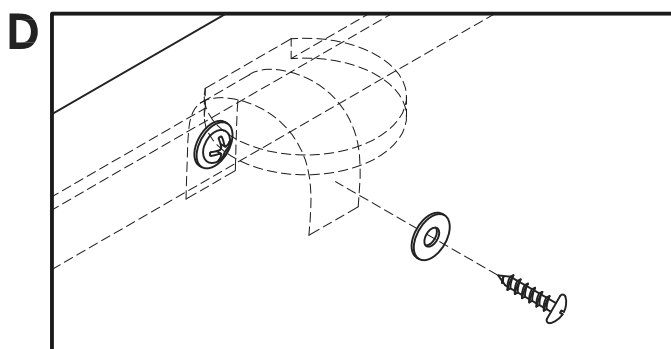

- Screw Tipover Restraint to unit with 1/2" Round Head Screw and Flat Washer.
- Slide Drawers (I,J) back into place.

 Drawer (I)

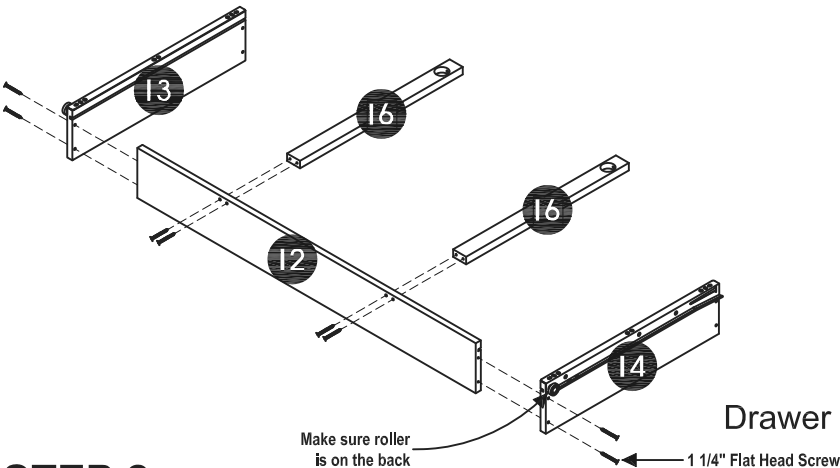



STEP 1

Attach Drawer Sides (I3) and (I4) and Drawer Supports (I6) to Drawer Back (I2) with 1 1/4" Flat Head Screws.

STEP 2

Insert Drawer Bottom (I5) into the groove.

  Attach Drawer Front (I1) to unit with 1 1/4" Flat Head Screws.

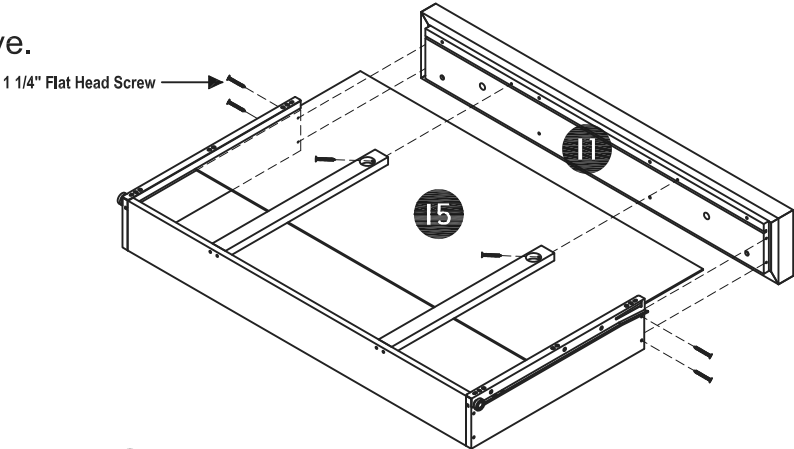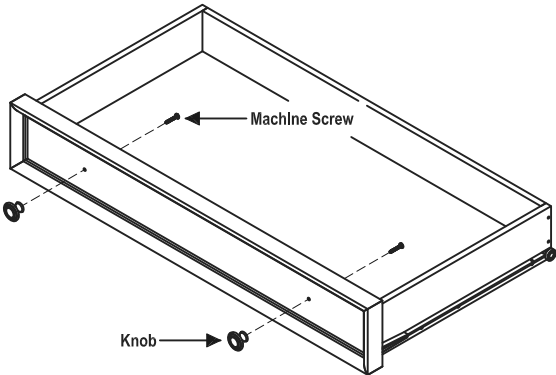


STEP 3


Attach Knobs with Machine Screws.

Note: Drawer assembly is not complete until 3/4" Flat Head Screws are used in a later step.

 
Part List

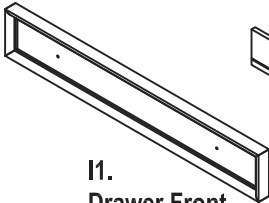

I1.
Drawer Front
1 pc.

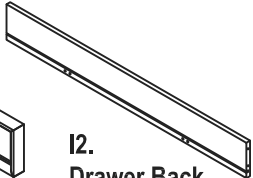 


I2.
Drawer Back
1 pc.

 

I3.
Drawer Side
1 pc.



 I4.
Drawer Side
1 pc.

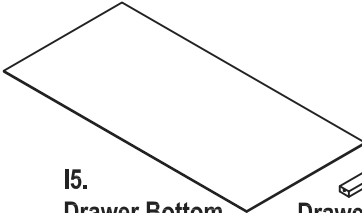


I5.
Drawer Bottom
1 pc.



I6.
Drawer Support
2 pcs.

 Drawer (J)

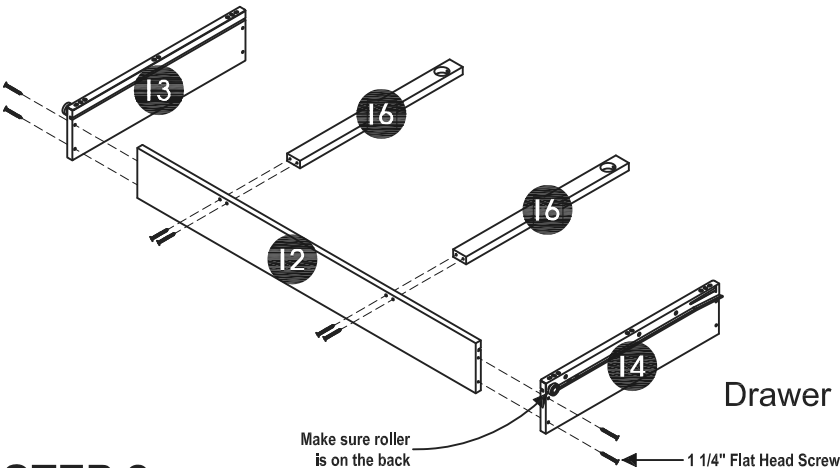



STEP 1

Attach Drawer Sides (I3) and (I4) and Drawer Supports (I6) to Drawer Back (I2) with 1 1/4" Flat Head Screws.

STEP 2

Insert Drawer Bottom (J5) into the groove.

  Attach Drawer Front (I1) to unit with 1 1/4" Flat Head Screws.

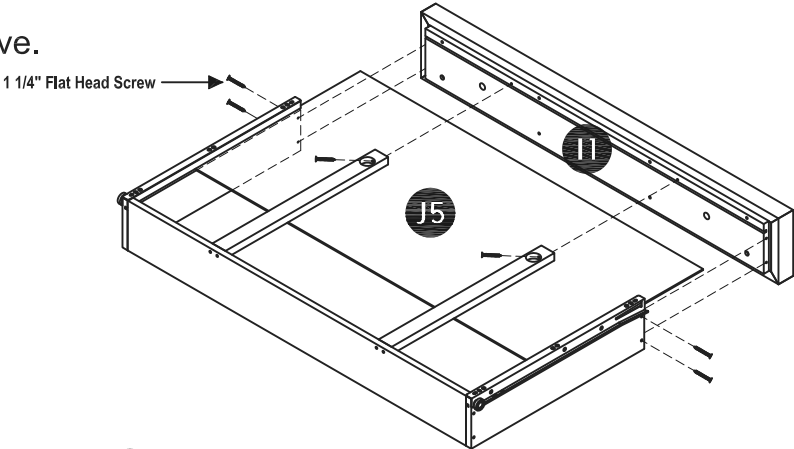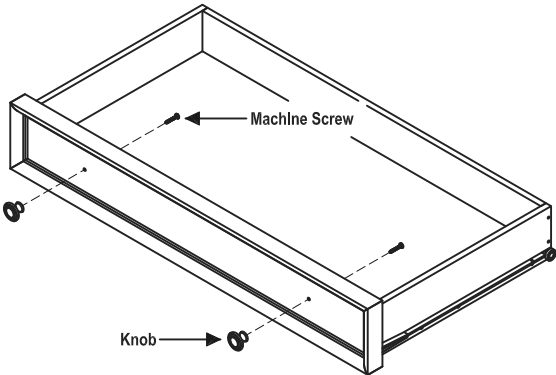

STEP 3

Attach Knobs with Machine Screws.

Note: Drawer assembly is not complete until 3/4" Flat Head Screws are used in a later step.

Part List

I1.
Drawer Front
1 pc.

I2.
Drawer Back
1 pc.

 
 
I3.
Drawer Side
1 pc.

I4.
Drawer Side
1 pc.

J5.
Drawer Bottom
1 pc.

I6.
Drawer Support
2 pcs.

Drawer (M)

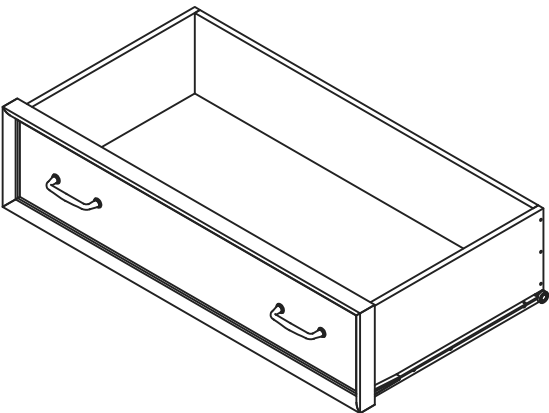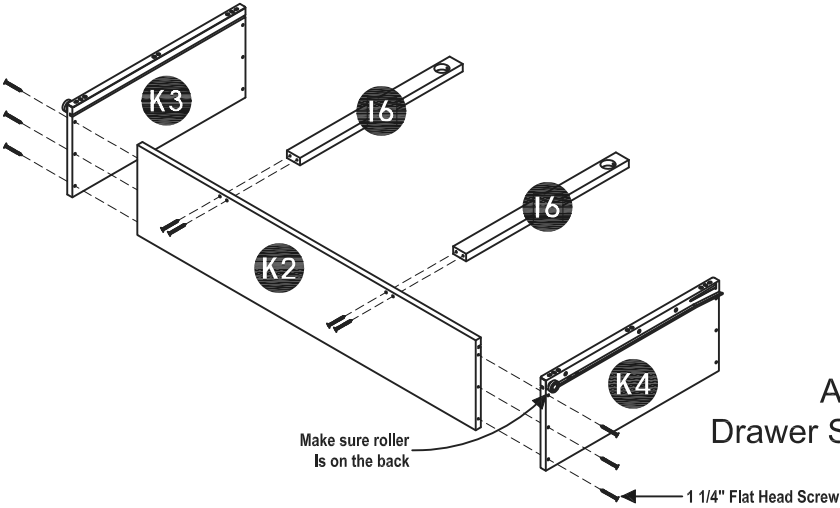


STEP 1

Attach Drawer Sides (K3) and (K4) and Drawer Supports (I6) to Drawer Back (K2) with 1 1/4" Flat Head Screws.


STEP 2

Insert Drawer Bottom (J5) into the groove.

 Attach Drawer Front (K1) to unit with 1 1/4" Flat Head Screws.

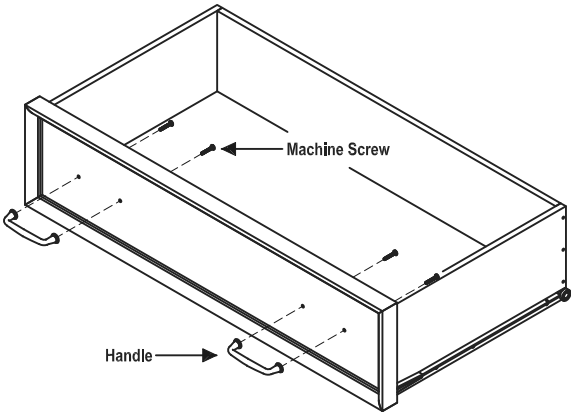

1 1/4" Flat Head Screw

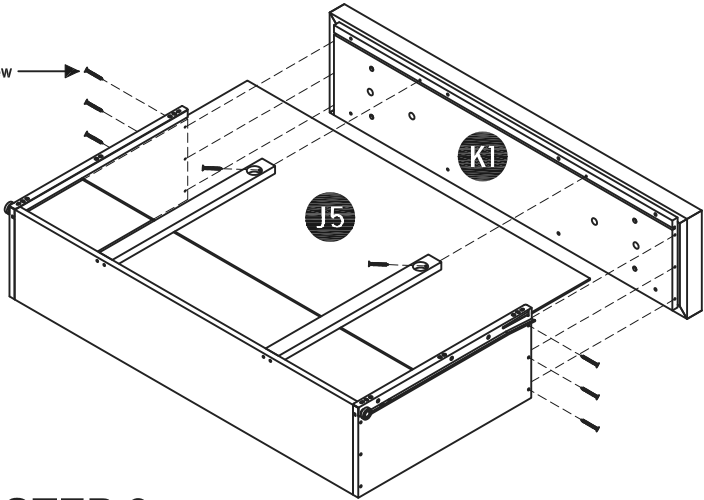 

STEP 3

Attach Handles with Machine Screws.

Note: Drawer assembly is not complete until 3/4" Flat Head Screws are used in a later step.

Part List

K1. Drawer Front 2 pcs.	K2. Drawer Back 2 pcs.	K3. Drawer Side 2 pcs.	K4. Drawer Side 2 pcs.	J5. Drawer Bottom 2 pcs.	I6. Drawer Support 4 pcs.

VERY IMPORTANT !!

CARE INSTRUCTIONS

NEVER

USE GLASS CLEANERS ON FINISHED FURNITURE. AMMONIA WILL CHEMICALLY ATTACK THE FINISH.

NEVER

ALLOW LIQUIDS OF ANY KIND TO REMAIN ON THE FURNITURE. ABSORPTION CAUSES PART TO WARP AND SPLIT AND FINISHES TO DELAMINATE.

DO NOT
WRITE
DIRECTLY
ON
SURFACE.



**PREVENT
MARKING**

DO NOT
PLACE IN
DIRECT
SUNLIGHT.



**PREVENT
FADING**

DO NOT USE
COMMERCIAL
WAXES AND
POLISHES.



**PREVENT
YELLOWING**

DO NOT
PLACE HOT
OBJECTS
ON SURFACE.



**PREVENT
FINISH DAMAGE**

DO NOT
USE
RUBBER
BASED
PLACE MATS.



**PREVENT
DISCOLORING**

TO CLEAN

USE A SOFT CLOTH MOISTENED IN LUKEWARM SOAP AND WATER, THEN BUFF WITH A DRY CLEAN CLOTH.



Home Styles will provide replacements free of charge for missing or damaged hardware or parts within 30 days of purchase. Digital images of the defective parts may be required. If this product was not purchased from an authorized retail affiliate, Home Styles is under no obligation to provide replacement parts. Parts are not available for fully assembled items nor are parts available for sale. Replacements for missing or damaged hardware or parts may be requested at:

www.homestyles-furniture.com/customer_service

Home Styles Consumer Assistance: www.homestyles-furniture.com,
servicedesk@homestyles-furniture.com, 888-680-7460, 877-831-0319