





PREMIUM PLAIN ZEBRA SHADE INSTALLATION MANUAL:

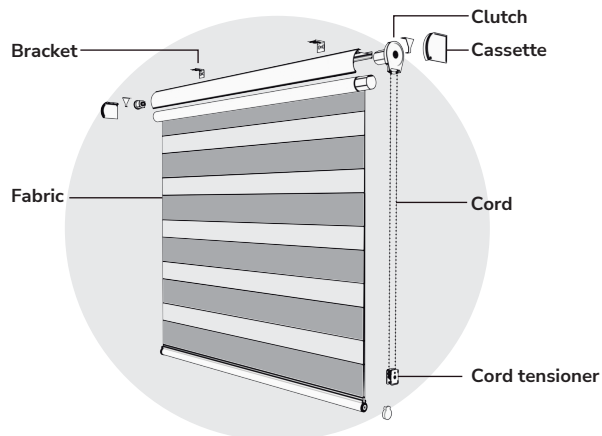


Our Custom Premium Zebra Shades add unique beauty to your windows and transform your spaces by providing a touch of versatile sophistication to both contemporary and modern decor styles.

Please read and follow these instructions to ensure a proper installation that will let you fully enjoy your Blinds.

NEEDED TOOLS AND COMPONENTS

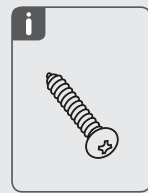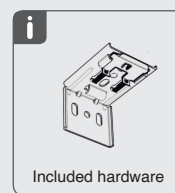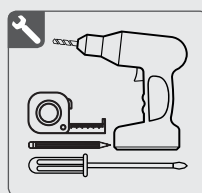

WARNING

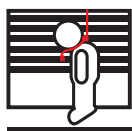

Window Blind Cord can STRANGLE your child. To prevent strangulation, purchase cordless products or products with inaccessible cords.


MOUNT TYPES

INSIDE MOUNT



For inside mount, install brackets using the top side.

OUTSIDE MOUNT

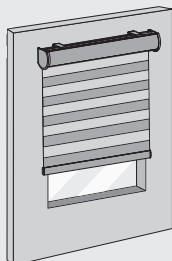


For outside mount, install brackets using the back side.

When choosing inside mount, the shade will be installed inside the windowframe.

For outside mount, the shade will be installed outside the windowframe. For this type of mount, consider ordering your shade slightly wider and higher than the width and height of your windowframe. We recommend increasing at least 5" to both width and height in relation to your windowframe when ordering your shade for outside mount.

Please do consider that we deduct 1/4 of an inch when producing our shades in order to ensure an easy fit when choosing inside mount installation. Since this deduction is made on all of our shades regardless of the type of installation you choose, please consider this when ordering you shade for outside mount.


BRACKET INSTALLATION

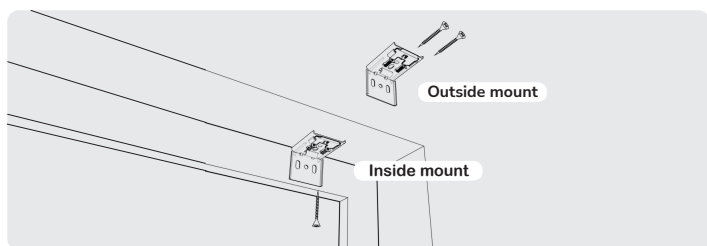

1. Mark the location of the screws using brackets as a guide. Drill holes for the screws and install the brackets (depending on the material of your walls, you might need to use drywall anchors).

Important: Make sure brackets are perfectly aligned to each other before attaching your shade to avoid wave effects to appear on the fabric.


CASSETTE INSTALLATION

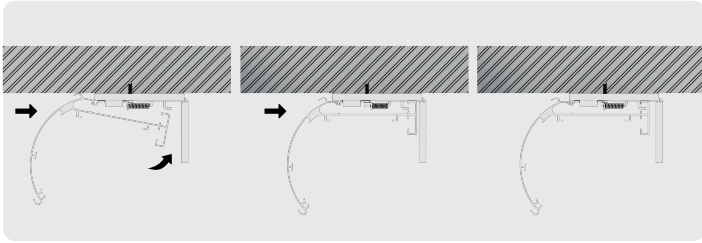

2. Attach the cassette by pushing it with a slight inclination on to the brackets until the front rib locks on the front bracket hook.

Push all the way into the bracket, rotate the cassette inwards and release the push. The cassette should hold firmly in place.


REMOVAL

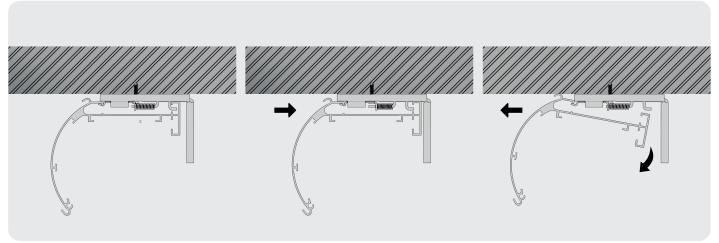


Push the cassette against the brackets and rotate slightly inwards. Slowly release the push, and remove the cassette from the brackets.

SAFETY DEVICE


A. INSIDE MOUNT: Fully recessed shade and safety device

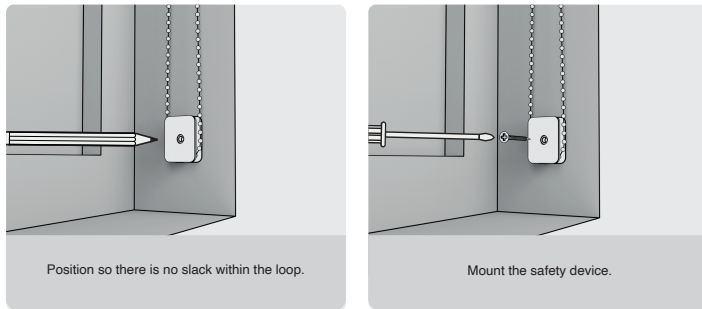


B. INSIDE MOUNT: Partially recessed shade and safety device

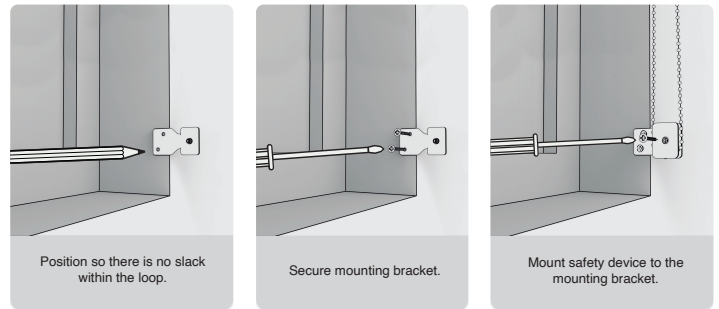

C. OUTSIDE MOUNT: Shade and safety device outside window.

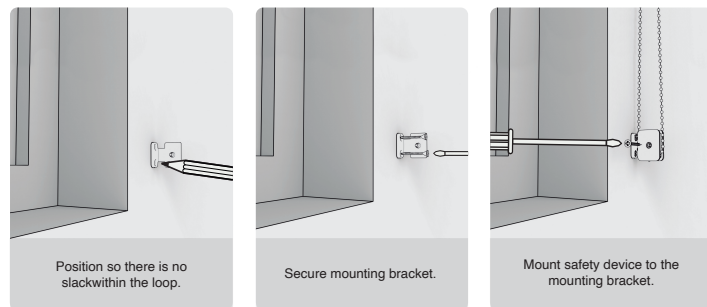

INSTALLATION TIPS

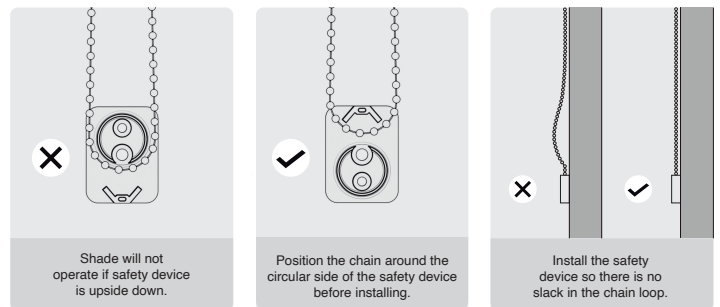

⚠ WARNING

The safety device is used to avoid free hanging bead chain loops. Read the following instructions carefully in order to properly install the Safety Device.