

Instruction Manual Manuel d'Instructions



support@kidsbuy.com
WWW.KIDSBUY.COM



Slide Function
Fonction Glissement



Swing Function
Fonction Oscillation



Climbing Function
Fonction Escalade



Arch Function
Fonction Arche

WARNING

- Assemble by an adult. Install this slide *AWAY* from child.
- Children must use this product under the guardianship of adults.
- The age range of this product is 1-5 years old.
- Only for one child weighing up to 50 kg.
- Only for domestic use.
- This activity toy is usually suitable for indoor use or temporary outdoor use.
- Use only with the mechanism securely engaged. Do not expose the product to direct sunlight for a long time.
- Keep the assembly and installation instructions for further reference.
- When the product is damaged, broken or disassembled, stop using the product.
- It is recommended that the activity toy be placed on a horizontal surface at least 2 meters away from any structure or obstruction such as a fence, garage, house, overhanging branches, laundry lines or electrical wires.
- The activity toys shall be used over concrete, asphalt or any other hard surface. Do not use in soil that is not hard.
- Consumers should not modify original activity toys without guidance from the manufacturer or a professional, especially to reduce the number of certain products.
- This product is not for commercial use and will not carry any warranty for commercial use.

CLEANING INSTRUCTION

Use a soft sponge or cloth with some detergent to scrub the surface of products, and then dry the surface with dry cloth.

MAINTENANCE INSTRUCTIONS

- Regular inspection and maintenance of major components, without which the activity toys may tip over or become hazardous.
- Check the tightness regularly and tighten as required.
- Always check all plastic parts to avoid cracks or abrasion and make sure it is properly fixed when necessary.
- Replace defective parts in accordance with the manufacturer's instructions.

AVERTISSEMENT

- Assemblage par un adulte. Instalez cette diapositive loin de l'enfant.
- Les enfants doivent utiliser ce produit sous la garde d'adultes.
- La tranche d'âge de ce produit est de 1 à 5 ans.
- Uniquement pour un enfant pesant jusqu'à 50 kg.
- Uniquement pour usage domestique.
- Ce jouet d'activité est généralement adapté à l'utilisation intérieure ou à l'utilisation temporaire extérieure.
- N'utilisez que lorsque le mécanisme est correctement engagé. Ne pas exposer le produit à la lumière directe du soleil pendant longtemps.
- Gardez les instructions d'assemblage et d'installation pour référence ultérieure.
- Lorsque le produit est endommagé, cassé ou désassemblé, arrêtez d'utiliser le produit.
- Il est recommandé que le jouet d'activité soit placé sur une surface horizontale d'au moins 2 mètres de toute structure ou obstacle comme une clôture, un garage, une maison, des branches en surplomb, des cordelles à linge ou des fils électriques.
- Les jouets d'activité doivent être utilisés sur du béton, de l'asphalte ou toute autre surface dure. Ne pas utiliser dans le sol qui n'est pas dur.
- Les consommateurs ne doivent pas modifier les jouets d'activité originaux sans la guidance du fabricant ou d'un professionnel, en particulier pour réduire le nombre de certains produits.
- Ce produit n'est pas destiné à un usage commercial et ne bénéficiera d'aucune garantie pour un usage commercial.

INSTRUCTIONS DE CLINATION

Utilisez une éponge ou un tissu doux avec un détergent pour laver la surface des produits, puis sécher la surface avec un tissu sec.

INSTRUCTIONS DE MAINTENANCE

- L'inspection et l'entretien réguliers des principaux composants, sans lesquels les jouets d'activité peuvent surmonter ou devenir dangereux.
- Contrôlez la serrure régulièrement et serrez le cas échéant.
- Vérifiez toujours toutes les parties en plastique pour éviter des fissures ou des abrasions et s'assurer qu'elles sont correctement fixées lorsque nécessaire.
- Remplacer des pièces défectueuses conformément aux instructions du fabricant.

XST-H01 PARTS LIST / XST-H01 LISTE DES PIÈCES



#1X1 (A+B)



#2X3



#3X1 (A+B)



#4X1 (A+B)



#5X1



#6X1



#7X1



#8X2



#9X1



#10X1



#11X2



#12X1



#13X1



#14X1



#15X1



S1X7



S2X2



S3X18



S4X2



S5X18



S6X2

 
 
 
 
 
 


S8X1


STAIR INSTALLATION / INSTALLATION DE ESCALIER



INSTALL THE SLIDE WAITING AREA INSTALLATION DE LA ZONE D'ATTENTE DU GLISSEMENT

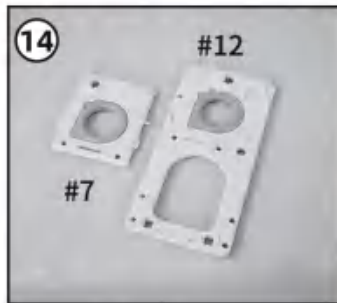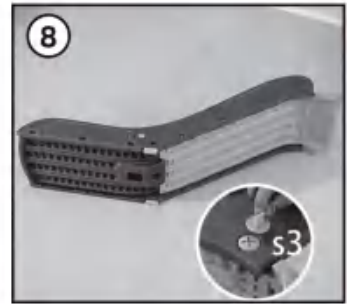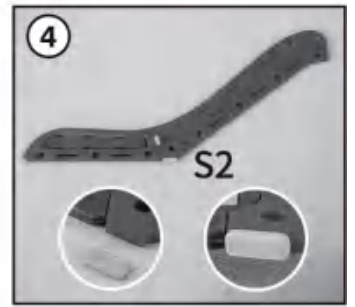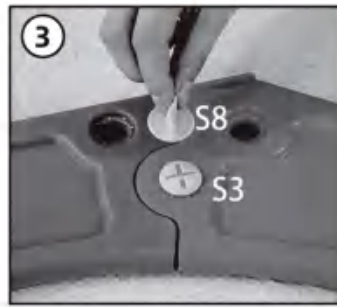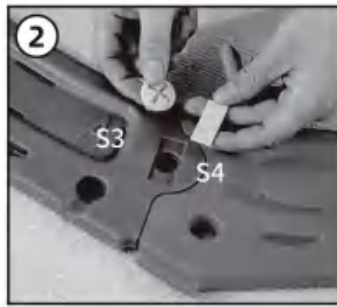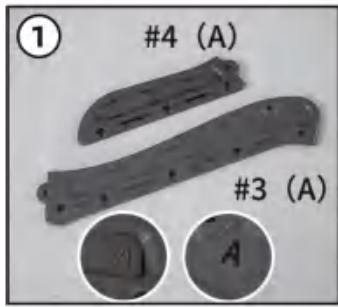

 ASSEMBLY PROCEDURE / PROCÉDURE D'ASSEMBLAGE

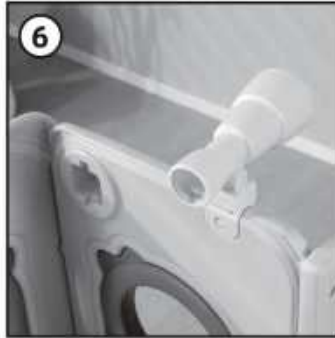

XST-H02 PARTS LIST / XST-H02 LISTE DES PIÈCES



#1X1 (A+B)



#2X3



#3X1 (A+B)



#4X1 (A+B)



#5X1



#6X1



#7X1



#8X2



#9X1



#10X2



#11X2



#12X1



#13X1



#14X2



#15X1



#16X2



#17X1



#19X1



#20X1



S1X7



S2X2



S3X19



S4X3



S5X32

 


S6X2

















S8X1

STAIR INSTALLATION / INSTALLATION DE ESCALIER

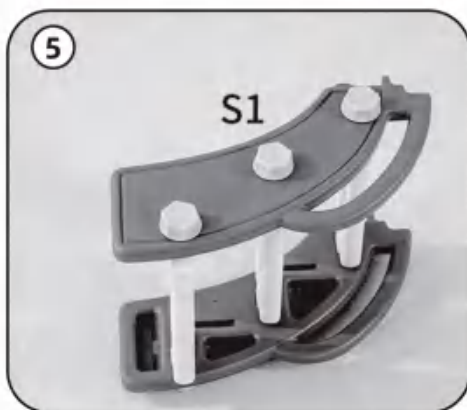

              INSTALL THE SLIDE WAITING AREA INSTALLATION DE LA ZONE D'ATTENTE DU GLISSEMENT

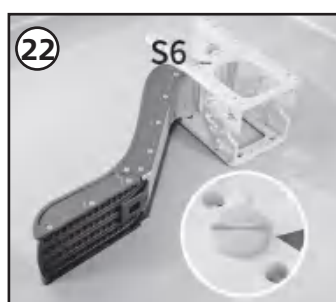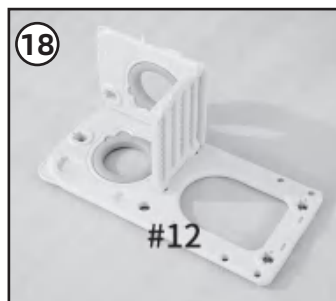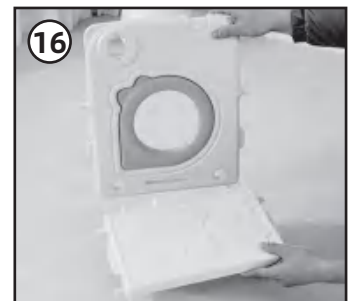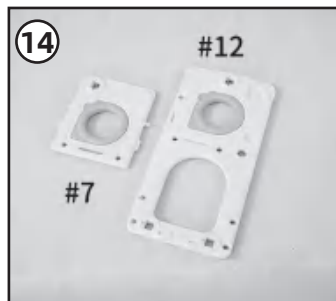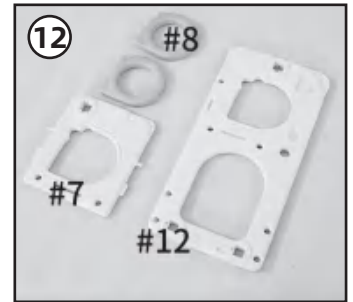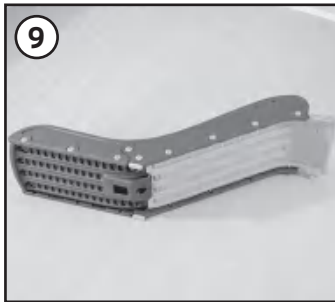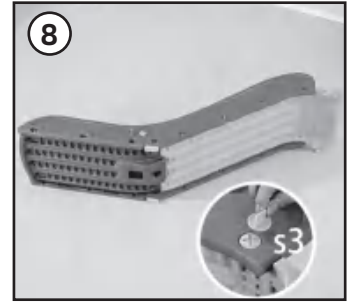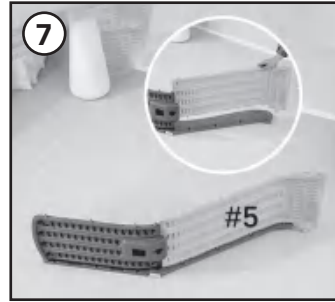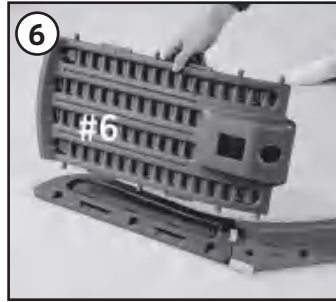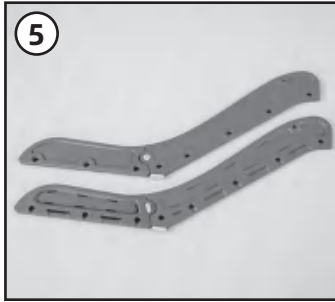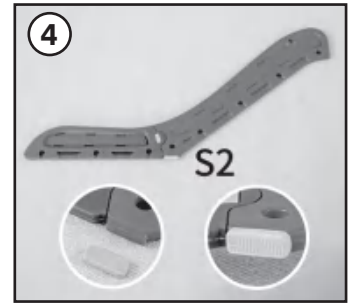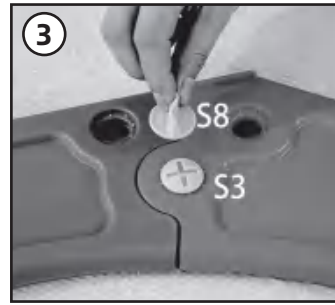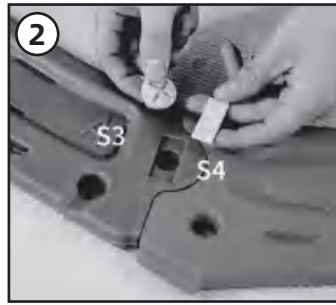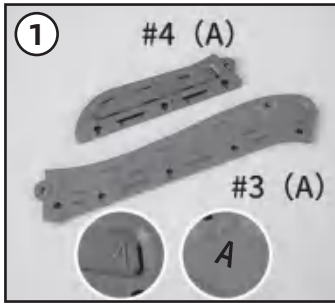

LARGE AISLE INSTALLATION / INSTALLATION DE GRANDE ALLÉE



ASSEMBLY PROCEDURE / PROCÉDURE D'ASSEMBLAGE



XST-H03 PARTS LIST / XST-H03 LISTE DES PIÈCES



#1X1 (A+B)



#2X3



#3X1 (A+B)



#4X1 (A+B)



#5X1



#6X1



#7X1



#8X3



#9X1



#10X1



#11X2



#12X2



#13X2



#14X1



#15X1



#18X1



#20X2



#21X1



#22X1



#25X1



#26X1



S1X13



S2X2



S3X18



S4X2



S5X27



S6X2



S7X2

 
 
 
 
 
 
 
 


S8X1


STAIR INSTALLATION / INSTALLATION DE ESCALIER



INSTALL THE SLIDE WAITING AREA INSTALLATION DE LA ZONE D'ATTENTE DU GLISSEMENT

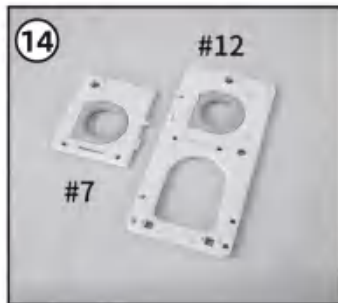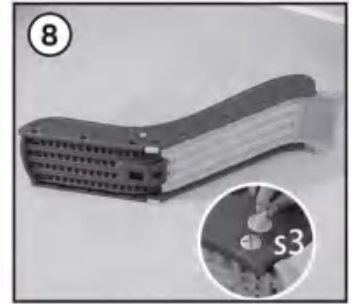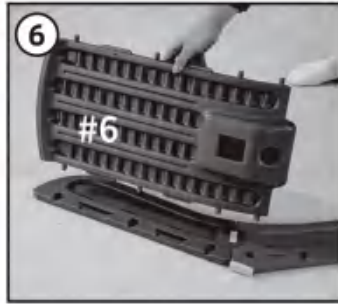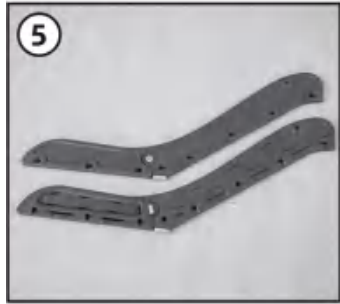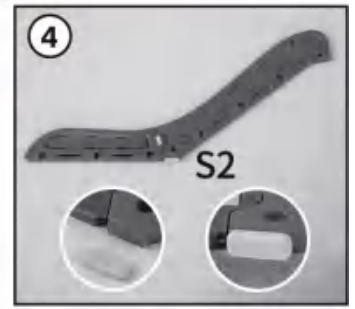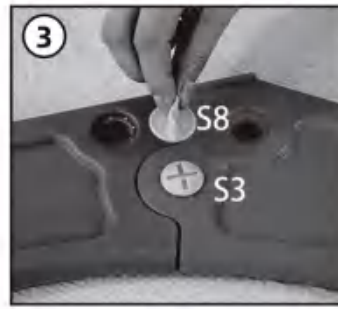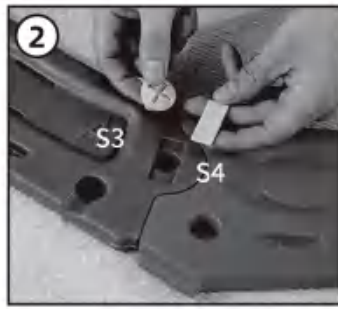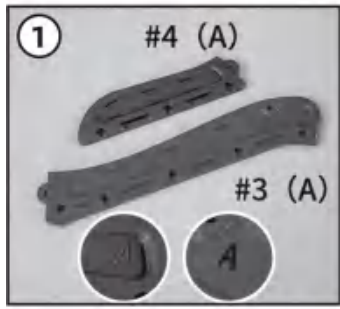

SWING MOUNTING / MONTAGE SWING

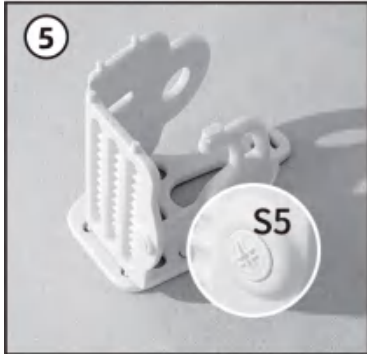 

ASSEMBLY PROCEDURE/ PROCÉDURE D'ASSEMBLAGE



PP04 PARTS LIST / PP04 LISTE DES PIÈCES



#1X1 (A+B)



#2X3



#3X1 (A+B)



#4X1 (A+B)



#5X1



#6X1



#7X3



#8X4



#9X1



#10X3



#11X4



#12X1



#13X1



#14X2



#15X2



#16X5



#17X1



#18X1



#19X1



#20X1



S1X7



S2X2



S3X18



S4X2



S5X50



S6X2



S8X1

 


S9X10


















S10X1






STAIR INSTALLATION / INSTALLATION DE ESCALIER

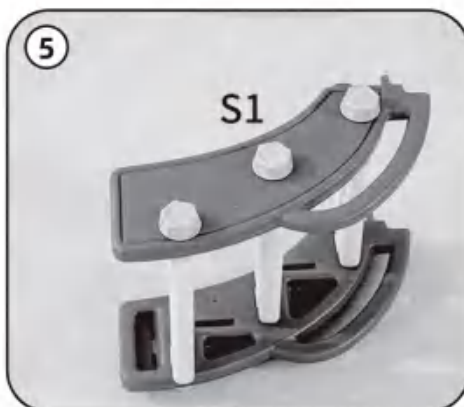

             
 
 
INSTALL THE SLIDE WAITING AREA INSTALLATION DE LA ZONE D'ATTENTE DU GLISSEMENT

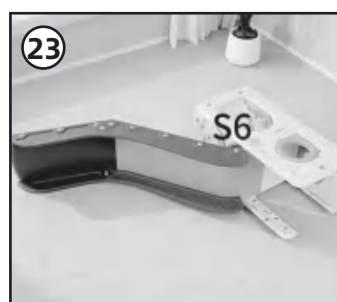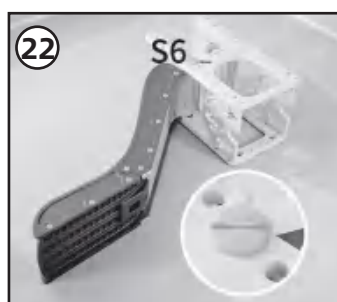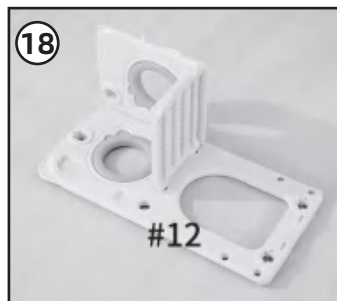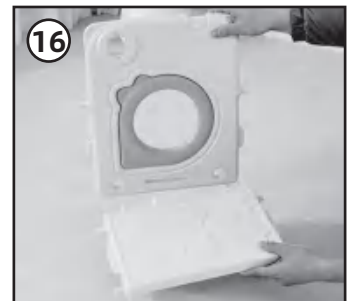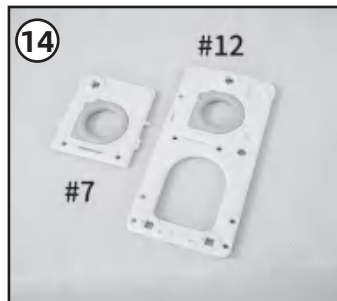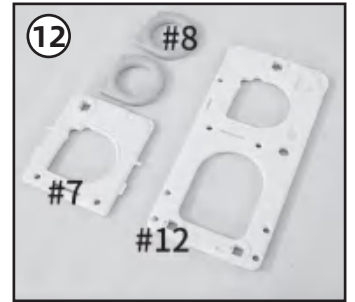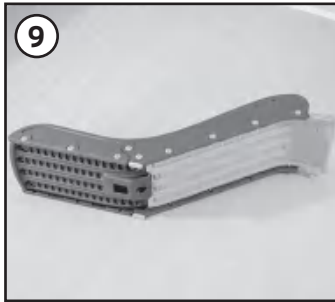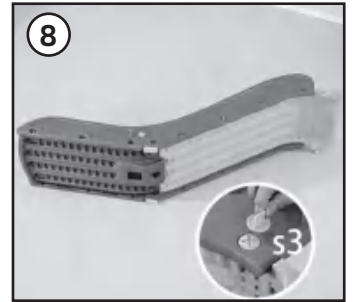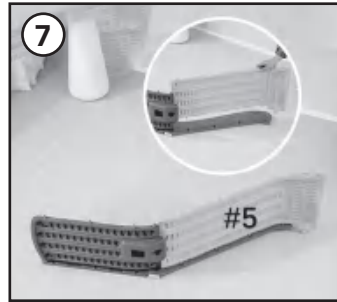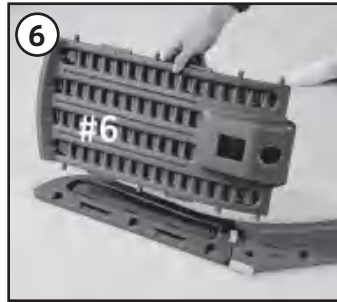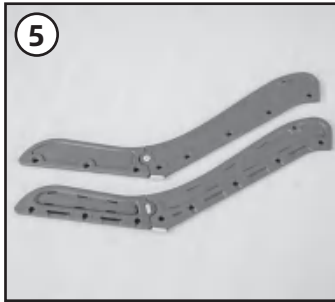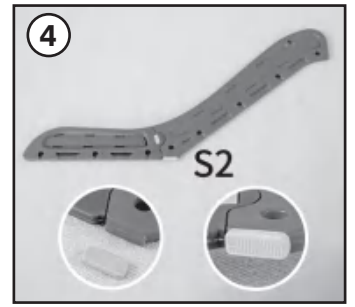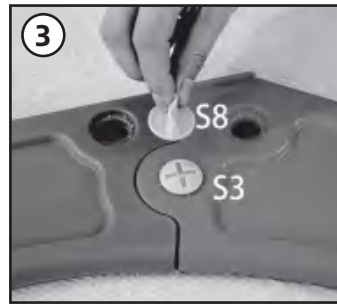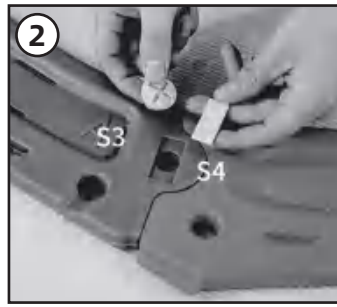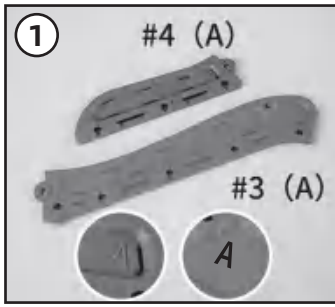

     ARCH INSTALLATION / INSTALLATION DE ARCHE

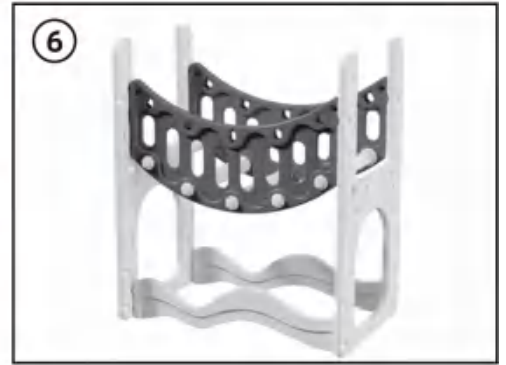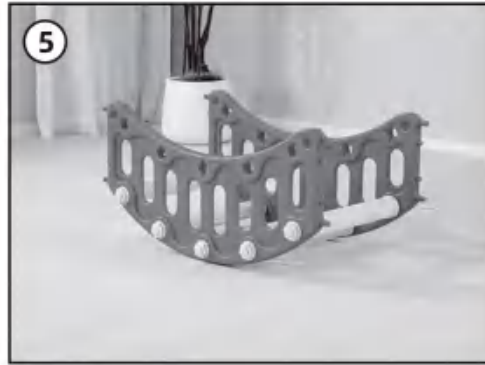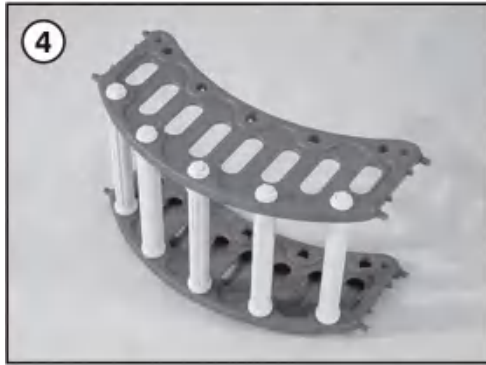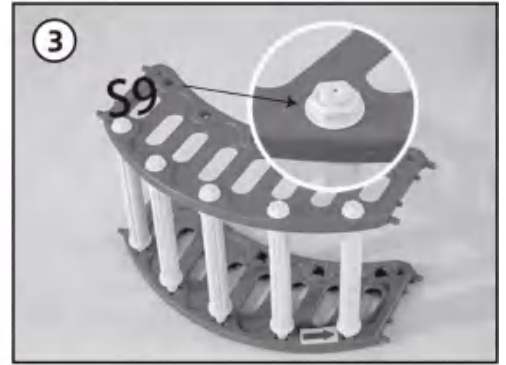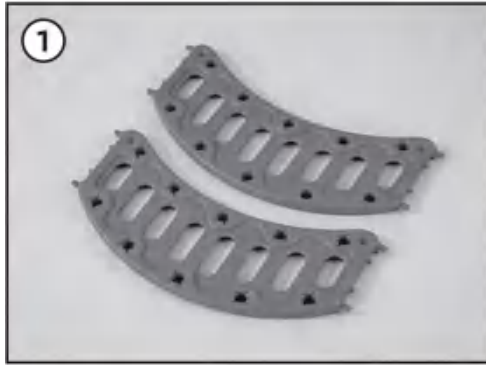

   WALKWAY INSTALLATION INSTALLATION DE SENTIER TECHNIQUE

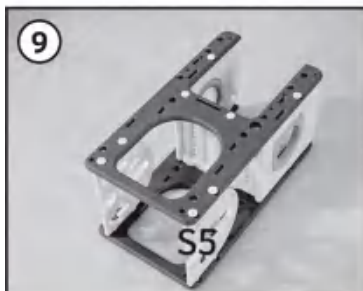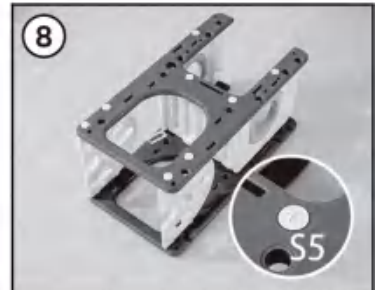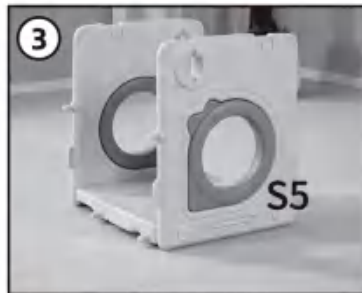

ASSEMBLY PROCEDURE / PROCÉDURE D'ASSEMBLAGE



PP06 PARTS LIST / XSPP06 LISTE DES PIÈCES



#1X1 (A+B)



#2X3



#3X1 (A+B)



#4X1 (A+B)



#5X1



#6X1



#7X3



#8X5



#9X1



#10X3



#11X4



#12X2



#13X1



#14X2



#15X2



#16X5



#17X1



#18X1



#19X1



#20X1



#21X2



#22X1



#23X1



#25X1



#26X1



#28X2



S1X13



S2X2



S3X18



S4X2



S5X59



S6X2



S7X2



S8X1



S9X10

 
 
 
 
 
 


S10X1




STAIR INSTALLATION / INSTALLATION DE ESCALIER





INSTALL THE SLIDE WAITING AREA INSTALLATION DE LA ZONE D'ATTENTE DU GLISSEMENT

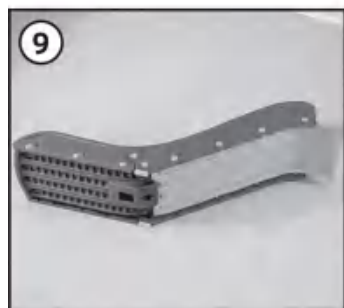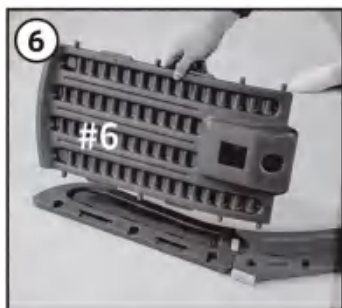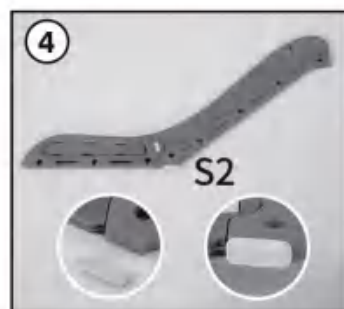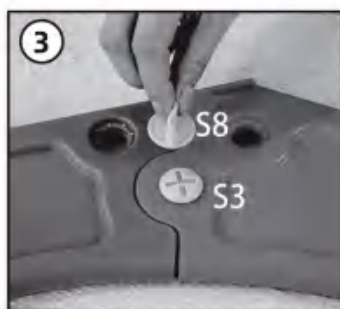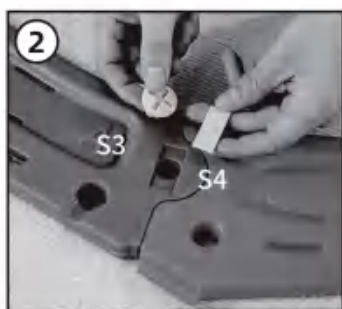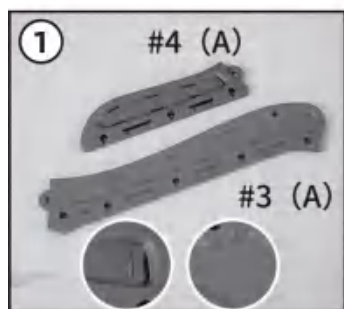

  
 
ARCH INSTALLATION / INSTALLATION DE ARCHE

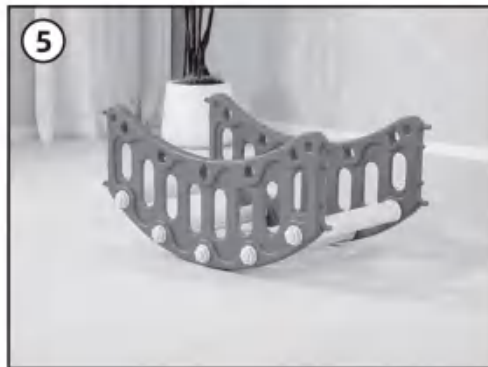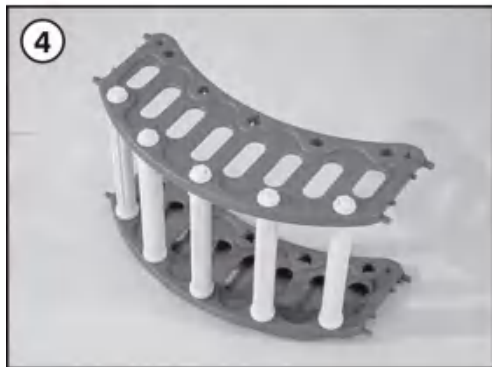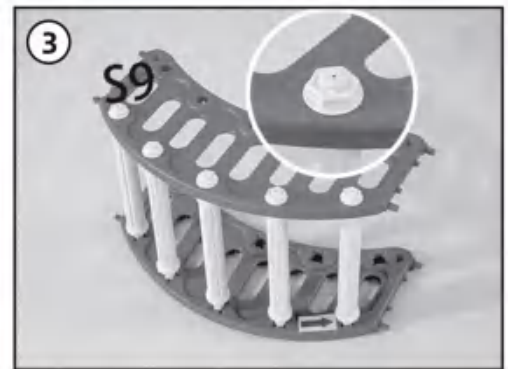


 
 
WALKWAY INSTALLATION INSTALLATION DE SENTIER TECHNIQUE

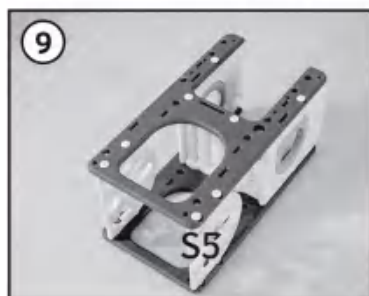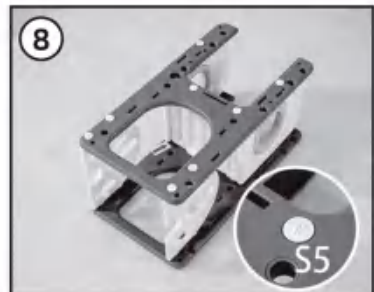

SWING MOUNTING / MONTAGE SWING

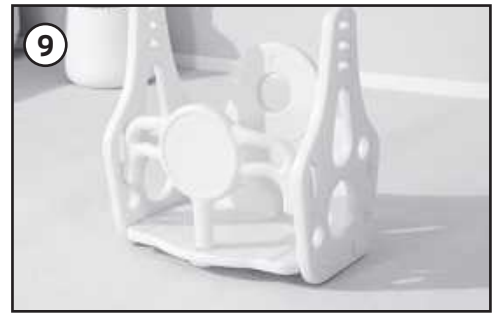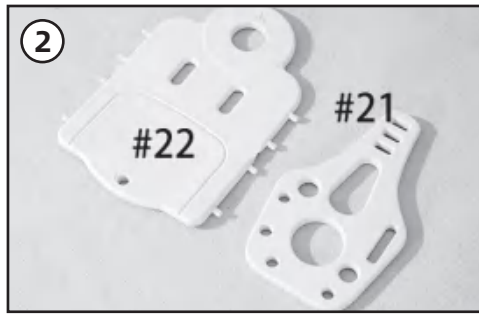  

   ASSEMBLY PROCEDURE / PROCÉDURE D'ASSEMBLAGE

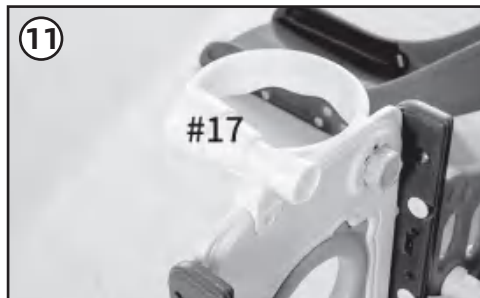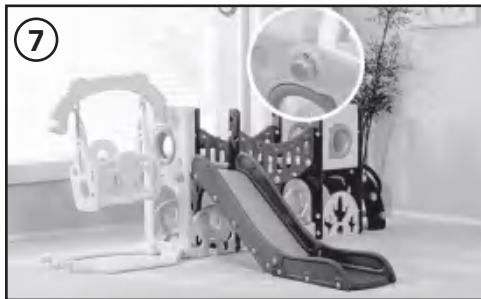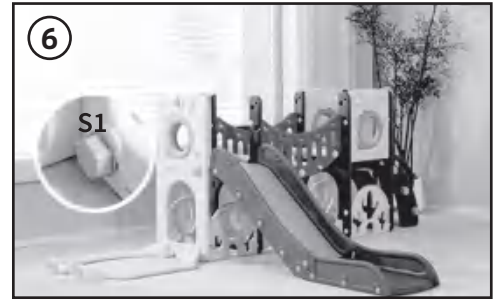



support@kidsbuy.com
WWW.KIDSBUY.COM

