 


Assembly Instructions

For more information contact our team: service.ec@foagroup.com

CM4086E

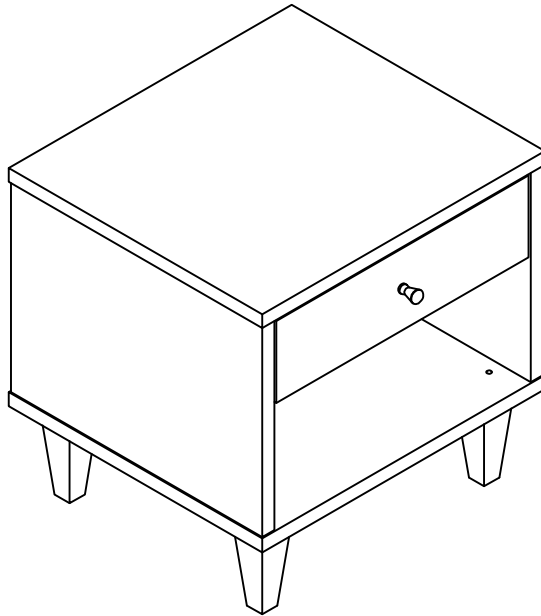

 
ASSEMBLY RATING

The Assembly Rating is a 5-point system that shows the degree of effort needed in assembling a specific product (with 1 being easy and 5 being difficult). For some products, two persons are recommended.



EASY  DIFFICULT

Tools Required For Assembly:

Allen Wrench



Phillips Screwdriver

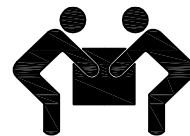  


2 PERSONS RECOMMENDED


ASSEMBLY & CARE ADVICE

FOR YOUR FURNITURE TO LAST, CORRECT ASSEMBLY AND PROPER MAINTENANCE ARE NECESSARY. PLEASE FOLLOW THE INFORMATION PROVIDED BELOW TO FULLY ENJOY YOUR FURNITURE.

 
BASIC ASSEMBLY TECHNIQUES

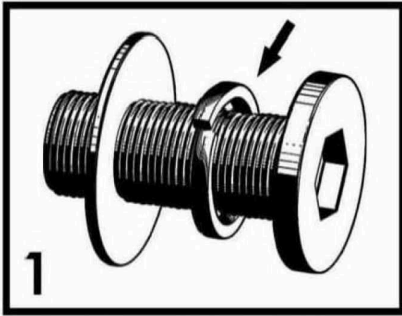

 
1 When lock or spring washer is used in an assembly, please make sure the lock or spring washer is placed between the larger flat washer and the head of the screw or bolt.

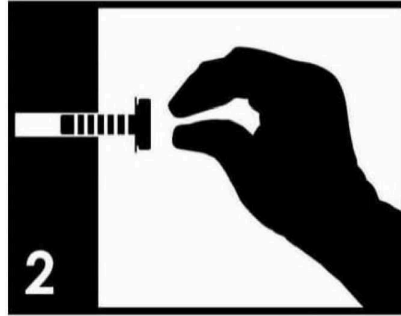

 
2 Position each part correctly and insert screws or bolts into their respective holes by hand tighten or using the proper hand tool. Only tighten when step is completed or when instructed to do so.

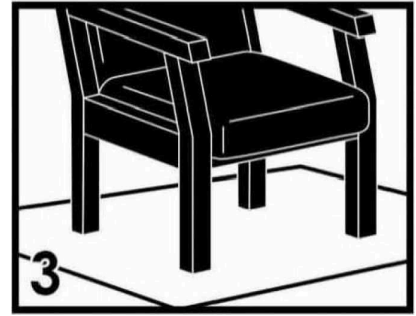

 
3 Use cardboard or carpet area when assembling furniture to prevent scratches. Make sure the furniture rests on a flat and level surface with each leg evenly touching the floor.

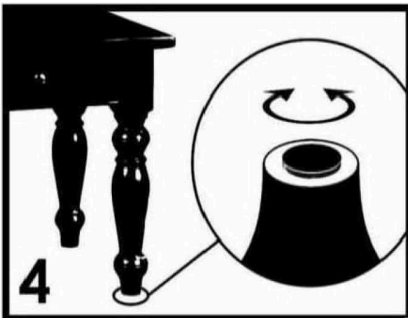

 4 Some furniture comes with height adjustment knobs underneath each leg. To lower or to raise each leg, you need to turn clockwise or counterclockwise, respectively.

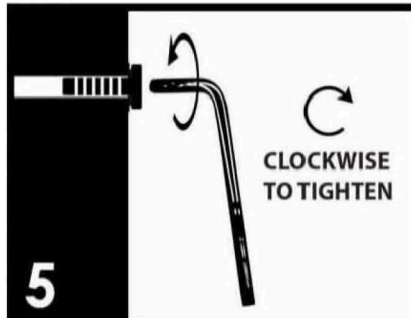


 5 Make sure all parts are properly aligned, then use the appropriate hand tool to completely tighten the bolts or screws. Do not use power tools and do not overtighten.

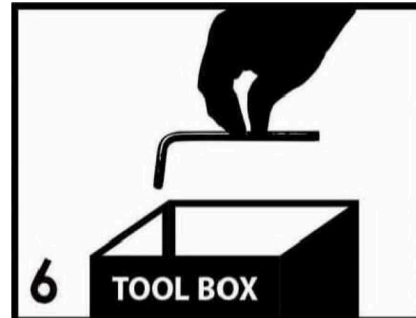

6 Save the instructions and store the Allen wrench or any supplied tool for later maintenance. After two weeks, check and tighten any loose hardware and repeat again every six months thereafter.

 IT IS THE USER'S RESPONSIBILITY TO MAINTAIN THE FURNITURE. THE HARDWARE MAY LOOSEN OVER TIME AND MAY CAUSE THE FURNITURE TO BE WOBBLY AND UNABLE TO SUPPORT ITS INTENDED WEIGHT CAPACITY. THIS MAY LEAD TO COLLAPSE AND MAY CAUSE SERIOUS INJURY.

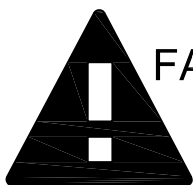


FAILURE TO FOLLOW THE GUIDELINES ABOVE MAY RESULT IN INJURY AND/OR PROPERTY DAMAGE.

Cam Lock Fastener Assembly


Cam Locks are fasteners used to join two boards together, usually the edge of one board (A) to the flat side of another board (B).



 Cam Lock




Cam Pin

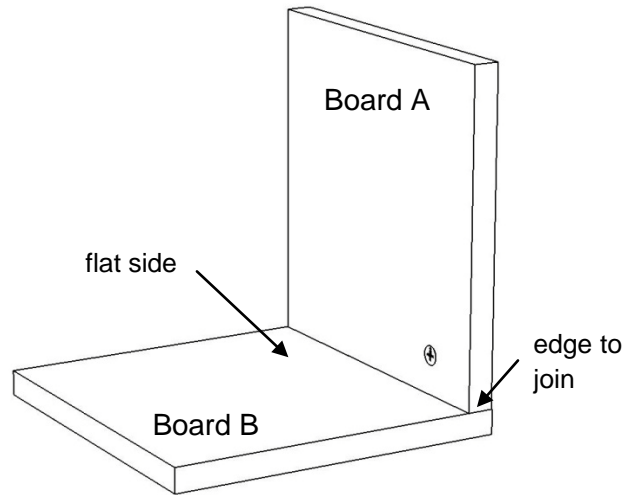 


To use Cam Lock Fasteners:

 
Step 1 - Insert Cam Pin into the flat side of a board. Tighten only until snug. Do not over-tighten.

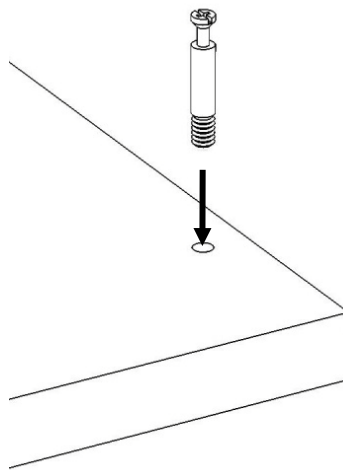

 
Step 2 - Fit the hole in the edge of the joining board over the Cam Pin. The head of the Cam Pin will be visible in the large hole in the side of the joining board, as in Step 3.

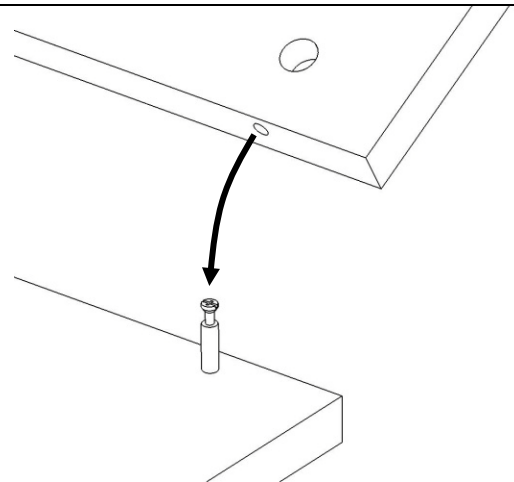


 Step 3 - Notice the Cam Lock has a "C"-shaped back. An arrow on the front points the same direction as the open section. Insert the Cam Lock into the large hole so the opening of the "C" fits over the head of the Cam Pin.

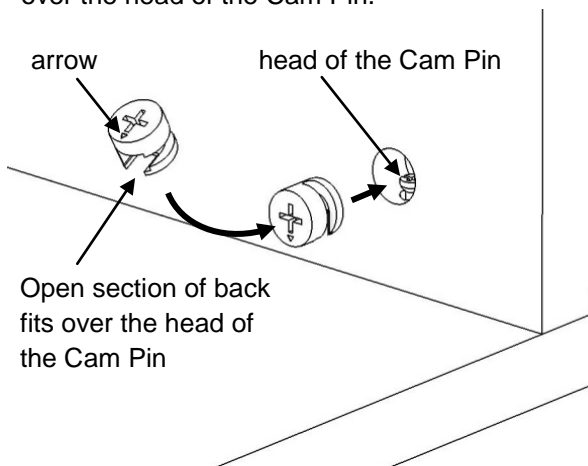

  Step 4 - Use a flat screwdriver to turn the Cam Lock clockwise one half a turn so it locks onto the head of the Cam Pin. Turn only until it is snug – over-tightening could cause the Cam to bend or break. If it will not turn the full amount, turn the Cam Pin out (counter-clockwise) one full turn, and try the Cam Lock again.





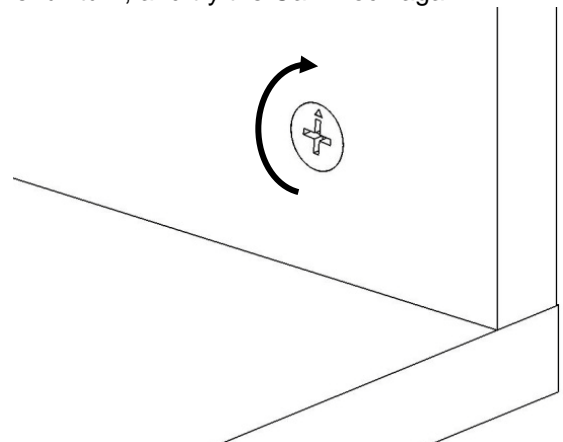

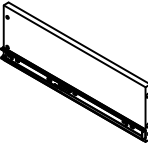
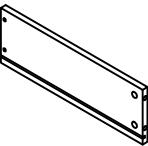


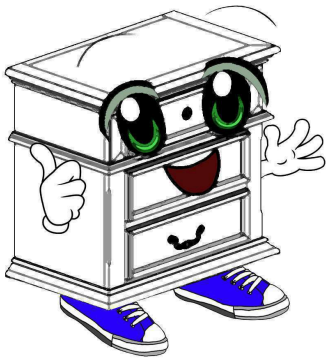



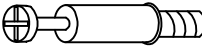





Before you begin, please read Page 2 of "Assembly and Care Advice".

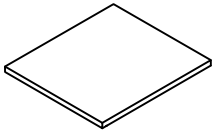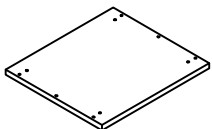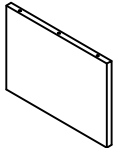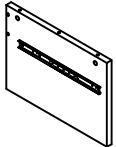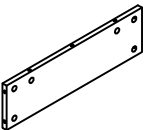
And remember, do not tighten until each step is completed or instructed.

Parts List

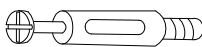	#1 X 1pc Top Panel
	#2 X 1pc Bottom Panel
	#3 X 1pc Left Side Panel
	#4 X 1pc Right Side Panel
	#5 X 1pc Back Panel
	#6 X 4pcs Leg
	#7 X 1pc Drawer Left Side Panel
	#8 X 1pc Drawer Right Side Panel

Hardware List




 
	#A X 10pcs Large Cam Bolt L29
	#B X 10pcs Large Cam Lock Ø15
	#C X 4pcs Small CAM Bolt L20
	#D X 4pcs Small CAM Lock Ø12
	#E X 2pcs Long Dowel Ø6x30
	#F X 9pcs Short Dowel Ø8x25
	#G X 6pcs Screw Ø4x30
	#H X 4pcs Wood Screw Ø7x48

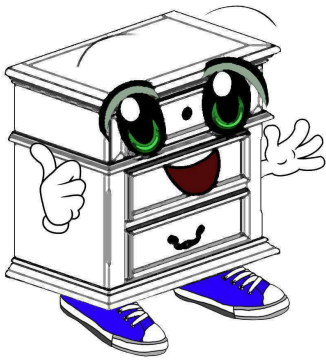








Before you begin, please read Page 2 of "Assembly and Care Advice".

And remember, do not tighten until each step is completed or instructed.


Parts List

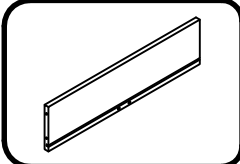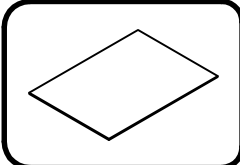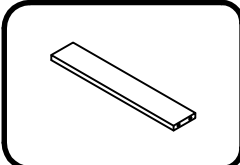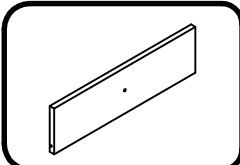-  #9 X 1pc
Drawer Back Panel
-  #10 X 1pc
Drawer Bottom Panel
-  #11 X 1pc
Drawer Bottom Support
-  #12 X 1pc
Drawer Front Panel

Hardware List

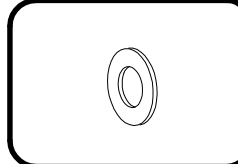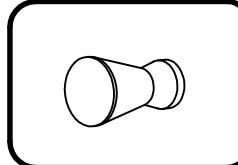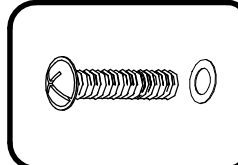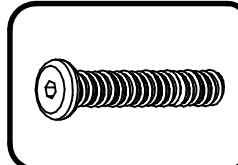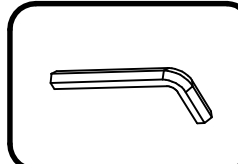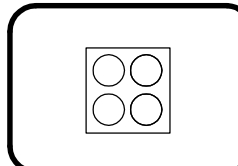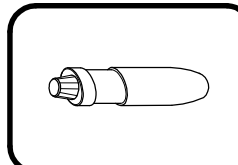-  #I X 8pcs
Flat Washer $\text{Ø}8 \times \text{Ø}16 \times 2$
-  #J X 1pc
Knob
-  #K X 1pc
Knob Screw M6x22
-  #L X 4pcs
Hexagon Socket Screw M8x35
-  #M X 1pc
Allen Wrench M5
-  #N X 4pcs
Sticker $\text{Ø}22$
-  #O X 1pc
Glue

 
Exploded View

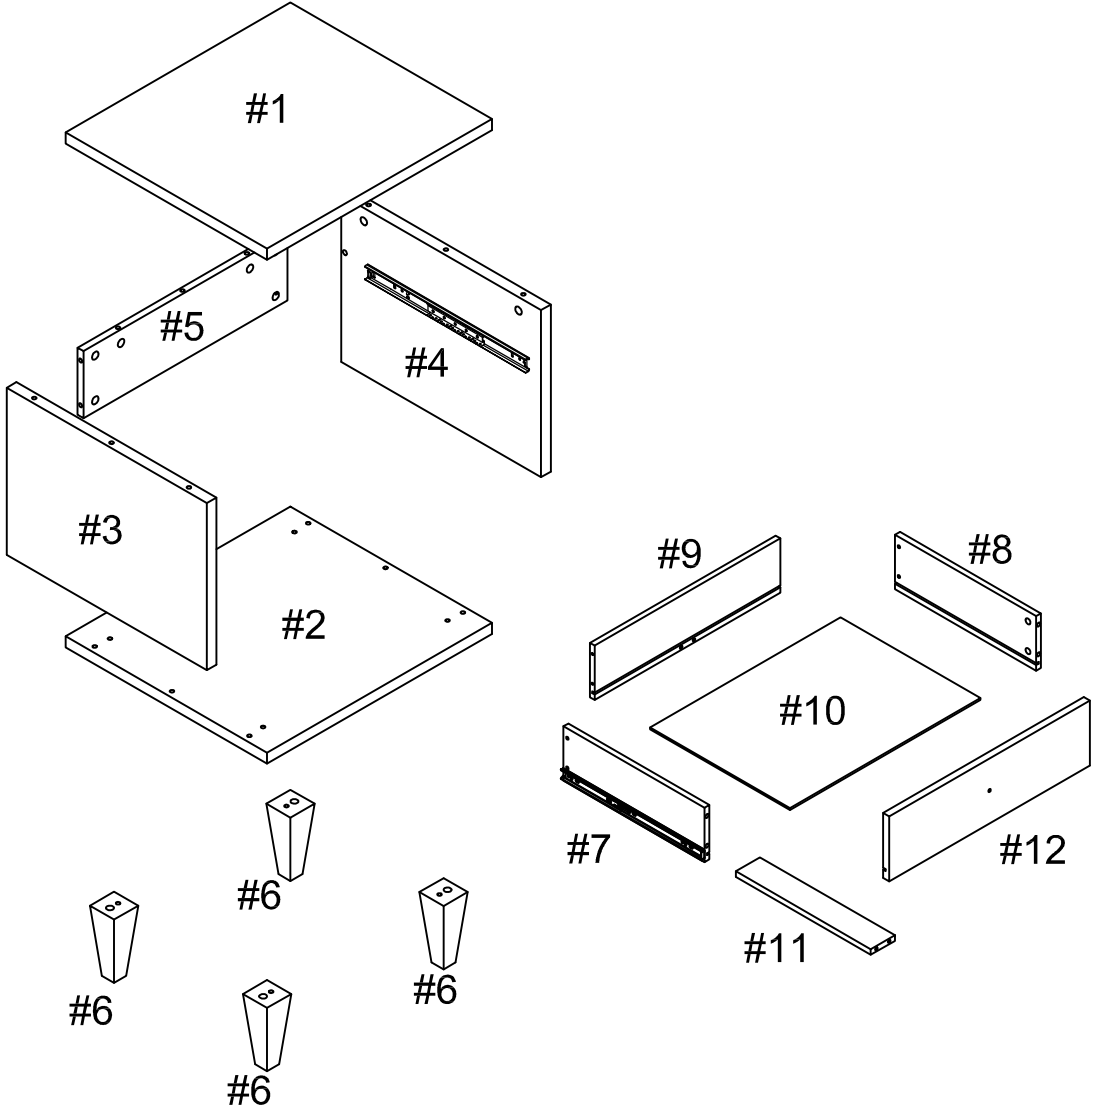




Align drawer side panels (#7,8) to the holes of the drawer back panel (#9).
Secure by using screws (#G).

#G X 4pcs

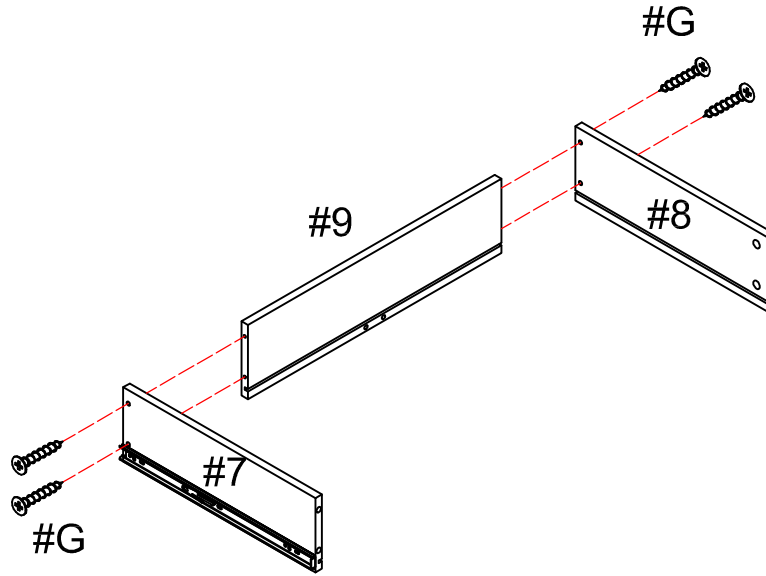 

Slide bottom panel (#10) to the thin lined gaps of the drawer. Align bottom drawer support (#11) to the holes of the drawer back (#9), then secure by using screws (#G).


#G X 2pcs

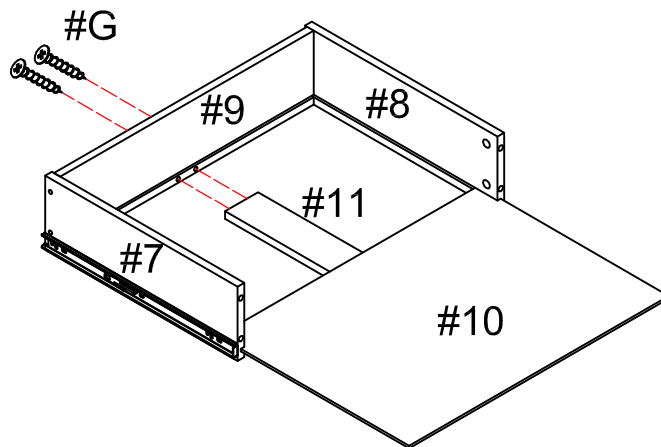 




Attach cam bolts (#C) and dowels (#E) to the holes of the front drawer panel (#12). Align front drawer panel (#12) to the holes of the drawer. Secure by using cam locks (#D). Align knob (#J) to the hole of the front drawer, then secure by using bolt and washer (#K).

 - #C X 4pcs
- #D X 4pcs
- #E X 2pcs
- #J X 1pc
- #K X 1pc

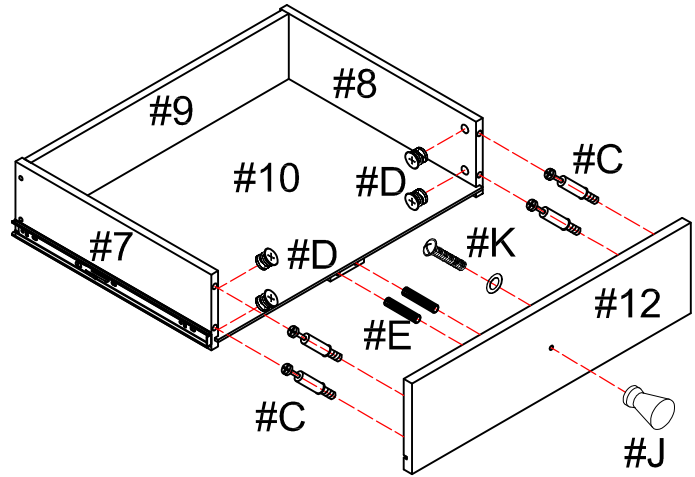

Attach cam bolts (#A) to the holes of the right side panel (#4). Align back panel (#5) to the cam bolts (#A) of the right side panel (#4). Secure by using cam locks (#B).

 
- #A X 2pcs
- #B X 2pcs

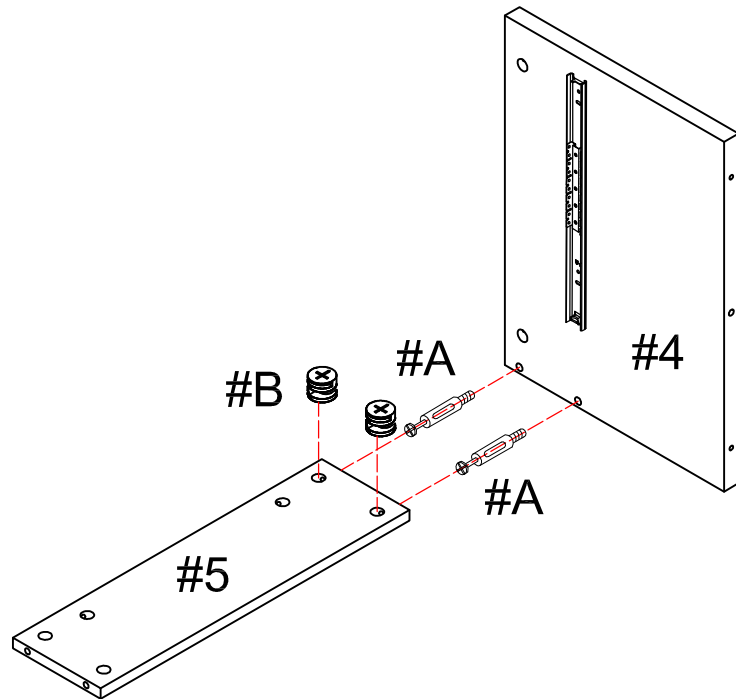




Attach cam bolts (#A) to the holes of the left side panel (#3). Align back panel (#5) to the cam bolts (#A) of the left side panel (#3). Secure by using cam locks (#B).

#A X 2pcs
#B X 2pcs

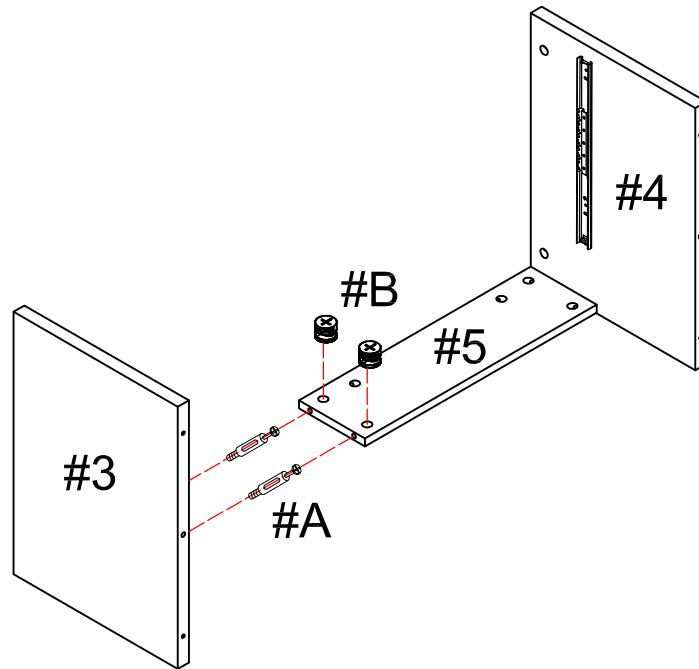 

Attach dowels (#F) to the holes of the bottom panel (#2). Align bottom panel (#2) to the side panels (#3,4), then secure by using bolts (#H) and washers (#I).


#F X 2pcs
#H X 4pcs
#I X 4pcs

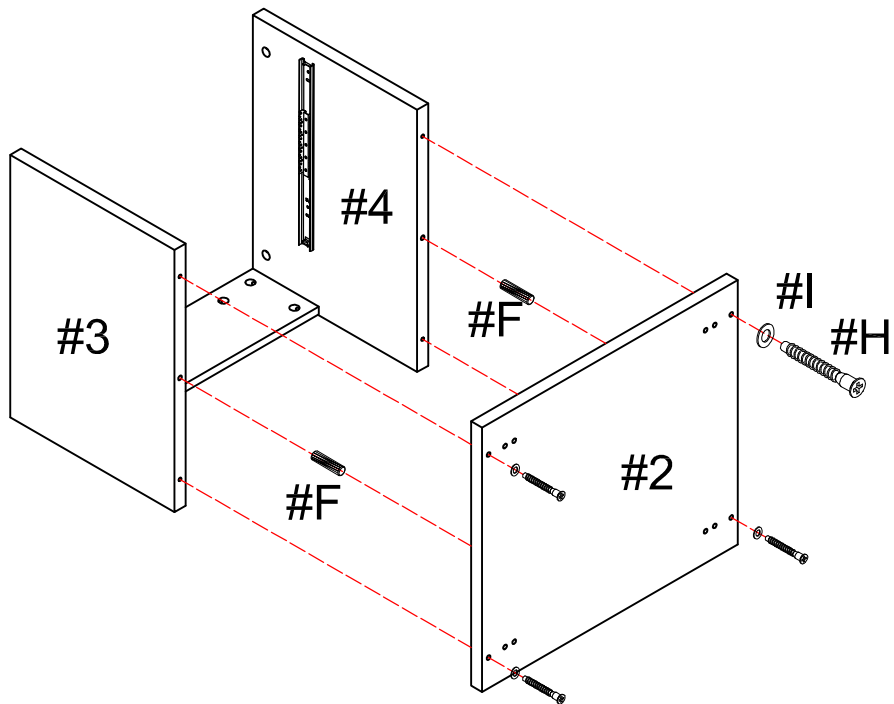 




Attach dowels (#F) to the holes of the bottom panel (#2). Align legs (#6) to the holes of the bottom panel (#2) then secure by using bolts (#L) and washer (#I). Use stickers (#N) to cover bolts (#L).

#F X 4pcs
 #L X 4pcs
 #I X 4pcs
 #N X 4pcs

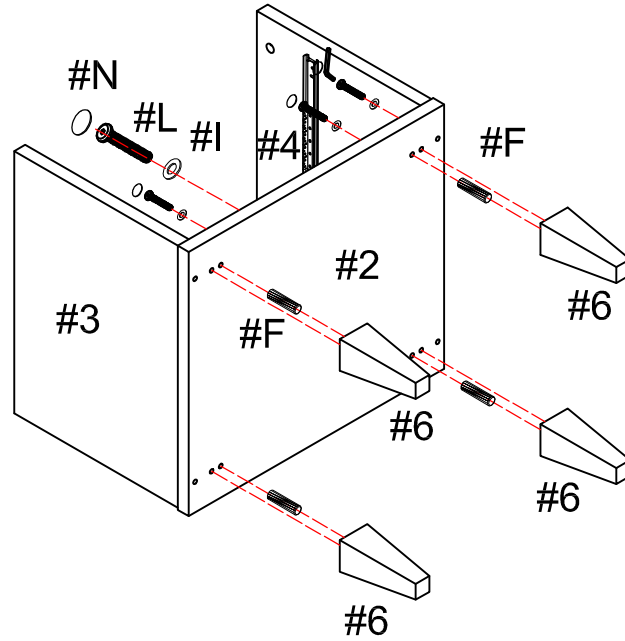 



Attach cam bolts (#A) and dowels (#F) to the holes of the top panel (#1). Align top panel (#1) to the holes of the nightstand, then secure by using cam locks (#B).

#A X 6pcs
 #B X 6pcs
 #F X 3pcs

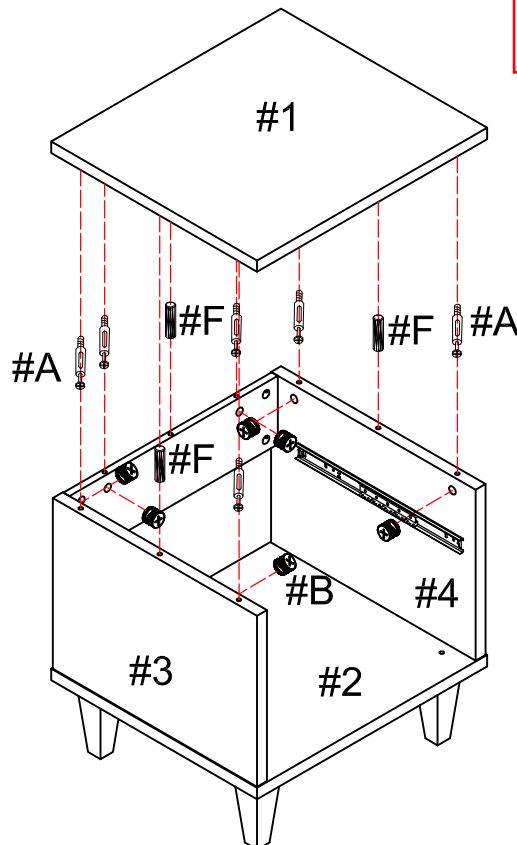 



  Align the drawer rails to the ball bearing glides of the nightstand, then push to attach and lock the drawer rails together.

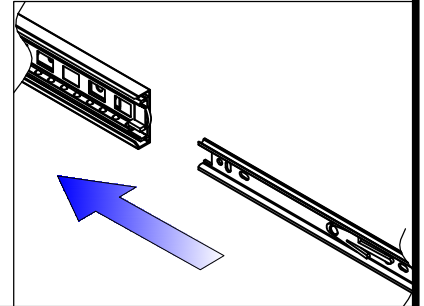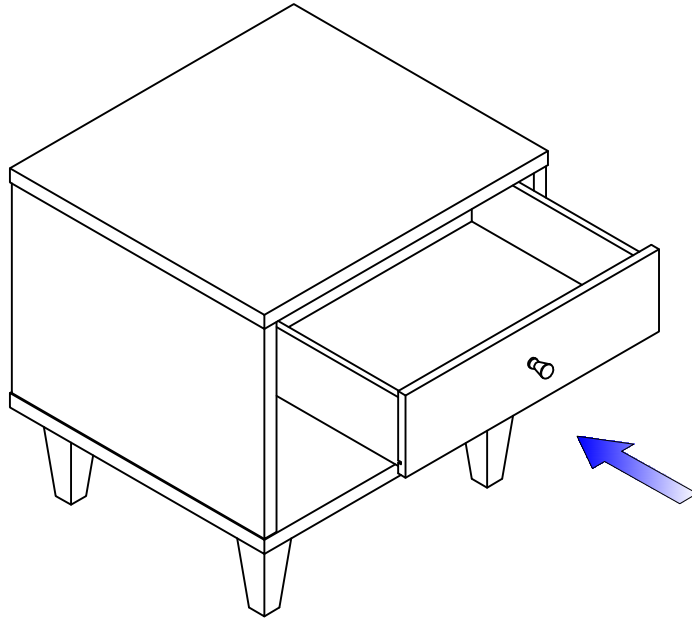

ASSEMBLY COMPLETED

