



# CPS50279

## 300D


### INSTRUCTION MANUAL

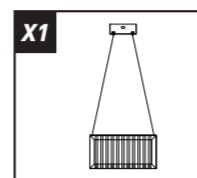


X1  
Canopy with  
lampholder  
assembled

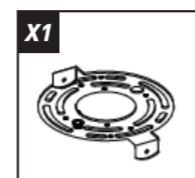


X1  
Mounting  
Bracket

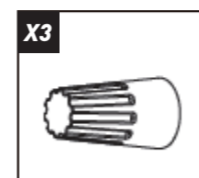

X3  
Wire  
connector

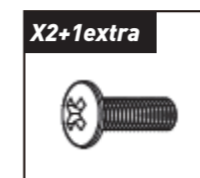


X2+1extra  
Canopy screw

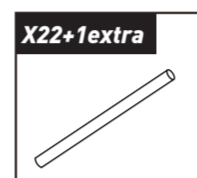

X22+1extra  
Glass Rod

### ASSEMBLY INSTRUCTIONS


**1** The light body has been installed. After unpacking, you only need to check if the fragile glass fittings are damaged. If there is any damage, please take out the broken glass fittings safely according to the drawing, then replace the spare glass rod in the accessory bag.

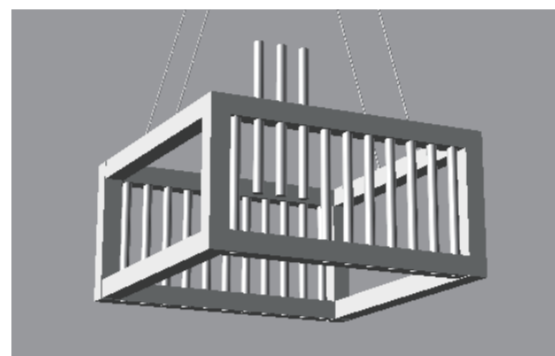

**2** Check whether the silicone covering the LED light source has come off or shifted. There is a shift phenomenon, you need to take out the section of silicone, and then align the edge line, press with the lamp body of the card slot installation can be neat.


**3** Turn off power at the circuit breaker and the light switch. Ensure the power is off before continuing.

**4** Install the mounting bracket on the junction box using the junction box screws (fig. 3).

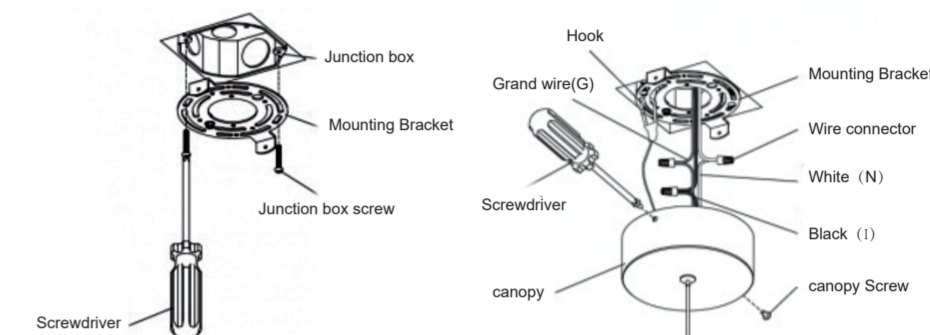


The brightness of the light source can be adjusted according to the installation requirements, please take care not to exceed the maximum power requirements of the lamp.

#### INCLUDED

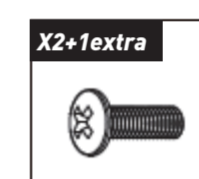

X2+1extra  
Canopy screw

#### WHAT YOU WILL NEED...

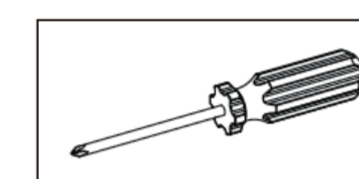

Screwdriver

### CARE AND MAINTENANCE

#### WARNING:

Risk of electrical shock. Turn off breaker at the panel. Switch off the main electrical supply from the fuse box/circuit breaker before installing the unit or doing any maintenance.

Do not use outdoor.

**CAUTION:** If using a dimmer, it must be LED compatible.

#### WARNING:

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

**1** this device does not cause harmful interference, and

**2** this device must accept any interference received, including interference that may cause undesired operation. NOTE: This equipment has been tested and found to comply with the limits for Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to

provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio or television reception. However, there is no guarantee that interference will not occur in a particular installation. If this equipment causes harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna. Increase the separation between the equipment and the receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an experienced radio/TV technician for help.

### HEIGHT ADJUSTMENT

**NOTE:** It is recommended to make any major adjustments to the height of the light fixture before installation.

**1** With the power off, measure the distance from the ceiling to the bottom of where you would like your light fixture to hang.

**2** To retract the wire, gently push it into the light fixture base (fig. 1).

**3** To extend the wire, push the metal collar while gently pulling the wire down (fig. 2). When the metal collar is released, the wire will be fixed into position.

**4** Once the wire is at the desired length, turn the fixture over and slide the plastic wire retainer up to the wire nut, to prevent the pendant from slipping down when in use.

