



ITEM #: RVY-CC5460-4

IMPORTANT SAFETY INSTRUCTIONS

- To avoid injury or damage, mount only on a surface that is sturdy.
- To avoid electric shock, make sure the electricity is turned off at the main circuit breaker panel. If you are replacing an existing fixture, turn off the following in order: fixture, wall switch, and main fuse or breaker box.
Note: Some types of fuses must be unscrewed to shut the power off.
- If you are unclear as to how to proceed, please consult a licensed electrician.

UNPACK THE FIXTURE: Check the contents of the box. Box should contain all items on the parts diagram.



For any replacement parts or installation issues, please Contact Us!

Email: help@kira-home.com


Facebook/Instagram: @KiraHomeDecor

Phone: 888.208.2085

INSTALLATION INSTRUCTIONS

1. Measure Canopy (D) height with measuring tape. Adjust Canopy Screws (E) on Mounting Plate (A) to the height of measured Canopy (D) plus 1/4" to allow them to protrude through Canopy (D) during installation. Lock Canopy Screws (E) in place with the hex nuts.
2. Secure Mounting Plate (A) to the junction box (not included) using Mounting Screws (B) provided. Ensure Mounting Plate (A) is positioned with the threads of Canopy Screws (E) pointing down towards the floor.
3. Place Canopy (D) flush against the ceiling with Canopy Screws (E) protruding through the holes in Canopy (D). Verify that 1/4" of the threaded portion of Canopy Screws (E) are visible. Remove Canopy (D) and set it aside.
Note: If 1/4" of Canopy Screws (E) are not visible, remove Canopy (D) and re-adjust Canopy Screws (E) to proper height and lock them in place with the hex nuts.
4. Thread Wires (H) from Fixture Body (I) through Center Pole (M) and Center Rod (N). Secure Center Pole (M) to Fixture Body (I) by screwing Center Rod (N) into the coupling on Fixture Body (I). Pull through any necessary Wire (H).
5. Determine desired hanging length using Downrods (G). Secure Downrods (G) together.
6. Thread Wire (H) through Downrods (G). Secure Downrods (G) to the top of Center Rod (N).
7. Use wire cutters to cut Wire (H) 10" beyond the length of Downrods (G) to allow for easier wire connection.

8. Thread Wire (H) through bottom of Canopy (D). Secure Canopy (D) to the top of Downrods (G).
9. Using the wire graph below, connect the appropriate wires from the fixture to the corresponding wires in the electrical junction box (not included) and secure Wire Connectors (C).

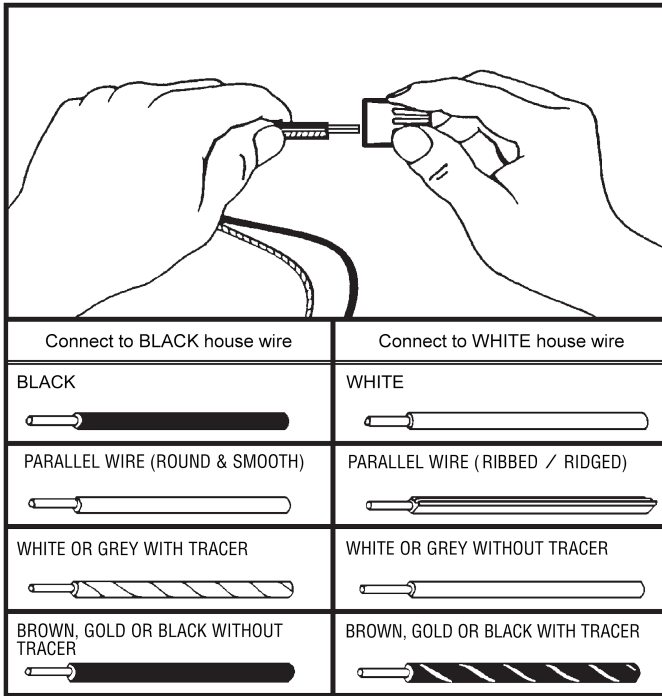

- A. Connect the ground wire (bare copper or green) from your fixture to the:
 - 1) ground wire in the junction box, or
 - 2) ground screw in the junction box
- B. Connect the BLACK house wire to fixture hot wire that corresponds to diagram (black, round & smooth, white/grey with tracer, brown/gold without tracer).
- C. Connect the WHITE house wire to fixture neutral wire that corresponds to diagram (white, ribbed/ridged, white/grey without tracer, brown/gold with tracer).

10. Place all Wires (H) and Wire Connectors (C) back into the junction box.
11. Place Canopy (D) against the ceiling, ensuring Canopy Screws (E) are protruding through the holes in Canopy (D). Secure Canopy (D) and the fixture in place with Decorative Caps (F).
Note: If the fixture does not sit flush against the ceiling, remove the fixture and readjust Canopy Screws (E) and hex nuts.
12. Place Shades (L) over Sockets (K) and secure in place with Socket Rings (J).
Note: Socket Rings (J) should already be attached to Sockets (K). Remove them before installing Shades (L). Use the included tool to assist in securing Socket Rings (J) in place.
13. Install bulbs (not included) into Sockets (K).

Enjoy your new fixture!



ITEM #: RVY-CC5460-4 - PARTS DIAGRAM

HELPFUL TOOLS: Safety Goggles, Screwdriver, Wire Cutter/Stripper, Ladder, Chain Pliers

