

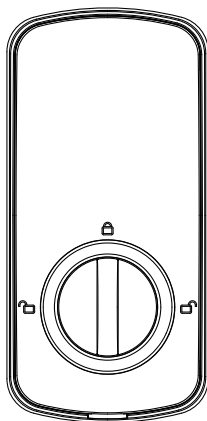


User Manual

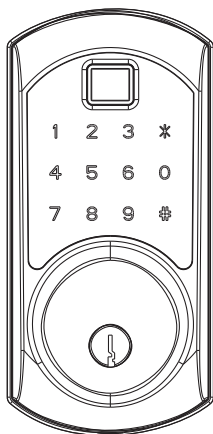


Note:

**This user manual suitable for
A02FT and A04 Pro**

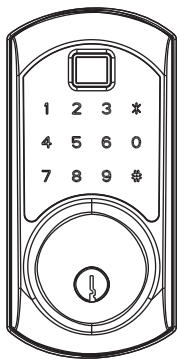

A02FT

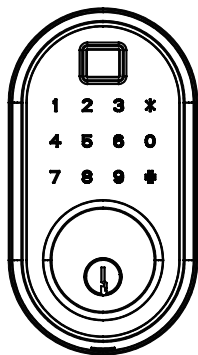

A04 Pro


Specifications

Working Voltage	5.2~6.4VDC
Battery	4*AA alkaline batteries
Working Temperature	-20°C~55°C (Not condensation)
Door Thickness	35~50mm
Material	Aluminium Alloy
Color	Satin Nickel, ORB, Matte Black
Access Method	Manual key override, Pin-code, Fingerprint
Pin Code	99 Groups (1 Master code & 98 User codes)
Fingerprint	99 Groups
Humidity	20%~93%


Components Overview



 
Front Body x 1



Mounting Plate x 1

 

Back Body x 1

 

Deadbolt x 1



Strike Box X 1



Strike Plate x 1



Key x2



ST3.5*20
x 5



M6*50
x 2




M4*8
x 2




M4*25
x 1

Lock Body Overview

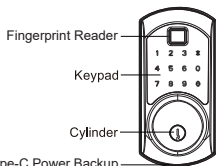


Front Body

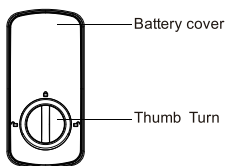

Back Body

Installation Guide

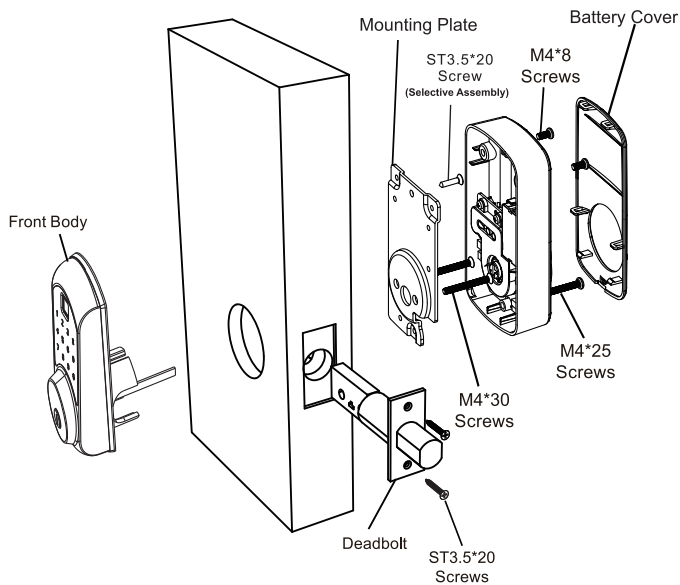




Adjustable Deadbolt Latch Set



NOTE: Deadbolt Latch Set is shipped with the backset set at 2-3/8" (60mm). Measure the backset (backset is distance between edge of the door and the center of Lock).




1. TO CONVERT FROM 2-3/8" (60mm) BACKSET TO 2-3/4" (70mm) BACKSET

- Rotate the cylinder cover clockwise (Figure 1a).
- Pull and twist the extension plate all the way out (Figure 1b).
- Finish convert (Figure 1c).

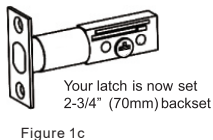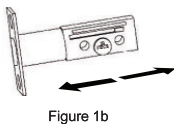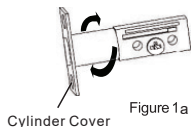


2. TO CONVERT FROM 2-3/4" (70mm) BACKSET TO 2-3/8" (60mm) BACKSET

- Rotate the cylinder cover anticlockwise (Figure 2a).
- Push and twist the extension plate all the way in (Figure 2b).
- Finish convert (Figure 2c).

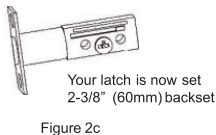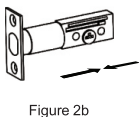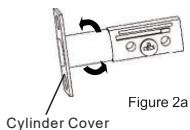


Installation Guide

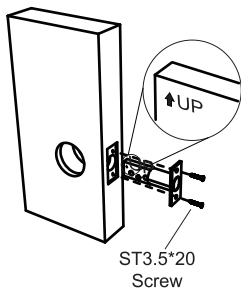


3. INSTALLING THE DEADBOLT LATCH SET


- Insert Deadbolt Latch Set into door edge hole with the word "UP" and the arrow on the extension plate facing UP. Cross shaped spindle connector will be at the bottom of the Deadbolt Latch Set.
- Make sure the face plate sits flush with the door. Do not force the latch into the mortise flush. Chisel out excess material if necessary for a flush fit.
- Using two "ST3.5*20". screw provided, screw the latch into the door with a hand held screwdriver. **DO NOT OVER TIGHTEN.**

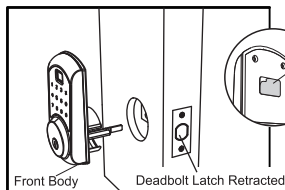

- Remove the sticker, and Install the front body to the door, let the front body stick to the door.

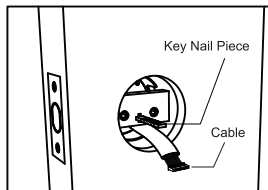


- Make sure the key nail piece through the deadbolt, the cable through the door hole.

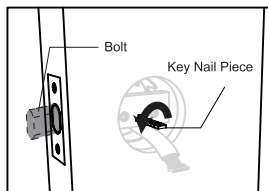


- Rotate the key nail piece to test if deadbolt works smoothly.


Installation Guide

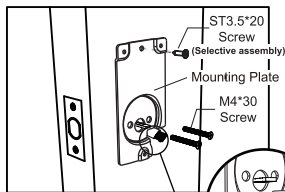


7. Make sure the cable through the door hold, the position near the mounting plate, then fix the fro body with 2 screws (M4*30), you can fix ST3.5*20 Screw selectively.

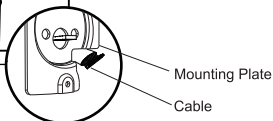


Key Nail Piece

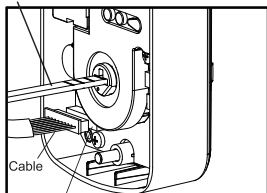


8. Insert the cable to the wire connector, ensure the cable is installed properly and securely. Insert the key nail piece to the hole which back of thumb turn.

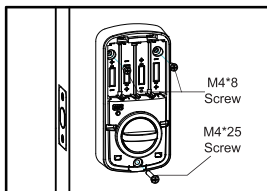

9. Fix the back body to the mounting plate with 3 screws

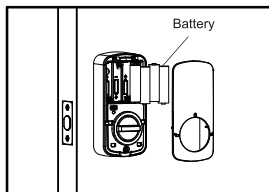


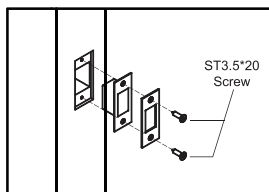
10. Turn the thumb turn to engaged the bolt, then place the batteries and install battery cover.

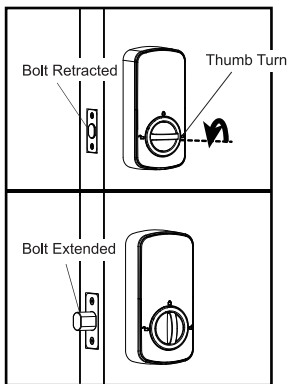

11. How to set the direction of lock

This lock requires deadbolt engaged to identify the open direction, please make sure the deadbolt is engaged after installation.

-  Note: If the deadbolt is retracted, there will be red light flashing and sound alarm, indicates that the lock's opening direction is not set, please turn the thumb turn to engage the deadbolt to set the opening direction.



12. Drill the strike box and strike plate according to the strike plate and strike box size, then fix them by two screws.

Operation Instruction

Low Battery Alarm

4 short beeps and red light flash 4 times

Anti-Prank Alarm

 
When the Pin-code is wrong for 3 times, there will be light flashing with alarm sound. The keypad will lock 180s.

Reset Lock

Press the reset button for 3s. There will be 1 long beep and blue light flash once, then 3 short beeps and red light flash 3 times

After Reset

The lock is reset to the factory mode, Master PIN code will be back to 123456, and all User Pin codes and User fingerprint will be deleted.



Reset Button

Change Master Pin-code

Factory default Master Pin code is 123456, please change the Master PIN Code when you receive the lock.

1. Enter 123456 + #
 2. Press 4 + # + New Master Pin code (6 digits)+#
 3. Repeat entering New Master Pin code + #
-

Add User Pin Code (98 User Pin Codes Can Be Set)

To add a new user Pin Code(you can add up to 98 new user Pin Codes)

1. Enter Master Pin code + #
 2. Enter 1 + # + 1 + #
 3. Enter (02- 99) ID number + #
 4. Enter User Pin code (4-9 digits) + #
 5. Repeat Enter User Pin code + #
-

Adding User Fingerprint

To add a new user fingerprint(you can add up to 99 new user fingerprints)

1. Enter master Pin code + "#",
 2. Enter 1 + # + 2 + #
 3. Enter "ID"(01-99) + #
 4. Press the fingerprint 3 times
-

Delete Some Of User Pin Code

1. Master Pin Code + #
 2. Enter 2 + # + 1 + #
 3. Enter "ID"(02-99) + #
 4. Repeat Enter "ID" + #
-

Delete Some Of User Fingerprint

1. Enter master Pin code + #
 2. Enter 2 + # + 2 + #
 3. Enter "ID"(01-99) + #
 4. Repeat Enter "ID" + #
-

Operation Instruction

Delete all User pin codes at a time

This will delete the user Pin code but not the master Pin code.

- 1.Enter master Pin code + "#",
 - 2.Enter 3 + # + 1 + #
 - 3.Enter master Pin code + #
-

Delete all User fingerprints at a time

This will delete all the user fingerprint.

- 1.Enter master Pin code + #
 - 2.Enter 3 + # + 2 + #
 - 3.Enter master Pin code + #
-

Delete all User pin codes and all User fingerprints at the same time

This will delete the all user Pin-code and user fingerprint but not the master Pin-code.

- 1.Enter master Pin-code + #
 - 2.Enter 3 + # + 0 + #
 - 3.Enter master Pin-code + #
-

Auto lock mode

The lock will be locked in certain duration automatically

Enter master Pin-code + #

- 1.Enter 5 + #
 - 2.Enter "Time(3-30)" + #
-

Cancel Automatic Lock Function

This programming will keep the door open all the time.

- 1.Enter master Pin-code + "#",
 - 2.Enter 5 + #
 - 3.Enter 00 + #
-

NOTE: You can press "★" to lock the door.

Turn Sound on/off

You can "mute" or "unmute" your lock by entering the following(the feature is on by default).

- 1.Enter master Pin-code + #
- 2.Enter 6 + #
- 3.Enter 1 or 2 + # (1=Sound OFF, 2=Sound ON).

NOTE: If the lock is muted you will not hear beeping during programming normal operation low battery indicators or system alerts.

Vacation Mode

Holiday mode make the lock being low power consumption, all the electronic function being invalid except for reset the lock.

- 1.Enter master Pin-code + #
 - 2.Enter 8 + #
 - 3.Enter 1 + #
-

Cancel Vacation Mode

- 1.Press the "#" for 5 seconds, then the screen light up
- 2.Enter the master Pin-code + #


If you forget the master Pin-code, you can open by mechanical key and reset the lock.

TUYA Function(Optional)

1.Download the TUYA app from Apple store or Google play.

2.Make sure the lock is not connected to APP before, and your smart phone's BLE is turned on, and the WIFI network is 2.4G.


3.After the installation of TUYA APP, press "Add device".

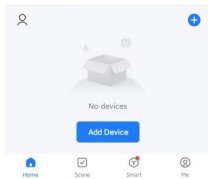

Close


智能生活 app is requesting the following access permissions.

 The privacy security of your personal information is guaranteed when the following permissions are granted.



4.Make sure the Location is turned on.

5.Press Continue, select "Camera & Lock", select "Lock (WIFI)".

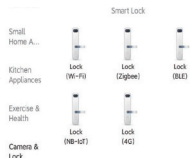

Reset the device



Power on the device and confirm that the smart door lock works normally.

Confirm the indicator is blinking rapidly.

Reset Device Step by Step


6.After select "Lock (WIFI)", you will see.

TUYA Function(Optional)

7. Enter your WIFI information, then press "Next".

Select 2.4 GHz Wi-Fi Network and enter password.

 
If your Wi-Fi is 5GHz, please set it to be 2.4GHz.
[Common router setting method](#)




8. Select "carry on".

Select 2.4 GHz Wi-Fi Network and enter password.

 If your Wi-Fi is 5GHz, please set it to be 2.4GHz.
[Common router setting method](#)



 Your mobile phone is connected to 5 GHz Wi-Fi. If the device does not support 5 GHz Wi-Fi, please change to 2.4 GHz Wi-Fi. Continue?



9. Enter the Master code + 7+ # +1+ # to make the keypad is blinking, and press "confirm the indicator is blinking rapidly".

Reset the device



Power on the device and confirm that the smart door lock works normally.

[Reset Device Step by Step](#)

10. Select "EZ mode".

Reset the device



Power on the device and confirm that the smart door lock works normally.

Select the status of the indicator light or hear the beep.

AP Mode




EZ Mode




TUYA Function(Optional)


11.APP is connecting to lock.

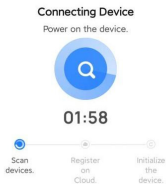


12.You will see a lock when the APP finds the lock, it will take several seconds.

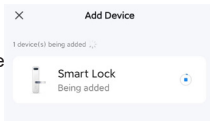

13.After the APP adds the lock, you will see below screen, and the lock will be sound.

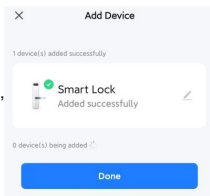

14.Press "Done", you will see.

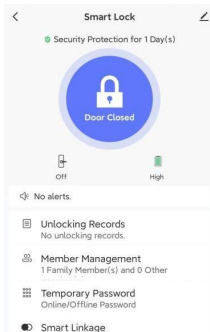


TUYA Function(Optional)

15.Remote to unlock

A.Press “ 0 + # ” on the lock keypad, the Light Indicator on the lock will keep bright.

B.You will see the APP gets notification as below, slide to unlock.

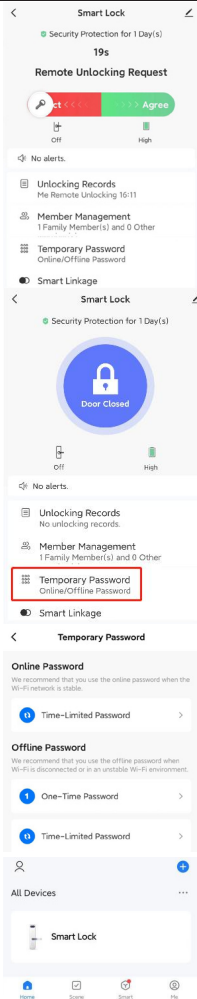

16.Temporary Password

You can set online password or offline password.

Note: You need to wake up the keypad first, then enter the password that you get from the APP.

17.Return to “ Home”.

Light and Sound indication

Event	Lock Response
Unlock/ Correct Setting	4 short beeps and screen flash
Lock	2 short beep and red light flash
Incorrect Entry/ Error Opreation	1 short beep and red light flash
3 Times Wrong Pin-code Entry	3 long beeps and red light flash 3 times then screen flash for 180s
Low Voltage	4 short beeps and red light flash 4 times
Ultra Low Voltage	6 short beeps and red light flash 6 times
Power On	1 long beep and 3 short beeps, red light flash and blue light flash