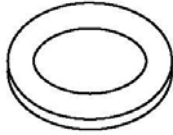

 

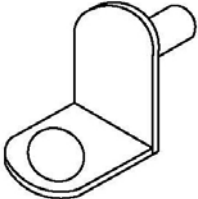


## Mission Oak 50" TV Console



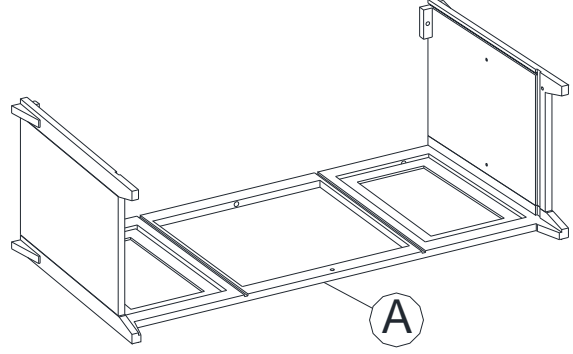
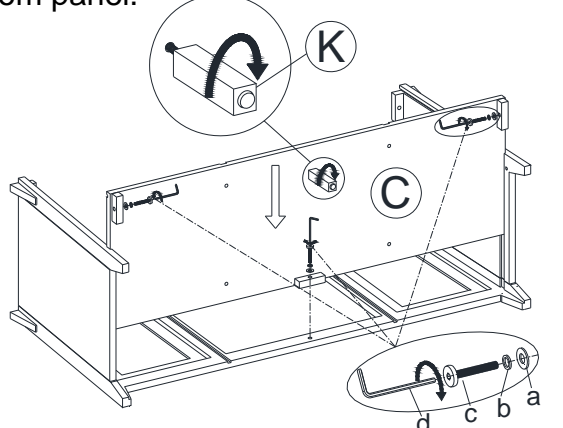
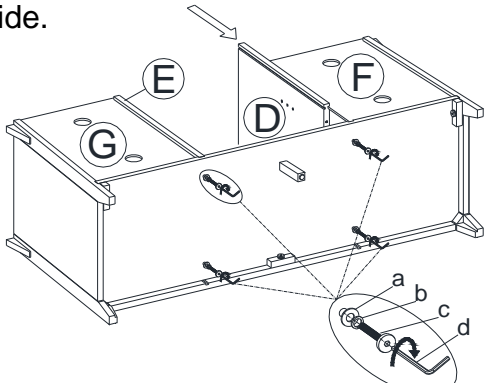
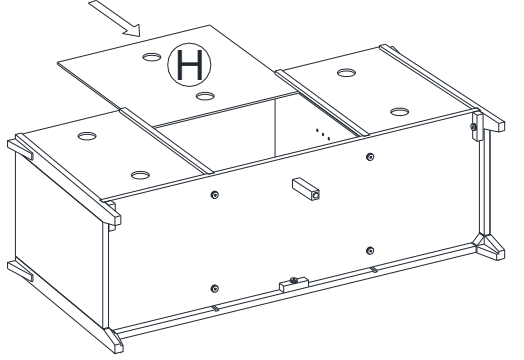
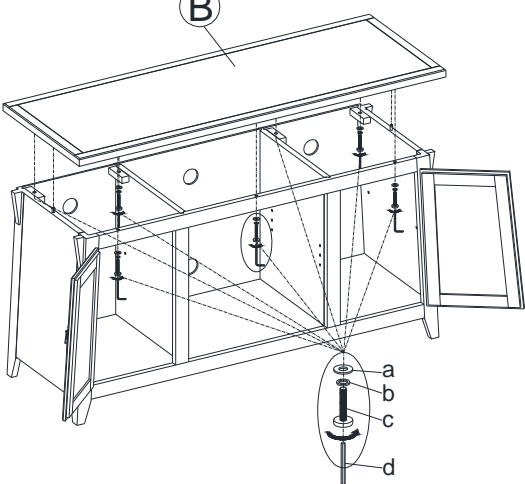
## Hardware List

Item	Description	Qty
a	 Flat Washers	14PCS
b	 Lock Washers	14 PCS
c	 Bolts	14 PCS
d	 Allen wrench	1 PC
e	 Shelf Metal Clip	12 PCS

# Parts List

Item	Description	Qty
A	Cabinet	1 PC
B	Top Panel	1 PC
C	Bottom Panel	1 PC
D	Left Middle Vertical Panel	1 PC
E	Right Middle Vertical Panel	1 PC
F	Left Back Panel	1 PC
G	Right Back Panel	1 PC
H	Middle Back Panel	1 PC
I	Side Shelf (not adjustable)	2 PCS
J	Middle Adjustable Shelf	1 PC
K	foot	1pc

# Assembly Instructions

<p><b>Step 1</b> Place the cabinet (A) on a soft surface and unfold two side panels.</p> 	<p><b>Step 2</b> Slide the bottom panel (C) into the grooves, and fasten the bolts. Fasten the foot on the bottom panel.</p> 
<p><b>Step 3</b> Insert the left back panel (F) into the side while then adding the middle vertical panel (D); these are done at the same time. Fasten with bolts. Do the same thing on the right back side.</p> 	<p><b>Step 4</b> Insert middle back panel (H).</p> 
<p><b>Step 5</b> Place the cabinet right side up, put the top (B) on and fasten with bolts.</p> 	<p><b>Step 6</b> Insert the shelf supports and place the shelves on the shelf supports.</p> 