 
 


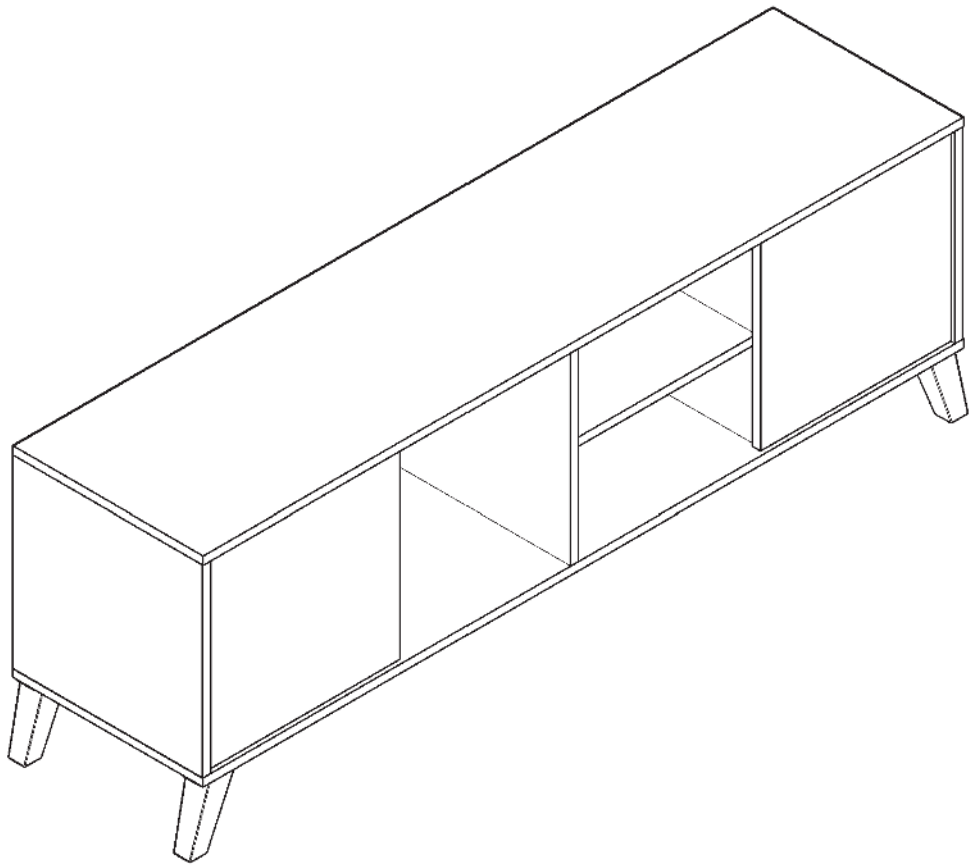

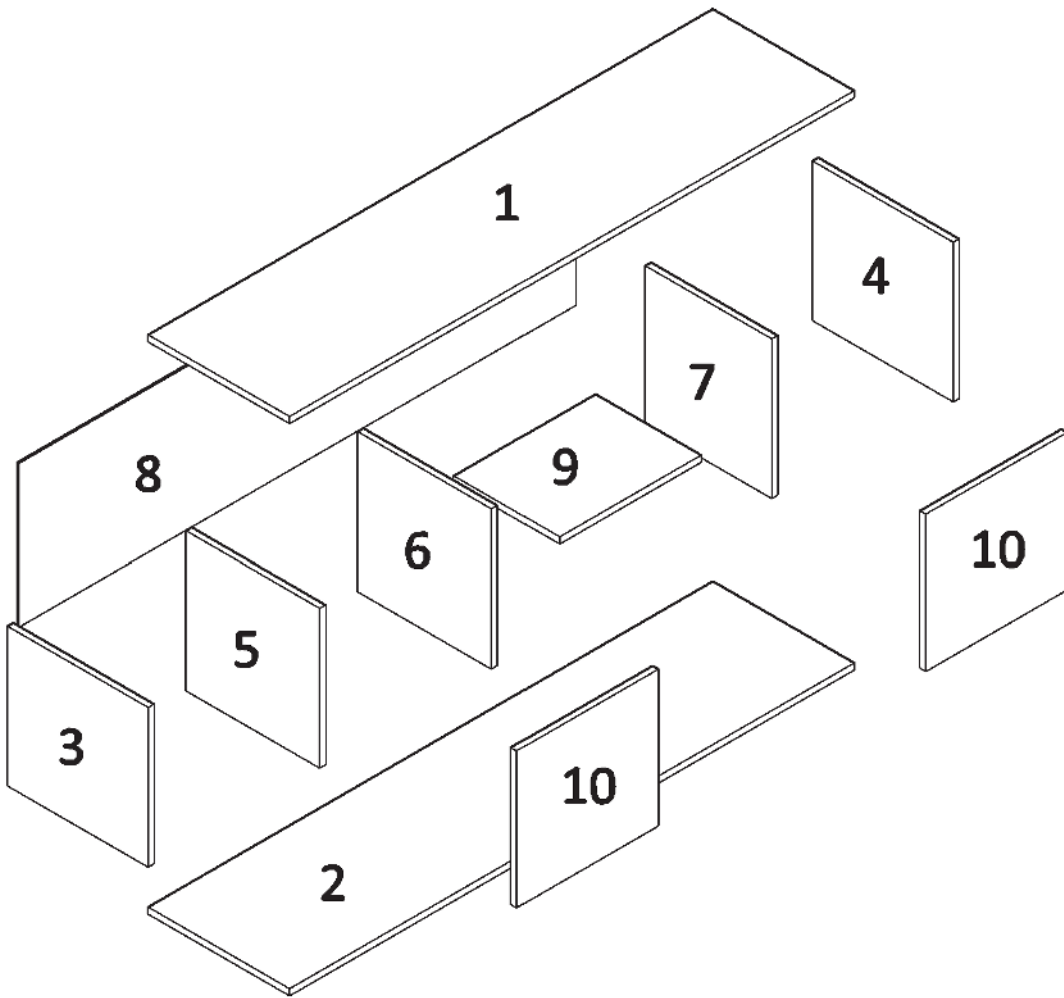







ASSEMBLY INSTRUCTIONS



 




 

 
 
Detail View



Part List

<p>1</p>  <p>Top Panel - 1pc</p>	<p>2</p>  <p>Bottom Panel - 1 pc</p>	<p>3</p>  <p>Side Panel (Left) - 1 pc</p>
<p>4</p>  <p>Side Panel (Right) - 1 pc</p>	<p>5</p>  <p>Left Panel (Center) - 1pc</p>	<p>6</p>  <p>Right Panel (Center) - 1pc</p>
<p>7</p>  <p>Stand Panel - 1pc</p>	<p>8</p>  <p>Back Mdf Board - 1 pc</p>	<p>9</p>  <p>Shelf Panel - 1pc</p>
<p>10</p>  <p>Door Panel - 2 pcs</p>		

Hardware List


A 	B 	C 
Cam Pin M5x24MM (7 pcs)	Cam Lock (7 pcs)	Wood Dowel M8X30MM(16 pcs)
D 	E 	F 
Iron Shelf Support (4 pcs)	Screw M6x50MM (7 pcs)	Long Taper Stand Leg (6 pcs)
G 	H 	
Screw M3.5x16MM (54 pcs)	Allen Key (1 pc)	
NH78 		
Hinges 7/8" (4 pcs)		

ASSEMBLY TOOLS REQUIRED (NOT INCLUDED)



PLEASE BE CAREFUL DO NOT DAMAGE THE HOLE POSITION WHEN YOU USE POWER TOOLS !

 
STEP 1 :

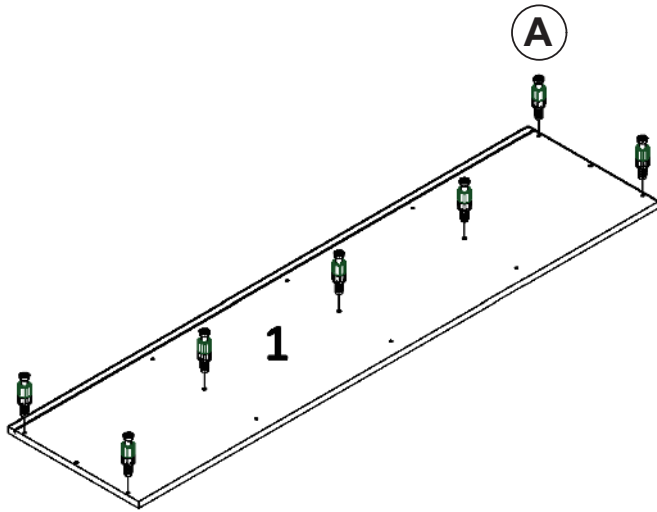


A



 7 PCS

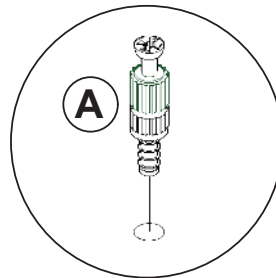


 STEP 2 :

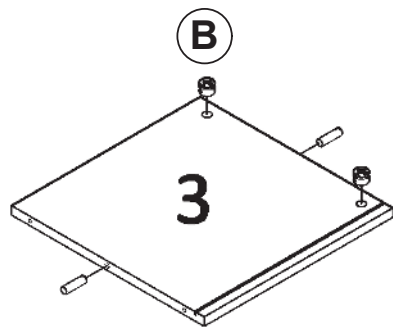

B

 3

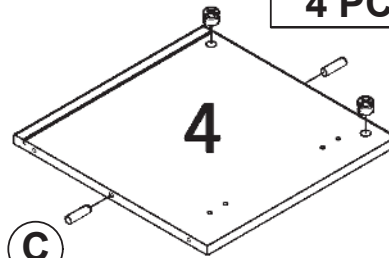

C

4

B

 


4 PCS

 
C



4 PCS

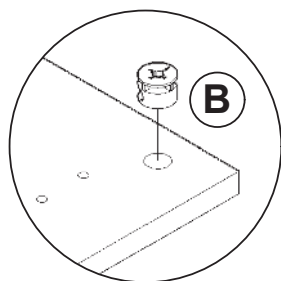

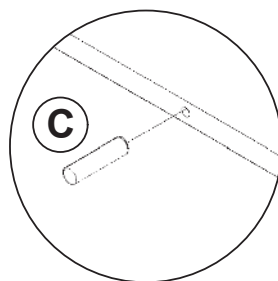


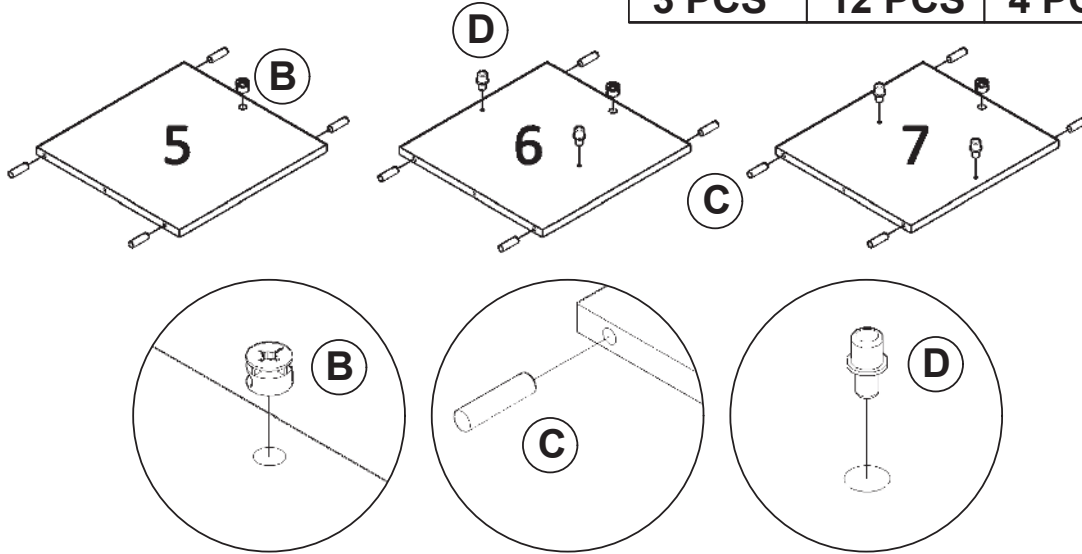 
B





C



STEP 3 :

B		C		D	
3 PCS		12 PCS		4 PCS	






  STEP 4 :

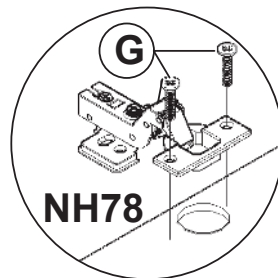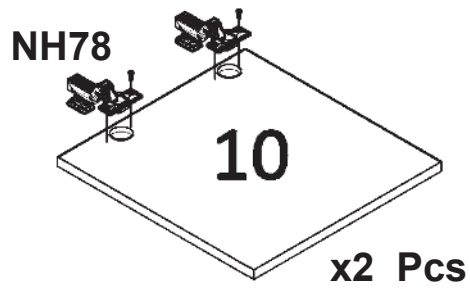
G		NH78	
8 PCS		4 PCS	

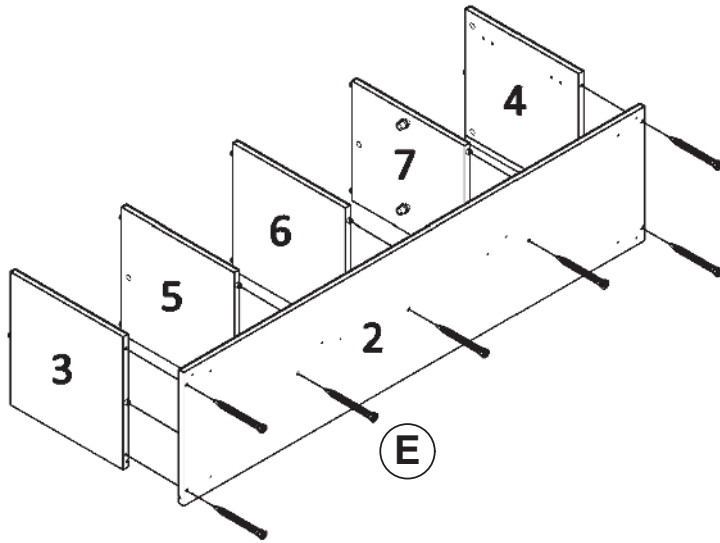 

  
STEP 5 :

 



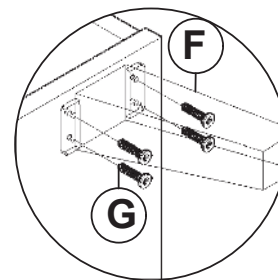 
E 	H 
7 PCS	1 PC

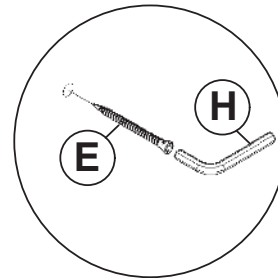



STEP 6 :

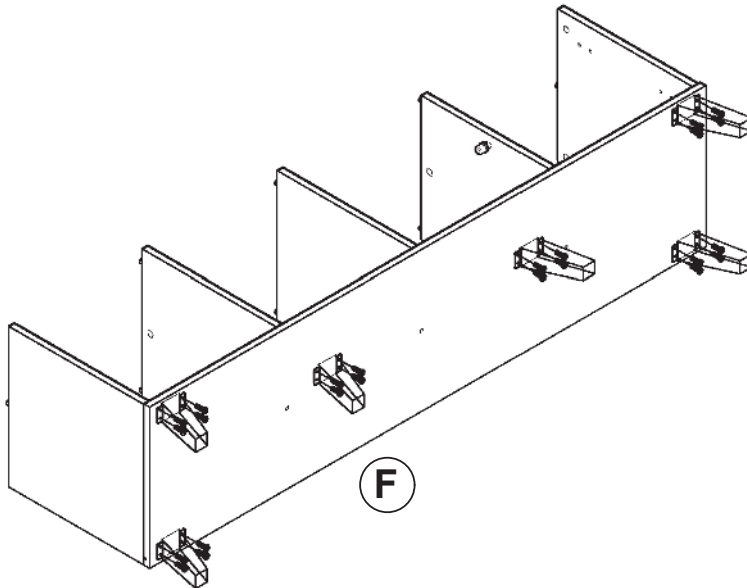


F 	G 
6 PCS	24 PCS



  STEP 7 :

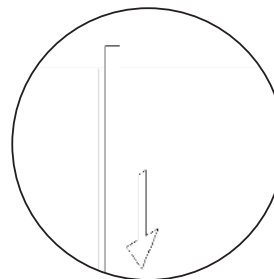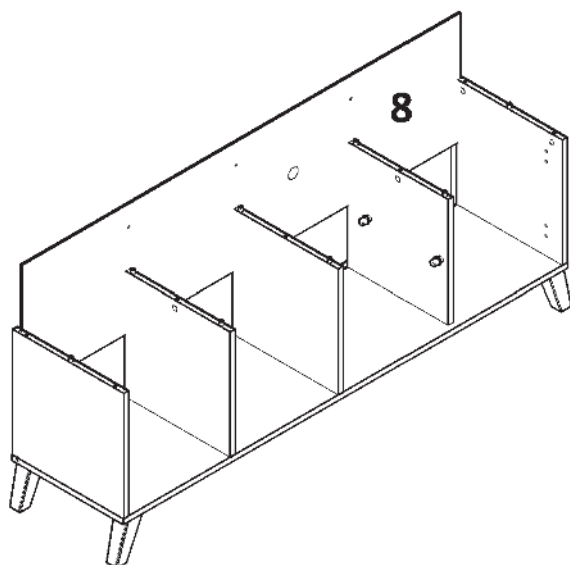

 
STEP 8 :

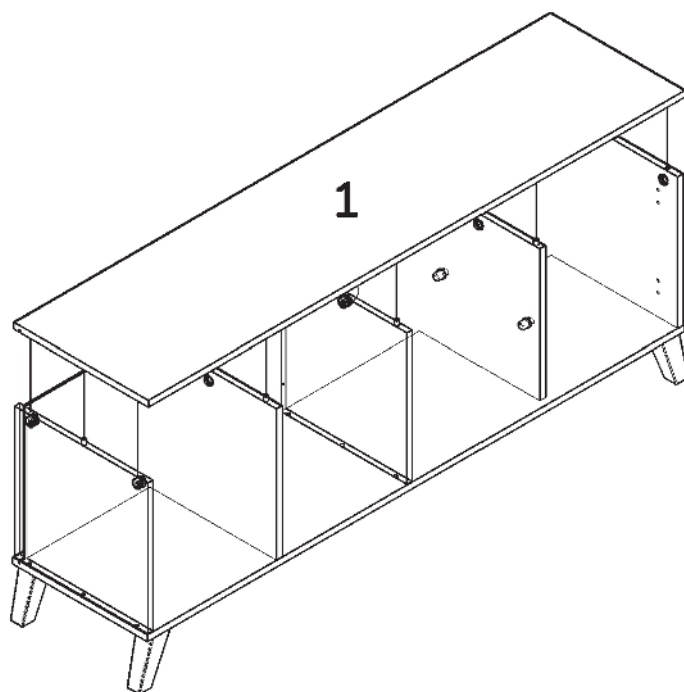


H



 1 PC

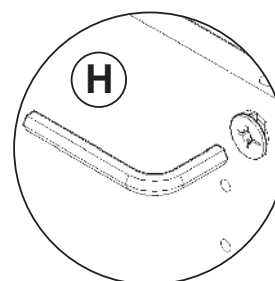

 
STEP 9 :

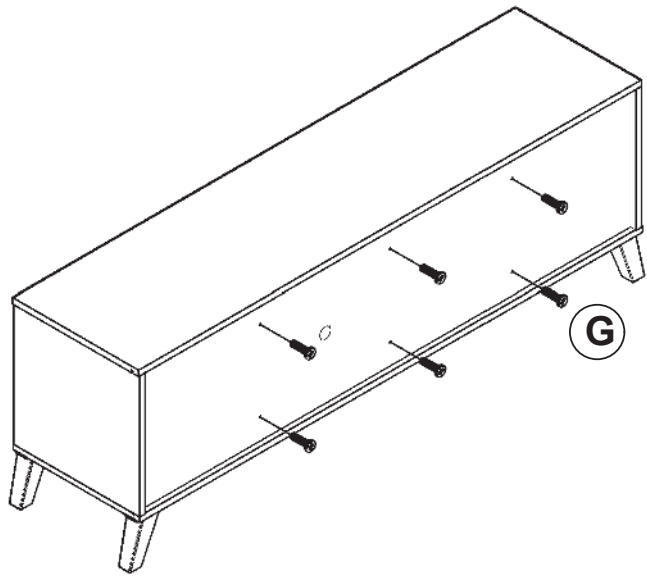


G



  
6 PCS

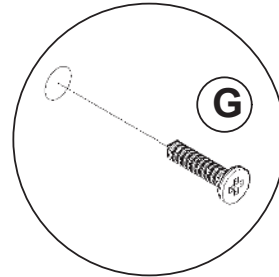

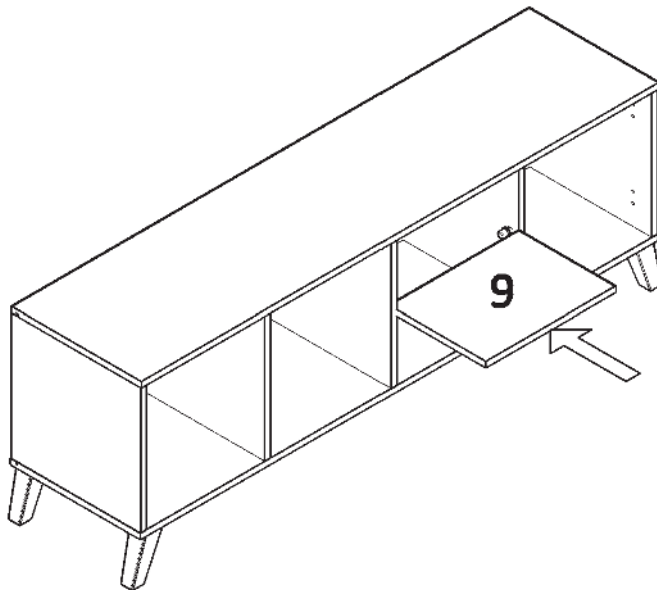

 
STEP 10 :

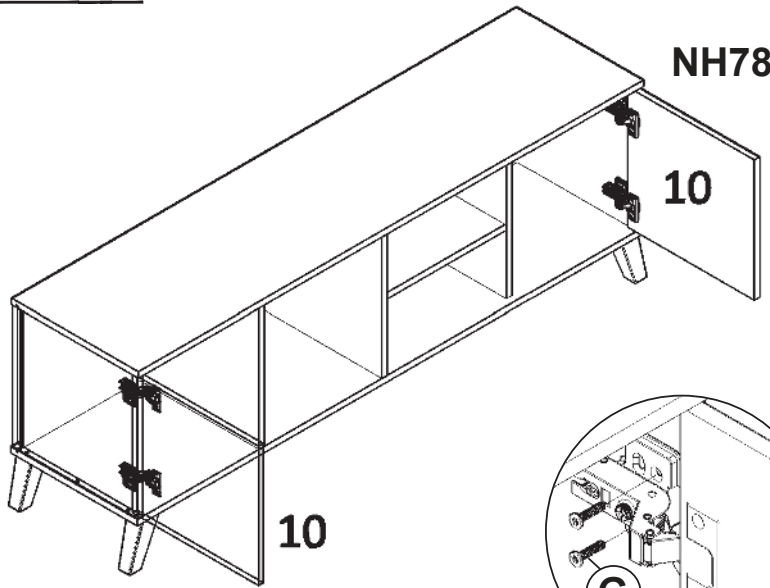


STEP 11 :




G		NH78	
16 PCS		4 PCS	

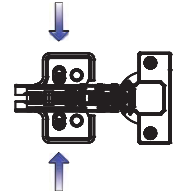 


#Adjust the door by moving it up and down or left and right the tighten the screws

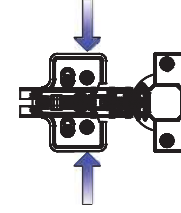 

#Tighten the screws to prevent sliding doors

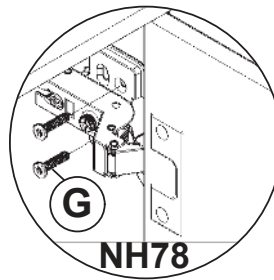 

COMPLETE :

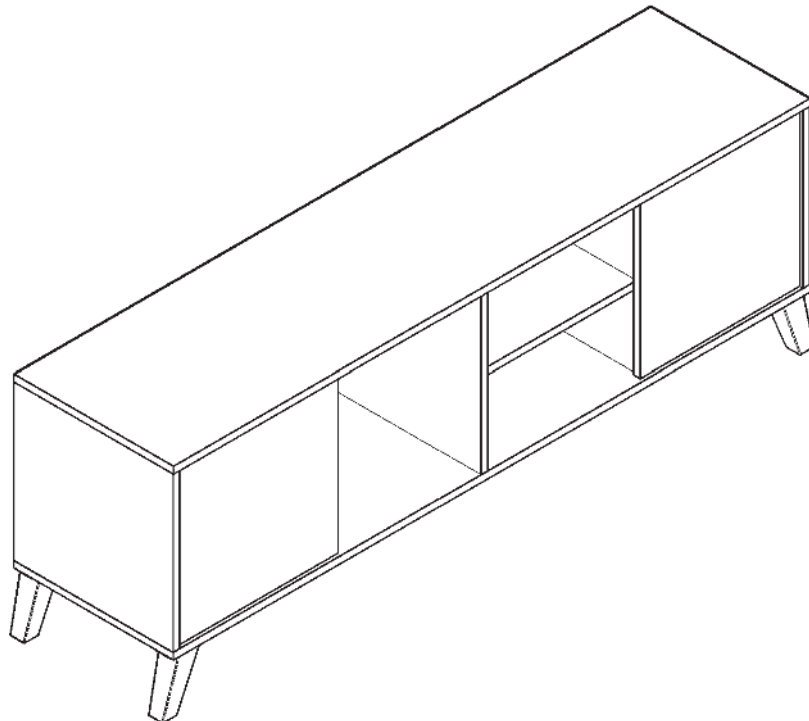 





HOW TO ADJUST GLASS/DOORS

- There is a gap between the door and the shelf with doors closed

 Loosen the back adjustable screw which is one of the two screws looking from the front while supporting the doors, adjust the door by moving it back and forth, then tighten the back screw.

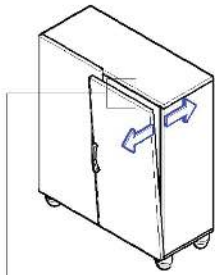

 
If there is a gap between the doors on the top.

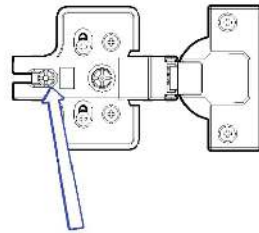


Loosen this screw, adjust by moving back and forth

- There is a gap in the middle with doors closed

 Loosen the ① back adjustable screw which is one of the two screws looking from the front while supporting the doors, tighten the ② screw clockwise, then adjust the middle gap. After adjusted, tighten the ① screw.

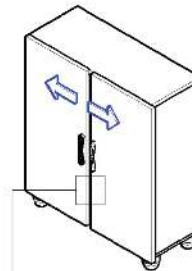


If the gap is wide

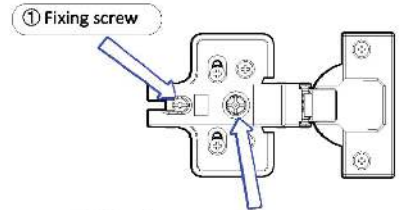 


② Adjusting screw
(If you twist clockwise once, the door moves about 2mm inward)

- There is a gap on the top of the door when doors are closed
(Glass slide hinge does not require this step)
(4 screw hole hinge does not require ①)

 Loosen the slide hinge screw while supporting the door, adjust the door by moving it up and down then tighten the screws.
(Please loosen the slide hinge screws of the door completely you are adjusting before moving it up and down.)

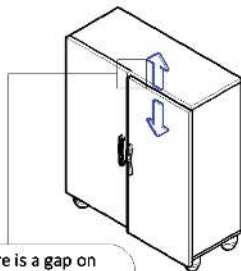

 If there is a gap on the top of the door

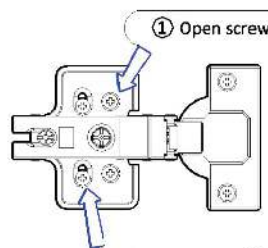


② Slide hinge screws (Please loosen these screws before adjusting)


- There is a V gap when doors are closed

Loosen the ① back adjustable screw which is one of the two screws looking from the front while supporting the doors, tighten the ② screw clockwise, then adjust the middle gap. After adjusted, tighten the ① screw.

 If there is a gap between the doors on the top
(Please adjust slide hinge the top part door)

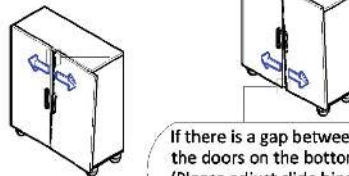

 If there is a gap between the doors on the bottom
(Please adjust slide hinge the bottom part door)

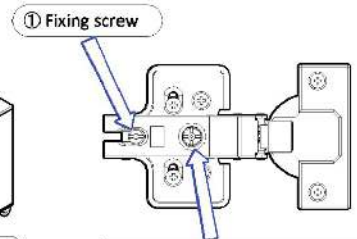

② Adjusting screw
(If you twist clockwise once, the door moves about 2mm inward)