 


ASSEMBLY INSTRUCTION

 
40"W BOOKCASE

A Top




1pc

B Side Frame-LSF

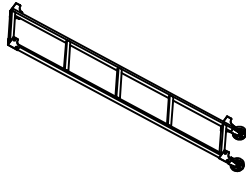


1pc

 C Side Frame-RSF

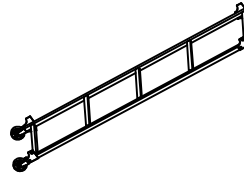

1pc

 D Shelf




3pcs

E Lower Frame




1pc

 F Tension Bar

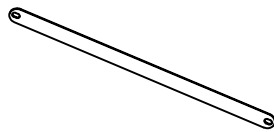


2pcs

 G Bolt
1/4"*5/8"




5pcs

 H Bolt
1/4"*7/8"



20pcs

 I Allen Wrench
4MM




1pc

J Nut
1/4"




1pc

 K Open Wrench
10MM




1pc

 L Anti-Tipping HW




2sets

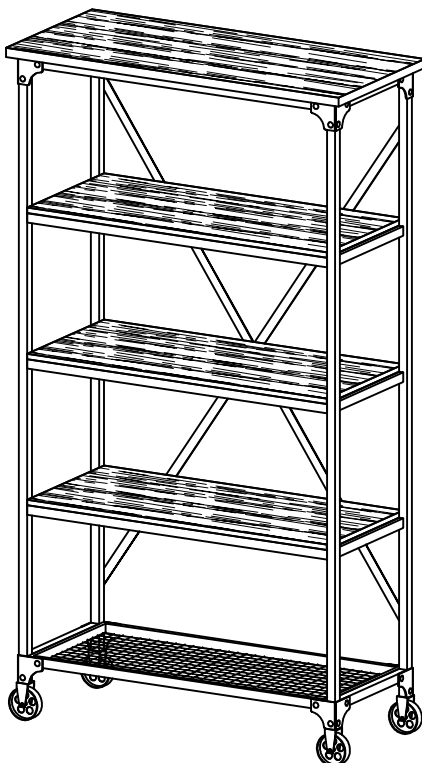 


This page lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.

 
-
- 1** Attached top(A), side frame-LSF(B), shelves(D), lower frame(E) with bolts(H) by allen wrench(I).

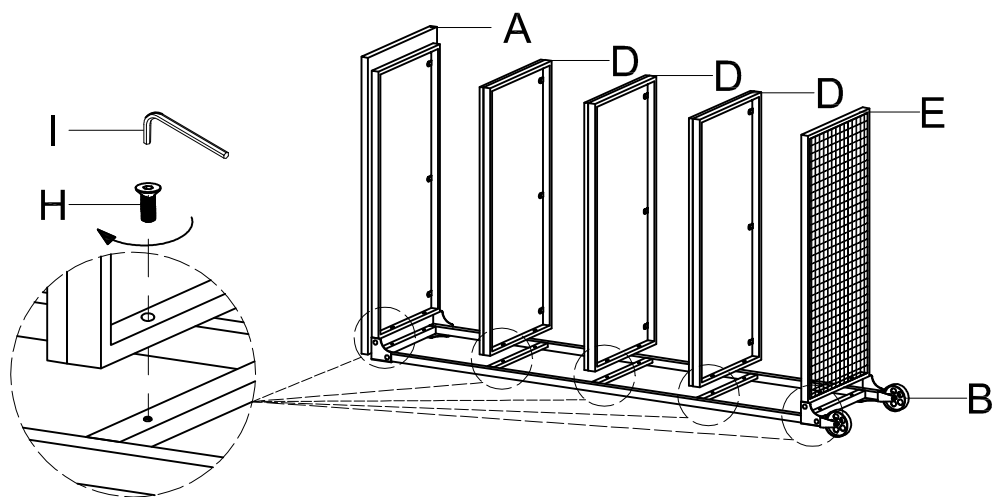

 
-
- 2** Attached side frame-RSF(C) with bolts(H) by allen wrench(I).

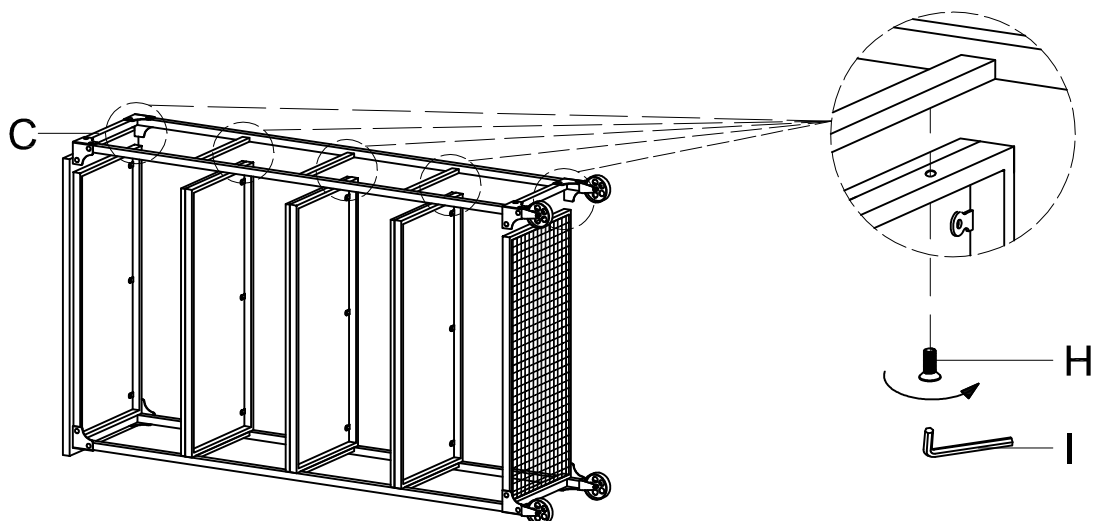

 - 3** Attached tension bar(F) with bolts(G), nut(J) by allen wrench(I) and open wrench(K).

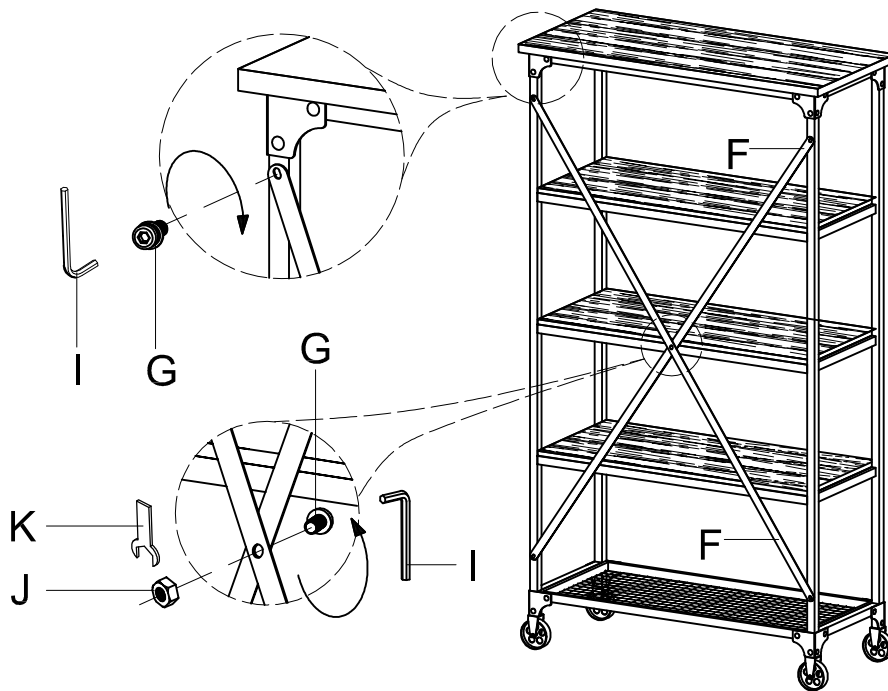

 - 4** Attach anti-tipping hardware(L) to wall. Attach bracket (vertically) to wall using 2 of the screws provided. Move furniture to its final position. Thread the strap through bracket, pull it tight.

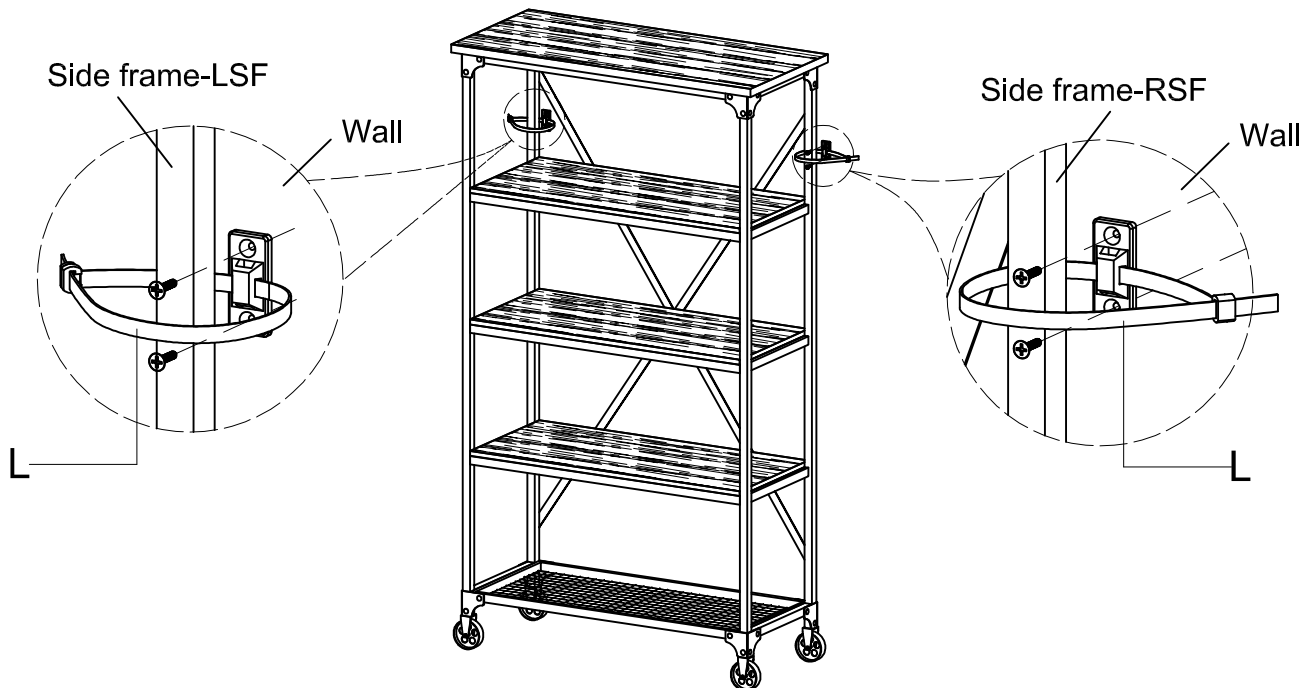

Cleaning & Care

Treat surface with care. Surface is resistant to scratches but is not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.