

**WHEAT BACK DINING CHAIR
WITH F.R. FOAM CUSHION SEAT**

ASSEMBLY INSTRUCTIONS



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS :



 

1. Remove hardware from plastic bag and sort by size.
2. Please check to see that all hardware and part are present prior to start of assembly.
3. Please follow attached instruction in the same sequence as numbered to assure fast & easy assembly.




 


Warning !

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishment.

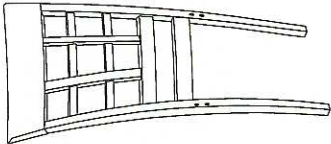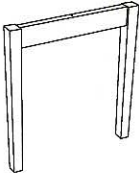PARTS IDENTIFICATION:

A		CHAIR BACK	2PCS
B		FRONT LEG FRAME	2PCS
C		SIDE RAIL	4PCS
D		CUSHION SEAT	2PCS

HARDWARE IDENTIFICATION:


1		ALLEN WRENCH	1PC
2		BOLT	12PCS
3		LOCK WASHER	12PCS
4		PAN HEAD SCREW	8PCS

NOTE : QUANTITIES SHOWN ARE FOR TWO CHAIRS

ASSEMBLY INSTRUCTIONS


STEP 1

Align and fasten side rails to front leg frame using bolt and lock washer and tighten with Allen wrench.

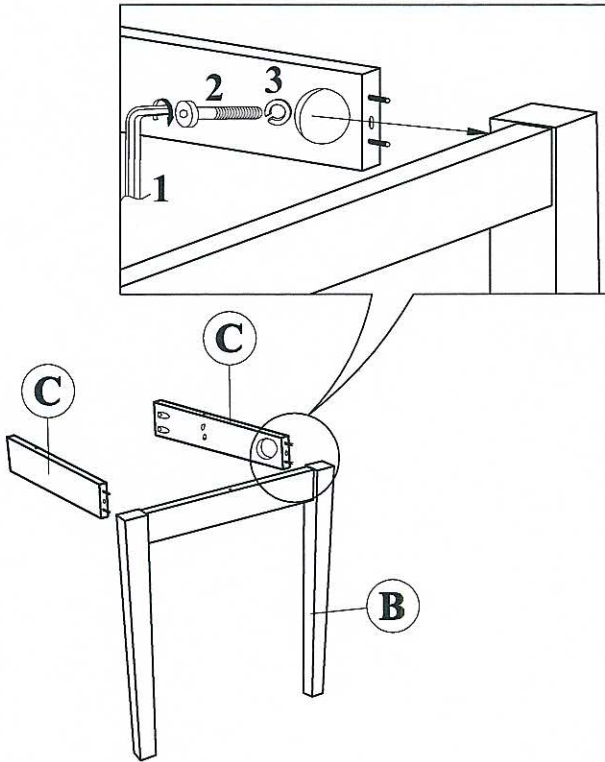


STEP 2

Align and fasten side rails to chair back using bolt and lock washer and tighten with Allen wrench.

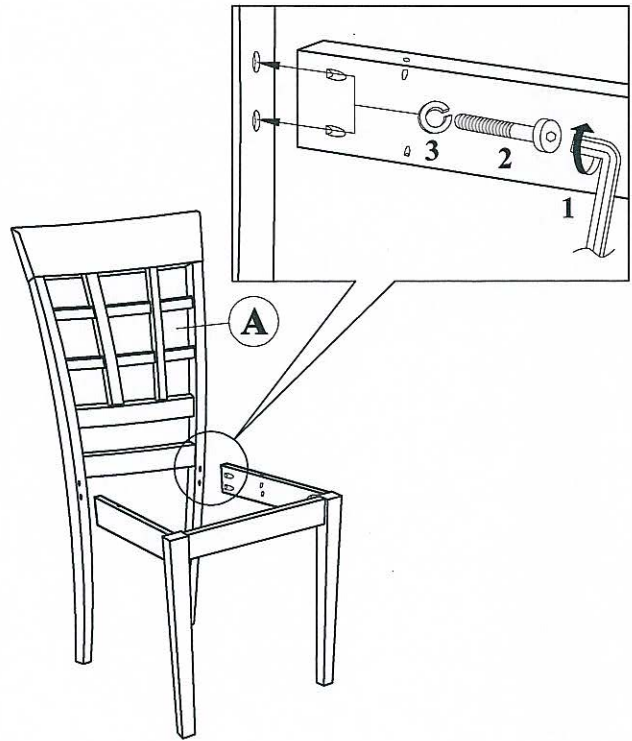

STEP 3

Align and fasten cushion seat to side rails using screws and tighten with screw driver (Not provided).

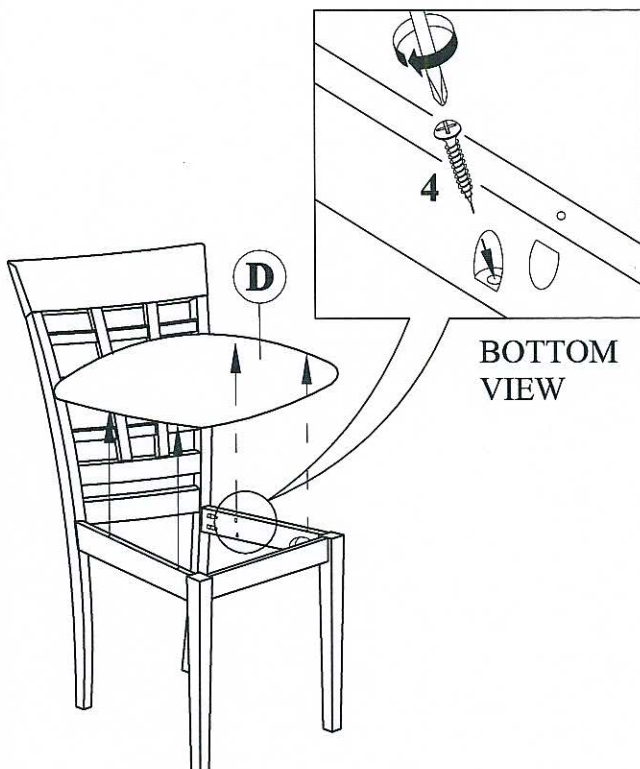

STEP 4

Complete.

