 
 
 
 



ASSEMBLY INSTRUCTION


DINING TABLE

A Top	B Shelf	C Lower Frame	D Leg
			
1pc	1pc	1pc	4pcs
E Bolt 1/4"*5/8"	F Self-Tapping Screw 3/16"*3/4"	G Allen Wrench 4MM	
			
16pcs	8pcs	1pc	

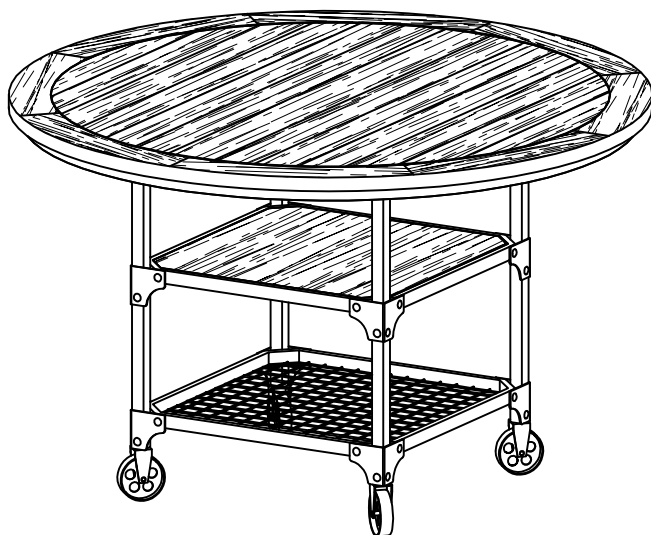


This page lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.

-
- 1** Attached leg(D), shelf(B), lower frame(C) with bolts(E) by allen wrench(G).

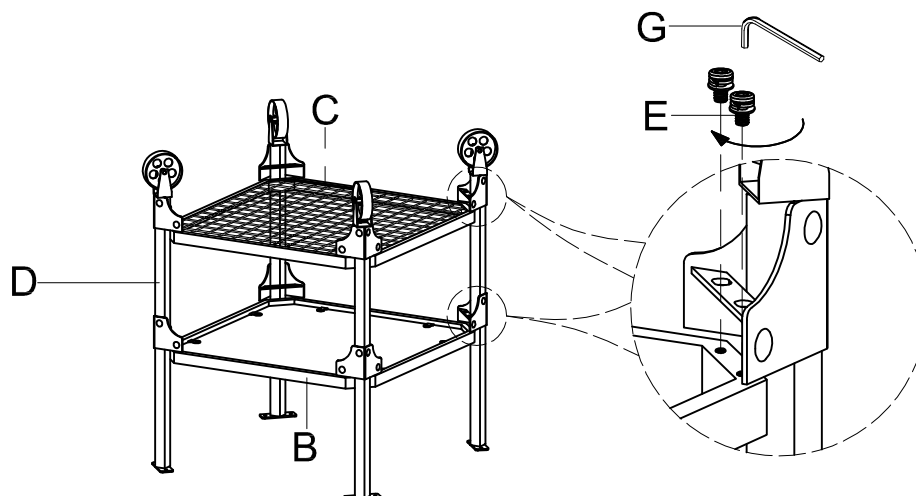

-
- 2** Attached top(A) with self-tapping screws(F).

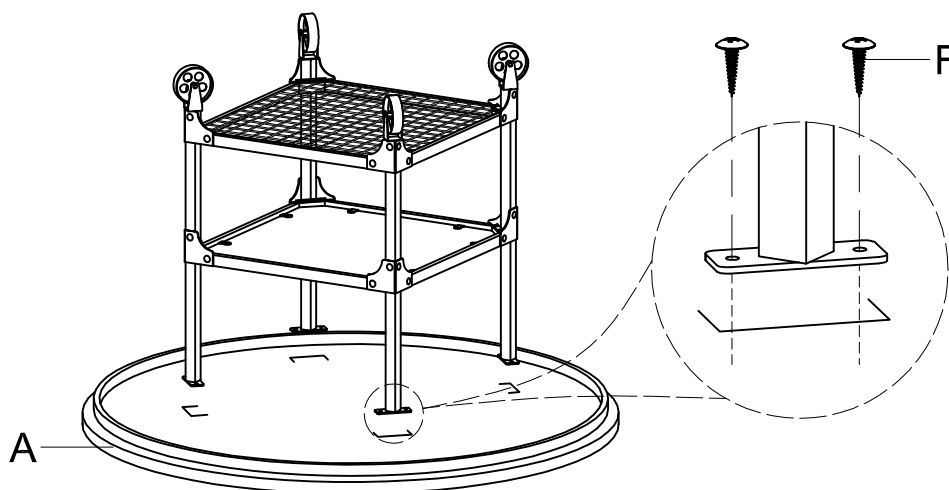

Cleaning & Care

Treat surface with care. Surface is resistant to scratches but is not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.