

Thank you for your order!

We appreciate your business. Additional information on your product may be available on our website.



Happy?

Wonderful! We are very glad.
Please share your experience with
us and others. It helps us know
what you like best!

- Review this product at www.householdessential.com.

Search the item # from the home
page to find the product. Leave your
review under the review tab on the
product's page!

- Follow us on Facebook and
Instagram!

Customer Service

1-800-922-5524 | 1-314-428-5657
info@householdessential.com

Open Mon-Fri at 8:30 am CT.
Closed all national holidays.



©2017 HOUSEHOLD ESSENTIALS, LLC
Hazelwood, MO 63042
www.householdessential.com

9" Utility Cart


5133-1 | Chrome



Parts


Ax3

Storage Baskets

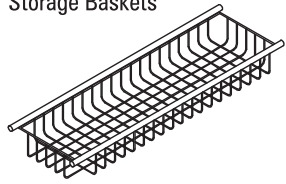

Bx2

 Upper Frame




Cx4

Lower Frame



Dx12

 Phillips
Head Screws



Ex2

Caster




Fx2

Locking Caster




Gx1

 Wrench



Assembly

**Do not tighten screws until
all baskets have been
attached to the side frames.**

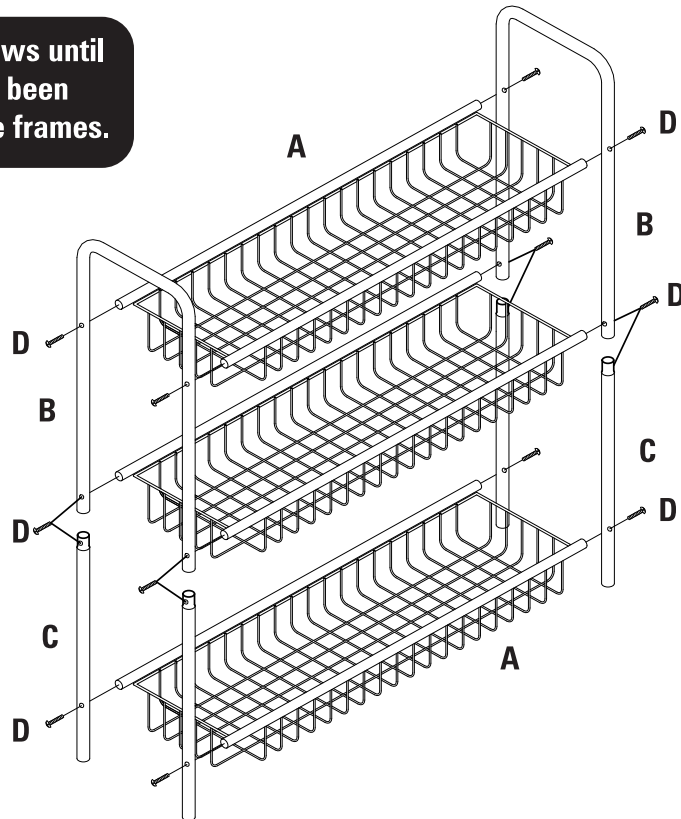

Assembly con't

Attach lowest Storage Basket (A) to Lower Frame (C) using 4 Screws (D).

Slide Upper Frame (B) onto Lower Frame (C) and secure with Storage Basket (A) using 4 Screws (D).

Attach the third Storage Basket (A) to the top of the Upper Frame (B) using 4 Screws (D).

After attaching the last basket, tighten all screws on each side.

Lay unit on a flat surface and insert wheels firmly into the legs.

