

Brand Concept

Funsite, a top manufacturer and good designer, has decades of experience in manufacturing patio products. Each piece is sleekly designed, rigorously tested for durability, and assembly instructions have been standardized for simplicity from start to finish.

Funsite always looks forward to creating a freedom lifestyle for more people, and more opportunities to explore the unknown and explore the value of life!

Funsite hopes your leisure time delightful and comfortable by providing more patio products with reliable craftsmanship and durable material and 24 Hours service.

Our Service

30-day money back guarantee.

90-day warranty for quality-related issue with free replacement.

24 Hours Online Customer Service FOR YOU!

Reminder: Be sure to use your product as directed.

WhatsApp: 0086-13905747420

EMAIL: servicefunsite@gmail.com



Order Status



Installation Help



Gift Cards




New Product Discount




1


Part & Accessories

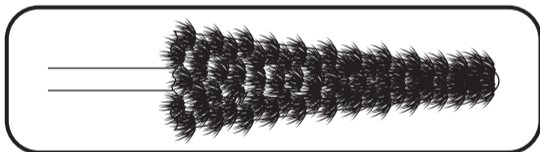

1 × Canopy Pole

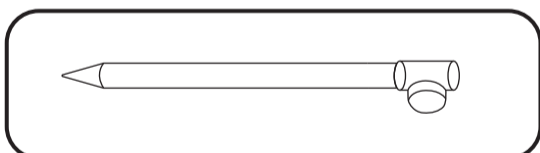

1 × Bottom Pole

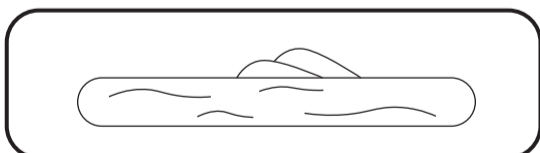

1 × Carry Bag

People Required: 1



Tools Required: None


Estimated Time: 5 minutes

Care & Maintenance

1. Once it's sufficiently buried into the sand, open the umbrella and tilt into the wind so the wind pushes the umbrella into the sand, instead of lifting it out. Keep in mind that the direction of the wind will change throughout the day, so make sure to change the tilt of your umbrella as well.
2. When adjusting the umbrella, make sure that no person or item are close to the umbrella. This is important to prevent injury or material damage.
3. Keep the umbrella away from fire; do not use it during extreme cold and heat, and severe weather like rainy, windy, snowy days, and hailstorms, etc.
4. Fabric might be color faded by a period of use, especially under strong sunlight.
5. Do not leave open umbrella unattended. If damage occurs, this is not covered by the warranty.

2


SET UP

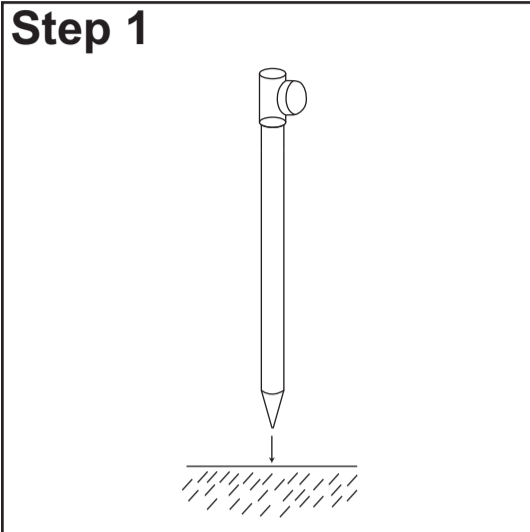

Step 1


Take the bottom pole and bury it in the sand by using a rocking back and forth motion until the safety line reaches the sand.

DON'T just stab it into the sand. The rocking motion is key.

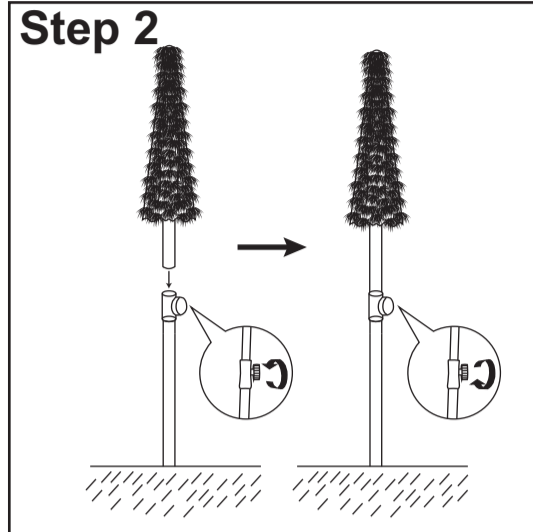


Step 2

Insert the canopy pole into the bottom pole. Adjust the height of canopy pole and press the handle to lock canopy pole.

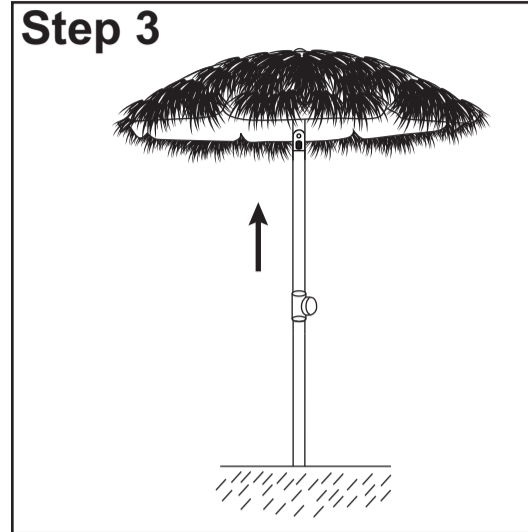

Step 3

Untie the strap on the canopy and open the umbrella by pushing the runner upward until the runner reaches the top and locks into place.

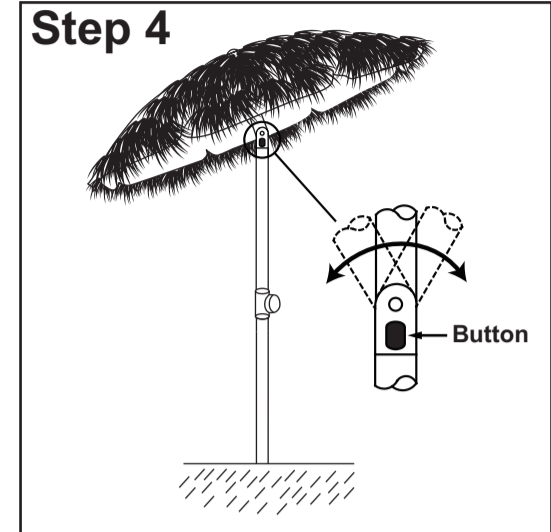


Step 4

Locate the button on the tilt, press it hard and hold it to adjust the tilt in different angle.

Release the button to lock the tilt in favorite angle. **To prevent unnecessary damage. Please fully press the push-button and do not forcibly adjust it by hand.**


3

TAKE DOWN

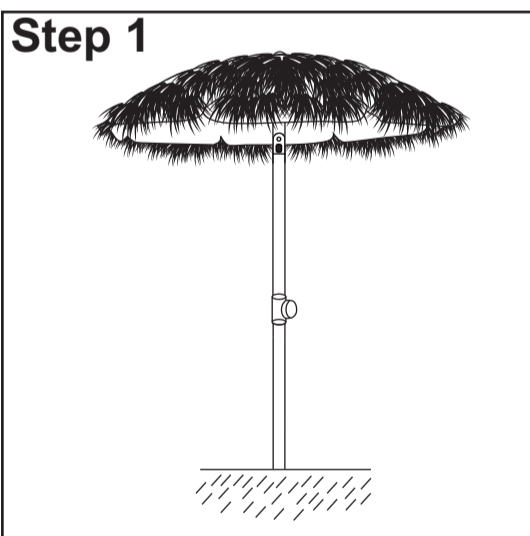


Step 1

Press the button hard and hold it to straighten the angle.

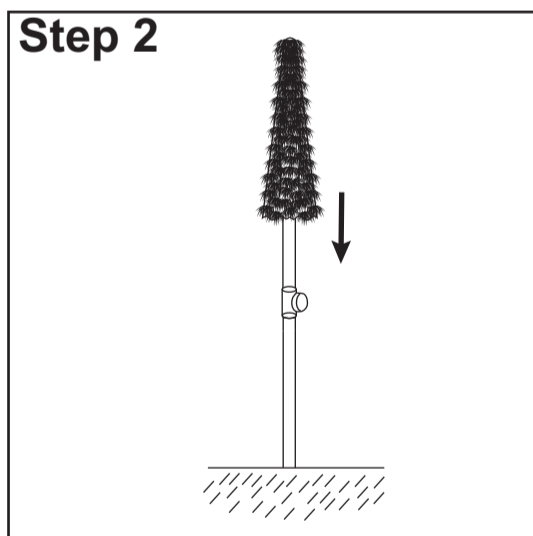


Step 2

Close the umbrella by pushing the runner downward and tie the strap on the canopy.

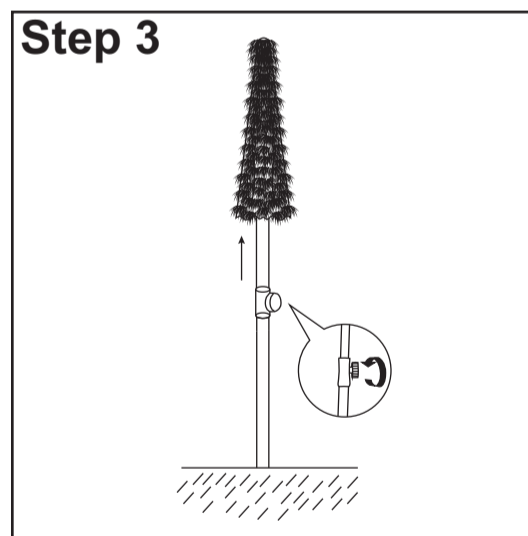

Step 3

Pull the handle apart and pull the canopy pole out .

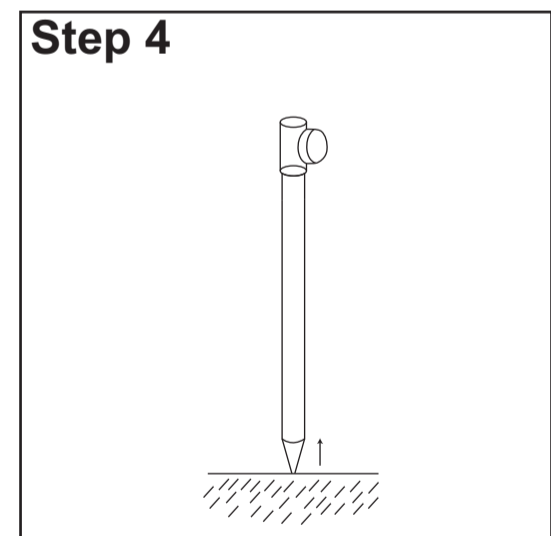

Step 4

Rock the bottom pole back and forth in the sand to loosen. Pull the bottom pole out of sand by hand. Dust off excess sand and store away.

Warning: To avoid the potential dangers of suffocation, please keep all parts and packaging away from babies and children.

4