

**GRIMALDI®**

**GRANITE  
NON STICK COOKWARE  
USE & CARE**

GRIMALDI® is a trademark of Grammy Housewares UK Ltd.  
Kemp House, 152-160 City Road, London, EC1V 2NX, United Kingdom

Thank you for choosing GRIMALDI® non-stick cookware. Please carefully review the following use, care and safety instructions, which contain important information for the use and safe enjoyment of your new cookware.

### **SAFETY**

- **WARNING!** Put safety first, GRIMALDI® friends! Read all use, care and safety instructions before using your new cookware to avoid injury.
- Keep hot pans away from children.
- **DO NOT LEAVE AN EMPTY POT ON A HOT BURNER OR ALLOW LIQUIDS TO BOIL DRY.** Besides wasting energy, it may impair the pan's performance, or discolour or damage it, and could result in a fire.
- GRIMALDI® cookware is oven safe up to 200°C degree.
- Do not store food in cookware after cooking. Always transfer it to another container.
- Do not use in microwave.

### **WAIT—BEFORE YOU TAKE THE PLUNGE**

Before using your new GRIMALDI® cookware for the first time, remove all packaging, wash your pan in warm, soapy water, rinse and dry. For best results, the non-stick surface should be “conditioned” by wiping the INTERIOR of the pan with a light coating of cooking oil. All non-stick surfaces benefit from periodic “conditioning”.

### **FOR THE BEST FOOD RELEASE**

Always start with a clean pan. Wash carefully and be sure you've removed all traces of cooking oil and food before you store your pan.

- Remove food from the refrigerator 10 minutes before you intend to cook.
- Remember to pre-heat your pan. GRIMALDI® non-stick cookware is designed for cooking without butter or oil. Butter or oil can be used over low heat.

### **ALL UTENSILS ARE NOT CREATED EQUAL**

Nylon, silicone, and wood, whisks and spoons are safe for GRIMALDI® non-stick cookware. Metal utensil can be used with GRIMALDI® GRANITE non stick cookware. Slight surface marks and abrasions are NORMAL and will not affect the performance of the non-stick coating.

### **GUIDE TO STOVETOP COOKING**

Best results are obtained by preheating your cookware for 2 to 3 minutes on low heat. **CAUTION!** Cookware over heat should never be left unattended nor empty for an extended time. Ideal cooking temperature is approx. 150°C and this is achieved in only a few minutes at low heat. Continuous high heat may discolour and damage your cookware. Select the right size burner to fit the bottom of the pan and adjust gas flames so they do not extend up the sides of the pan. Minor scratches will not harm the non-stick performance or affect food cooking in the pan. The handles of your cookware are stay-cool handles. Use oven mitts or potholders if necessary.

### **GRIMALDI® CLEANING FUN**

Immediately after cooking, remove the pan from heat and let it cool on a heat-resistant surface. **DO NOT POUR WATER INTO HOT COOKWARE.** This can cause grease to splatter and can cause the bottom of the pan to warp. Always wash pan thoroughly with soap and water after each use. Brief cleaning with a dishcloth may not remove all food or grease particles, which may settle into the non-stick finish. If not removed, they may burn when the pan is reheated, causing stains and reducing the non-stick quality. To remove stubborn spots, use a non-abrasive plastic mesh pad. Use only products which clearly state they are safe for non-stick surfaces. Do not use steel wool, coarse scouring pads or powders. Although GRIMALDI® non-stick cookware is dishwasher safe, dishwasher detergents are very hard on finishes. Hand washing will help to protect the characteristics of the non-stick coating and preserve the long lasting beauty of the pan. For best results, we recommend hand washing with non-abrasive cleaners and liquid dish soap. Then wash, rinse, dry and recondition the non-stick surface with cooking oil.

### **WARRANTY**

This product is warranted to be free from defects in material and workmanship under normal household use. The manufacturer's obligation shall be limited to repairing and replacing, FOB Grammy Housewares UK distribution facility as well as the authorized selling agent, any part of the product that is defective. Such warranty shall not apply to damages resulting from accidents, abuse or misuse, including damages caused by overheating and does not apply to scratches, stains, discoloration or other damage, which does not impair the functionality of the cookware. This warranty is valid only for the first quality goods purchased from an authorized selling agent of Grammy Housewares UK Ltd. Please retain this information for future reference.