ASSEMBLY INSTRUCTIONS



Please remove cap on the gas lift mechanism (C) before assembly.

DISASSEMBLY INSTRUCTIONS




To disassemble, turn the stool upside down and hit the clip in the center of the bottom of the Base with a hammer to disengage the locking mechanism. Then, turn the stool right side up, and lift the Seat upward, pulling the Seat assembly off of the Base.



To remove the Seat from the Gas Lift Mechanism, turn the stool upside down, and gently strike the edge of the Seat where it meets the Gas Lift Mechanism.

ASSEMBLY INSTRUCTIONS

Adjustable Bar Stool

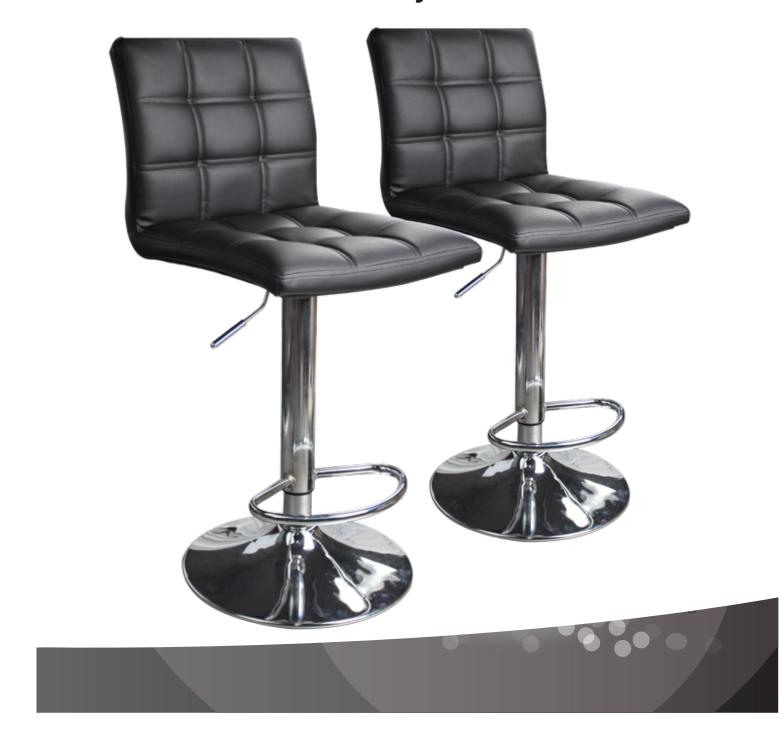

MAXIMUM RECOMMENDED WEIGHT CAPACITY

1. Maximum weight capacity per stool is 250 pounds.

GENERAL INFORMATION &TIPS

- 1. Please read all instructions and warnings before using this product.
- 2. To avoid damage, assemble the chair on a non-abrasive surface such as carpet.
- 3. Make sure all bolts are tightly fastened before the chair is used.

IF THERE IS ANY QUESTION ABOUT A CONDITION BEING SAFE OR UNSAFE, DO NOT USE THIS PRODUCT!


PARTS AND HARDWARE LIST




Note

Please make sure you have all parts before beginning assembly. Please wait until all steps are completed before tightening bolts.

ASSEMBLY INSTRUCTIONS

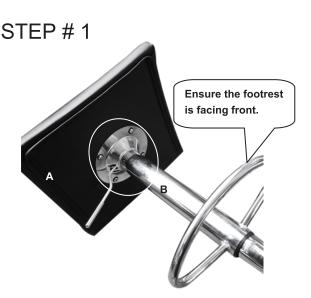

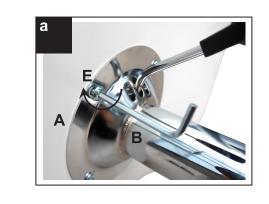

1.Attach steel seat plate (B) to the seat cushion (A) by using four bolts (E) as instruction (a). Tighten the bolts with allen wrench(F)

Note: Ensure the footrest of the steel seat plate (B) is facing front.

STEP#2

 Insert Gas Lift mechanism(C) into Base Top Cover(G) and into the hole on the barstool base(D) as shown.



STEP#3



- 3. Attach the barstool top to the base by inserting the upper of the gas lift mechanism (C) into the bottom of the steel seat plate (B) as instruction (a).
- 4. The Barstool is now ready for use. To raise and lower the seat, grasp the Handle and pull upward without applying any weight on the seat. To lower, raise the handle upward by sitting on the seat.