

Assembly Instruction

Please follow this instruction to avoid assembly errors.

For customer service, please contact **E-mail: shop@robud.com**



WARNING:

- **CHOKING HAZARD**-Small parts. **STRANGULATION HAZARD**-Long cord.
Not suitable for children under 3 years.
- Toys intended to be assembled by an adult. Children should use the product under adult's guidance.
- After opening the package, please keep the packaging items such as plastic film or bags away from babies and children to avoid danger of suffocation.

MAINTENANCE:

- Please keep the product away from fire, substances flammable and humid environments to prevent damage.
- Please keep the product away from water, and don't put liquid in the toy sets.
- Please clean the product with dry soft cloth, don't clean this product with chemical cleaners: alcohol, ammonia water, glass cleaner, etc.
- The instruction must be retained since it contains important information.

Assembly Tips

 


Assembly time: 3 - 4 hours




Recommended Tools:



(Please prepare them by yourself.)

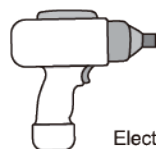

Electric drill


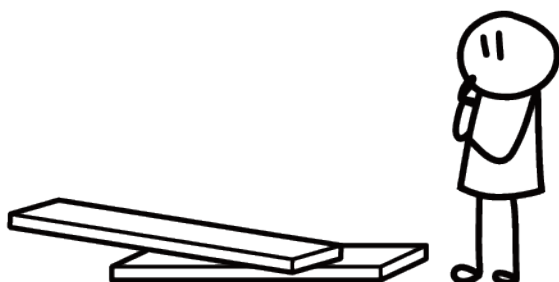 


    - Avoid overtightening screws during assembly.
- Screws should be fully tightened once.
- Arrange all accessories on a hard, flat surface for assembly.
- Follow the instructions step by step.

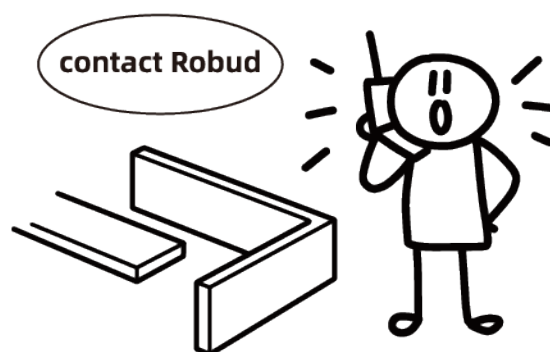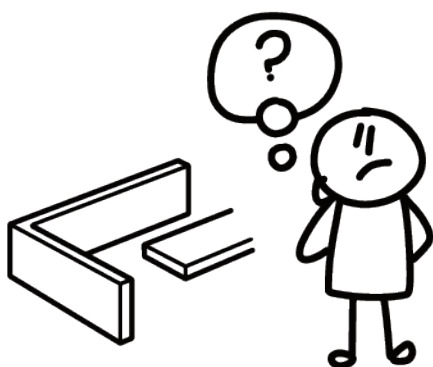

 

 



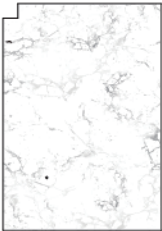 


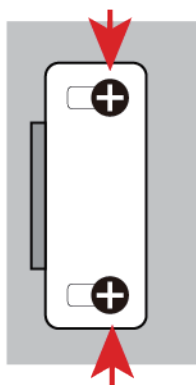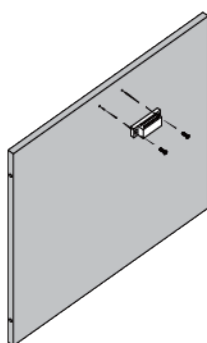
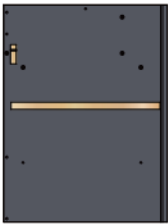 
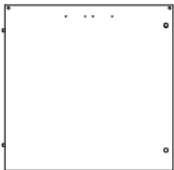 
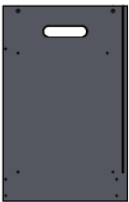 


 
 
 

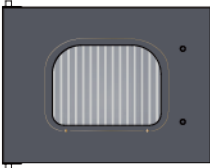 

If you feel hard to assemble the toy or there is any other problem that makes you feel unhappy with the product, please contact us **shop@robud.com**. We are glad to do our best to solve your problem and provide a solution to your satisfaction.

! Notice:

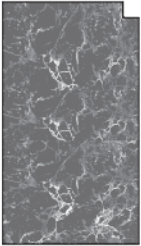 






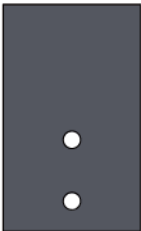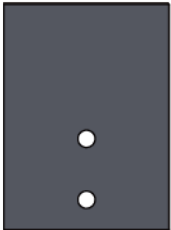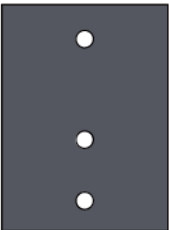


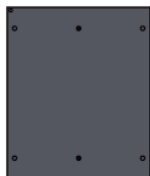 


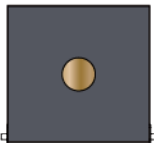








   When assembling the door stop, hold the screw with the screwdriver first and then adjust the screw to the position shown on the left.

 

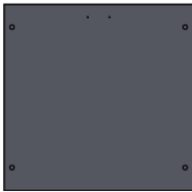 



 
 
 

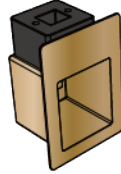 


Product Parts
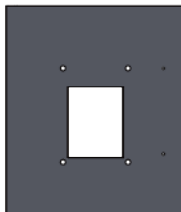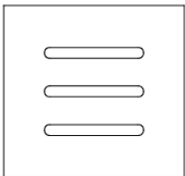
<div>1</div> 	<div>2</div> 	<div>3</div> 	<div>4</div> 
x1	x1	x1	x1
<div>5</div> 	<div>6</div> 	<div>7</div> 	<div>8</div> 
x1	x1	x1	x1
<div>9</div> 	<div>10</div> 	<div>11</div> 	<div>12</div> 
x1	x1	x1	x1
<div>13</div> 	<div>14</div> <div>1</div>  <div>2</div> 	<div>15</div> 	<div>16</div> 
x1	x1	x1	x1
<div>17</div> 	<div>18</div> 	<div>19</div> 	<div>20</div> 
x1	x1	x1	x1





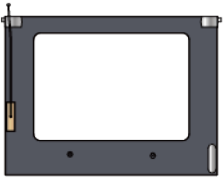



Product Parts

21		22		23		24	
x2	x1	x1	x2				
25		26		27		28	
x1	x1	x1	x1				
29		30		31		32	
x1	x1	x1	x1				
33		34		35		36	
x1	x1	x1	x1				
37		38		39		40	
x2	x1	x1	x1				



      

 


Product Parts

41	42	43	44
			
x1	x1	x1	x1
45	46	47	48
			
x1	x1	x1	x1
49	50	52	53
	 x5		
x1	51	x1	x1
	 x1		
x1	x1	x1	x1




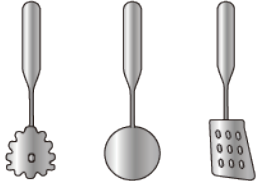 





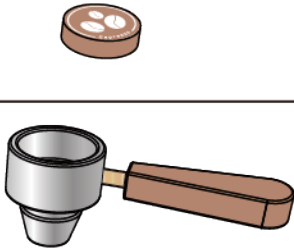 
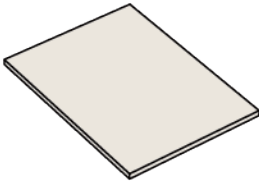 

Hardware

54	55	56	57
		 M3.5x32	 M4x20
x8	x2	x73	x17
58	59	60	61
 M4x18	 M4x8	 M3x12	 M4x40
x13	x4	x16	x2

Hardware


62  M3x16 x2	63  M4x8 x4	64  x2	65  x2
66  M4x6 x12	67  x3	68  x3	

Accessories


 x1	 x1	 x1	 x1
 x6	 x1	 x1	 x2
 x2	 x1	 x1	 x1

Assembly Instruction

 1

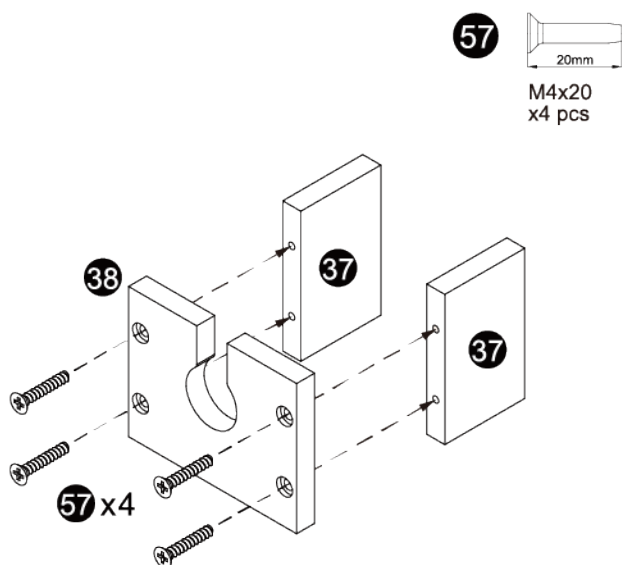


2

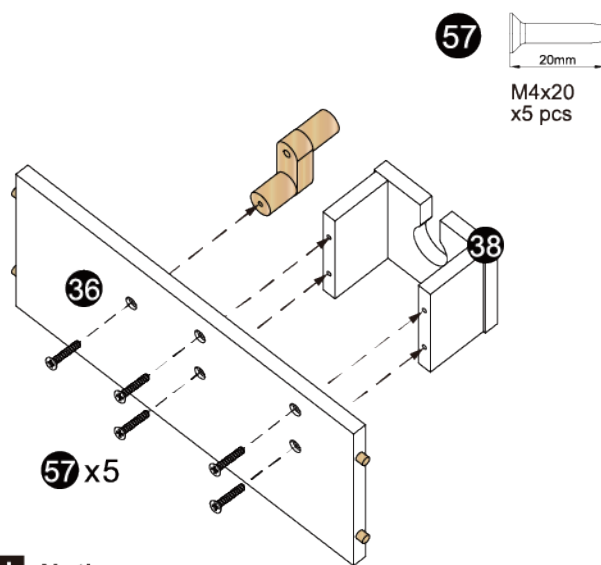 


! Notice:
The assembling direction of each part.

 3

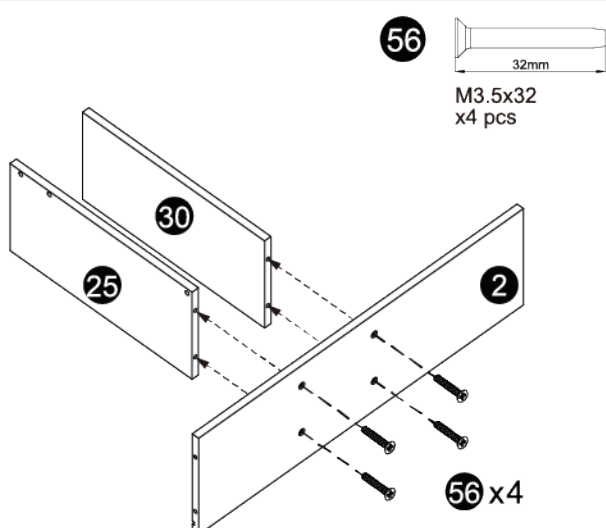


4

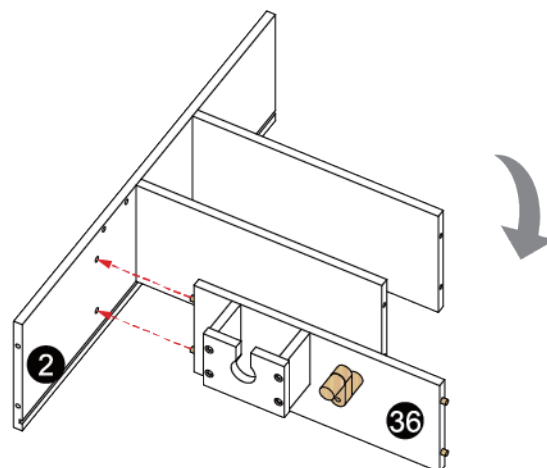 


! Notice:
Align the wooden dowel hole on the left first.

 5

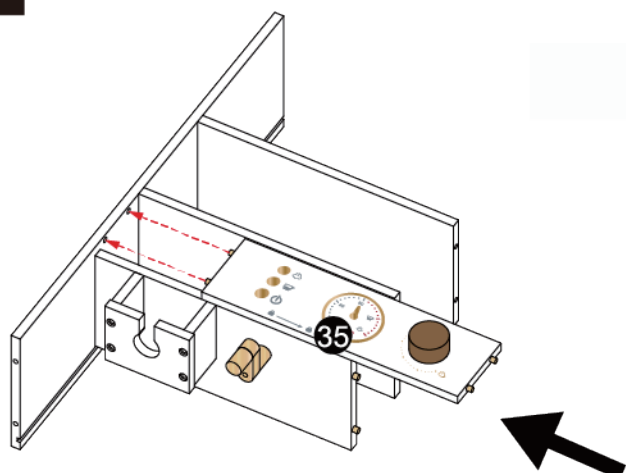

! Notice:
Align the wooden dowel hole on the left first.

 
6

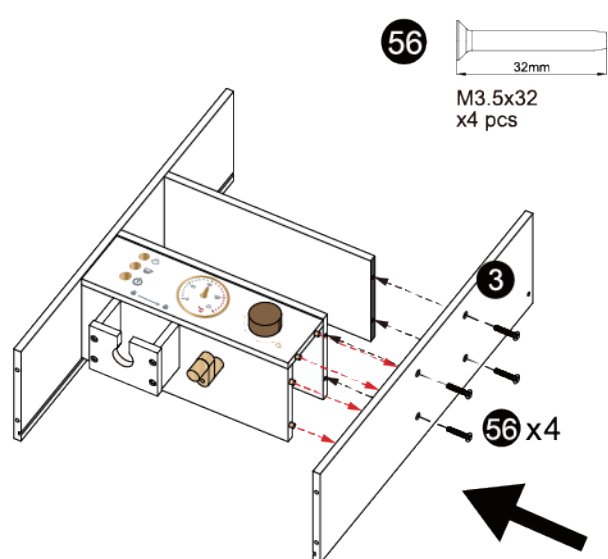


! Notice:
First align the wooden dowel with the hole of 3

Assembly Instruction

 
7

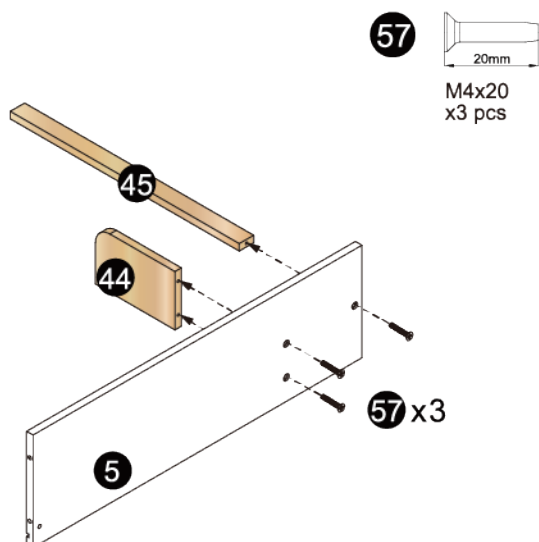

8

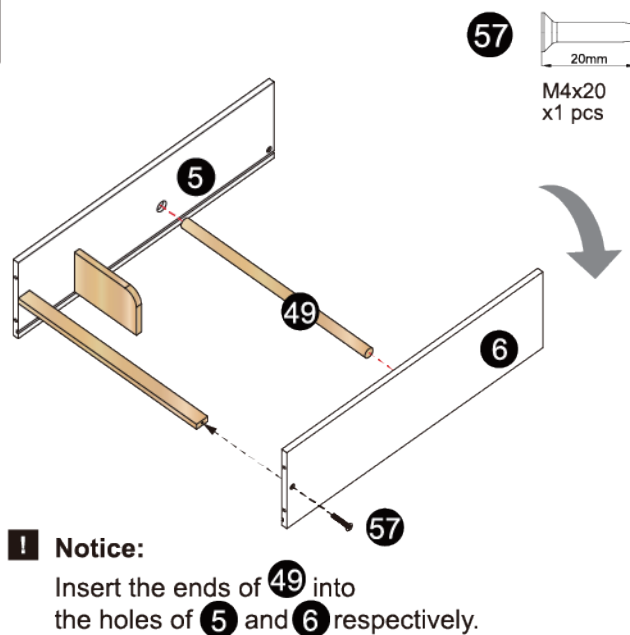 


9

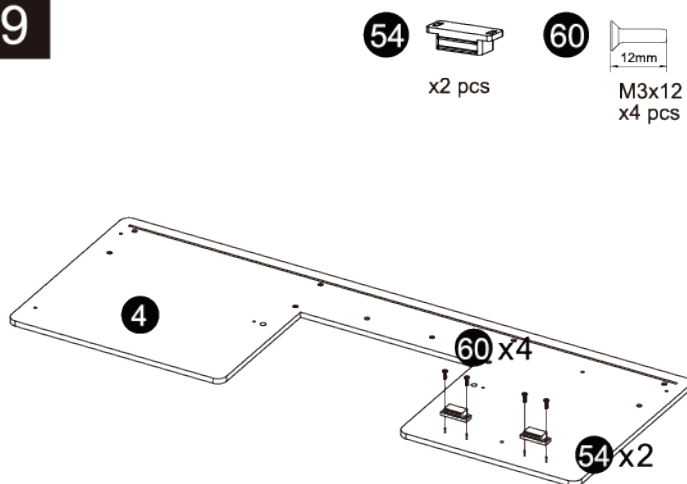 


Notice:
Adjust the door stop.

 
10

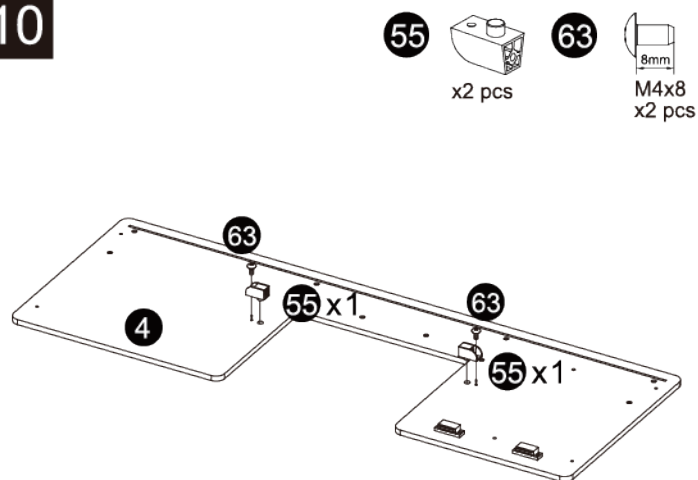

11

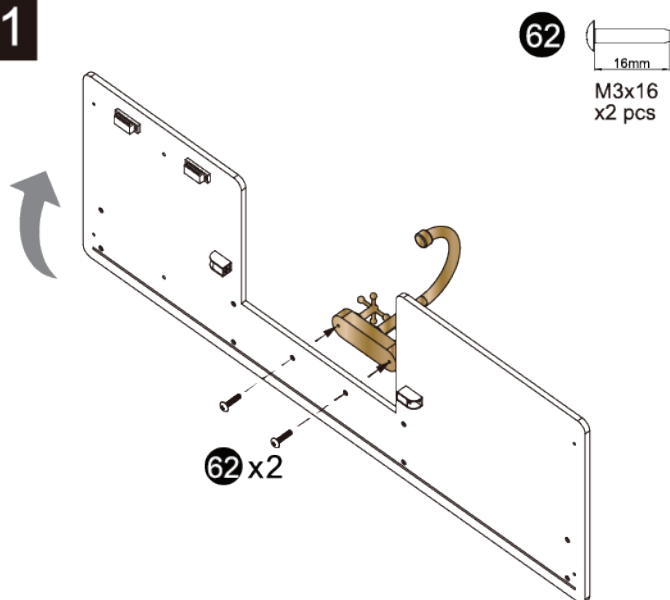 

12

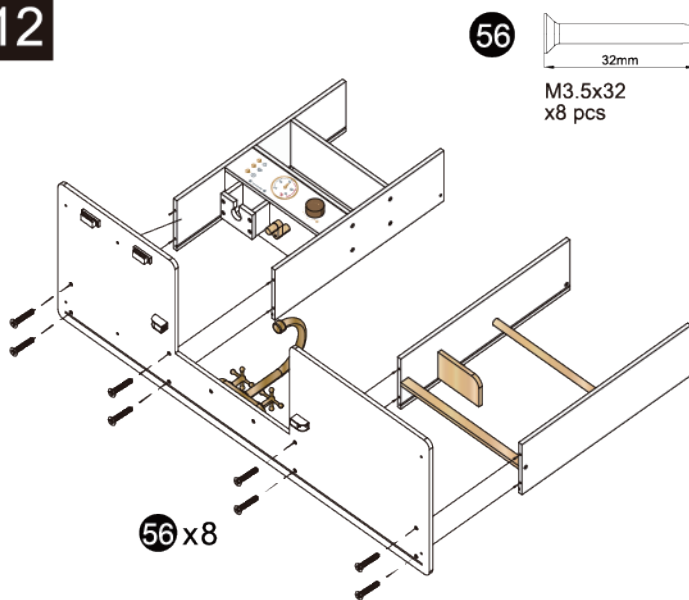 


Assembly Instruction

13


! Notice:

 Wrap the fabric around the woodenstick, and secure the hook and loop.

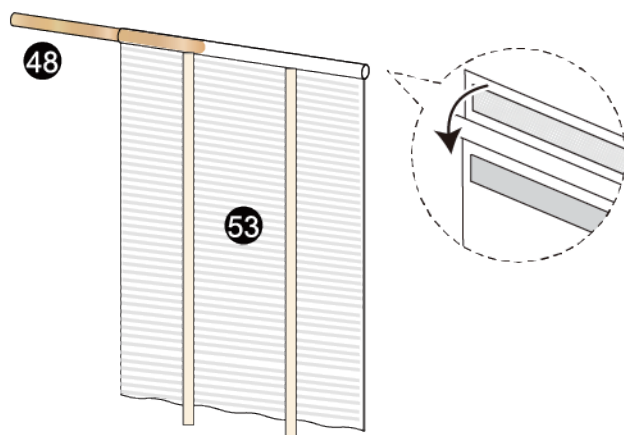


14

 57




M4x20
x2 pcs

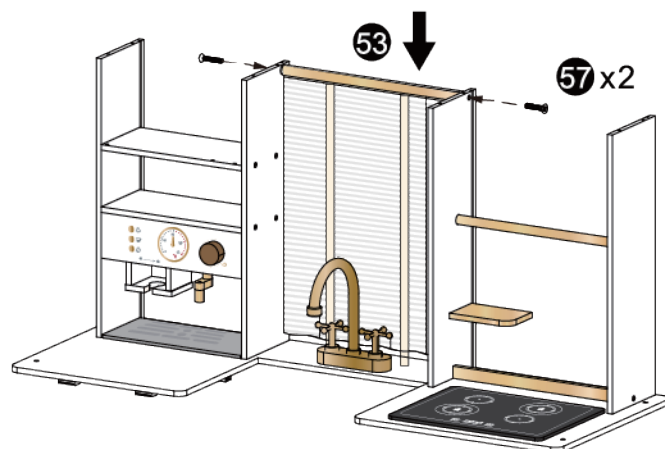 

15

! Notice:

 The notch should face inward.

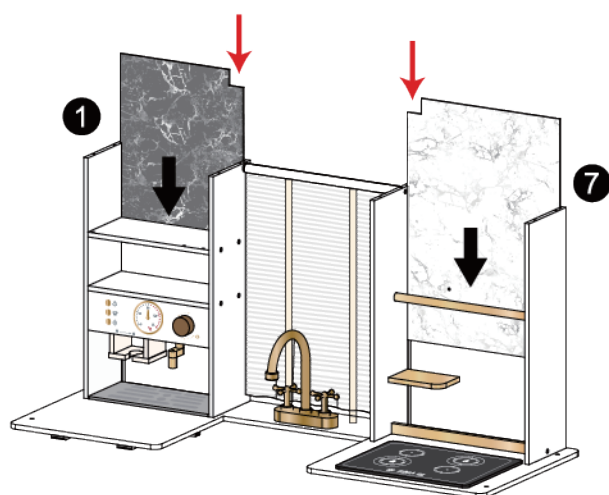


16

58



 M4x18
x1 pcs

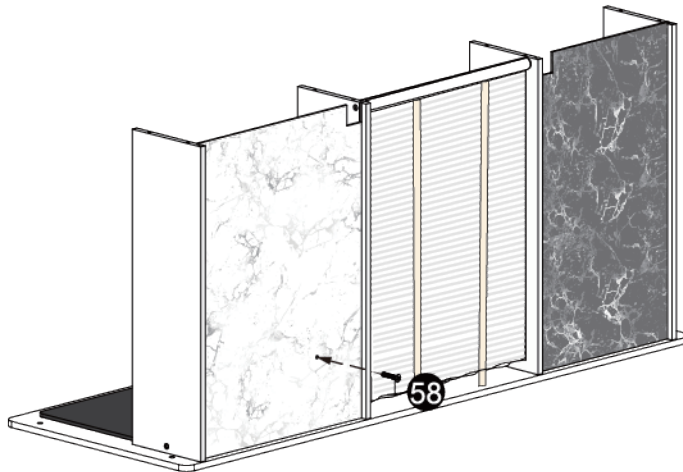


17

56



 M3.5x32
x4 pcs

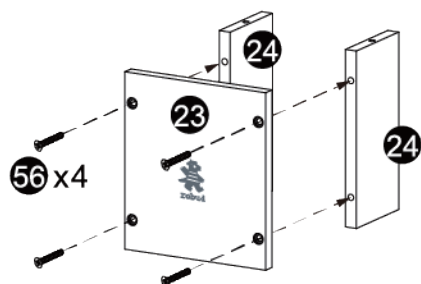


18

56




 M3.5x32
x2 pcs

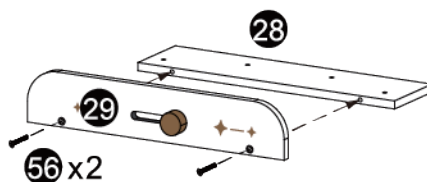


19

 56




M3.5x32
x2 pcs

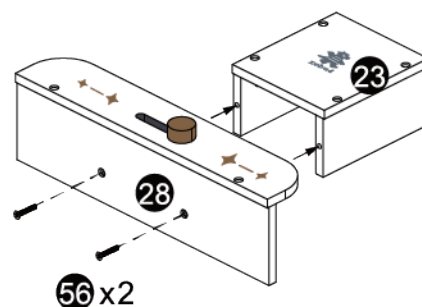 


Assembly Instruction

 20


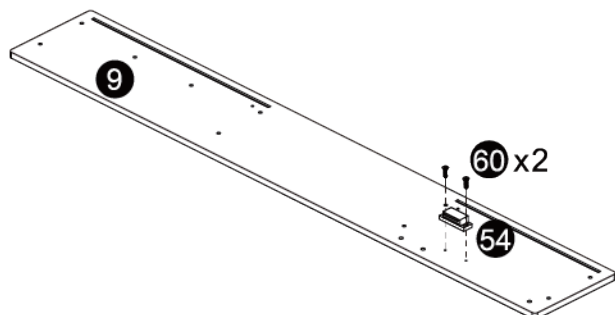


! Notice:
Adjust the door stop.

 
21

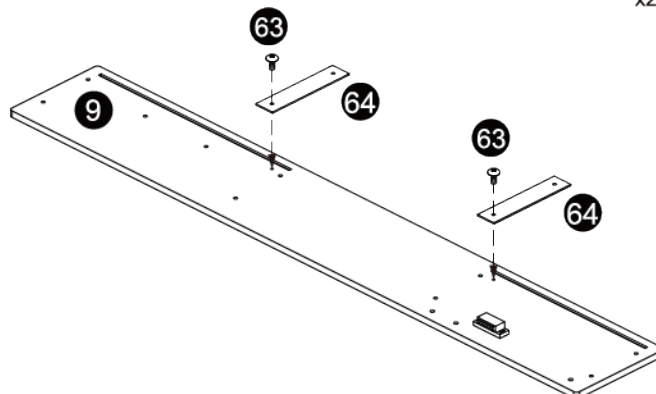


22

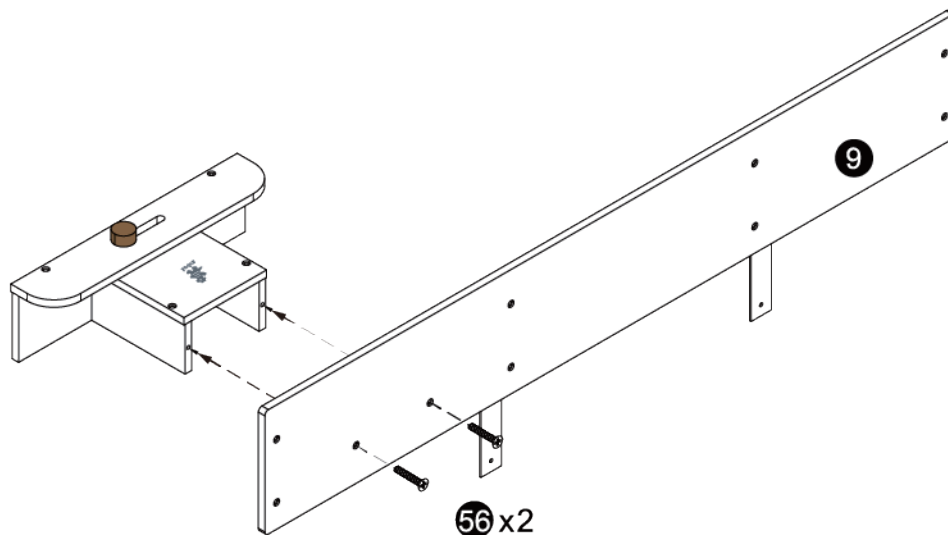  

23

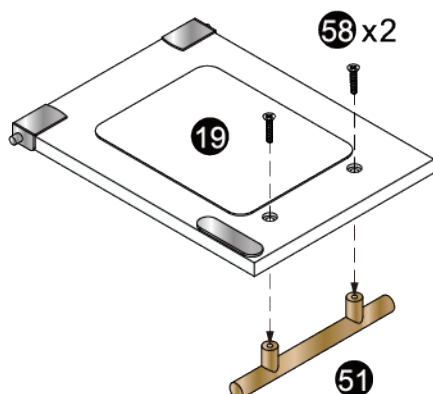 


24

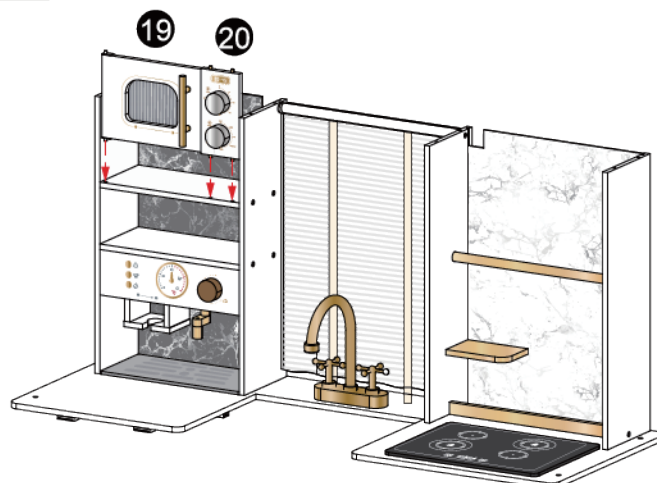 

! Notice:
Align the holes in the arrow direction.

Assembly Instruction

 25

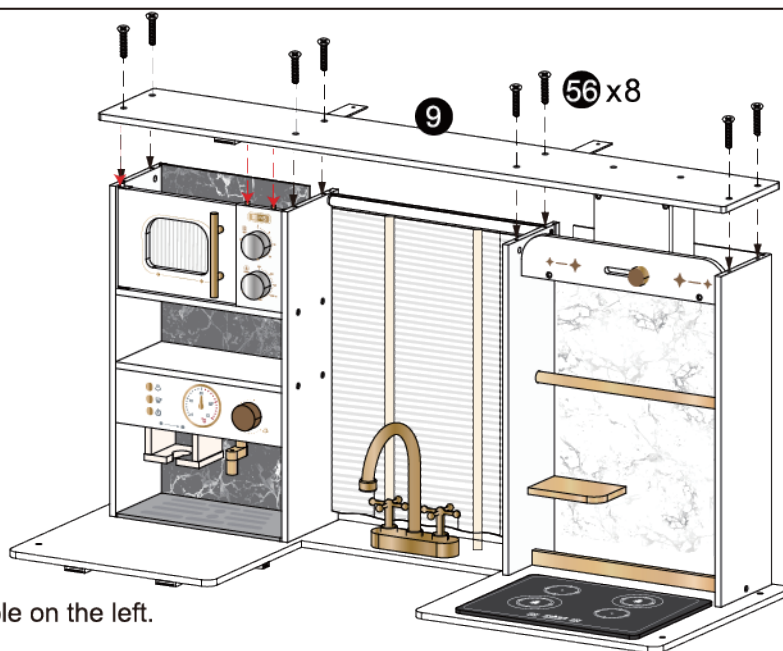

56



M3.5x32
x8 pcs

! Notice:

First align the hole on the left.

26

54

 


x1 pcs

60



M3x12
x2 pcs

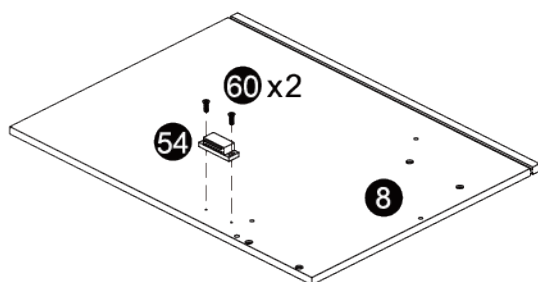


! Notice:

Adjust the door stop.

27

 
56



M3.5x32
x2 pcs

! Notice:

 The direction of the hinge hole on 31

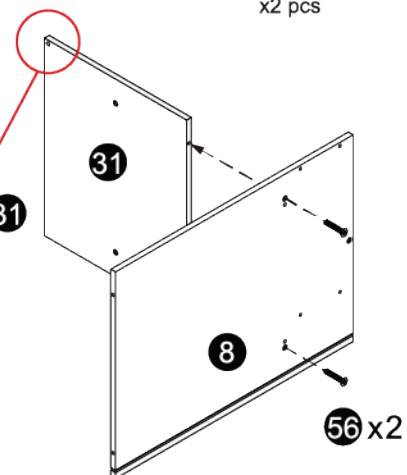


28


56



 M3.5x32
x4 pcs

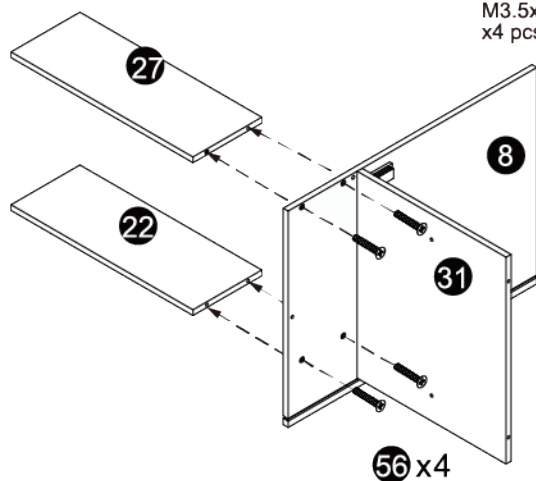

29

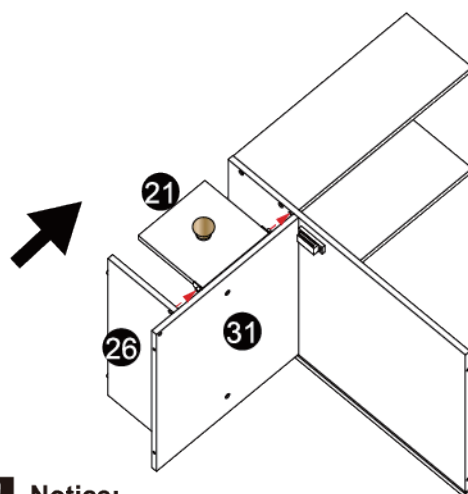 


! Notice:


Align the holes in the arrow direction.

Assembly Instruction

 
30

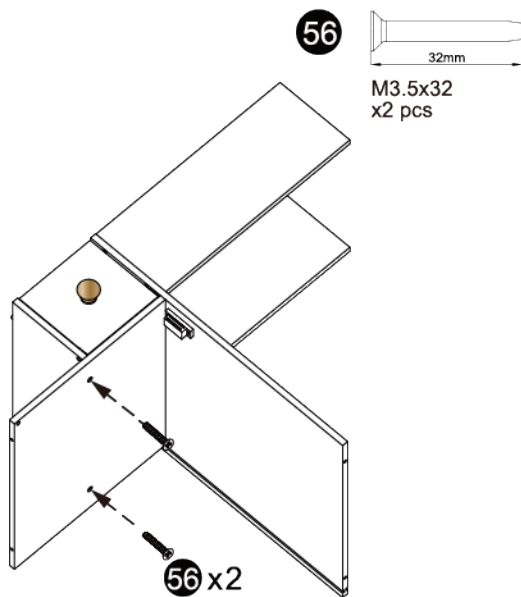


31

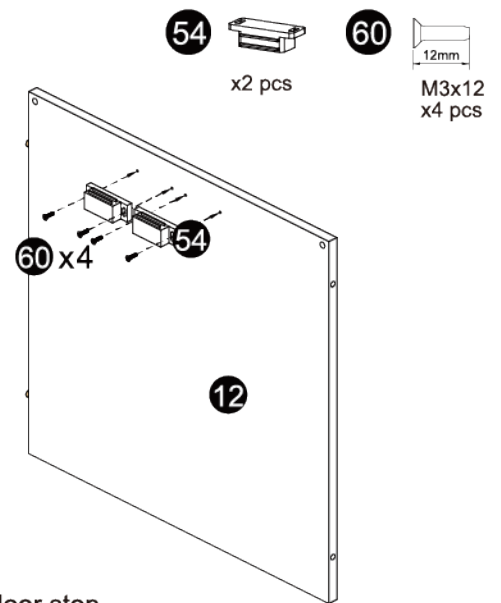 


32

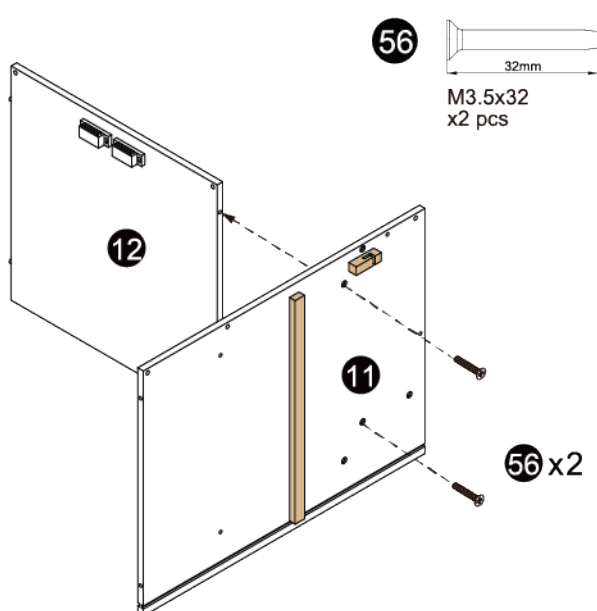 


33

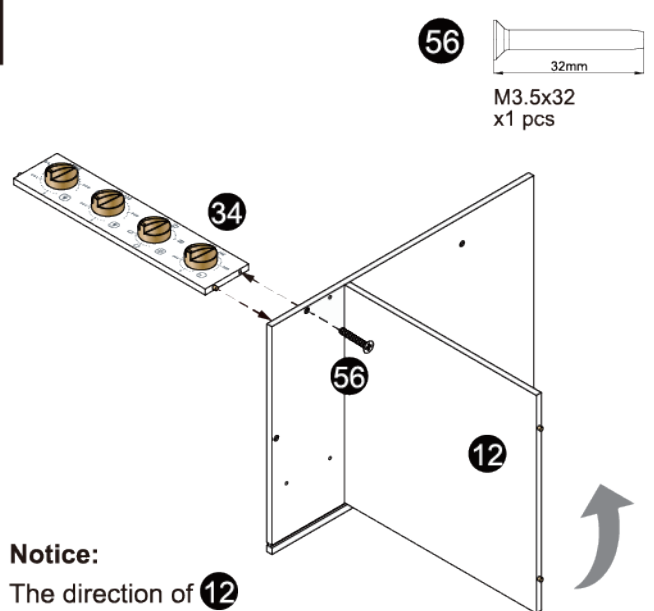 

34

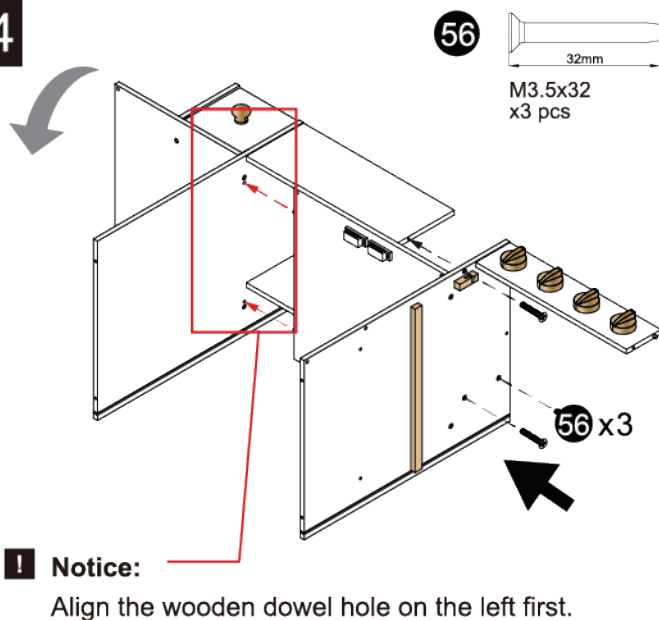 


35

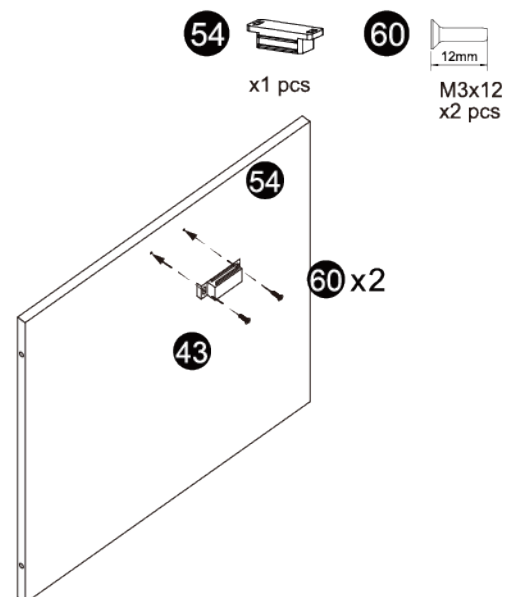 


Assembly Instruction

 
36

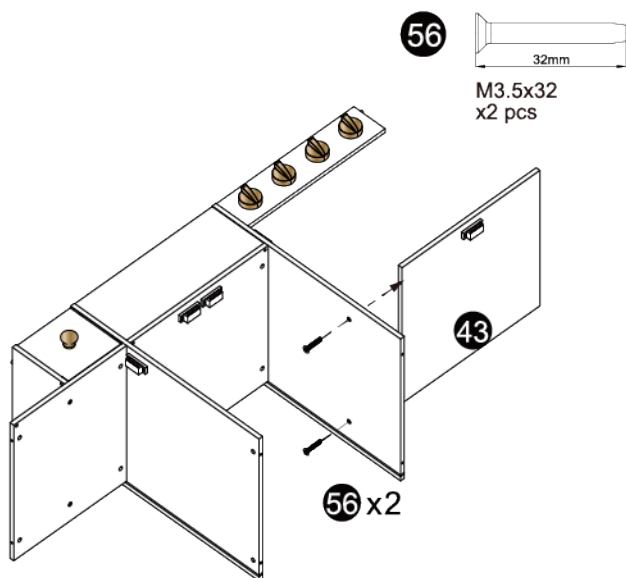


37

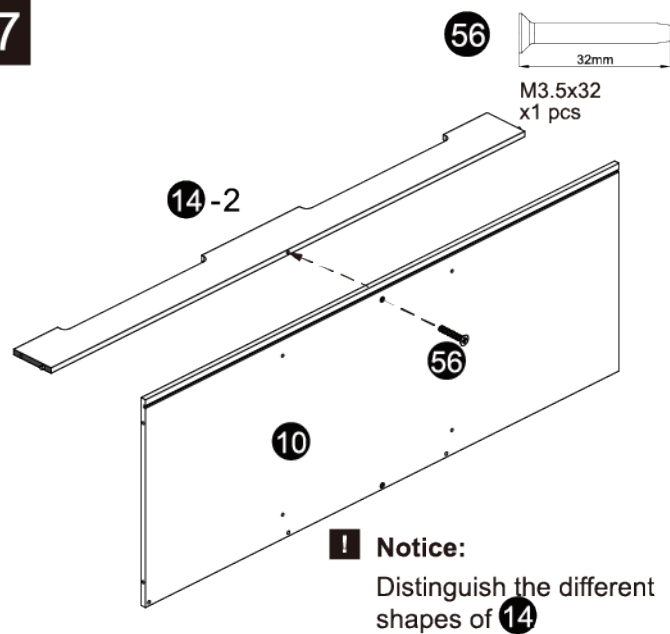 


38

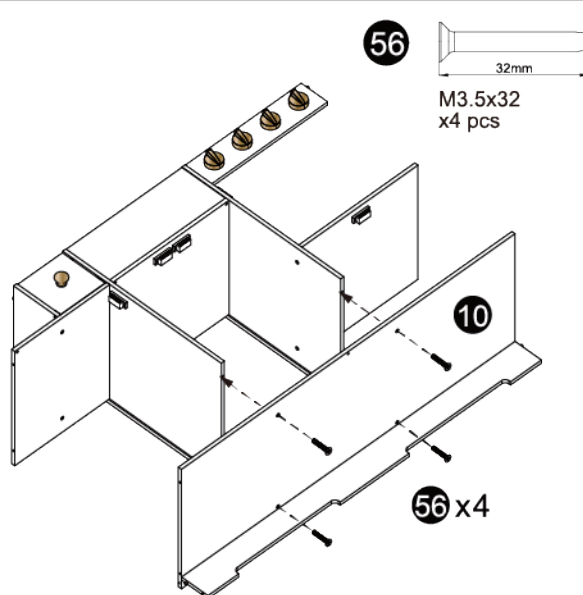 

39

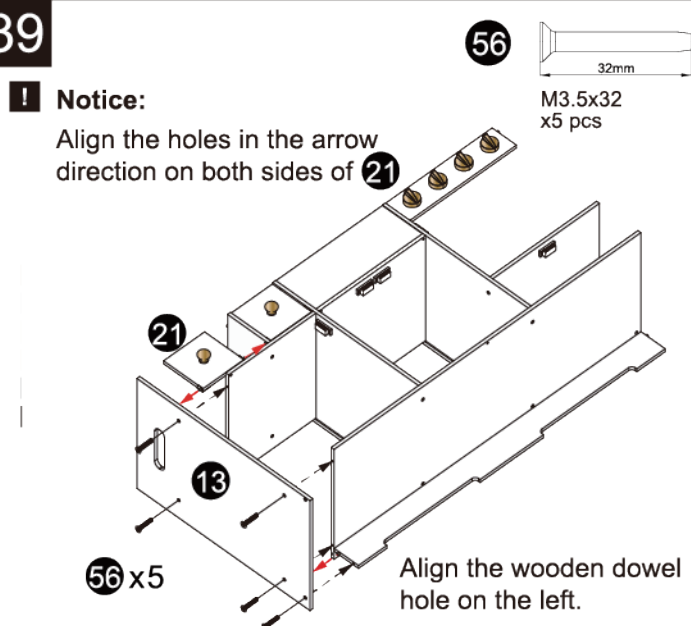 


40

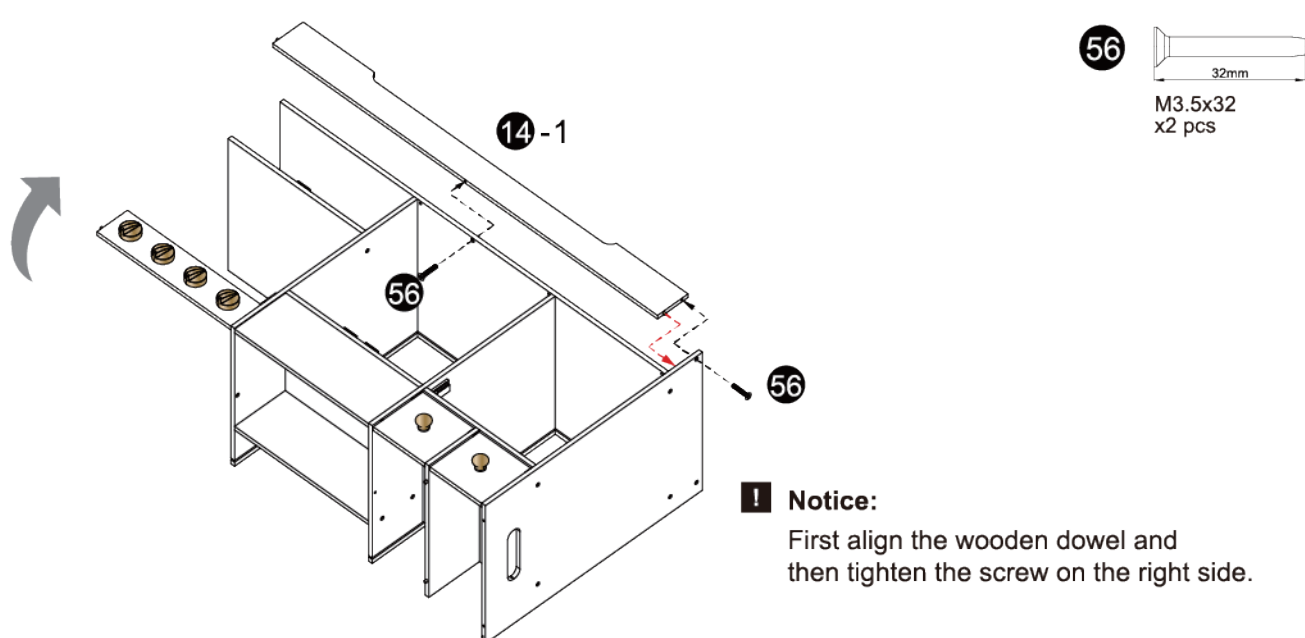 


Assembly Instruction

 
41

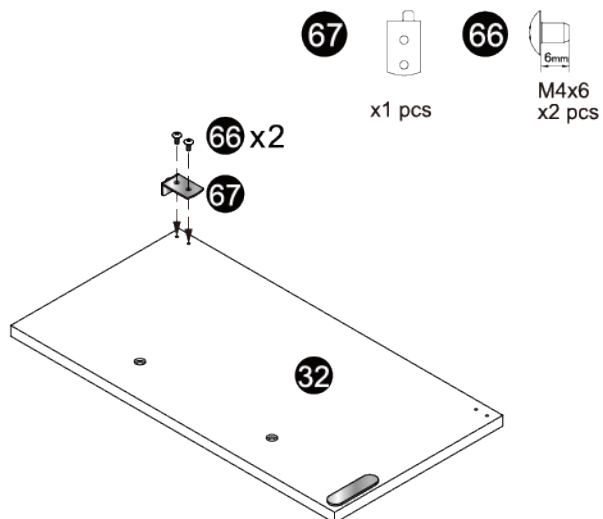


42

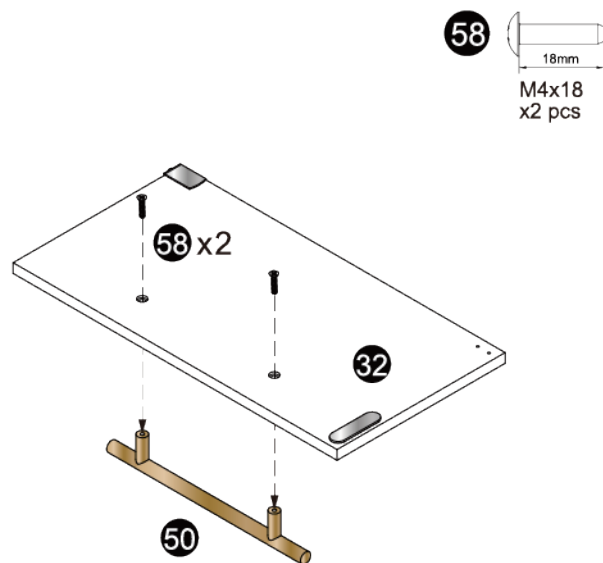 


43

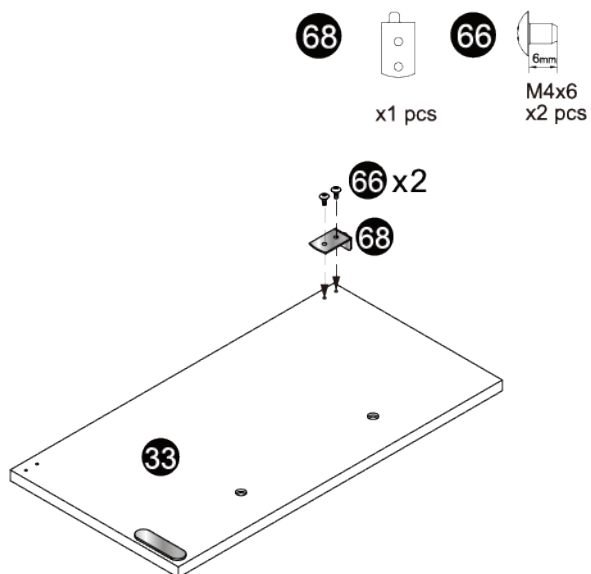 


44

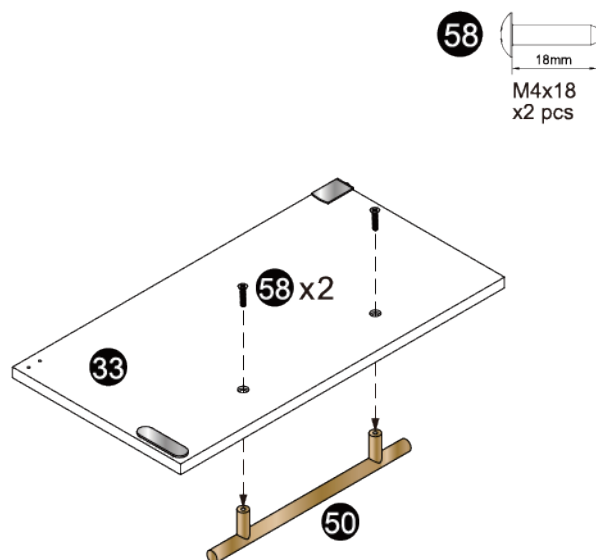 


45

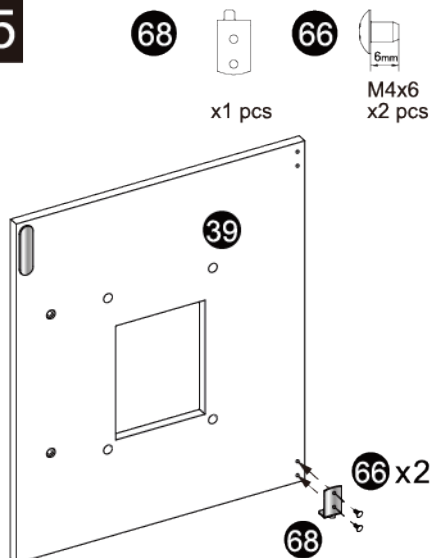 

46

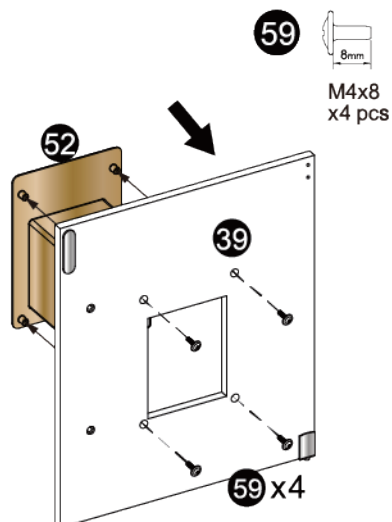 


47

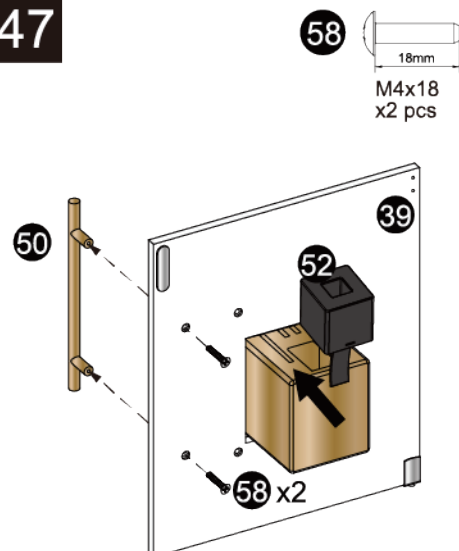 


Assembly Instruction

 48

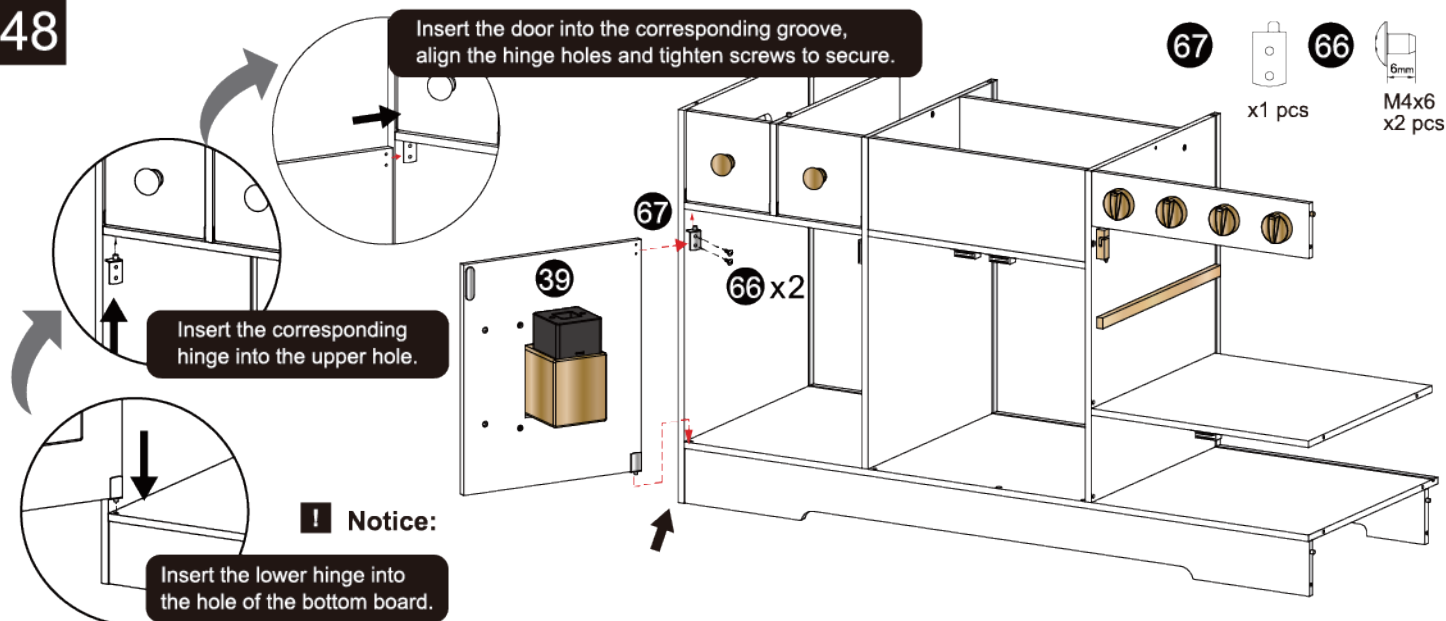


49

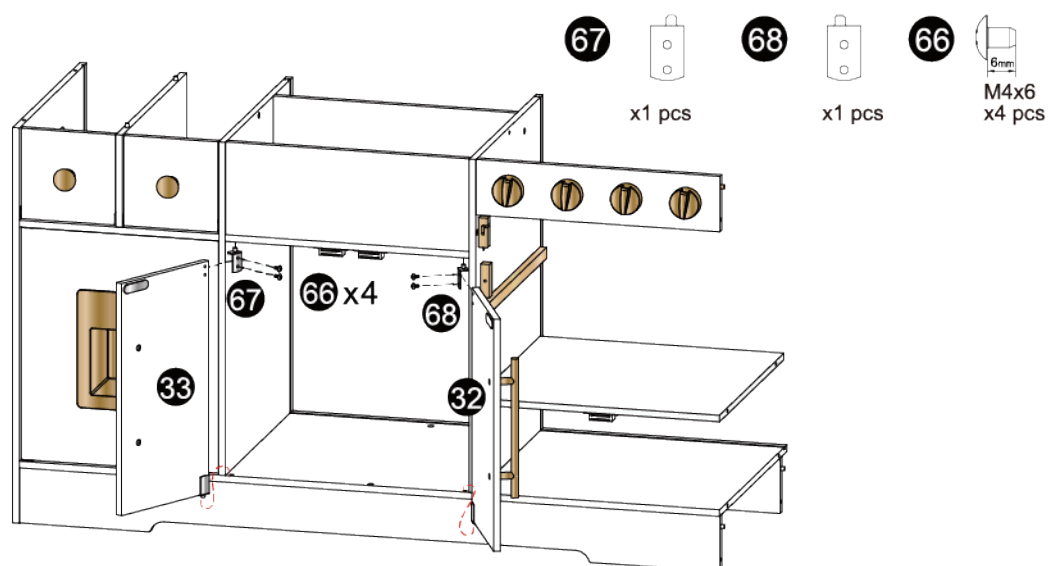 


! Notice:

The assembly steps are the same as in Step 48.

 
50

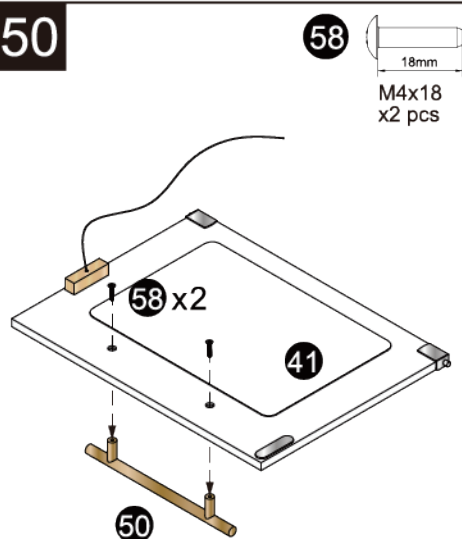

51

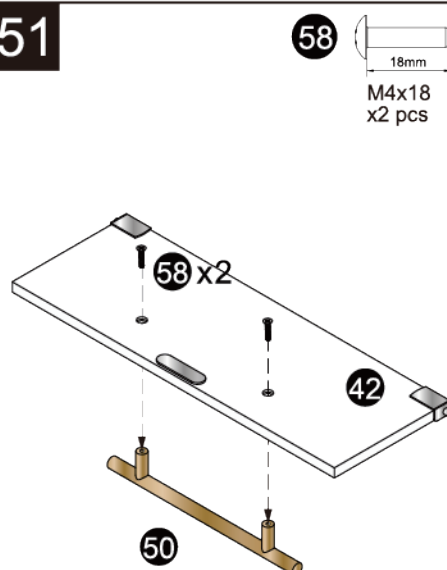 

52

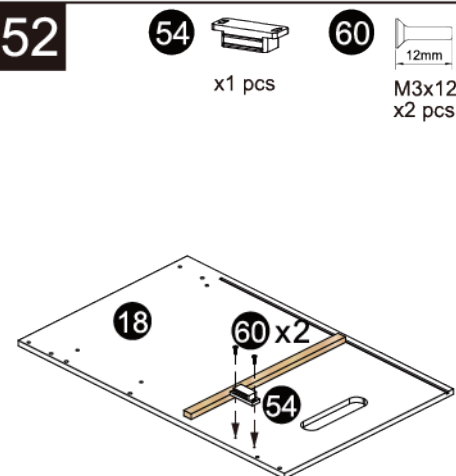 


! Notice:

Adjust the door stop.


Assembly Instruction

53


 
! Notice:
Align corresponding holes in the arrow direction.

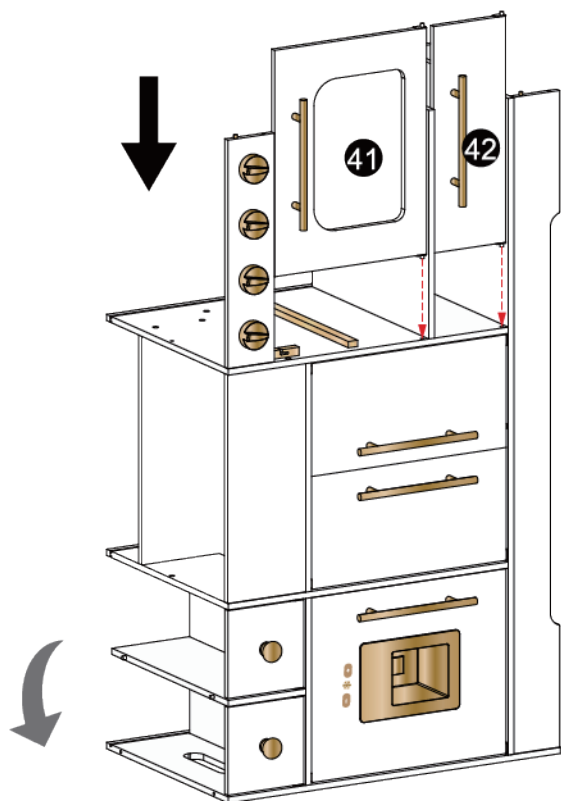

54

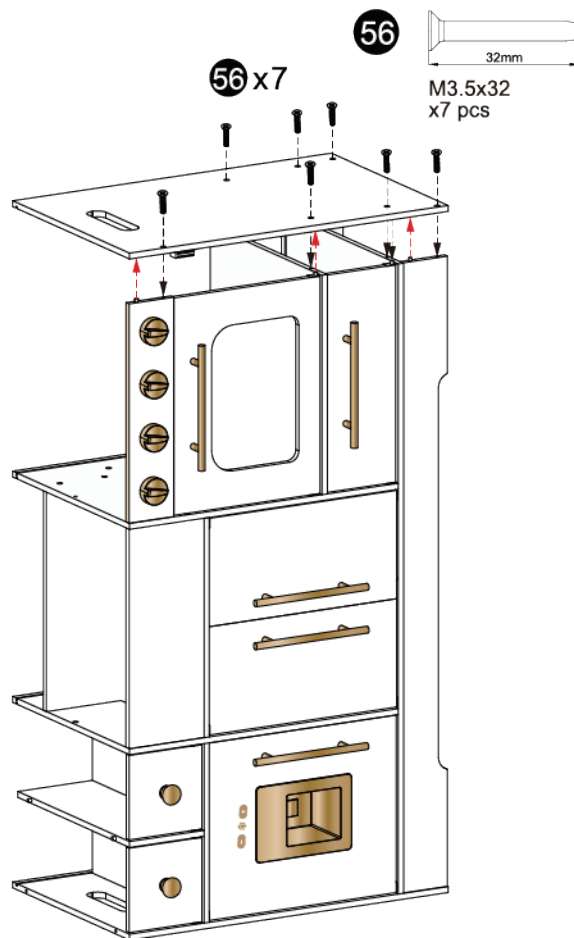 


55

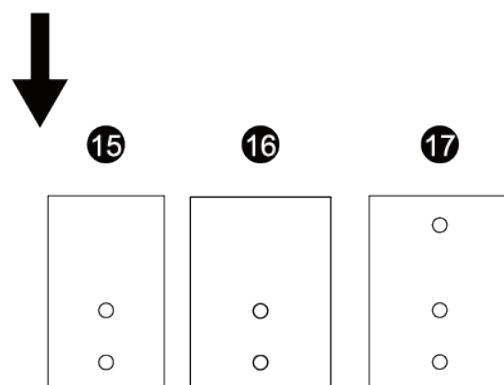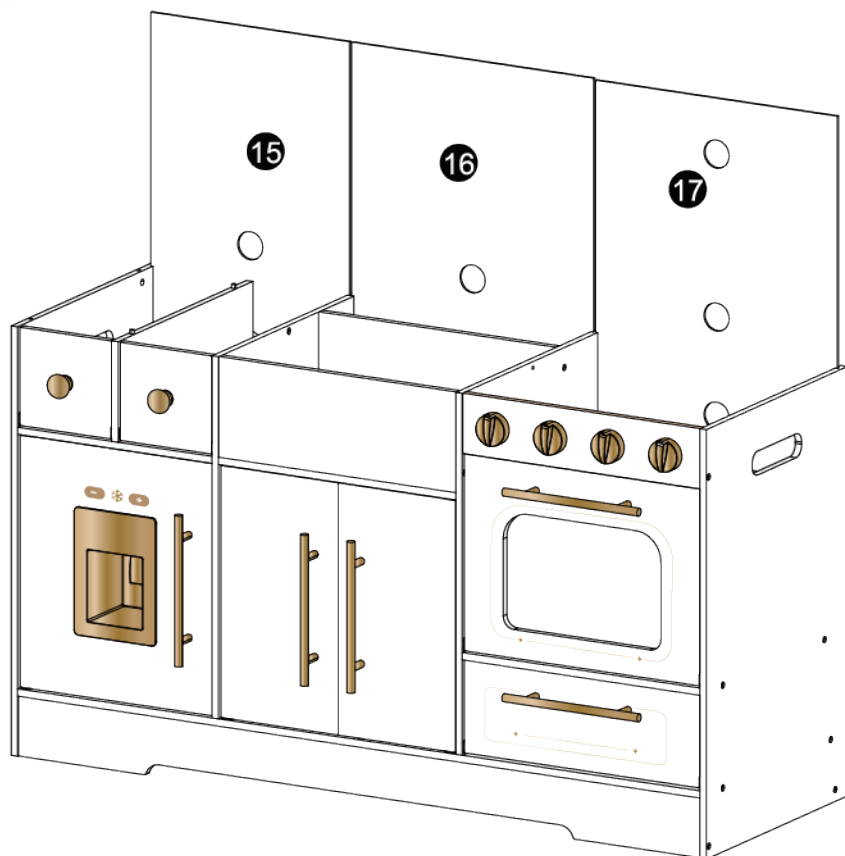  

! Notice:
The direction of boards.

Assembly Instruction

 
56

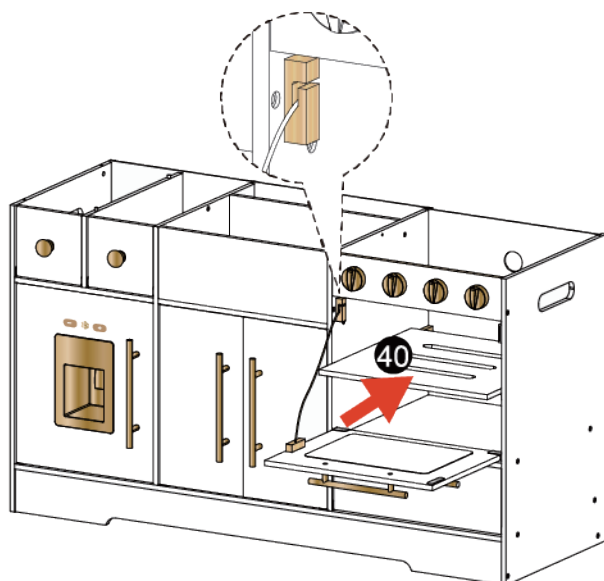

! Notice:

Open the oven door, hang the string on the groove, and place 40 inside. Then, close the oven door.

 
57

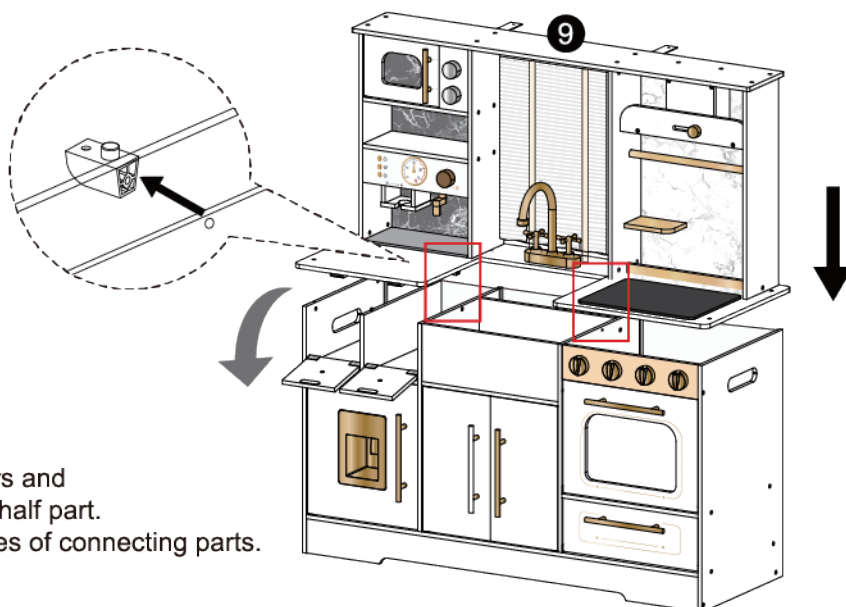

! Notice:

Open two small drawers and then assemble the top half part. Adjust to align with holes of connecting parts.

 58

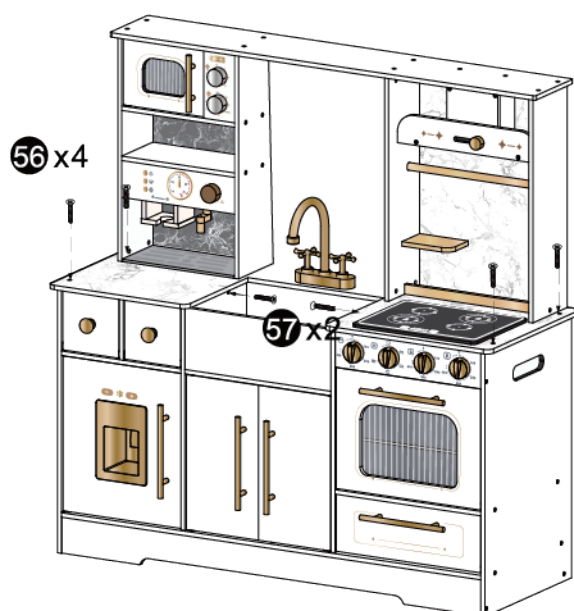


56



M3.5x32
x4 pcs

 57





M4x20
x2 pcs

Assembly Instruction

59

You have completed the toy kitchen, and the following instructions of part assembly can help use it better!

  Curtain Fixing Tips

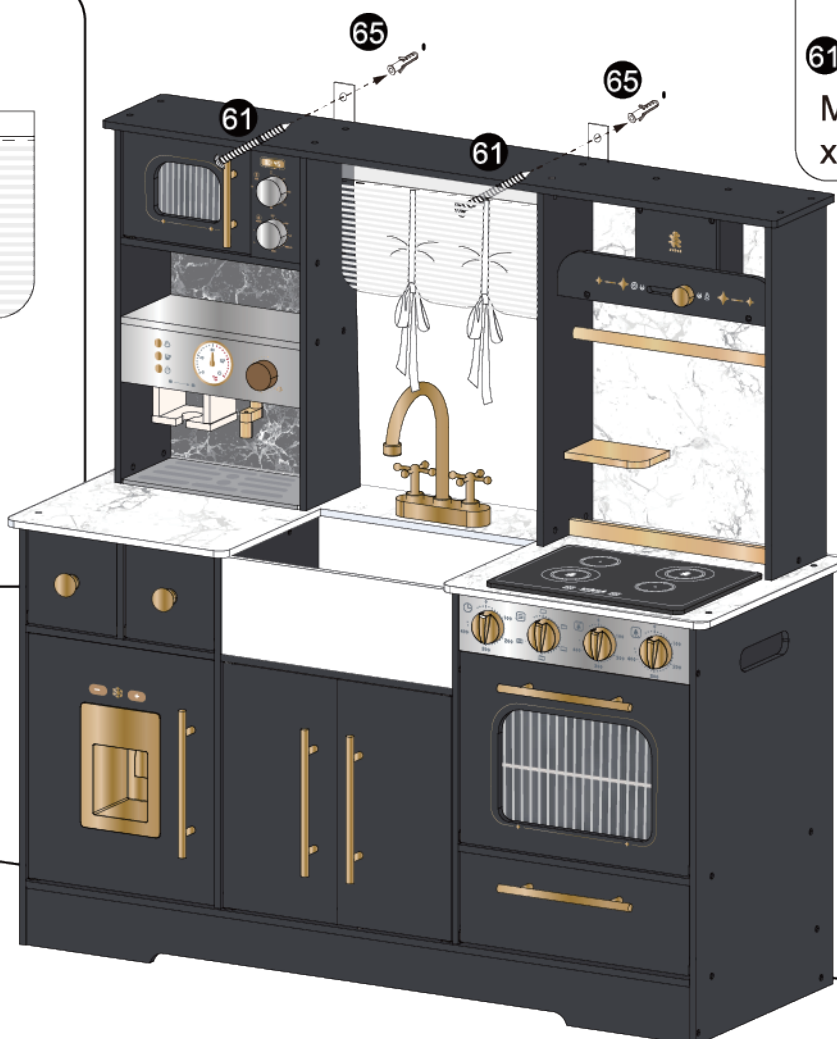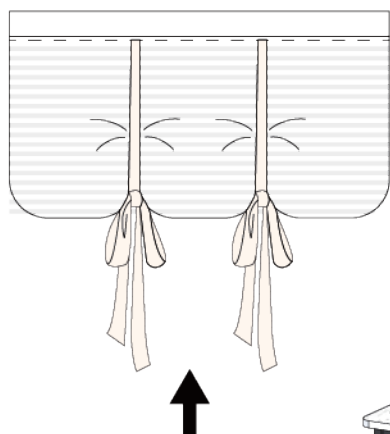

61
M4x40
x2 PCS

! Notice:

The the anti-tip assembly can be secured on the wall to prevent the kitchen from tipping during play.



It is recommended to place the kitchen against the wall during use.

Avoid placing the toy kitchen in open spaces and prevent your child from climbing on it.

The hardware accessories are primarily suitable for being assembled on walls shown in the instruction. For other situations, consult your local hardware store to choose more suitable accessories.

Instruction of anti-tip assembly

Suitable Bricks/Materials

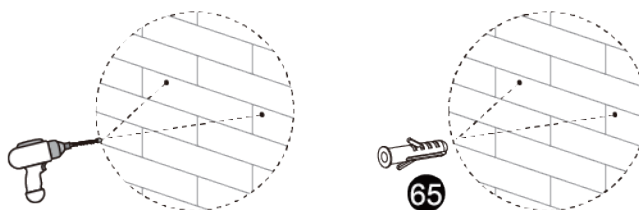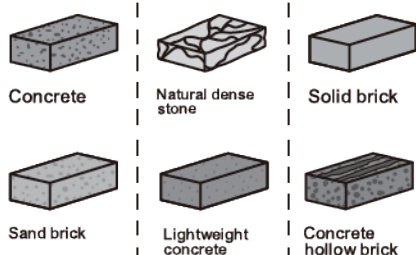

Use the electric drill to drill holes on marks.

The punching depth should be longer than the part to be inserted (the expandable tube 65)

Place the expandable tubes 65 into the drilled holes.

Finally, screw 61 into two hole for the expandable tubes.



www.robud.com