

ASSEMBLY INSTRUCTIONS



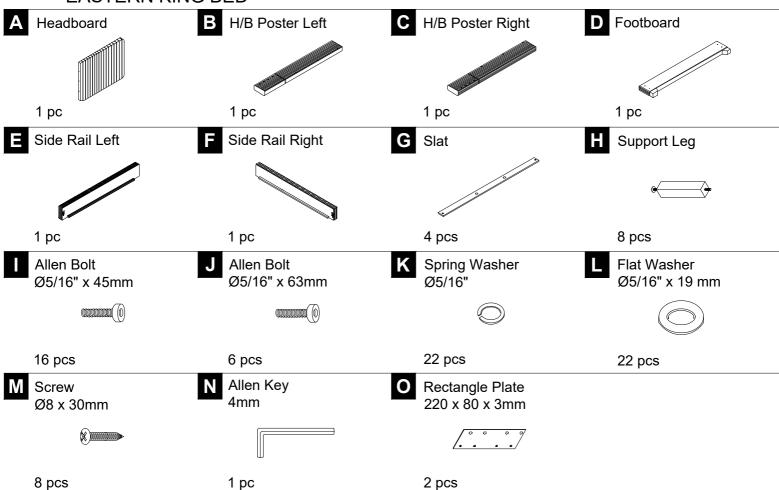

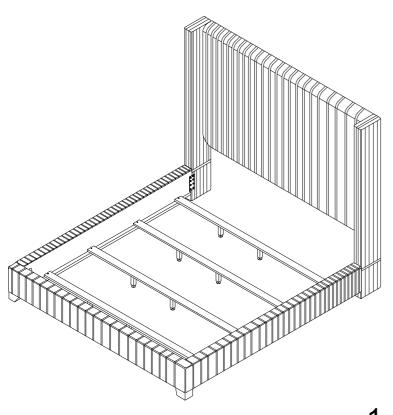


This page lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.

IMPORTANT NOTE:

- 1. Do not tighten all screws / bolts until all completely assembled.
- 2. Keep all hardware parts out of reach of children.


*** Do not tighten screws & bolts until the entire unit is completely assembled.

Attach H/B Poster Left & Right (B), (C) to Headboard (A) by using Allen Bolt (J), Spring Washer (K) and Flat Washer (L) with Allen Key (N).

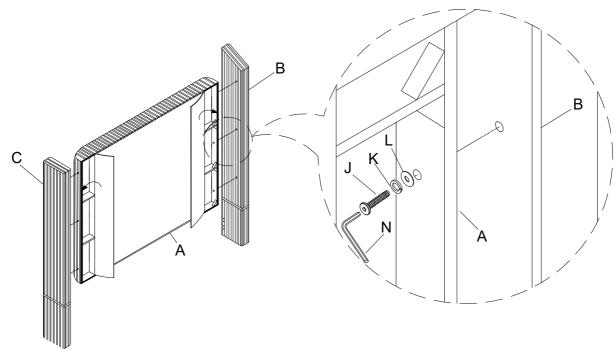


- (I) Attach Rectangle Plate (O) to H/B Poster Left & Right (B), (C) and Side Rail Left & Right (E), (F) by using Allen Bolt (I), Spring Washer (K) and Flat Washer (L) with Allen Key (N).
- (II) Unfasten bolts on Footboard (D) then attach Side Rail Left & Right (E), (F) to Footboard (D) by using same bolts with Allen Key (N).


Remark: Do not fully tighten bolts until screwing Slat (G) onto Side Rail Left & Right (E), (F).

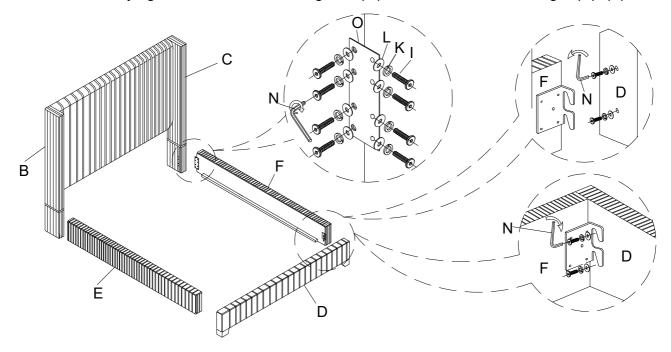

Attach Support Leg (H) to Slat (G).

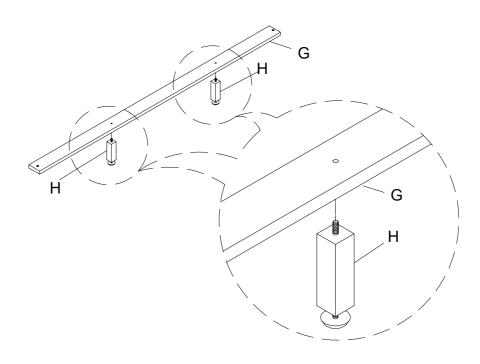

4 Attach Slat (G) to Side Rail Left & Right (E), (F) by using Screw (M) with a screwdriver (not included). Remark: Tighten all bolts after screwing Slat (G) onto Side Rail Left & Right (E), (F).

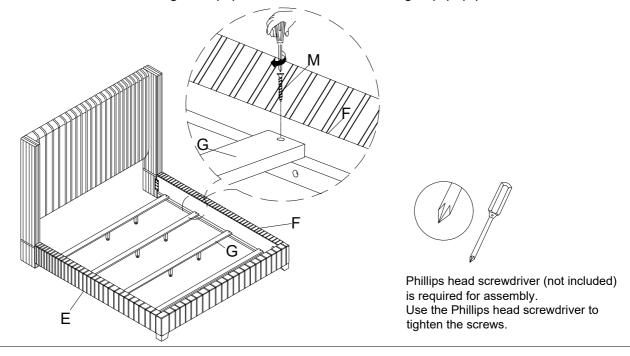

Cleaning & Care

Treat surfaces with care. Surfaces are resistant to scratches but are not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.