




NE 4275-4

PB 8210-4

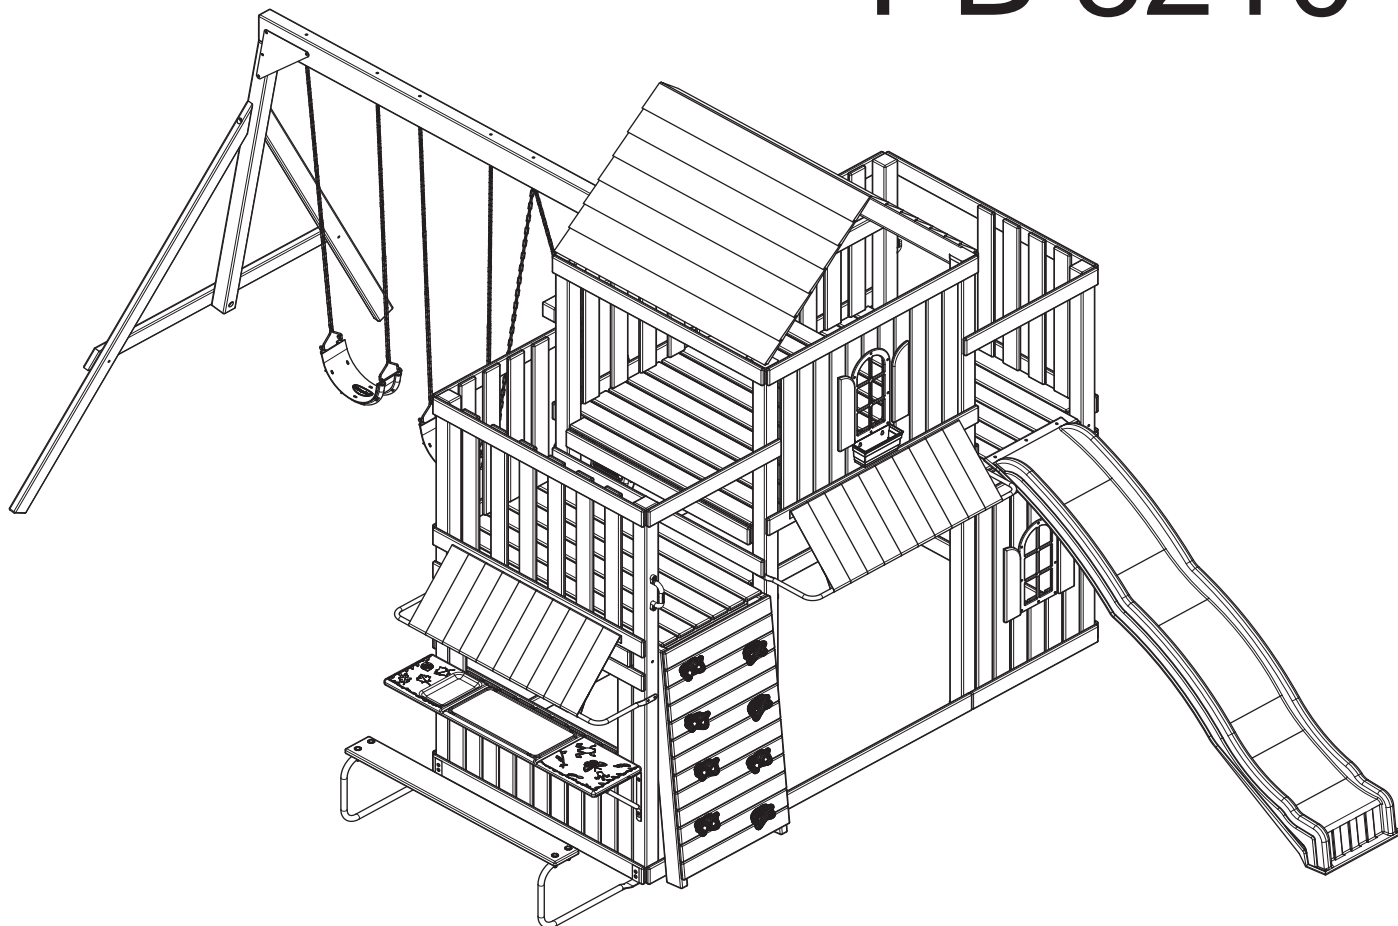

WARNING:

Assembly by an adult.

No. of children: Up to 12
Est. building Time: 6-11 hrs.
Two Adults

IMPORTANT!!

PLEASE READ BEFORE BEGINNING ASSEMBLY!!

Please make sure all lumber, hardware and accessory parts are accounted for. If you are missing anything, please DO NOT RETURN to the store where purchased. Please call our Customer Service Department at the number below.

ASSEMBLY INSTRUCTIONS

Swing•N•Slide • 1212 Barberry Drive • Janesville, Wisconsin 53545
Visit our web site at: www.swing-n-slide.com or call us at 1-800-888-1232



Safety Checklist for Swing-N-Slide Play Sets and Accessories

Observing the following statements and warnings reduces the likelihood of serious or fatal injury

Installation Safety – Have You:

- ☐ Consulted the assembly instructions supplied with your particular model?
- ☐ Noted this accessory is to be used only on Swing•N•Slide approved designs? (Do not alter its design or add/remove components, this accessory is intended for wooden playsets only, do not install on metal frame playsets).
- ☐ Made sure all hardware is tightened securely? (Supplied bolt covers must also be fastened securely.)
- ☐ Using a hacksaw, cut off all protruding threaded ends of bolts and other fasteners and remove any sharp edges with a metal file as needed, and coated fastener ends with lead free paint?
- ☐ Placed the equipment on level ground, not less than six feet (1.8 meters) from any structure or obstruction such as a fence, garage, house, overhanging branches, laundry lines, or electrical wires?
- ☐ Made sure home playground equipment is not installed over concrete, asphalt, packed earth or any other hard surface? (A fall onto a hard surface can result in serious injury to the equipment user.)
- ☐ Verified that suspended climbing ropes, chain, or cable are securely anchored at both ends and cannot be looped back upon itself?
- ☐ Consulted in assembly instructions of your particular model for minimum use zones?
- ☐ Used a water sealant on your play set to protect the wood and prevent cracking and warping? (Apply water sealant directly after assembly is complete. If you live in a coastal area, it is advisable to apply a clear coat finish to all metal parts to discourage rust).
- ☐ Followed all anchoring and shock absorbing surfacing requirements on the back of this sheet as they apply?
- ☐ Made sure not to allow children to use equipment until it is properly installed?
- ☐ Made sure to adjust all swings so there is a minimum 8" clearance between the swing and the ground surface?
- ☐ If project requires more than one day to complete, made certain to anchor the tower as soon as it is constructed?

Do not leave the tower unanchored overnight.

Operating Safety – Have You:

- ☐ Determined that on-site adult supervision is provided for children of all ages?
- ☐ Warned children the following before allowing them to use the equipment?
 - ☐ Not to walk close to, in front of, behind or between moving items.
 - ☐ Not to twist swing or any other accessory chains or ropes or loop them over the top support bar since this will reduce the strength of chain or rope.
 - ☐ Not to stand on swing seats.
 - ☐ Not to swing empty seats or other accessories.
 - ☐ Not to slide down swing chains.
 - ☐ Be sure to sit in the center of the swing seat and other accessories with full weight on the seat.
 - ☐ Not to attach items to the playground equipment that are not specifically designed for use with the equipment such as but not limited to, jump ropes, clotheslines, pet leashes, cables and chain. They may cause a strangulation hazard.
 - ☐ Not to climb or walk on the top of swing beams, railings or roof.
 - ☐ Not to use equipment in a manner other than intended.
 - ☐ Not to get off equipment while it is in motion.
 - ☐ Not to climb on the equipment when it is wet.
 - ☐ Be sure to go down slides feet first.
- ☐ Determined that only one child per planned occupant seat should be allowed on this set at one time.
- ☐ Determined children must be dressed appropriately for play. Avoid hooded jackets, bicycle or other sports helmets, clothing with draw strings and loose fitting clothes which could become entangled or snagged on equipment.
- ☐ Determined that suspended climbing ropes, chain, or cable are securely anchored at both ends and cannot be looped back upon itself.
- ☐ Made certain the slide is placed so that it is not in direct sunlight.

Safety Maintenance – Follow these preventive maintenance instructions at the intervals required:

- ☐ Use of weed trimmers too close to board surfaces will cause damage to the wood and compromise protection against rot and insect infestation.
- ☐ To prevent the deterioration of materials, remove plastic swing seats and other plastic accessories when outdoors temp dips down to or below 32° F and take indoors. Reinstall these plastic elements at the beginning of each play season.
- ☐ At the beginning of each play season check metal parts for rust. If found, sand and repaint using a non lead-based paint meeting the requirements of 16 CFR 1303 or SOR/2005-109.
- ☐ At the beginning of each play season and once a month during each play season, check all moving parts for wear, rust or other deterioration. Replace as needed. If any of these conditions exist, call 1-800-888-1232 to order replacement accessories.
- ☐ At the beginning of each play season and once a month during each play season lubricate metallic moving parts.
- ☐ At the beginning of each play season and twice a month during each play season, check all protective coverings on bolts, pipes, edges, and corners. Replace if they are loose, cracked, or missing.
- ☐ At the beginning of each play season and twice a month during each play season, rake and check depth of loose fill protective surfacing material to prevent compaction and maintain appropriate depth. Replace as necessary.
- ☐ At the beginning of each play season and twice a month during each play season tighten all hardware.
- ☐ At the beginning of each play season and twice a month during each play season, check all wood members for deterioration and splinters. Sand down splinters and replace deteriorating wood members.

Disposal Instructions

When the equipment is taken out of service, it must be disassembled and disposed of in such a way that no unreasonable hazards will exist at the time the set is discarded.

Important! Additional Safety Instructions for all Swing-N-Slide Playground Equipment.
Save this instruction sheet in the event the manufacturer needs to be contacted.

This product is intended for single family home/residential use only and not intended for use in any public setting. Placement in any public setting constitutes a misuse of this product.

IMPORTANT!

ADDITIONAL REQUIRED SAFETY INSTALLATION INSTRUCTIONS

According to ASTM requirements, all kits must be anchored to the ground and, if the unit has a climbing rope, the rope end must be anchored to the ground. If soil conditions permit stakes to be pulled out easily, cementing into ground is necessary.

- **To anchor the unit to the ground,** Follow the instructions included in this plan for applying Anchor-It devices to your unit, or use 2" x 4" x 18" (45mm x 95mm x 457mm) pressure-treated stakes. Pound stakes into ground at least 12" (305mm) at all inside corners of the posts (including A-frame legs and climbing unit posts). Attach with four (4) 2-1/2" galvanized screws per stake into each tower and/or A-frame upright. NOTE: Leave the soil around anchors as intact as possible. Do not excavate more soil than is necessary to place anchors.
- **If the unit has a climbing rope,** securely anchor the rope at both ends.
- **Once the unit is completely assembled and before children are allowed to play on it, proper shock-absorbing surfacing material must be installed.** This may be accomplished by using loose-fill materials at a sufficient depth. The Consumer Product Safety Commission "Handbook for Public Playground Safety" lists the following materials and required depths that are sufficient for home/residential application. Supplemental information may be found in ASTM F1292. For fall height protection up to 9 ft. (2.742m) [recommended for Swing-N-Slide kits]:

<u>LOOSE FILL MATERIAL</u>	<u>REQUIRED (UNCOMPRESSED) DEPTH¹ in. (mm)</u>
Wood Mulch	9" (229mm)
Double Shredded Bark Mulch	9" (229mm)
Uniform Wood Chips	12" (305mm)

¹These depths were derived from the CPSC Handbook. Swing-N-Slide has not done independent tests to determine these required depths. When properly installed, shock absorbing material will completely cover the horizontal baseboards on climbing units. This protective surfacing must extend a **minimum** of 6 ft. (1.828m) in all directions from the perimeter of the equipment or from the outermost edges of any component. For example, a slide extending beyond the platform must have protective surfacing at least 6 ft. (1.828m) out from both sides as well as the end. For swings, the protective surface must extend **at least 14 ft. (6m)** out from **both** the back and front of the swing when the swing is in its rest position.

For further information on playground safety, the Consumer Product Safety Commission (CPSC) publishes the Outdoor Home Playground Safety Handbook which can be downloaded for free from www.cpsc.gov. An additional resource is the American Society of Testing and Materials (ASTM) Standard Consumer Safety Performance Specification for Home Playground Equipment (ASTM F1148) which can be purchased and downloaded from www.astm.org.

Swing-N-Slide® MANUFACTURERS LIMITED WARRANTY

Swing-N-Slide® takes great pride in the quality and durability of our products. Our Manufacturer's Limited Warranty provides confidence and demonstrates our commitment to providing quality residential playground products.

MANUFACTURER'S LIFETIME LIMITED WARRANTY

Swing-N-Slide® warrants its thermoformed slides and climbing mountains to be free from defects in workmanship and materials, under normal use and conditions, for the lifetime of the product.

MANUFACTURER'S 5 YEAR LIMITED WARRANTY

Swing-N-Slide® warrants its Custom Ready-to-Build Play Set kits and accessories to be free from defects in workmanship and materials, under normal use and conditions, for a period of 5 years.

MANUFACTURER'S 5 YEAR LIMITED WARRANTY

Swing-N-Slide® warrants its No-Cut and Wood Complete Ready-to-Assemble Play Set kits against wood rot and termite damage, and to be free from defects in workmanship and materials, under normal use and conditions, for a period of 5 years for structural wood components.

Cosmetic defects that do not affect the structural integrity of the product, or natural defects of wood such as warping, splitting, checking, twisting, shrinkage, swelling or any other physical properties of wood that do not present a safety hazard, are not covered by this warranty.

MANUFACTURER'S ONE YEAR WARRANTY

Swing-N-Slide® warrants its canopy roofs and/or tarps, playhouses and Timber GLOVE lumber wrap to be free from defects in workmanship and materials, under normal use and conditions, for a period of one year.


Swing-N-Slide® will repair, or at its discretion, replace any part within the stated warranty period which is defective in workmanship or materials. This decision is subject to verification of the defect upon delivery of the defective part to Swing-N-Slide® at 1212 Barberry Drive, Janesville, Wisconsin, 53545. Any part(s) returned to Swing-N-Slide® must have prior approved Return Authorization Number and proof of purchase, including the date of purchase. This warranty is valid only if the product is used for the purpose for which it was designed and installed at a residential, single family dwelling. This warranty is void if the product is put to commercial or institutional use. This warranty does not cover (a) products which have been damaged by acts of Nature, negligence, misuse, or accident, or which have been modified or repaired by unauthorized persons; (b) the cost of labor; or the cost of shipping the product, any part, or any replacement product or part.

Swing-N-Slide® DISCLAIMS ALL OTHER REPRESENTATIONS AND WARRANTIES OF ANY KIND, EXPRESS, IMPLIED, STATUTORY OR OTHERWISE, INCLUDING THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. Swing-N-Slide® WILL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES. This warranty is non-transferable and does not extend to the owners of the product subsequent to the original purchaser. Some states do not allow limitations on implied warranties or exclusion of incidental or consequential damages, so these restrictions may not be applicable to you. This warranty gives you specific legal rights. You may also have other rights, which vary from state to state.


This warranty also does not apply to:

- Structures not erected, maintained or inspected in conformance with **Swing-N-Slide®** installation plans
- Structures that have had parts added or substituted not in conformance with **Swing-N-Slide®** installation plans
- Parts that have been modified, altered or misused
- Parts that have not been used as designed or intended
- Damage due to acts of Nature, vandalism, abnormal use or abuse as determined by **Swing-N-Slide®**


DIMENSIONS

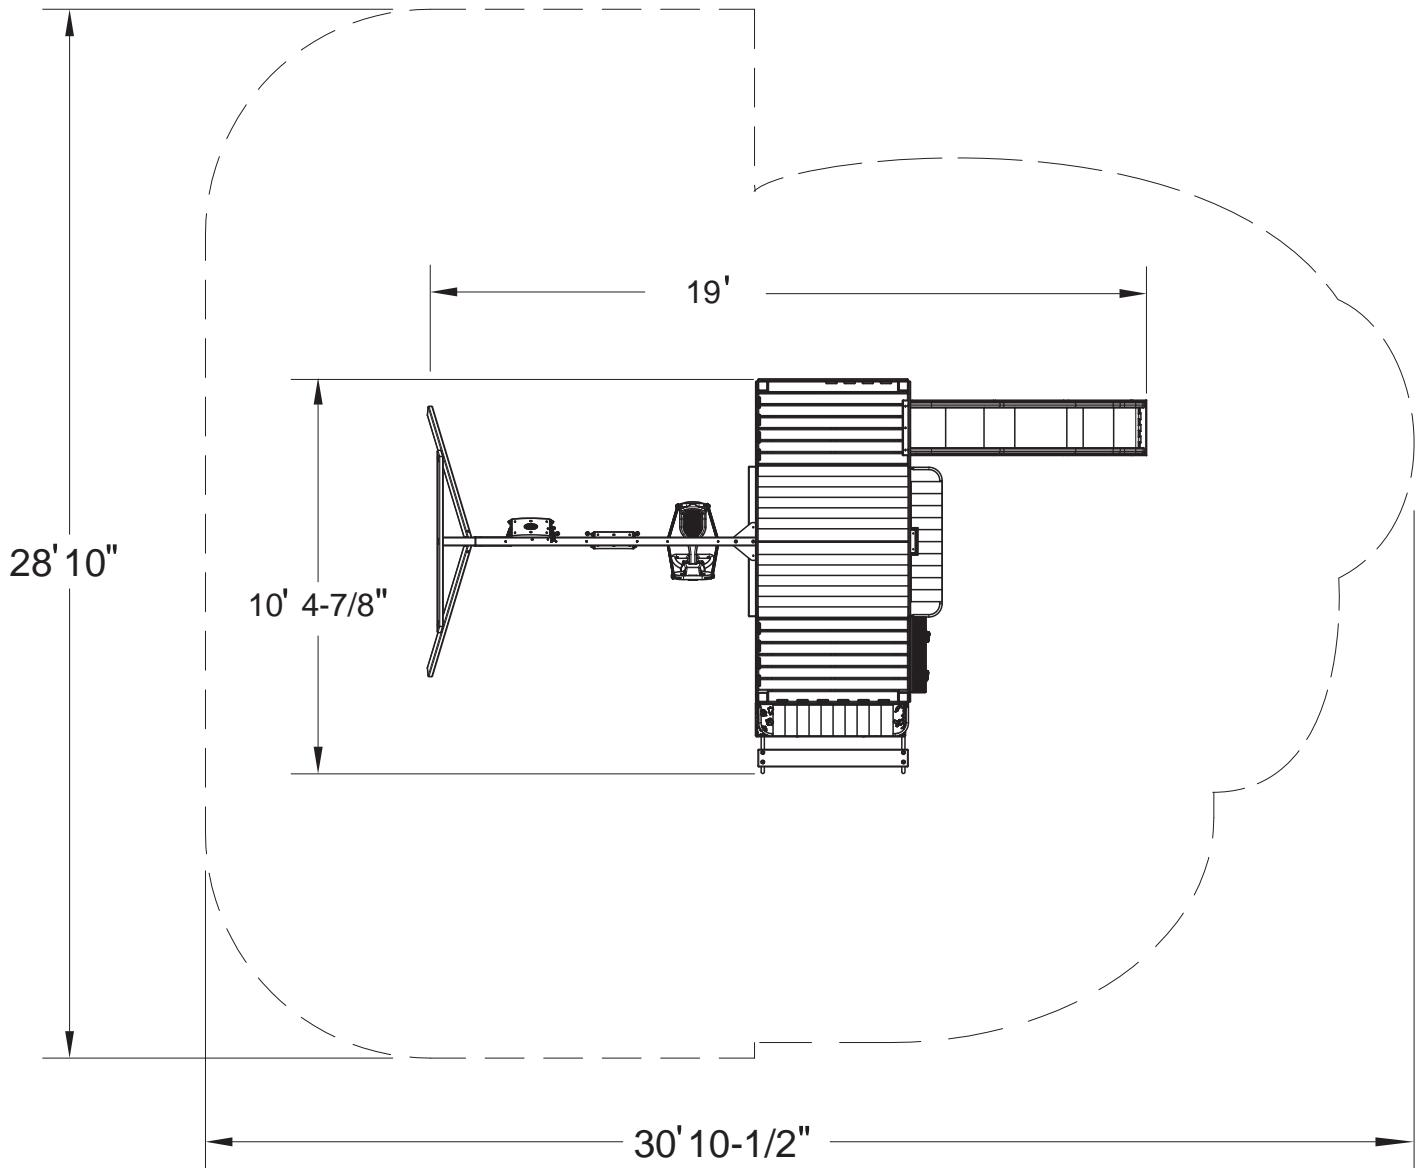


MINIMUM USE ZONE FOR PLAY EQUIPMENT SHALL EXTEND NO LESS THAN 72" FROM ALL SIDES OF THE PLAY STRUCTURE.
 SWING USE ZONE EXTENDS NO LESS THAN 168".
 SWINGS MUST HAVE A MINIMUM CLEARANCE OF 8" ABOVE THE PROTECTIVE SURFACING.

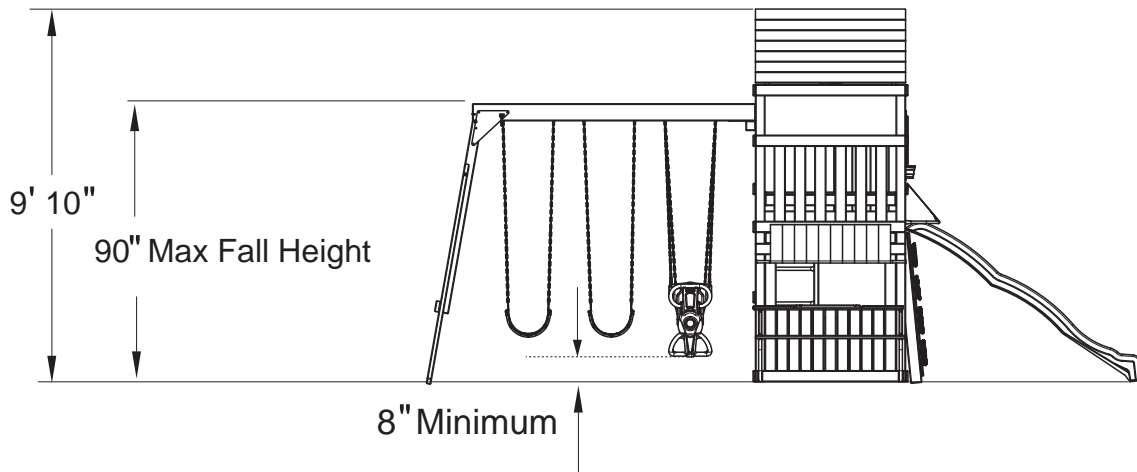

TOOLS REQUIRED

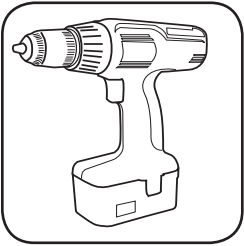


DRILL

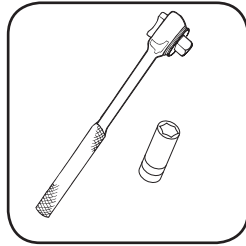


7/16" & 1/2" SOCKET
& WRENCH




HAMMER

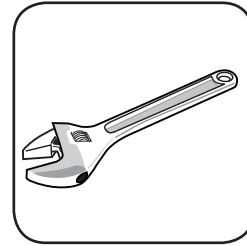


ADJUSTABLE
WRENCH

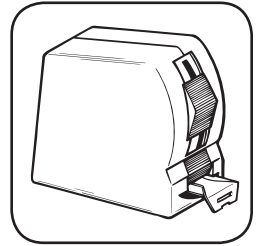


TAPE MEASURE

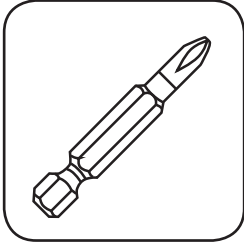


PHILLIPS BIT

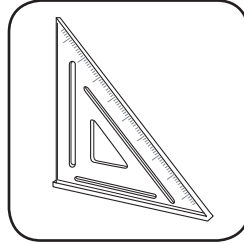

CARPENTER
SQUARE

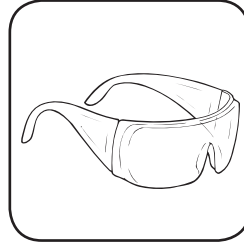

SAFETY GLASSES

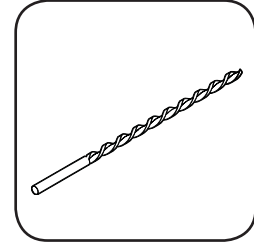


1/8" DRILL BIT

INCLUDED HARDWARE



 30mm Deck Screw (x264)



1-1/2" Deck Screw (x58)



2-1/2" Deck Screw (x513)




#8 x 1/2" Pan Screw (x2)



 
3/4" Flat Head Screw (x16)




#12 x 3/4" Pan Screw (x13)




1/4" x 1-3/4" Pan Screw (x4)

 

1-1/4" Lag Screw (x3)

 


2" Lag Screw (x24)

 

5/16" x 1-1/2" Lag Screw (x4)




T-20 Bit (x1)

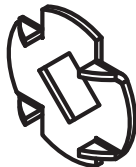

5/16" Wood Loc Washer (x4)



5/16-18 Large T-Nut
(x22)

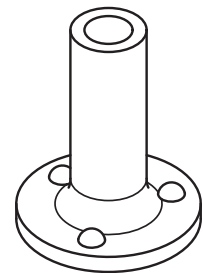


Weld-Nut (x16)



8mm Loc Washer
(x16)




8mm Washer (x16)

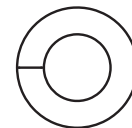

5/16" Loc Washer (x16)




T-30 Bit (x1)

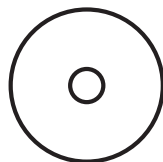

3/16" Washer (x10)



1/4" Washer (x10)

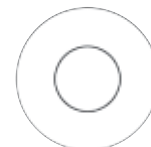


5/16" Washer (x50)




5/16" Loc Nut (x17)

 
INCLUDED HARDWARE




5/16"-18 x 7-1/2" Hex Bolt (x1)

 


5/16"-18 x 6" Hex Bolt (x3)

 


5/16"-18 x 5" Hex Bolt (x1)

 

5/16"-18 x 4-1/2" Hex Bolt (x13)

 


5/16"-18 x 3-1/2" Hex Bolt (x4)

 


5/16"-18 x 3-1/4" Hex Bolt (x2)




5/16"-18 x 3" Hex Bolt (x2)

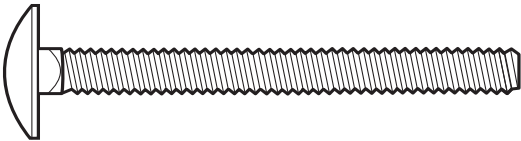

5/16"-18 x 2-1/2" Carriage Bolt (x4)

 

1/4"-20 x 1-1/4" Hex Head Bolt (x16)

 


1/4"-20 x 3/4" Hex Head Bolt (x6)


INCLUDED COMPONENTS




Cool Wave Slide (x1)

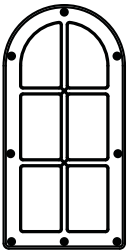

Window (x2)

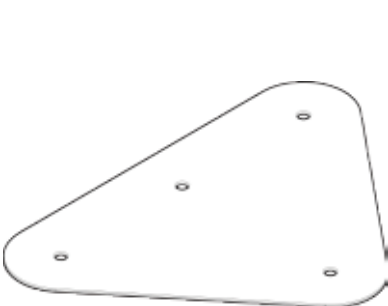

Beam Brace (x1)

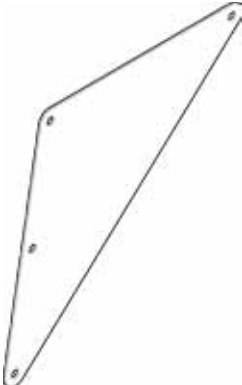

Swing Beam Bracket (x2)


INCLUDED COMPONENTS



Play Handle (x2)




Beam Clamp Slotted (x6)

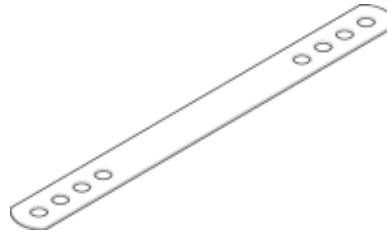


Anchor It Strap (x4)



Anchor It (x4)

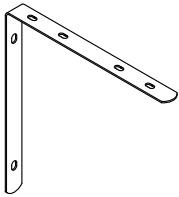

'L' Brackets (x2)

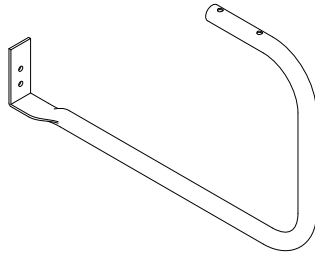

Bench Supports (x2)



Plan (x1)

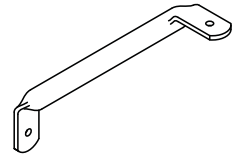



Table Support Bars (x2)




ID Tag (x1)



5/16" x 5-1/4" Swing Hanger (x6)

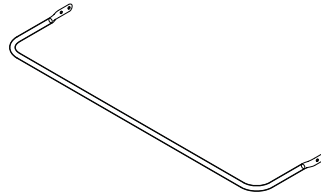


Awning Support (x2)

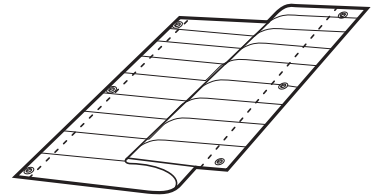

Awning (x2)



STD Swing Seat (x2)

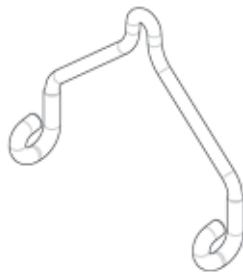

V Hanger (x4)




22" UnCoated Chain (x4)




58" Coated Chain (x4)

INCLUDED COMPONENTS CONT.

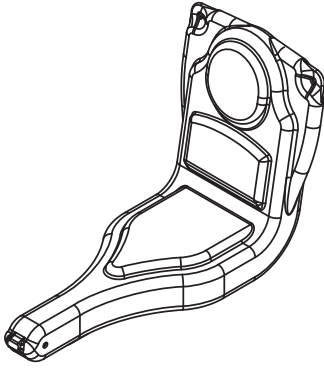


Wind Rider Seat (x1)

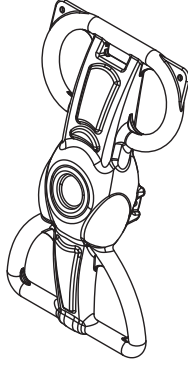


Wind Rider Handle (x1)




51" UnCoated Chain (x4)

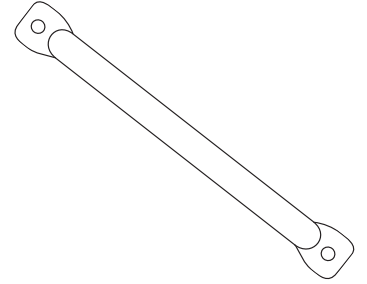


19" Metal Rung (x4)

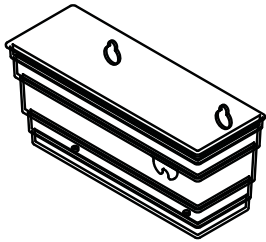


Flower Box (x1)

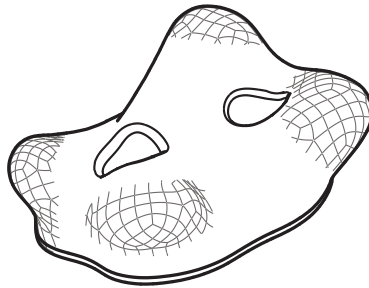


Climbing Rock (x8)

 

Quick Link (x4)

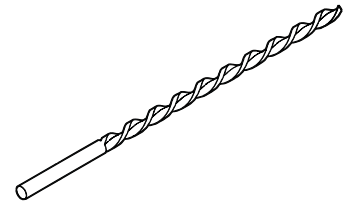

3/8" DRILL BIT (x1)

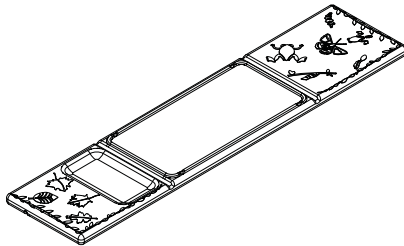

Discovery Table (x1)



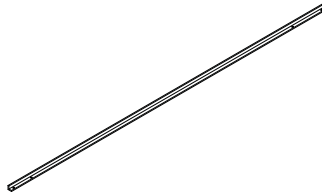


Table Support (x1)

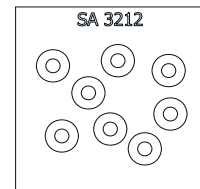

 SA 3212 (x1)
(Contains (8) 5/16" washers for
use on page 46 of plans)



5/16"-18 x 6-1/2" Hex Bolt (x1)

 
BOARD LIST



(1) [PF 4000] 2-5/8" x 6" x 89-1/2" SWING BEAM



(4) [PF 3441] 3" x 3" x 94" PLASTIC ENCAPSULATED



(4) [PF 4723] 3" x 3" x 78"



(1) [PF 4724] 3" x 3" x 47-1/2"



(1) [PF 3999] 2-5/8" x 3" x 62" SWING BEAM SUPPORT



(3) [PF 3404] 2" x 4" x 47-1/2"



(2) [PF 4721] 2" x 4" x 47-1/2"



(2) [PF 3608] 2" x 4" x 36" ROOF "A" FRAME



(2) [PF 3607] 2" x 4" x 32-1/2" ROOF "A" FRAME



(4) [PF 4722] 2" x 4" x 30"



 
(2) [PF 3402] 2" x 4" x 30"



(2) [PF 4787] 2" x 4" x 18-1/4"



(1) [PF 3419] 2" x 4" x 17-1/4" SLIDE STAKE



(1) [PF 3517] 2" x 3" x 47"



(2) [PF 3995] 2" x 4" x 83" A-FRAME



(1) [PF 3994] 2" x 4" x 57-5/8" A-FRAME SUPPORT



(1) [PF 3981] 5/4" x 6" x 47-1/2"



(1) [PF 3524] 1" x 5" x 29" OFFSET ARCH



(36) [PF 3430] 1" x 4" x 47-1/2"



(3) [PF 3605] 1" x 4" x 44-1/2"



(12) [PF 3514] 1" x 4" x 41-1/4"



(6) [PF 3523] 1" x 4" x 40"



(2) [PF 3497] 1" x 4" x 40" WINDOW SIDE



(14) [PF 3471] 1" x 4" x 33"



(2) [PF 3481] 1" x 4" x 33" WINDOW SIDE



(25) [PF 3426] 1" x 4" x 30"



(6) [PF 3527] 1" x 4" x 28-1/2"



(2) [PF 3600] 1" x 4" x 27-3/4"



(1) [PF 3604] 1" x 4" x 26"



(13) [PF 3528] 1" x 4" x 24"



(9) [PF 3521] 1" x 4" x 22-1/4"



(1) [PF 3603] 1" x 4" x 20"



(1) [PF 3519] 1" x 4" x 14"



(1) [PF 3498] 1" x 4" x 11-1/8" WINDOW TOP



(1) [PF 3516] 1" x 4" x 9-3/4"



(1) [PF 3482] 1" x 4" x 8-5/8" WINDOW TOP



(1) [PF 3420] 1" x 3" x 23-1/2"



(14) [PF 3609] 5/8" x 5" x 47-1/2" SHINGLE



 
(4) [PF 3483] 5/8" x 4" x 15-3/8" SHUTTER

USE THE CORRECT FASTENER


Use the guides below to help select the correct length, quantity & location of screws for the board installation.

Avoid splitting your lumber by offsetting your screws at least 3/4" from edge. All hardware should be driven until flush with the surface or no deeper than 1/16".

1x4 to 2x4 & 3x3




(3) 2-1/2" screws
per attachment point

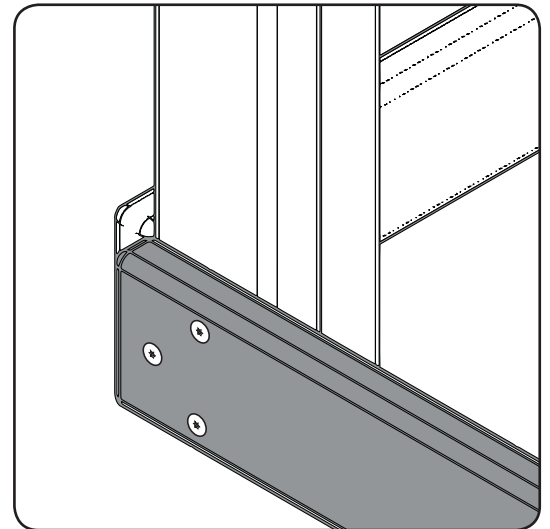

1x4 to 1x4




(2) 30mm screws
per attachment point

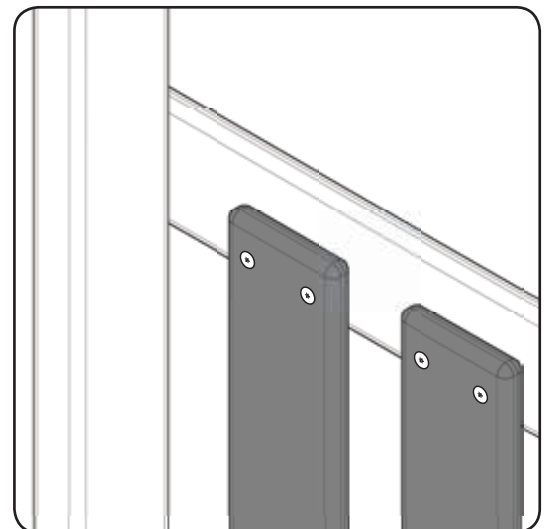


NOMINAL MATERIAL SIZE			
LISTED SIZE		TRUE SIZE	
English(*)	Metric(Cm)	English(*)	Metric(Cm)
1x4	2.5x10.2	5/8x3-3/8	1.59x8.57
1x5	2.5x12.7	5/8x4-1/2	1.59x11.43
5/4x4	3.2x10.2	1x3-1/2	2.5x8.89
5/4x6	3.2x15.3	1x5-1/2	2.5x14
2x2	5x5	1-1/2x1-1/2	3.8x3.8
2x3	5x7.6	1-1/2x2-1/2	3.8x6.4
2x4	5x10	1-1/2x3-1/2	3.8x9
2x6	5x15.3	1-1/2x5-1/2	3.8x14
3x3	7.6x7.6	3x3	7.6x7.6
4x4	10x10	3-1/2x3-1/2	9x9
(*) Estimated Sizing Due to Cutting Process			

STEP 1

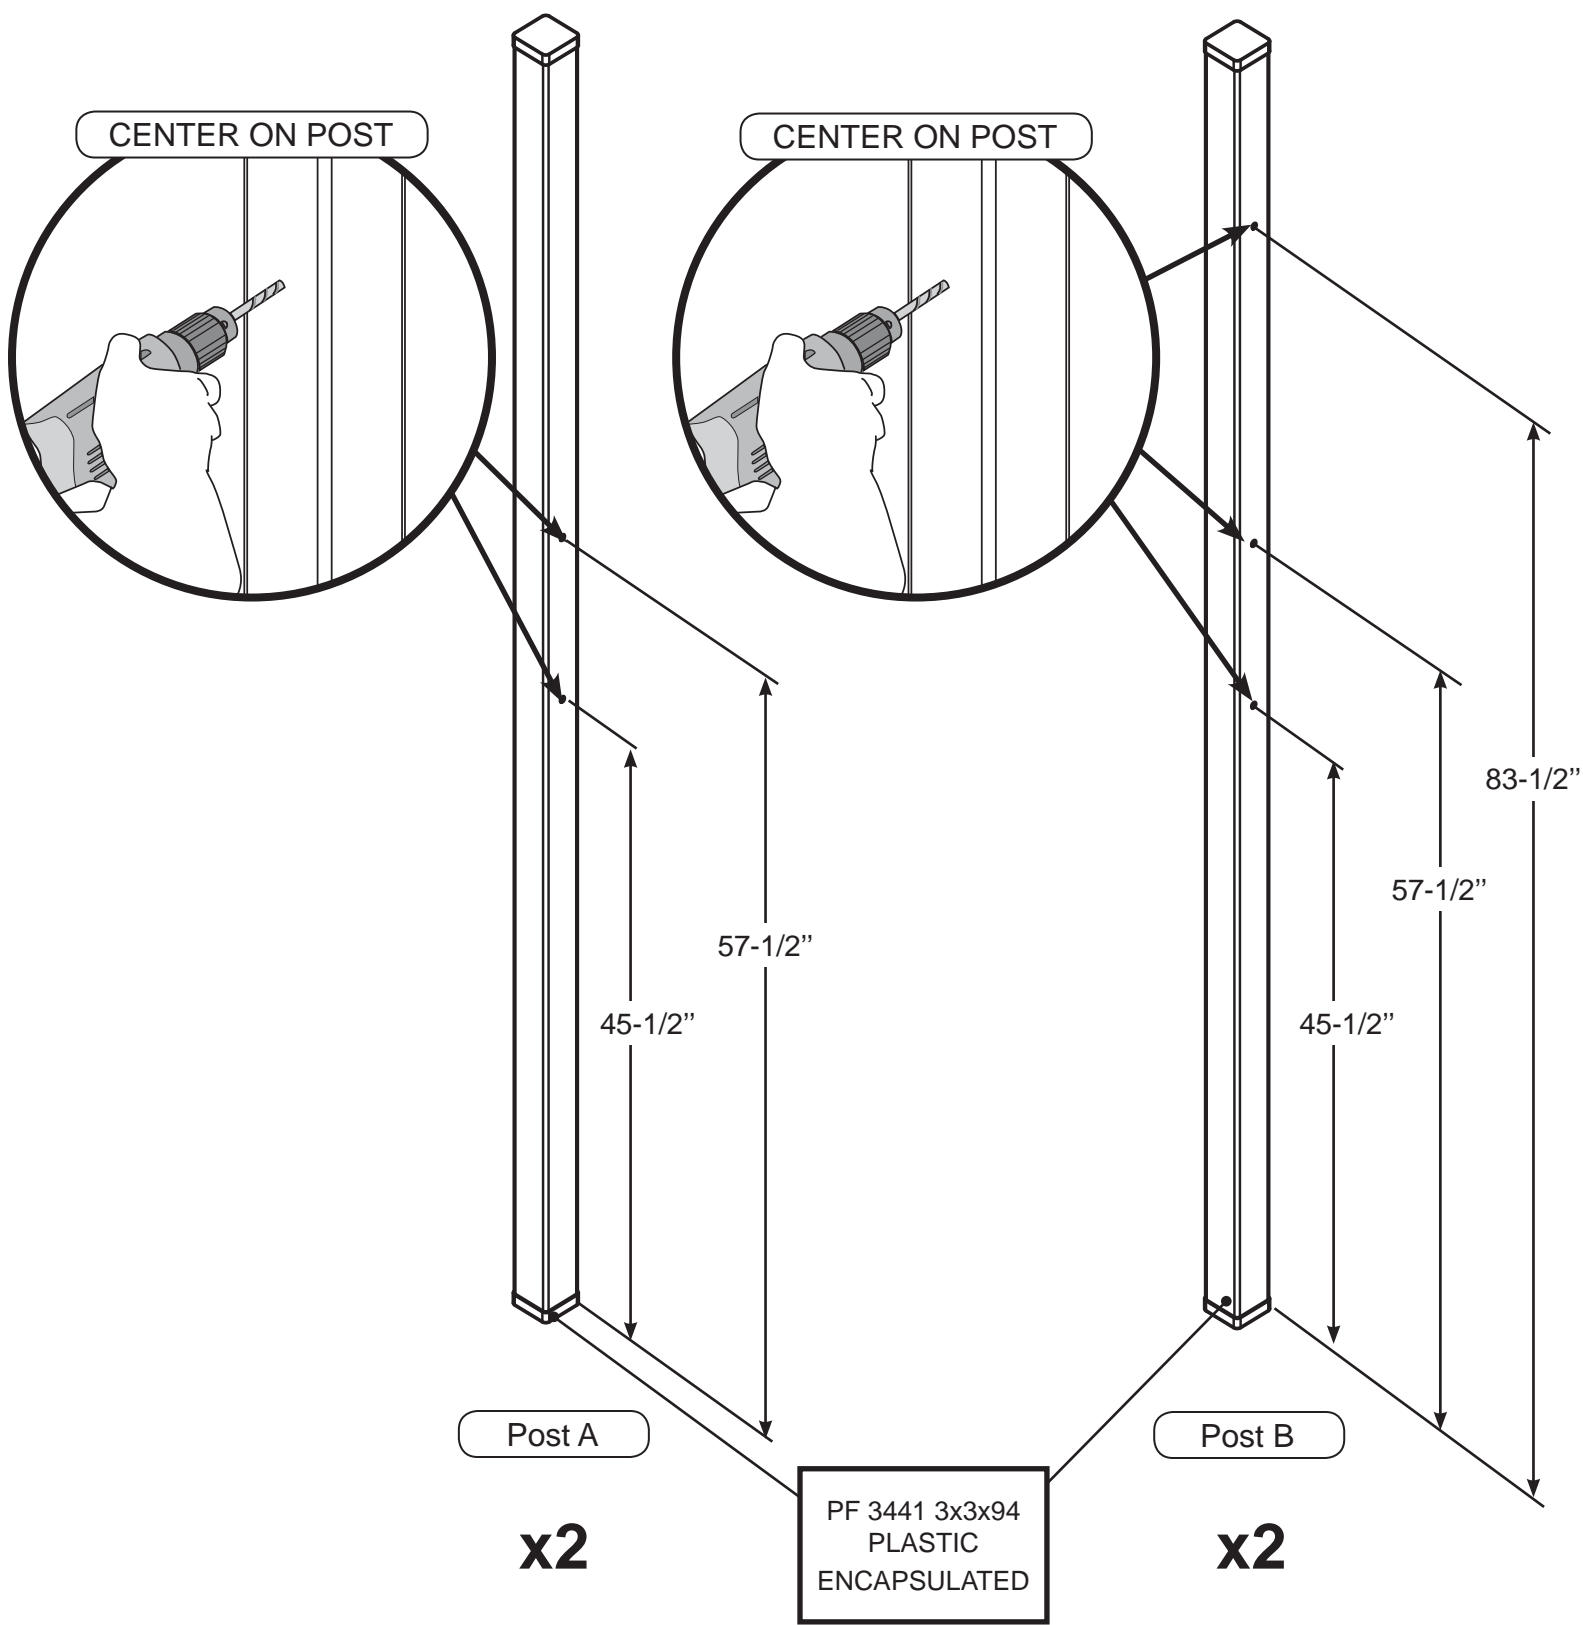


1. Drill a 3/8" hole at the locations shown on the 3" x 3" Plastic Encapsulated Uprights as shown.

STEP 2

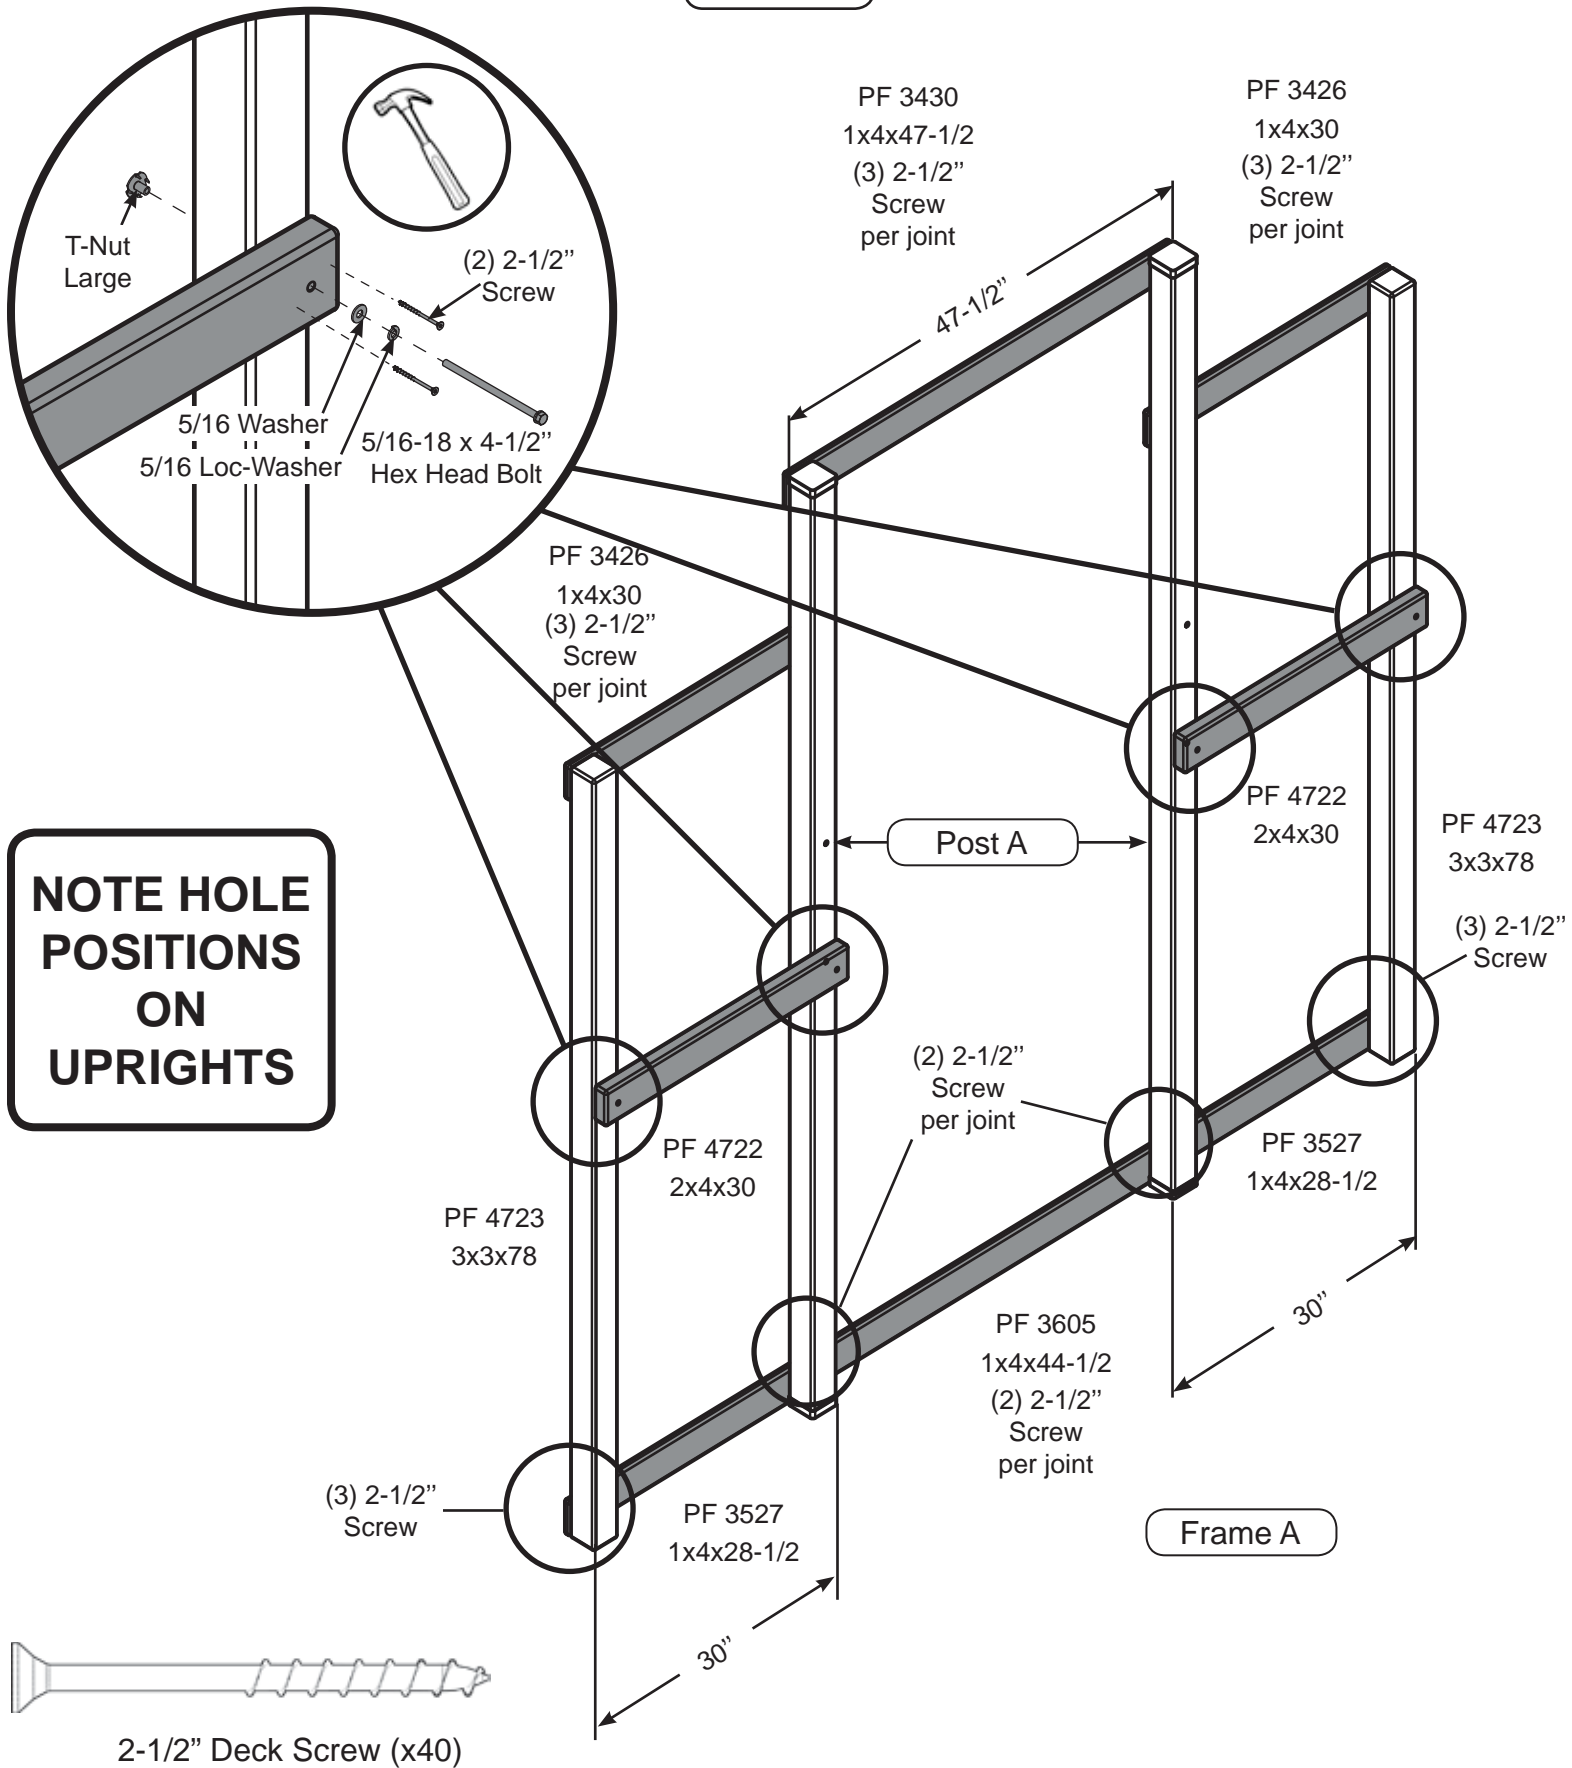


1. Attach boards as shown.

STEP 3

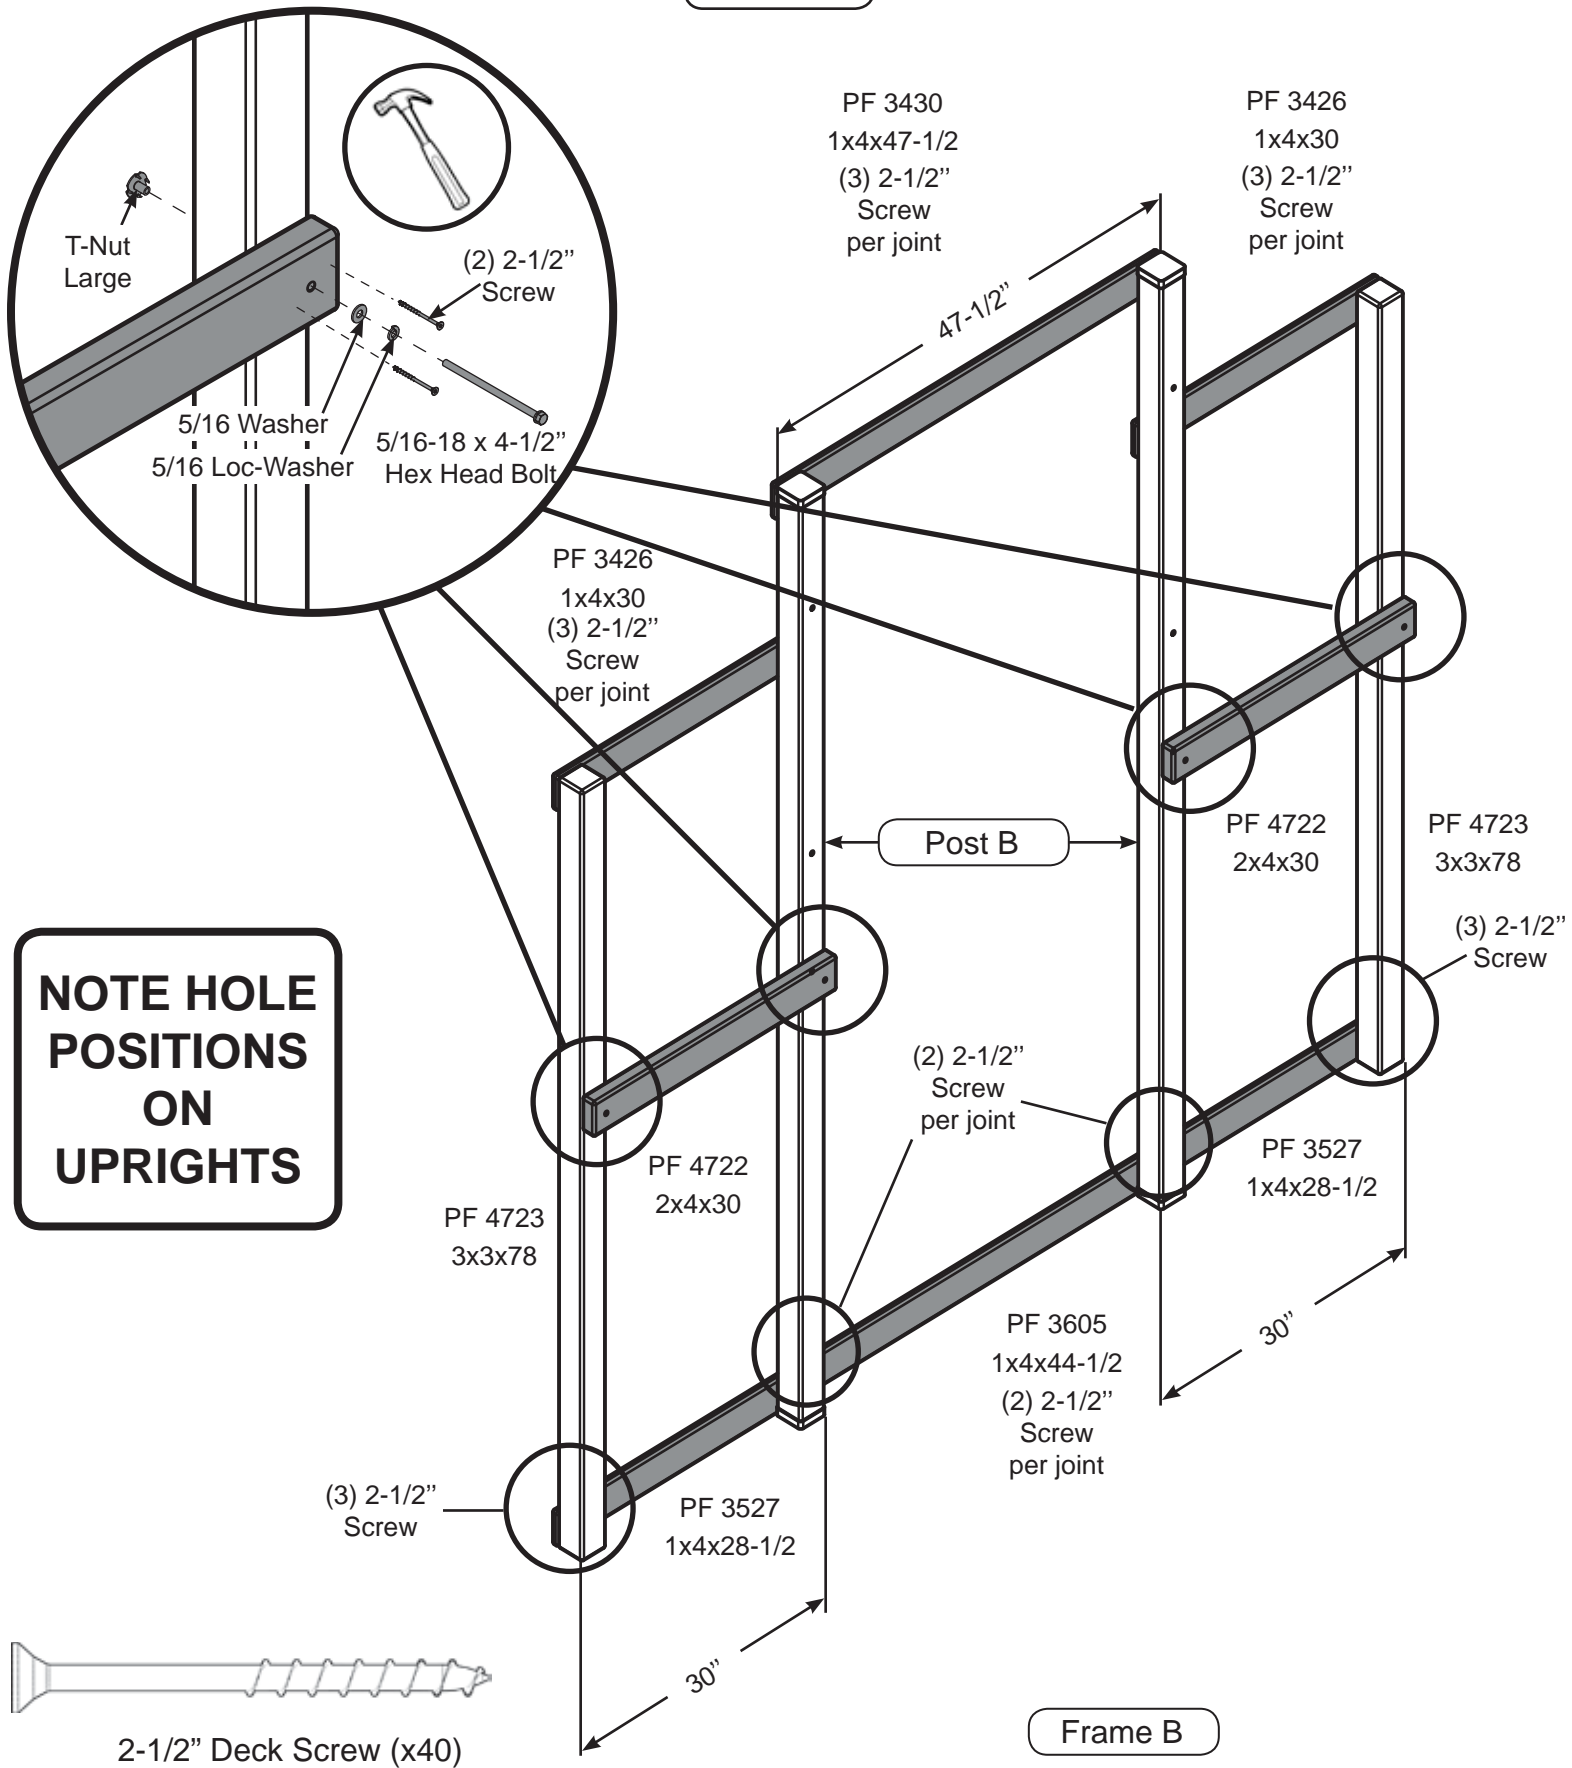



1. Attach boards as shown.

STEP 4

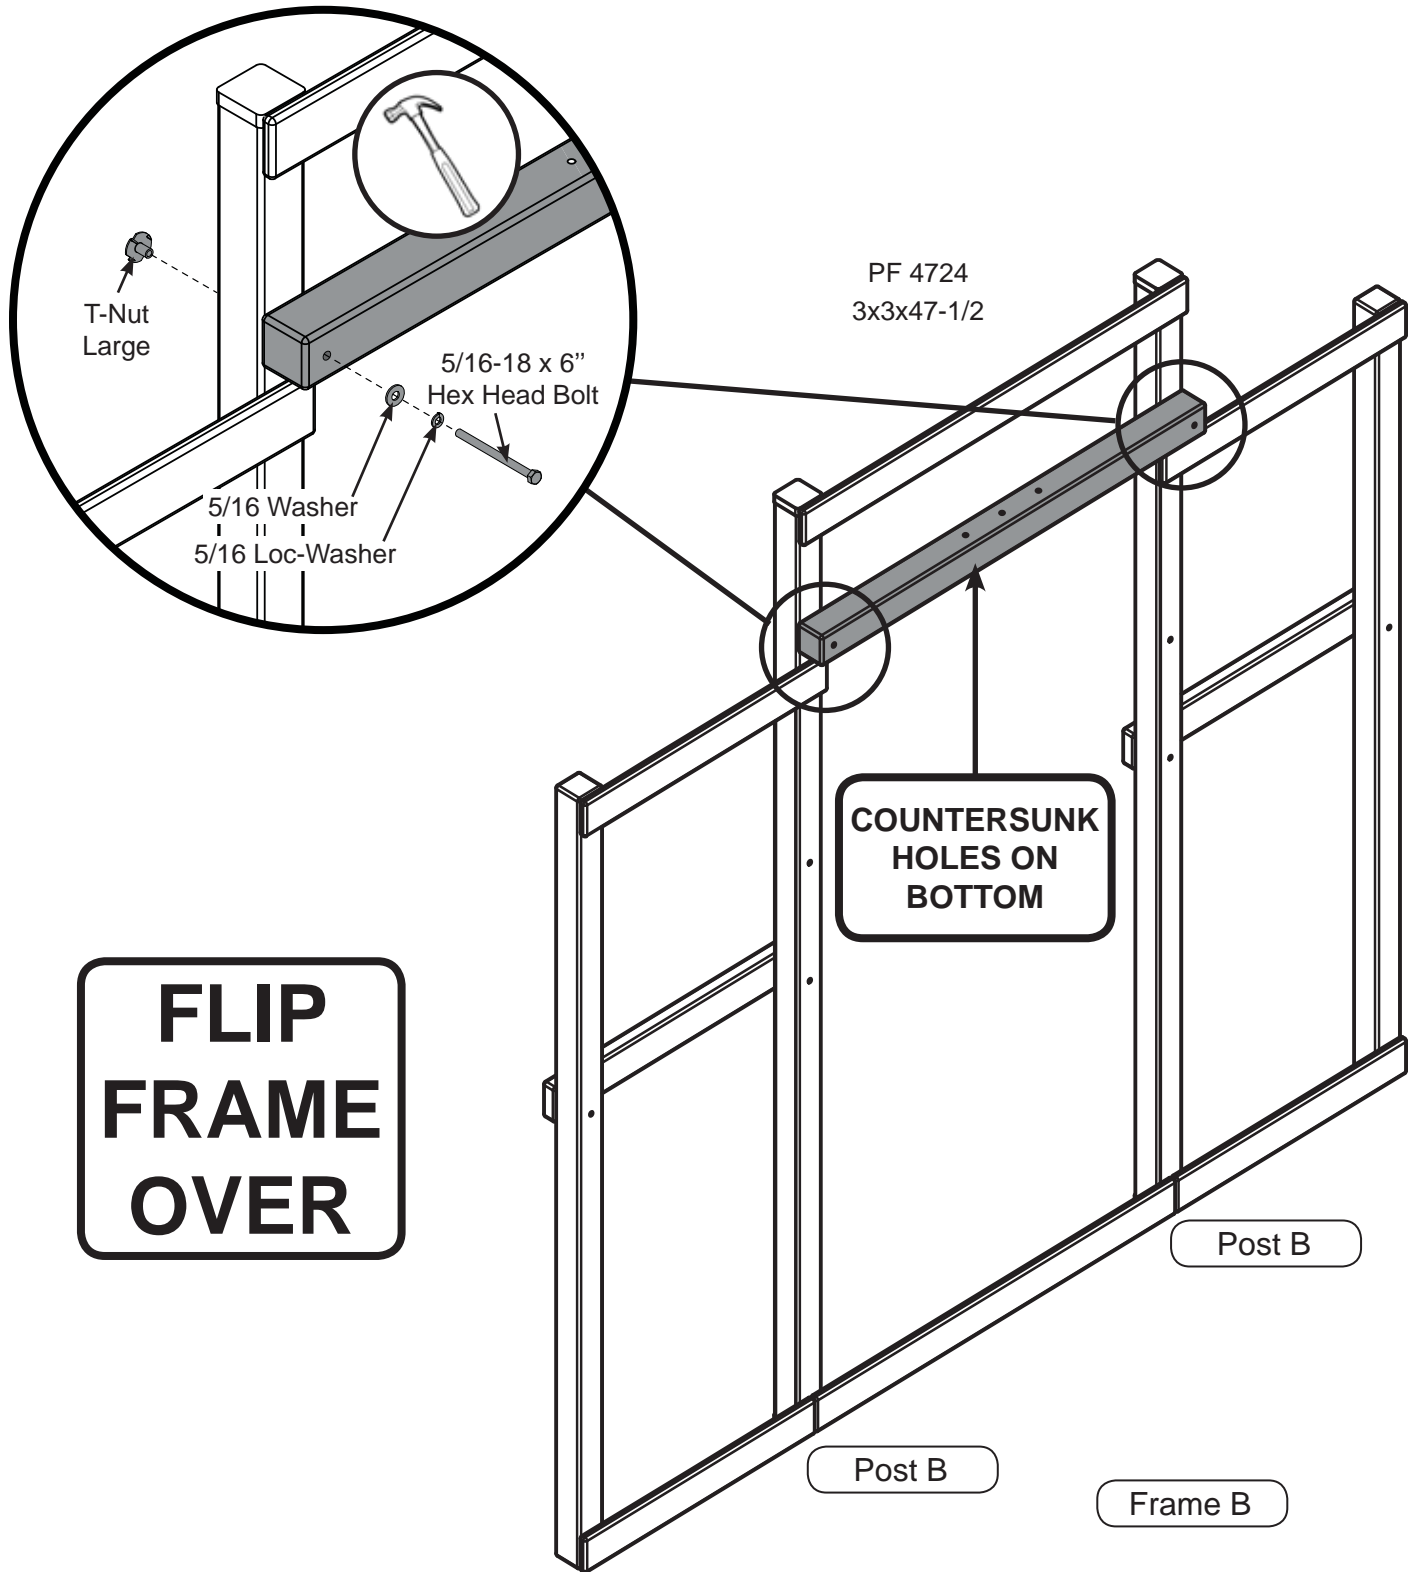


1. Attach board as shown.

STEP 5

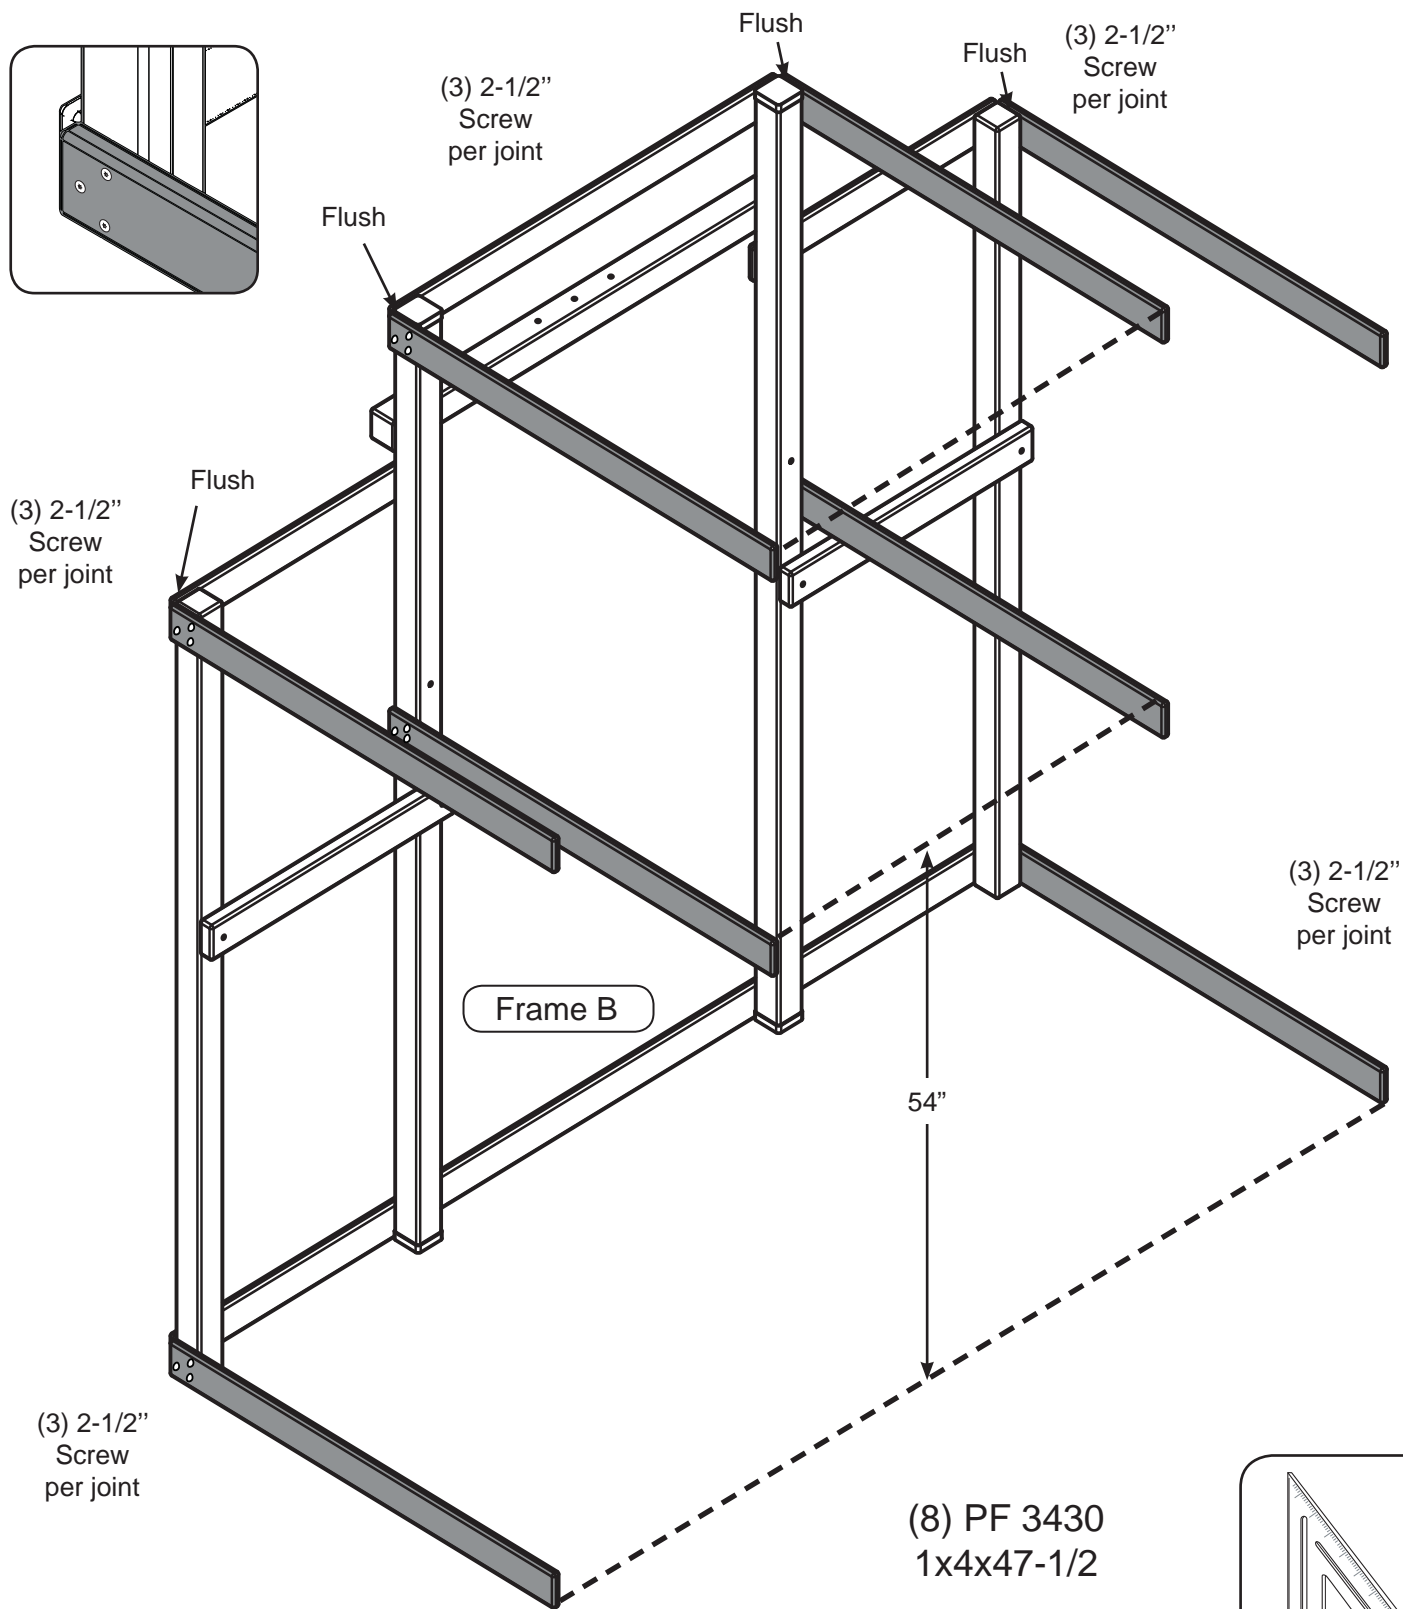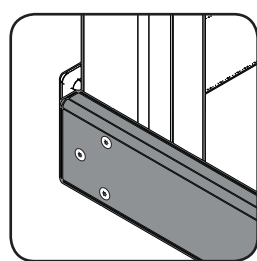



2-1/2" Deck Screw (x24)

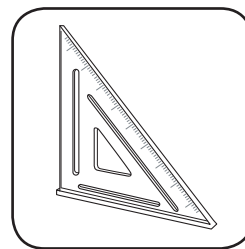

Check to make sure structure is square

1. Attach Support Boards to Frame B as shown.

STEP 6

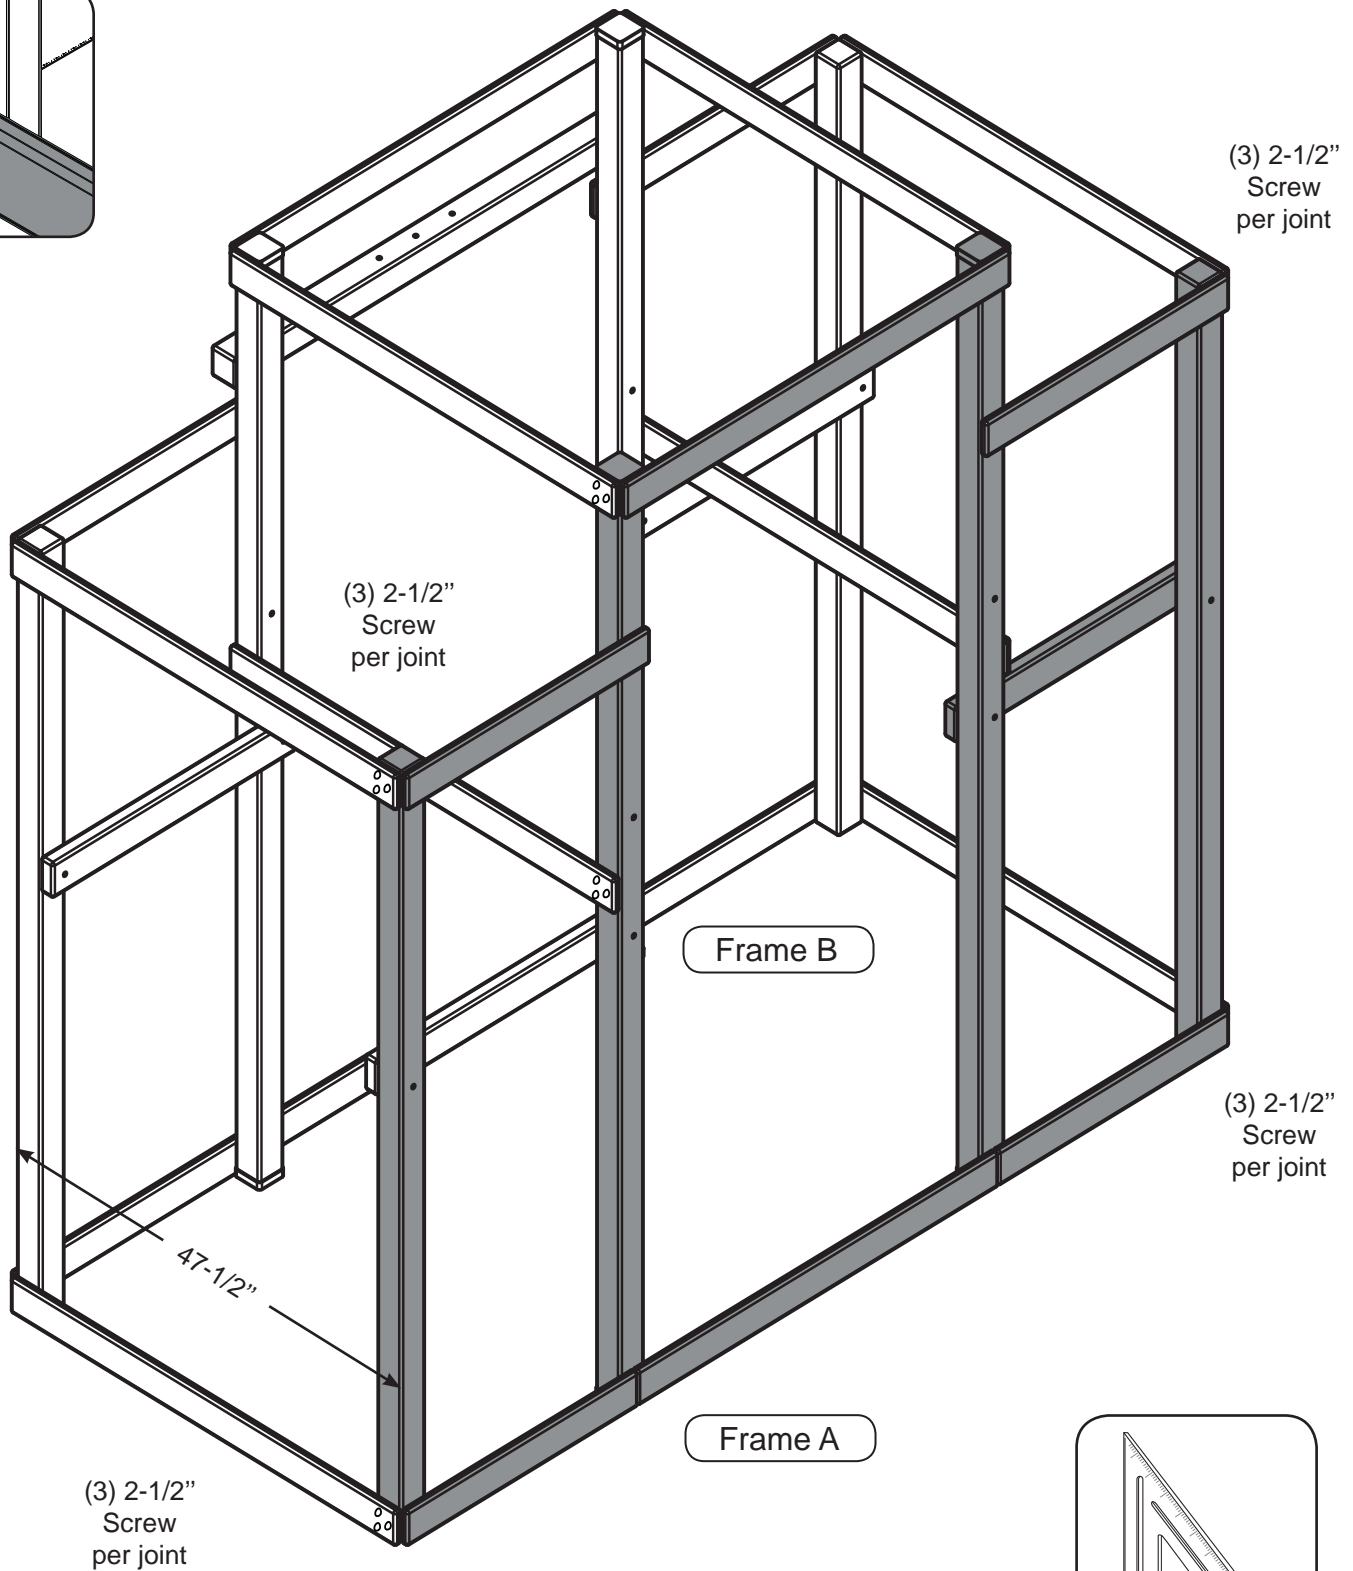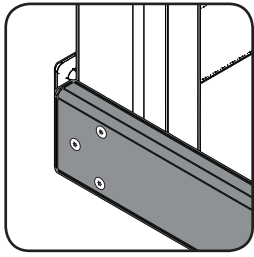


2-1/2" Deck Screw (x24)




Check to make sure structure is square

1. Attach Frame A to Frame B as shown.

STEP 7

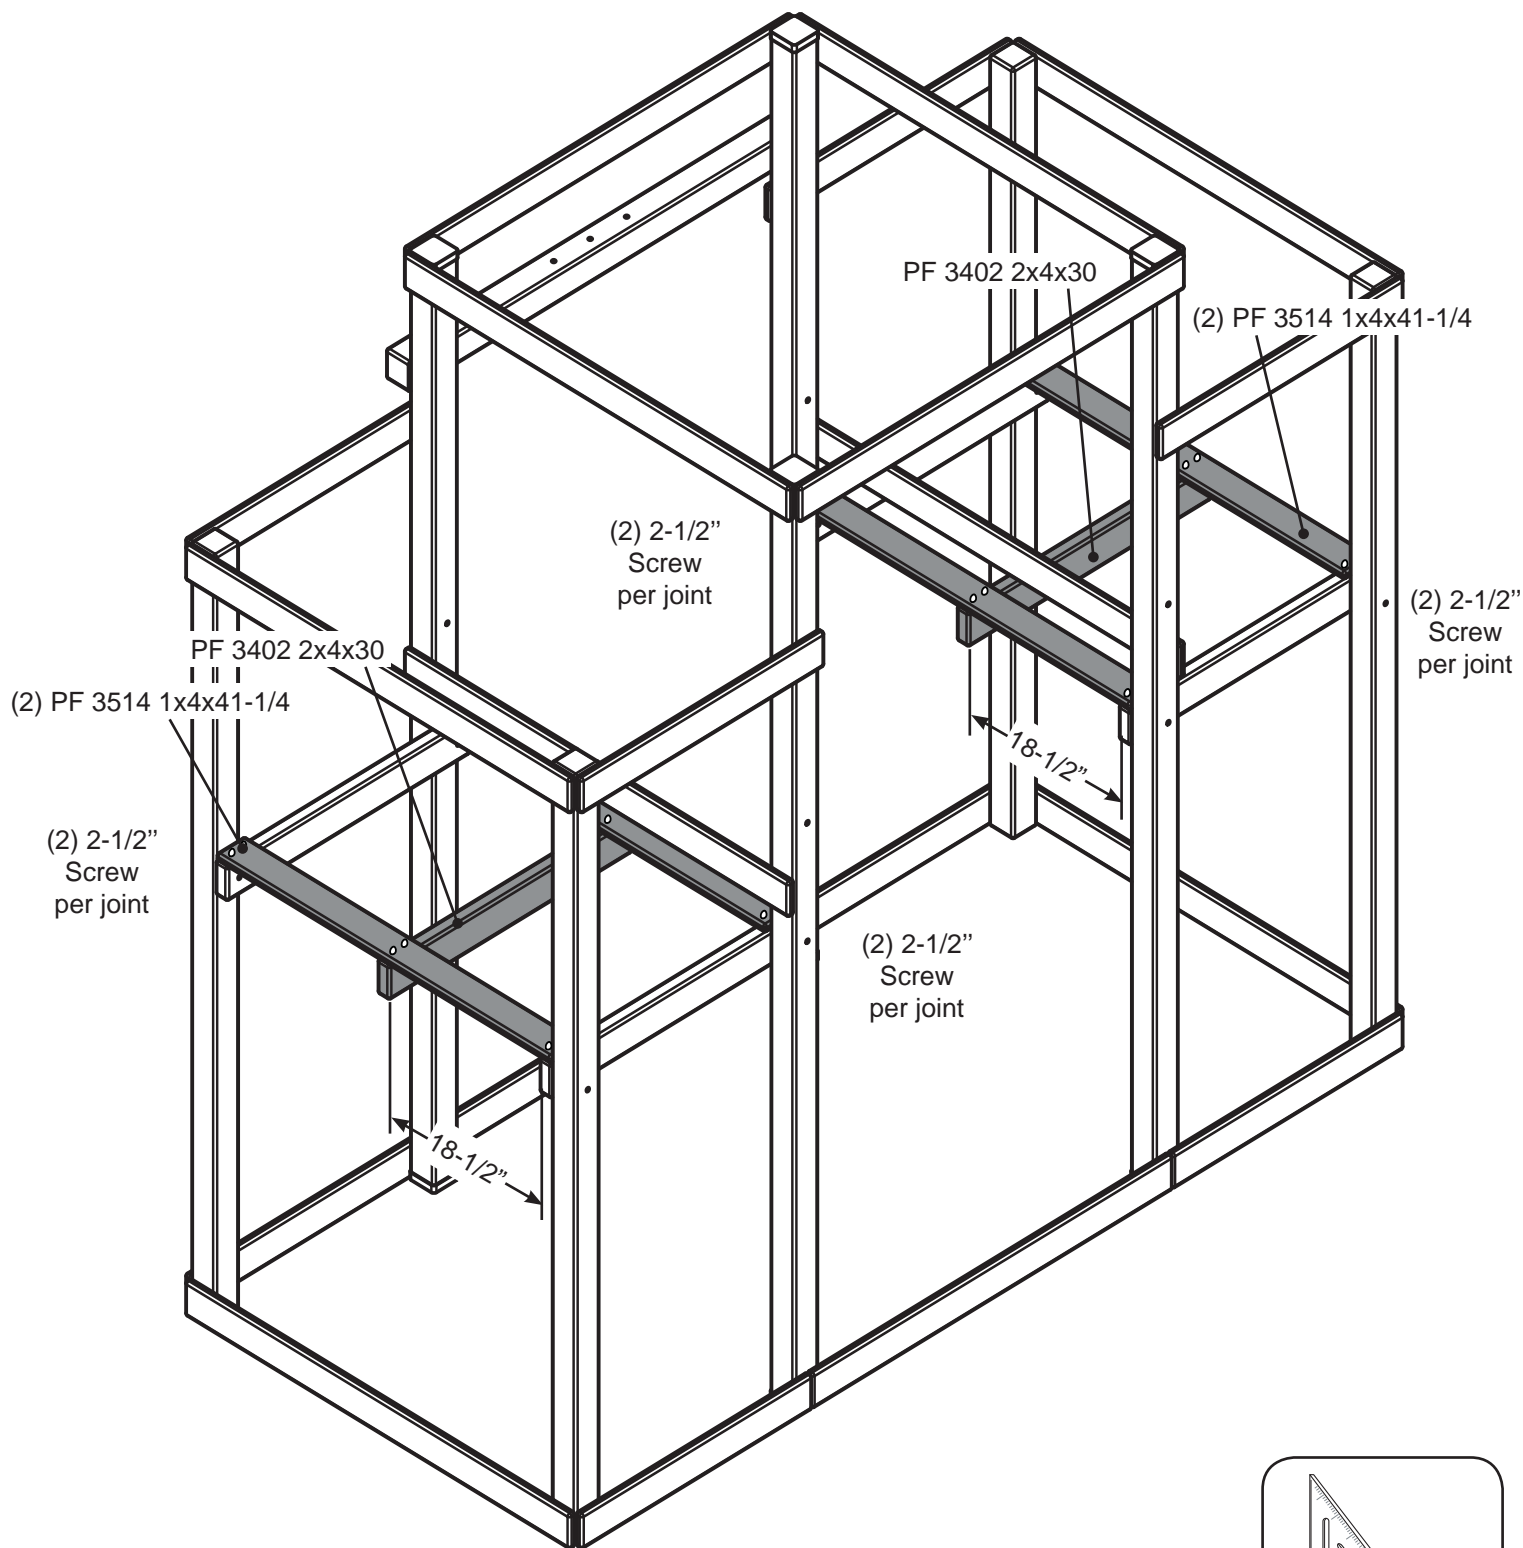


2-1/2" Deck Screw (x24)

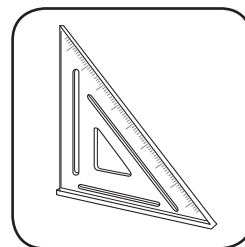

Check to make sure structure is square

1. Attach Deck Support Boards as shown.

STEP 8

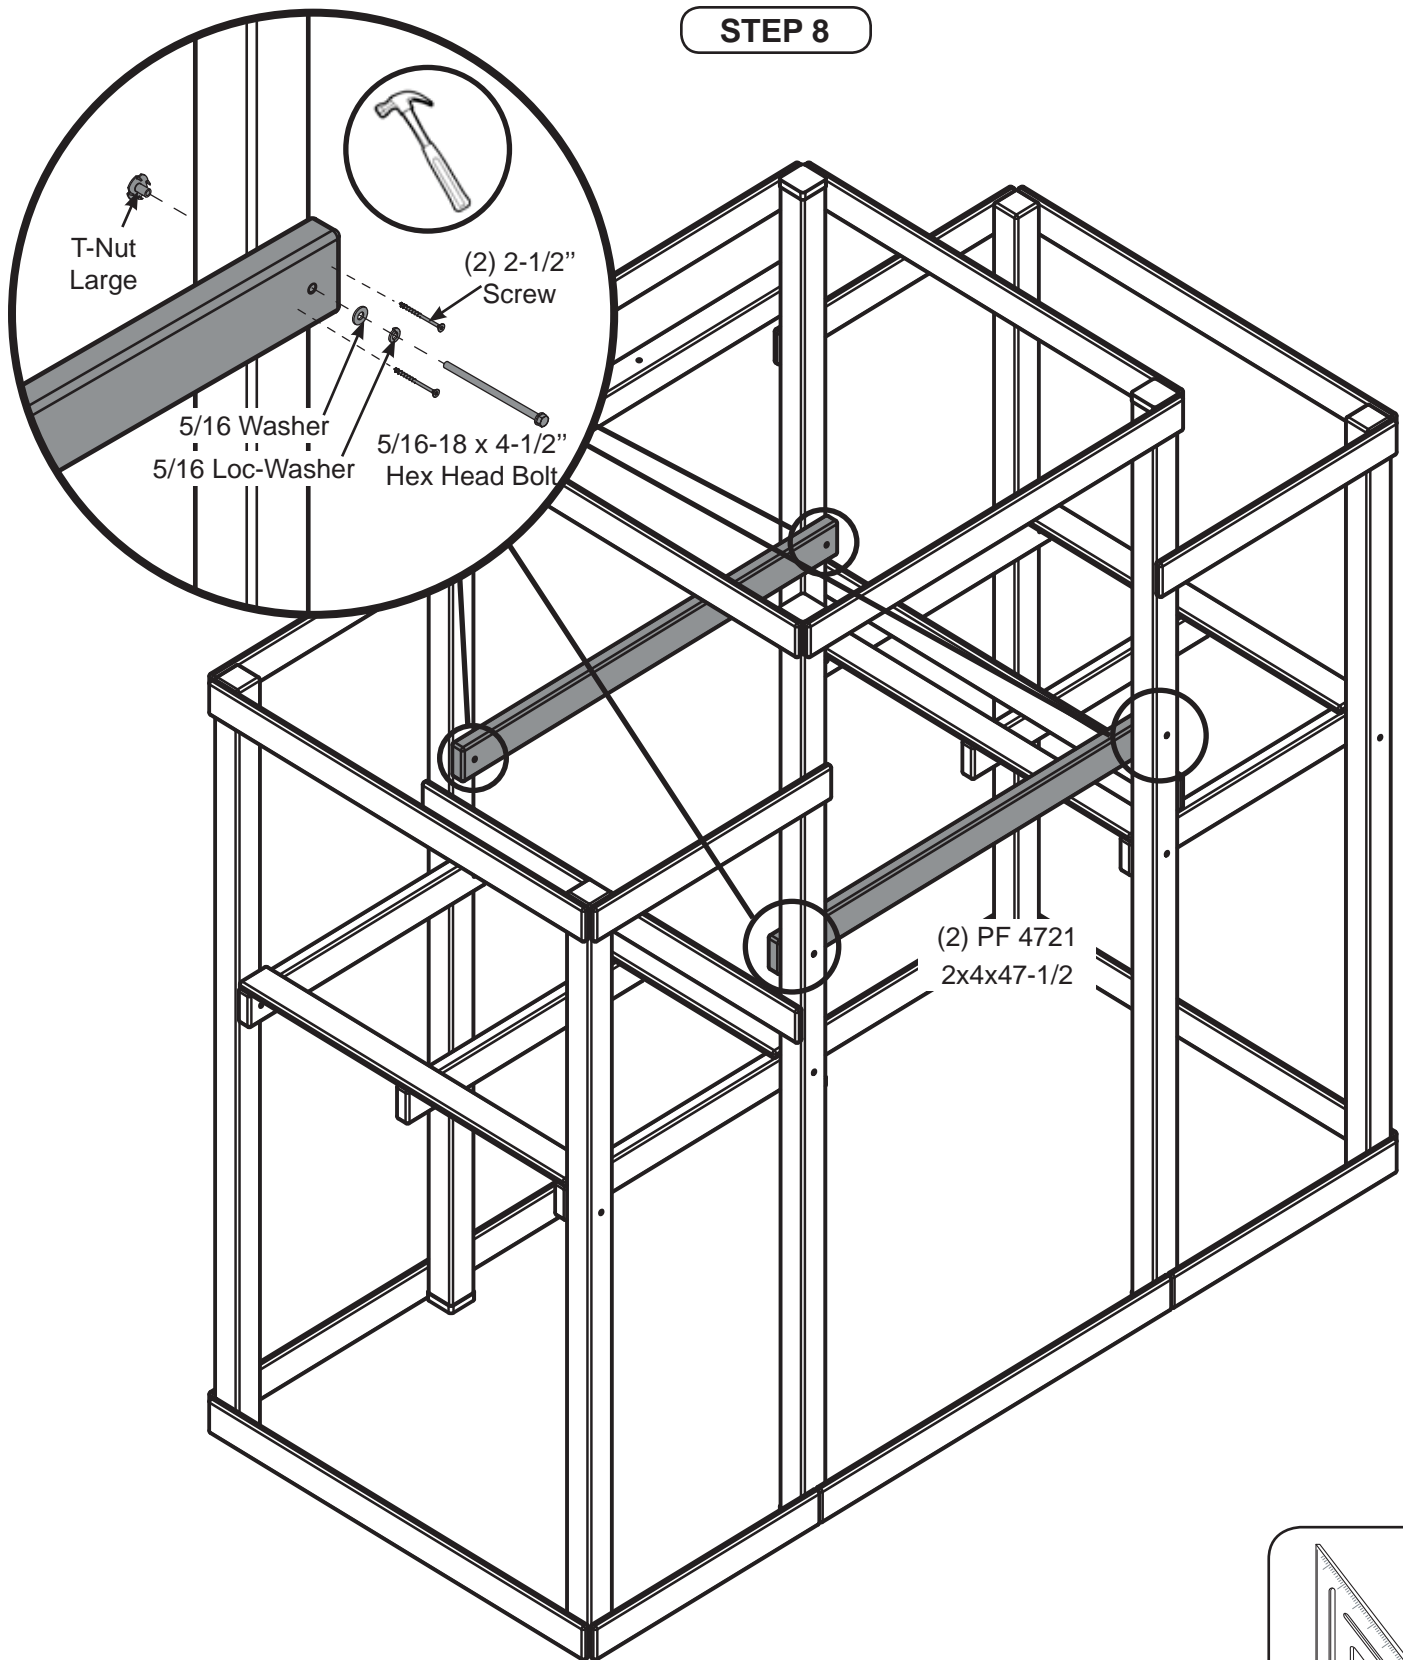


2-1/2" Deck Screw (x8)



Check to make sure
structure is square

1. Attach Deck Support Boards as shown.



STEP 9

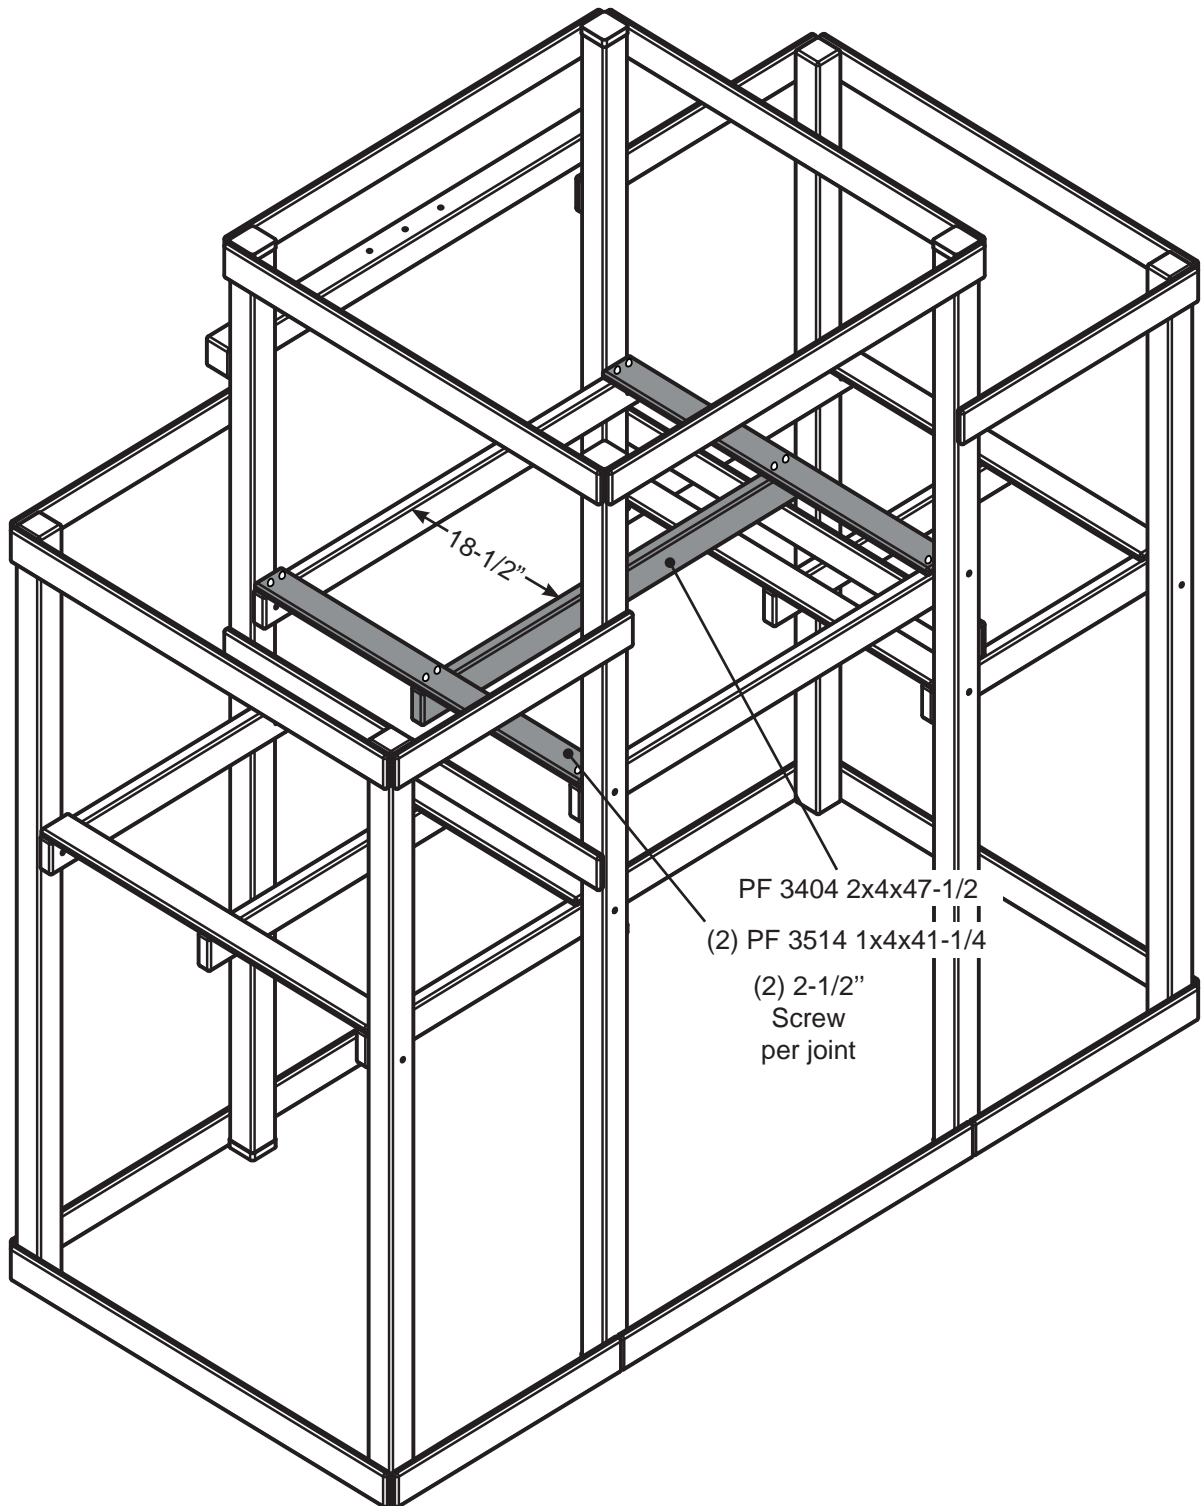

2-1/2" Deck Screw (x12)

1. Attach deck support boards as shown.


STEP 10

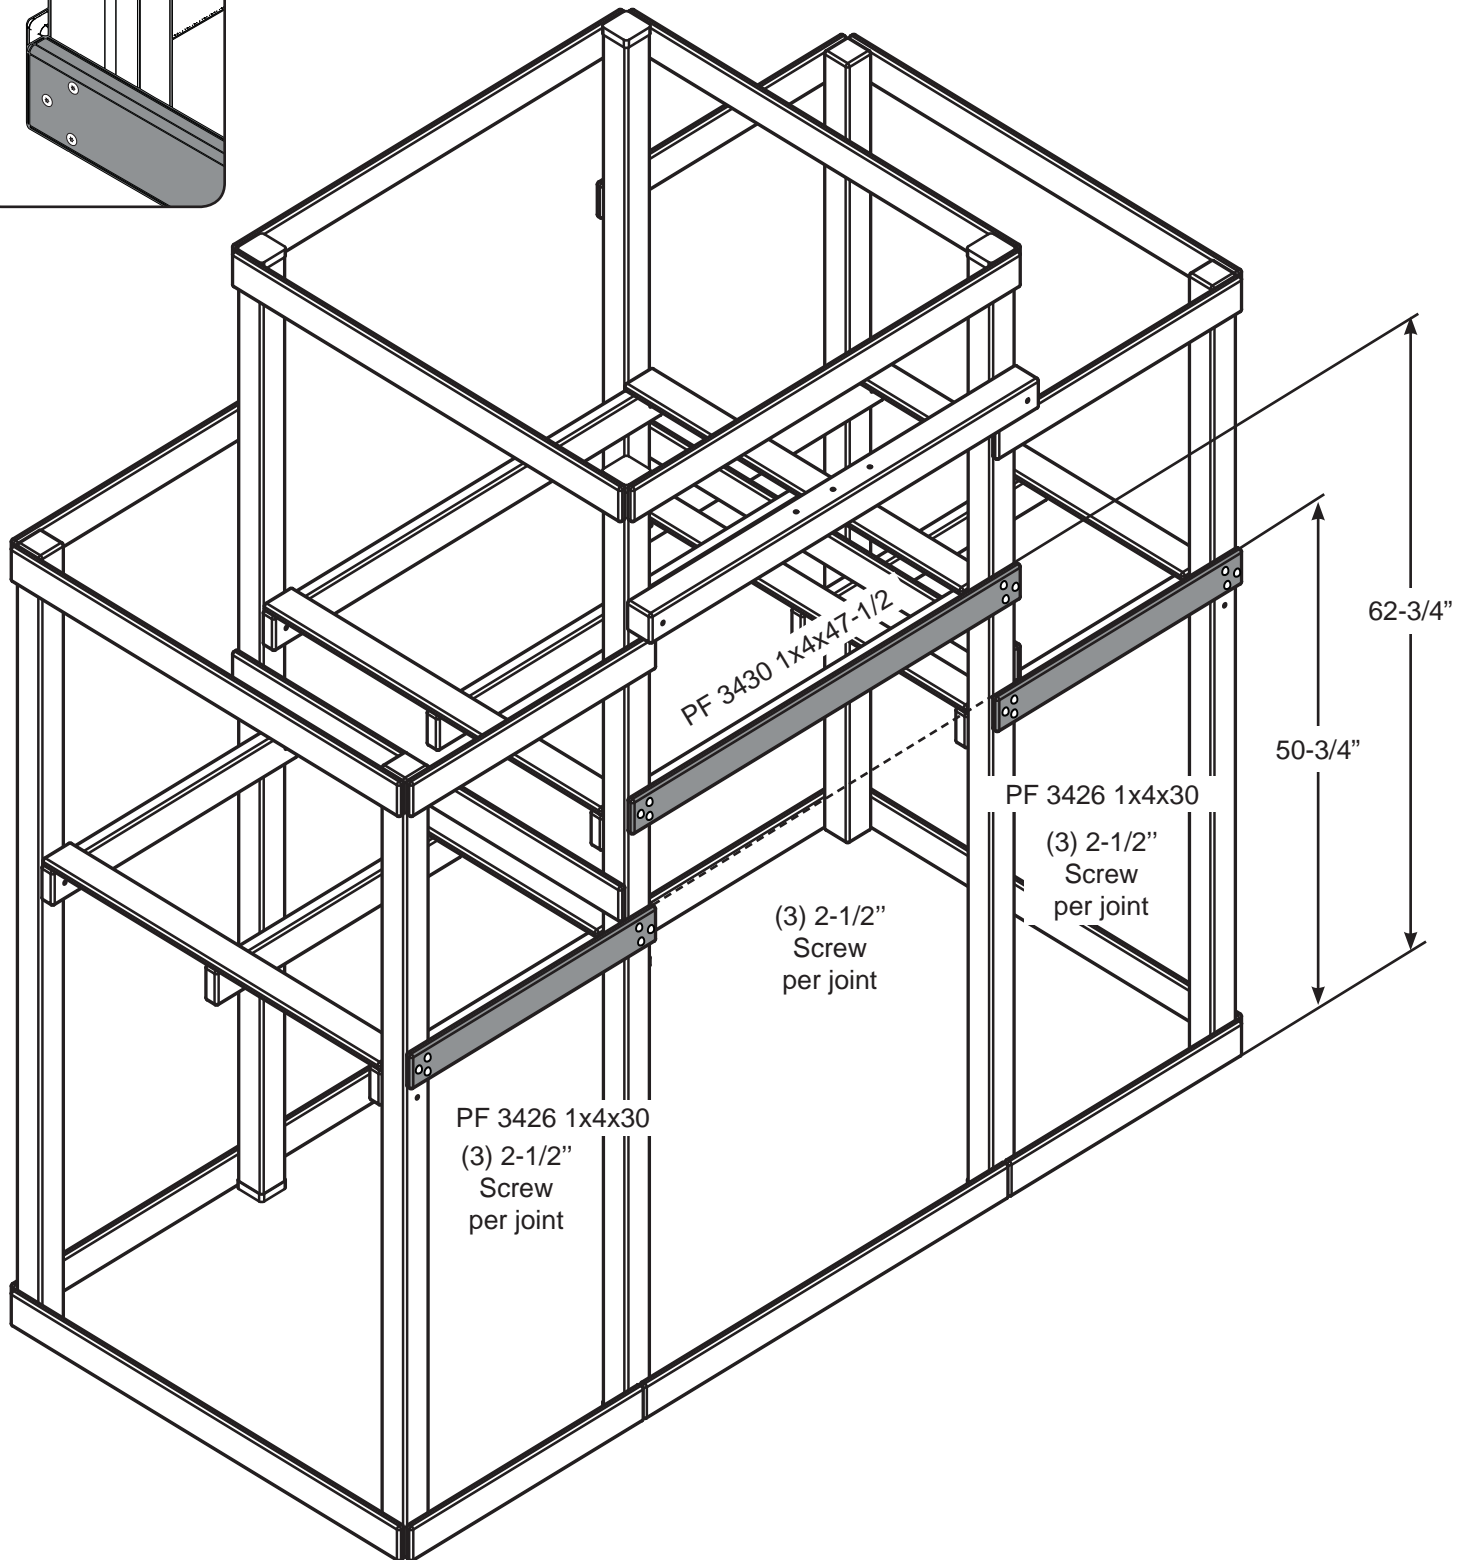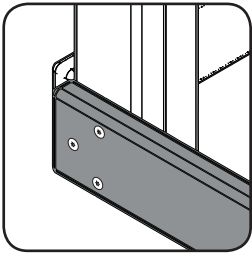

2-1/2" Deck Screw (x18)

1. Attach Barrier Support Boards as shown.


STEP 11

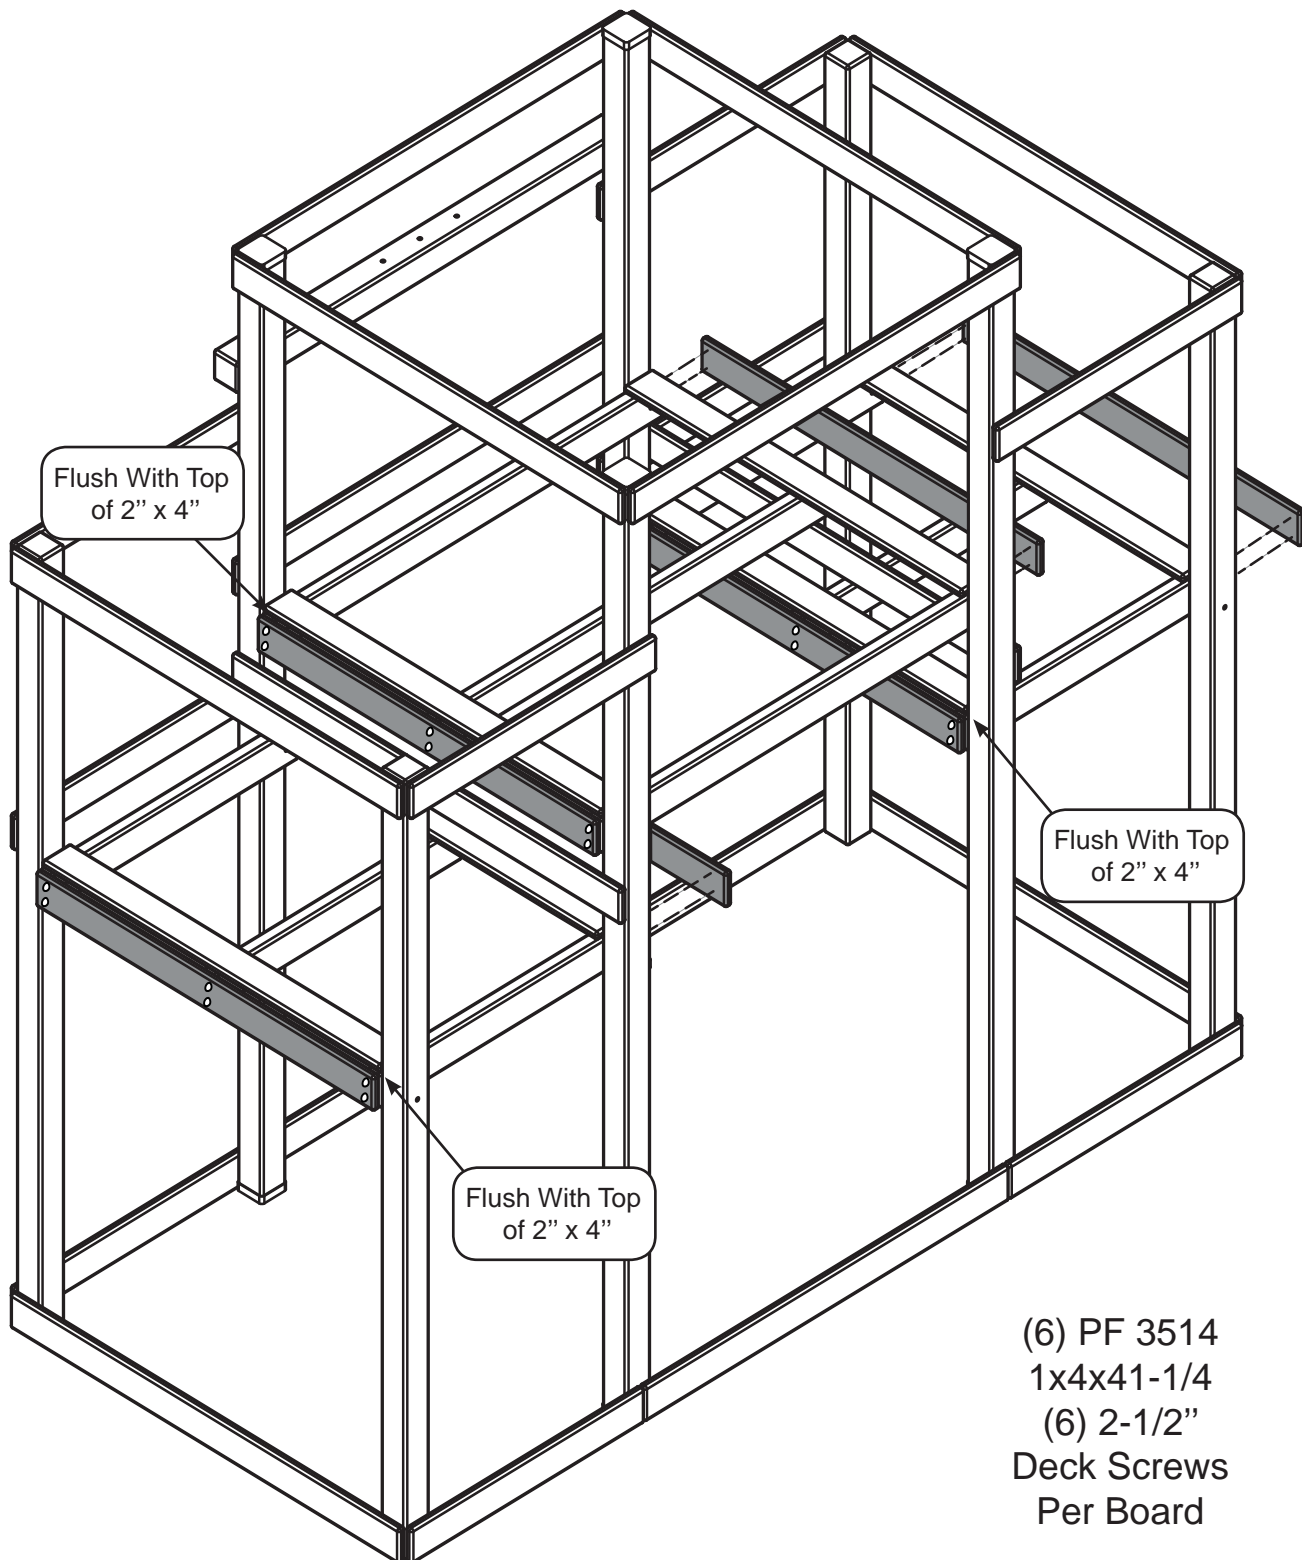

2-1/2" Deck Screw (x36)

1. Attach boards as shown.


STEP 12

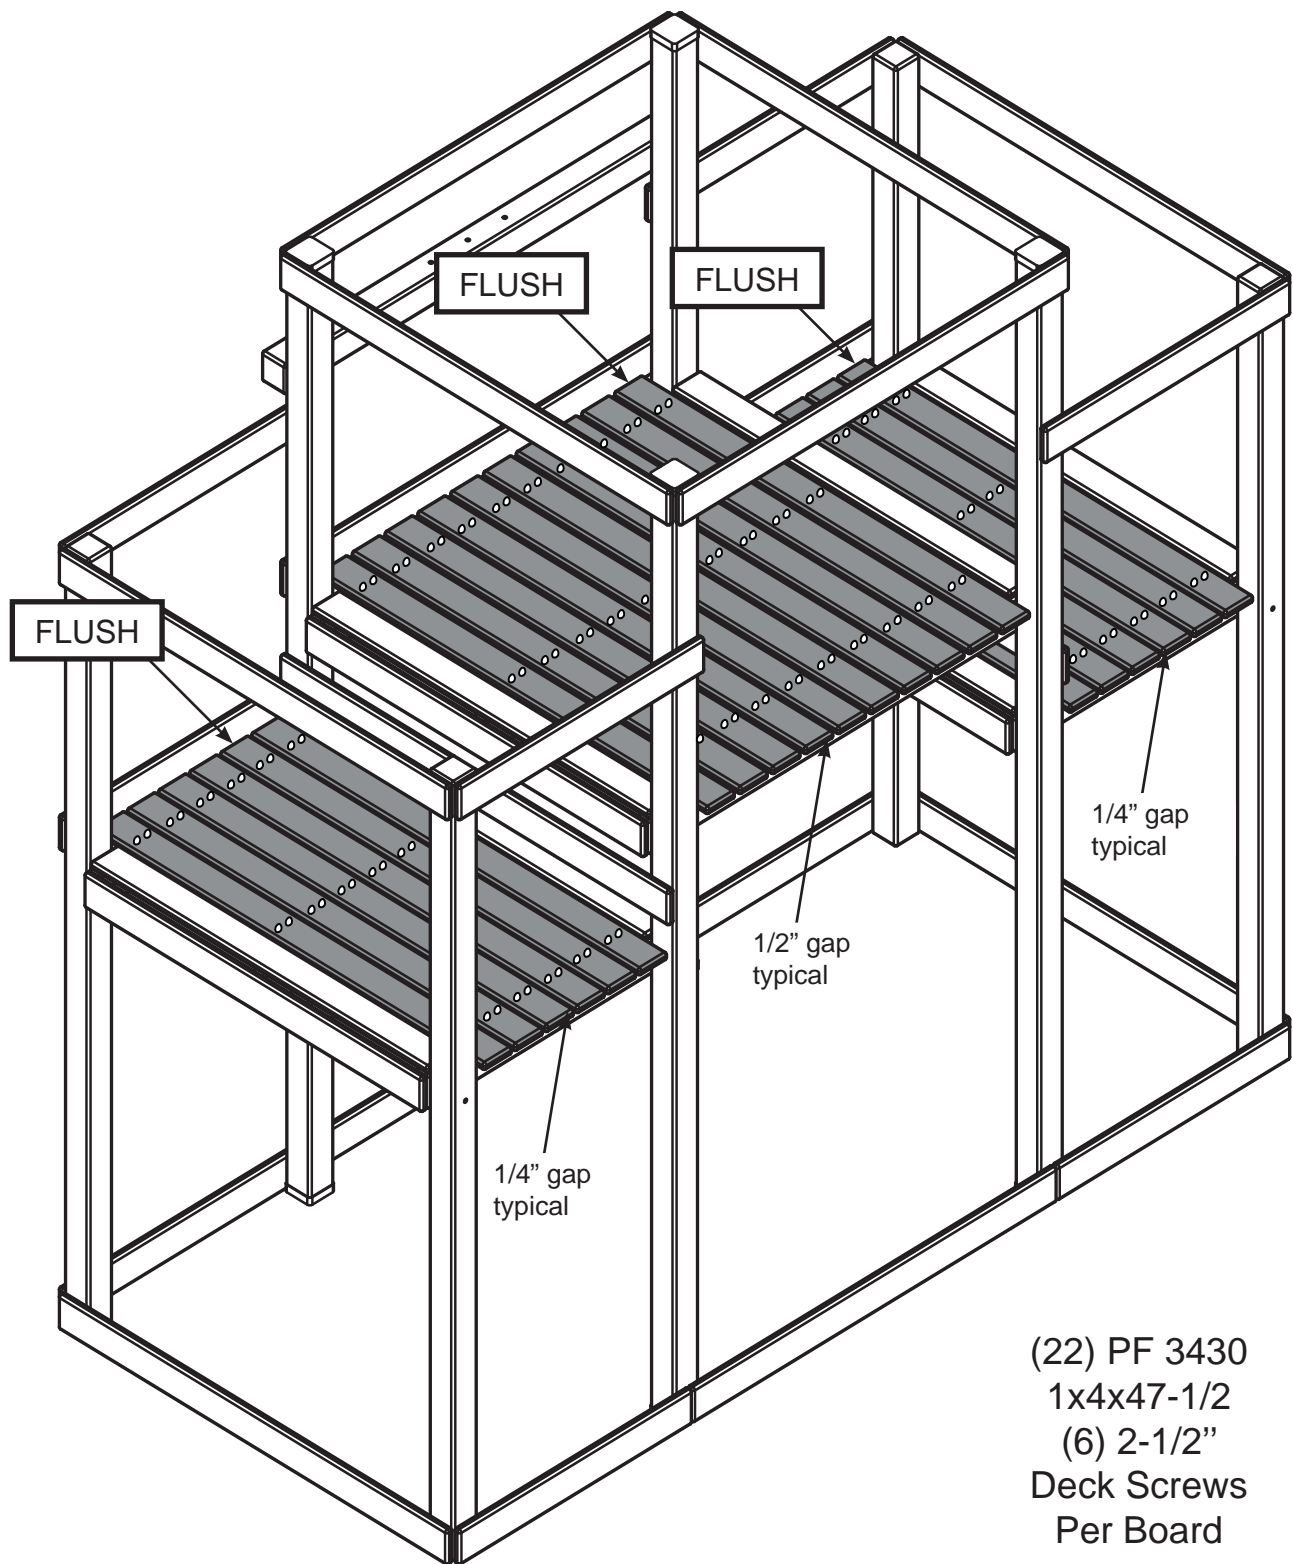


2-1/2" Deck Screw (x132)

1. Attach boards as shown.

STEP 13

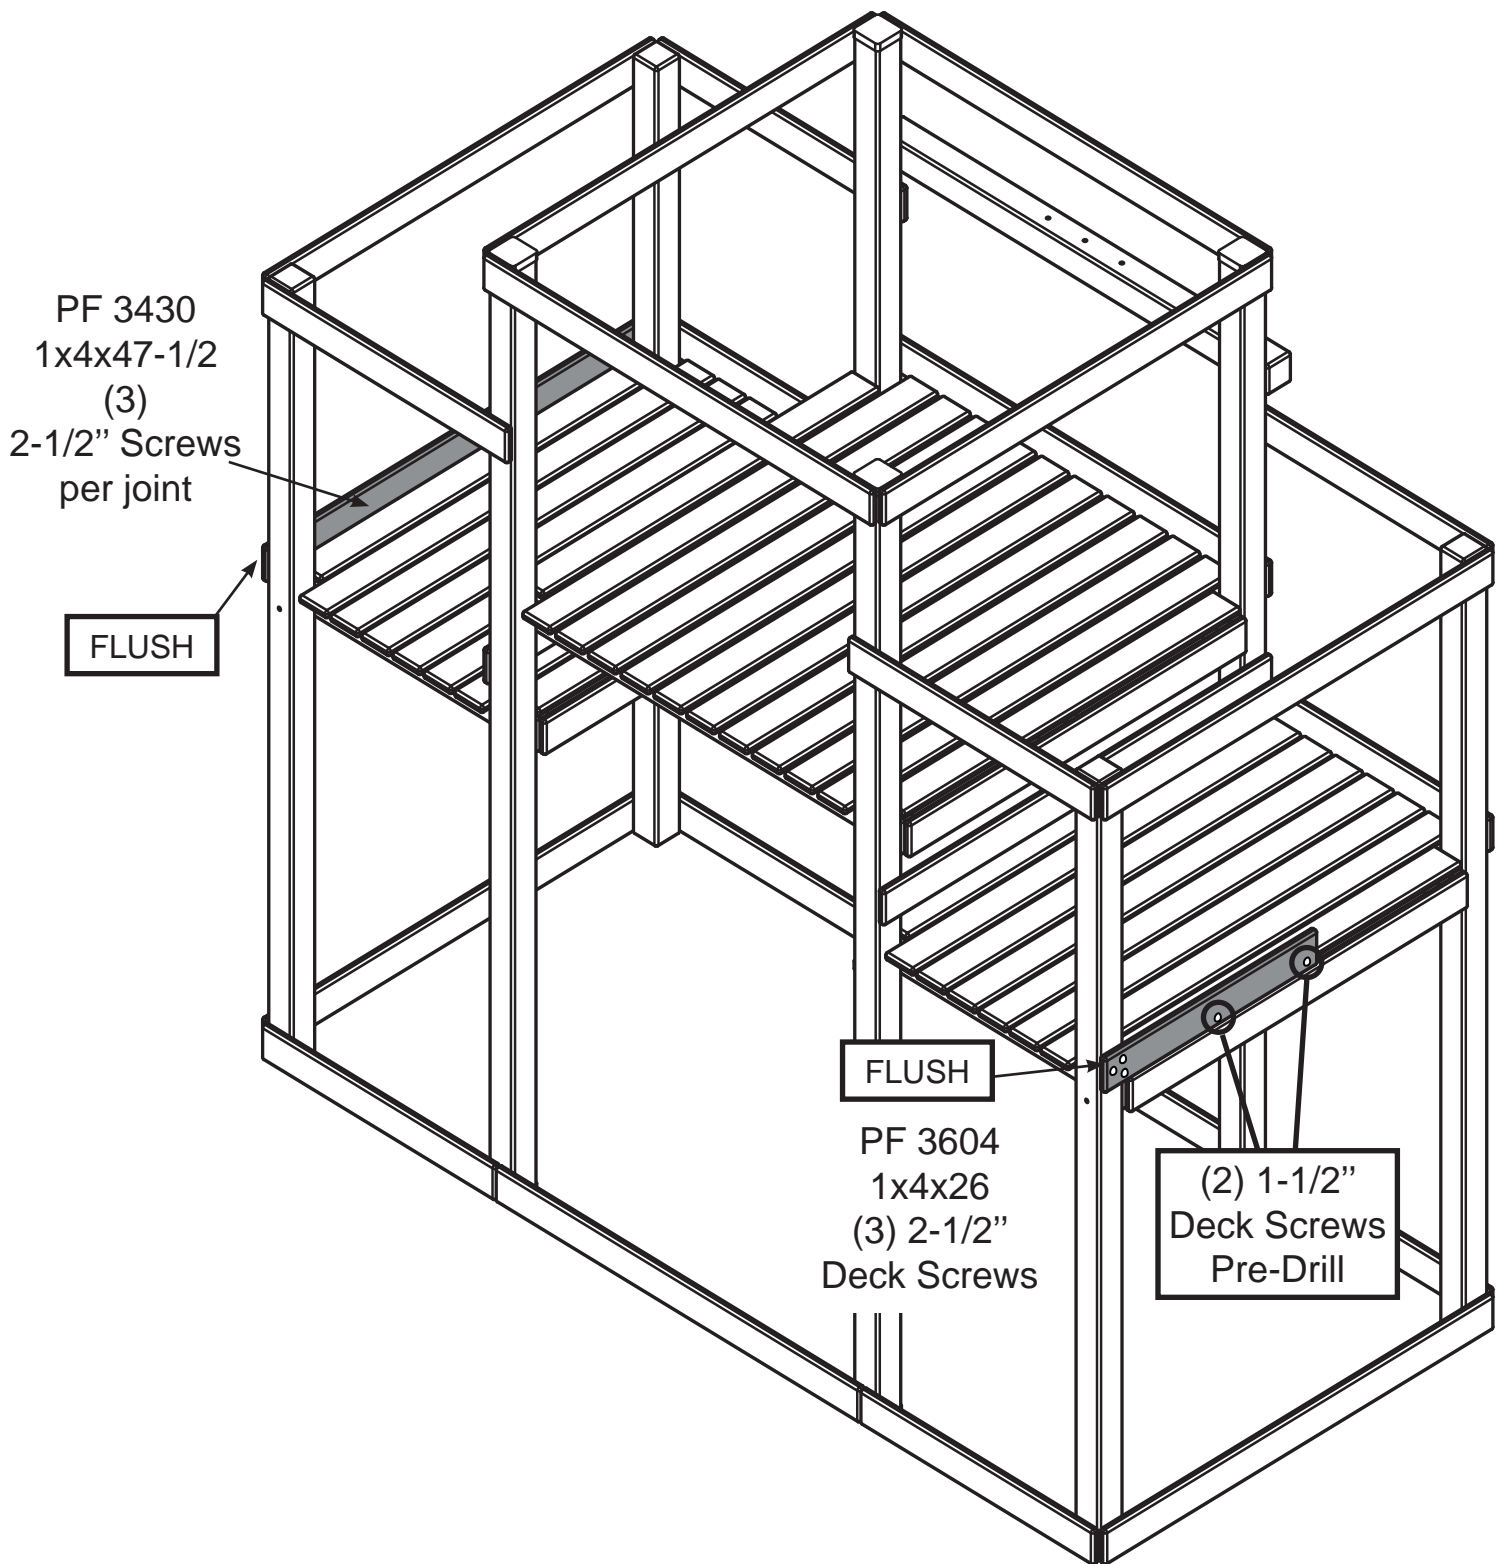

2-1/2" Deck Screw (x9)

 

1-1/2" Deck Screw (x2)

1. Attach boards as shown.

STEP 14

(6) PF 3426
1x4x30
(4) 30mm
Deck Screws
per Board

3" Gap Between
Barrier Boards

FLUSH

(4) PF 3426
1x4x30
(4) 30mm
Deck Screws
per Board

2-1/4" Gap
Between Barrier
Boards

FLUSH

FLUSH




30mm Deck Screw (x40)

1. Attach boards as shown.

STEP 15


(4) PF 3426
1x4x30
(4) 30mm
Deck Screws
per Board

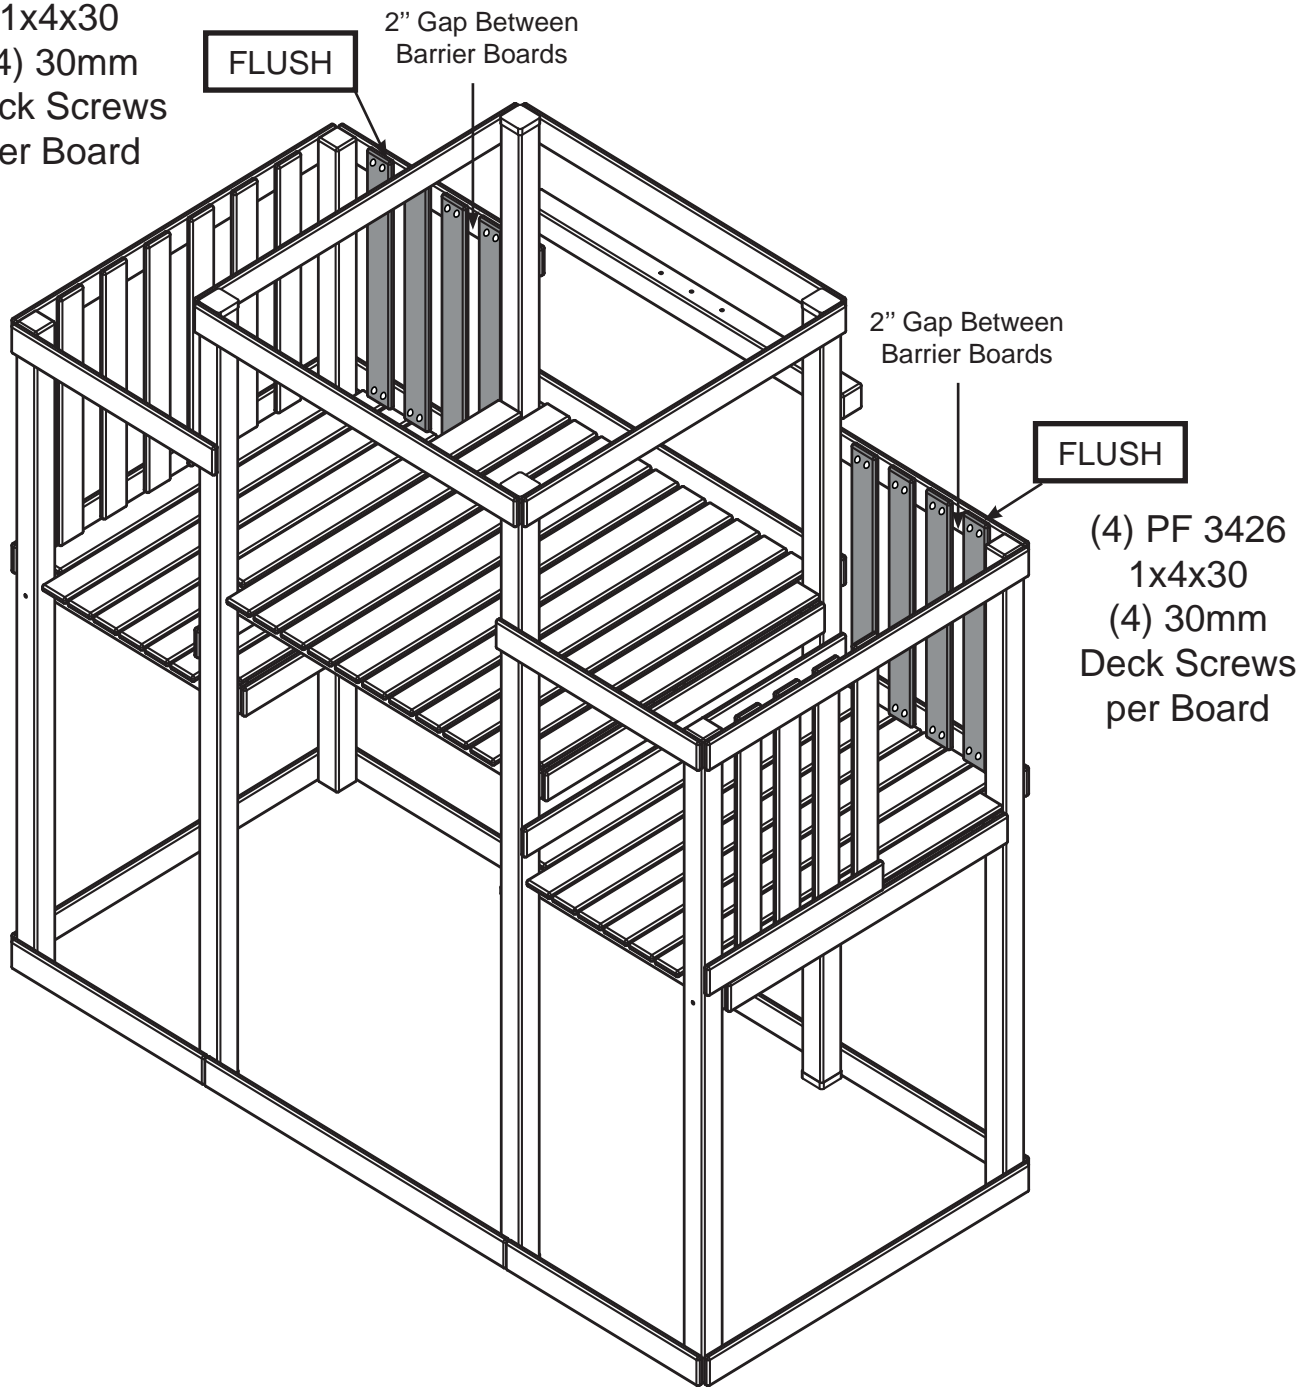

30mm Deck Screw (x32)


1. Attach boards as shown.

STEP 16

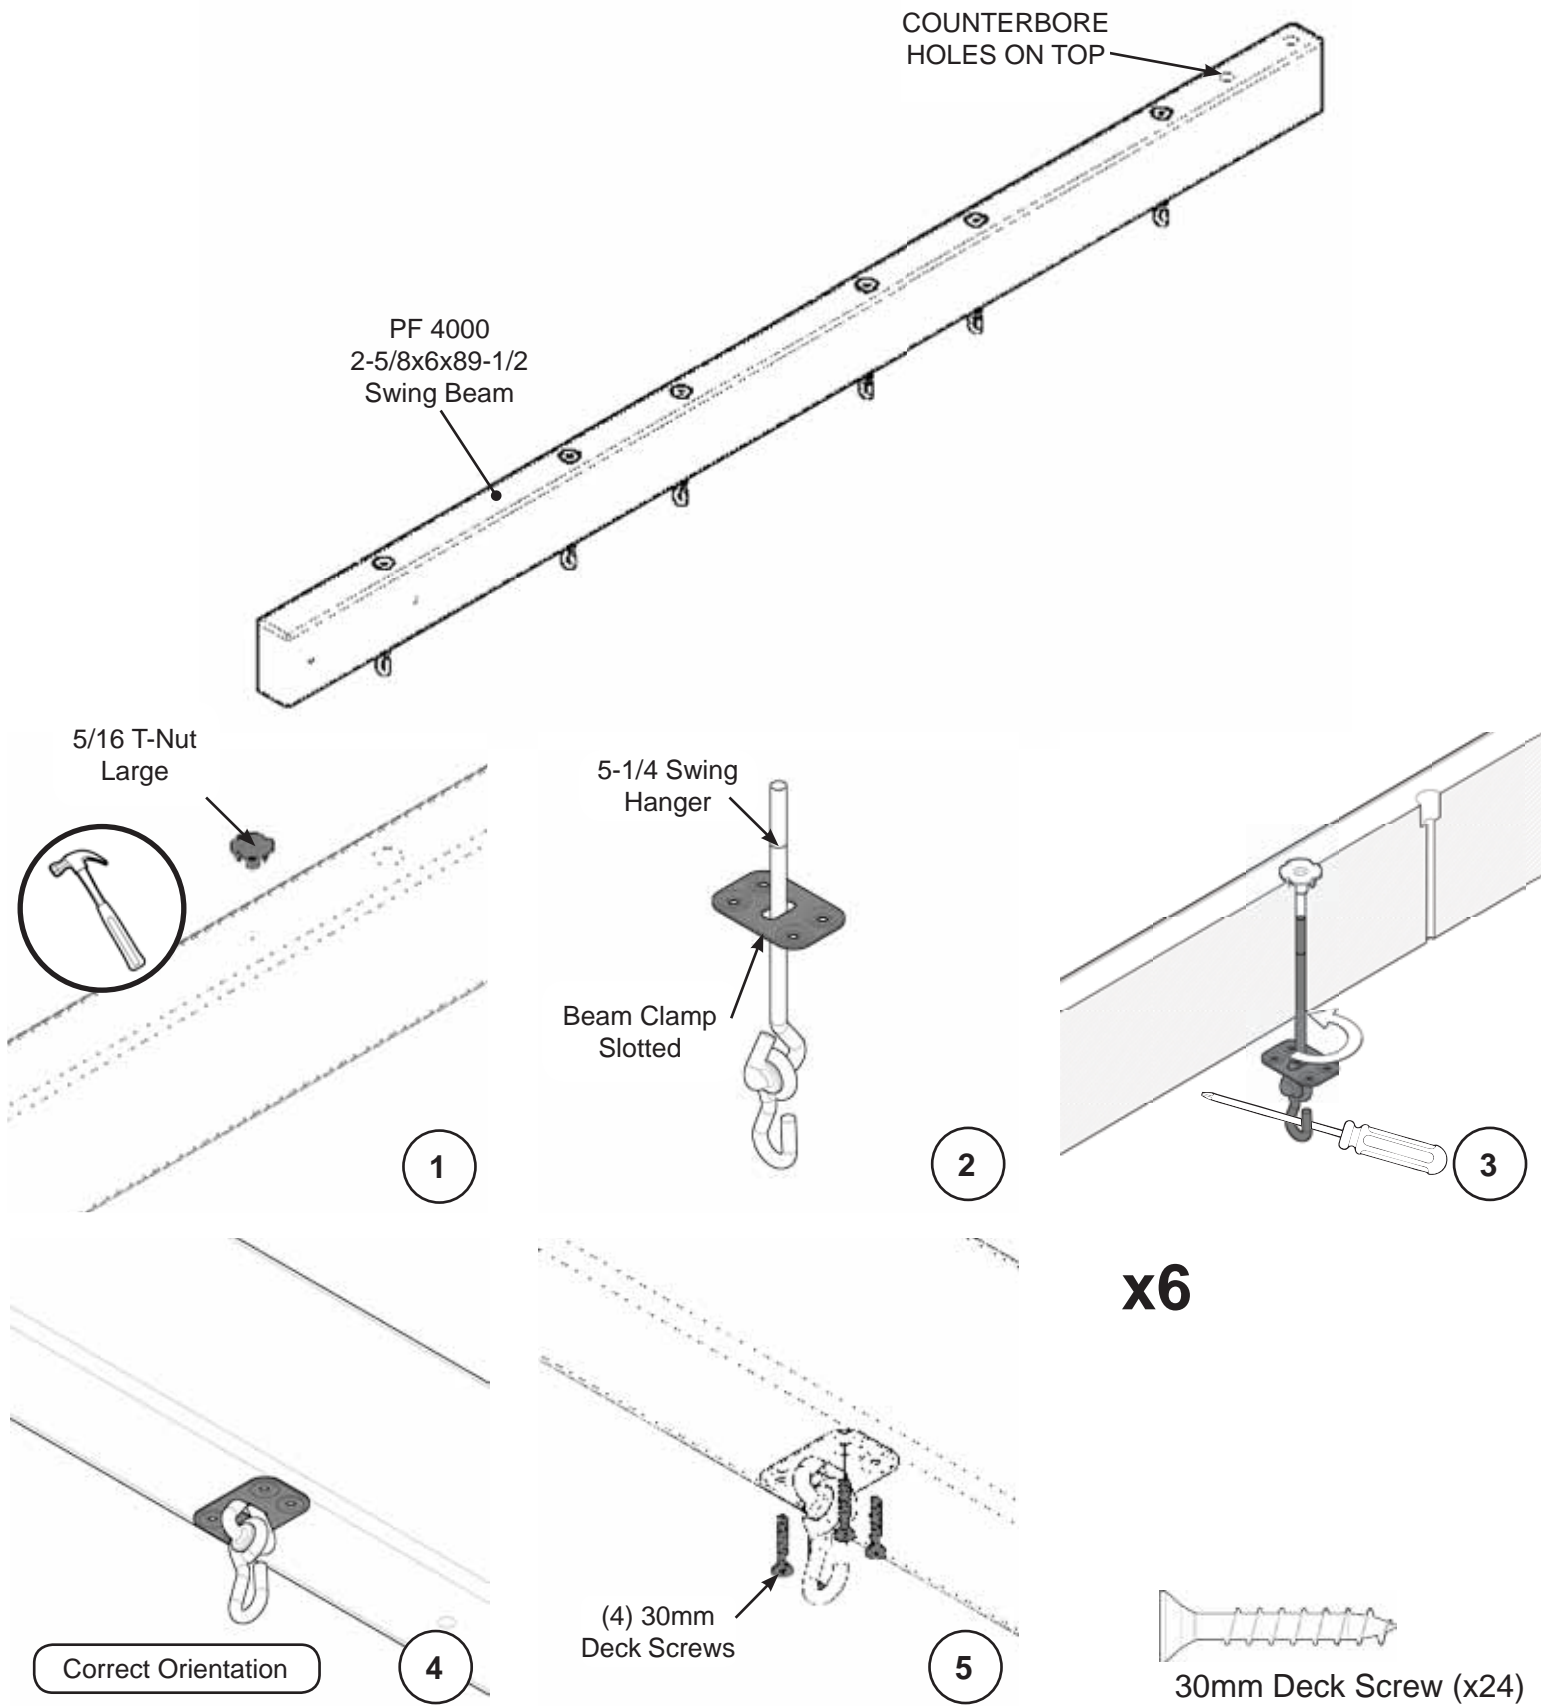


1. Attach Swing Hanger(s) to swing beam as shown.

STEP 17

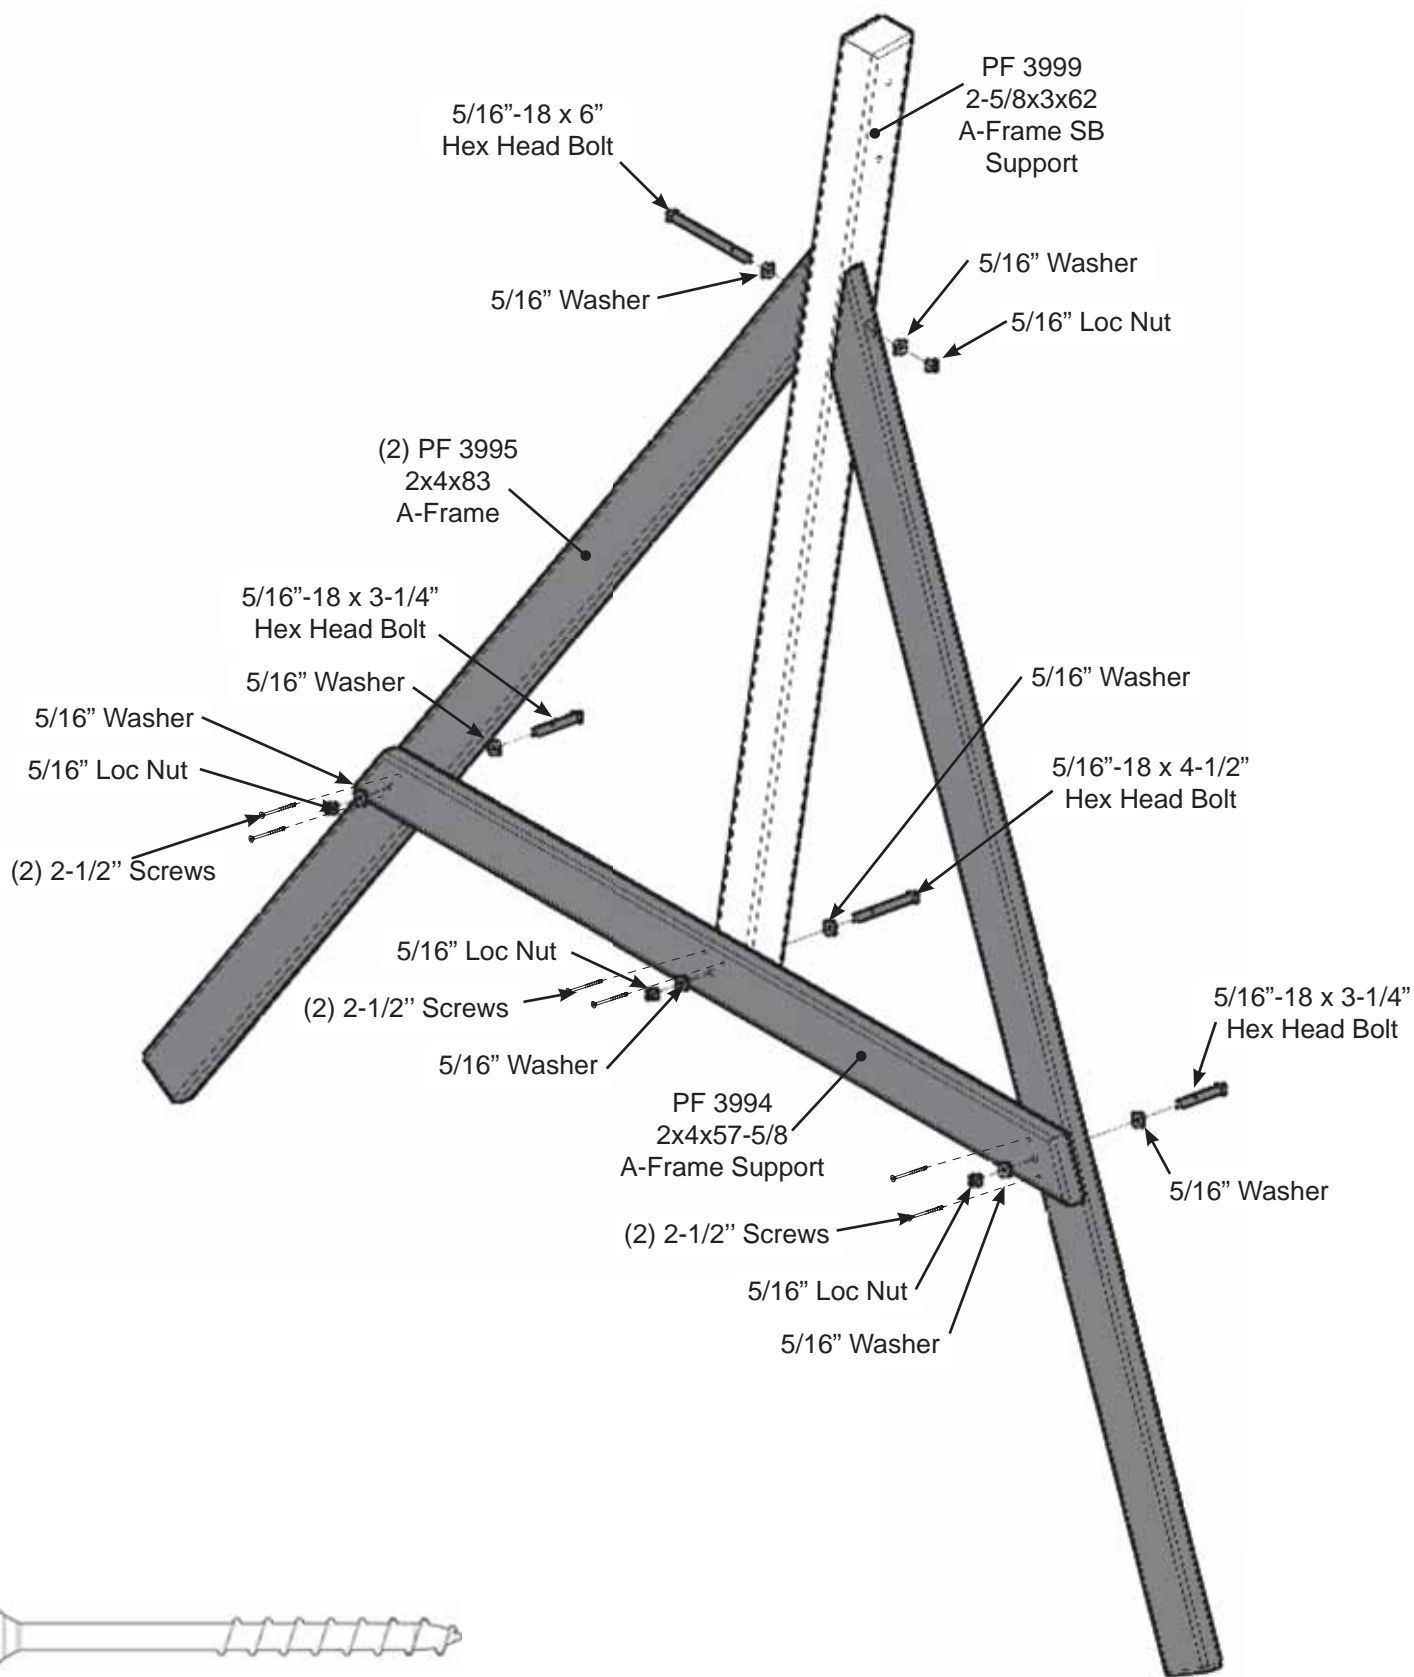




1. Assemble A-Frame as shown.

STEP 18

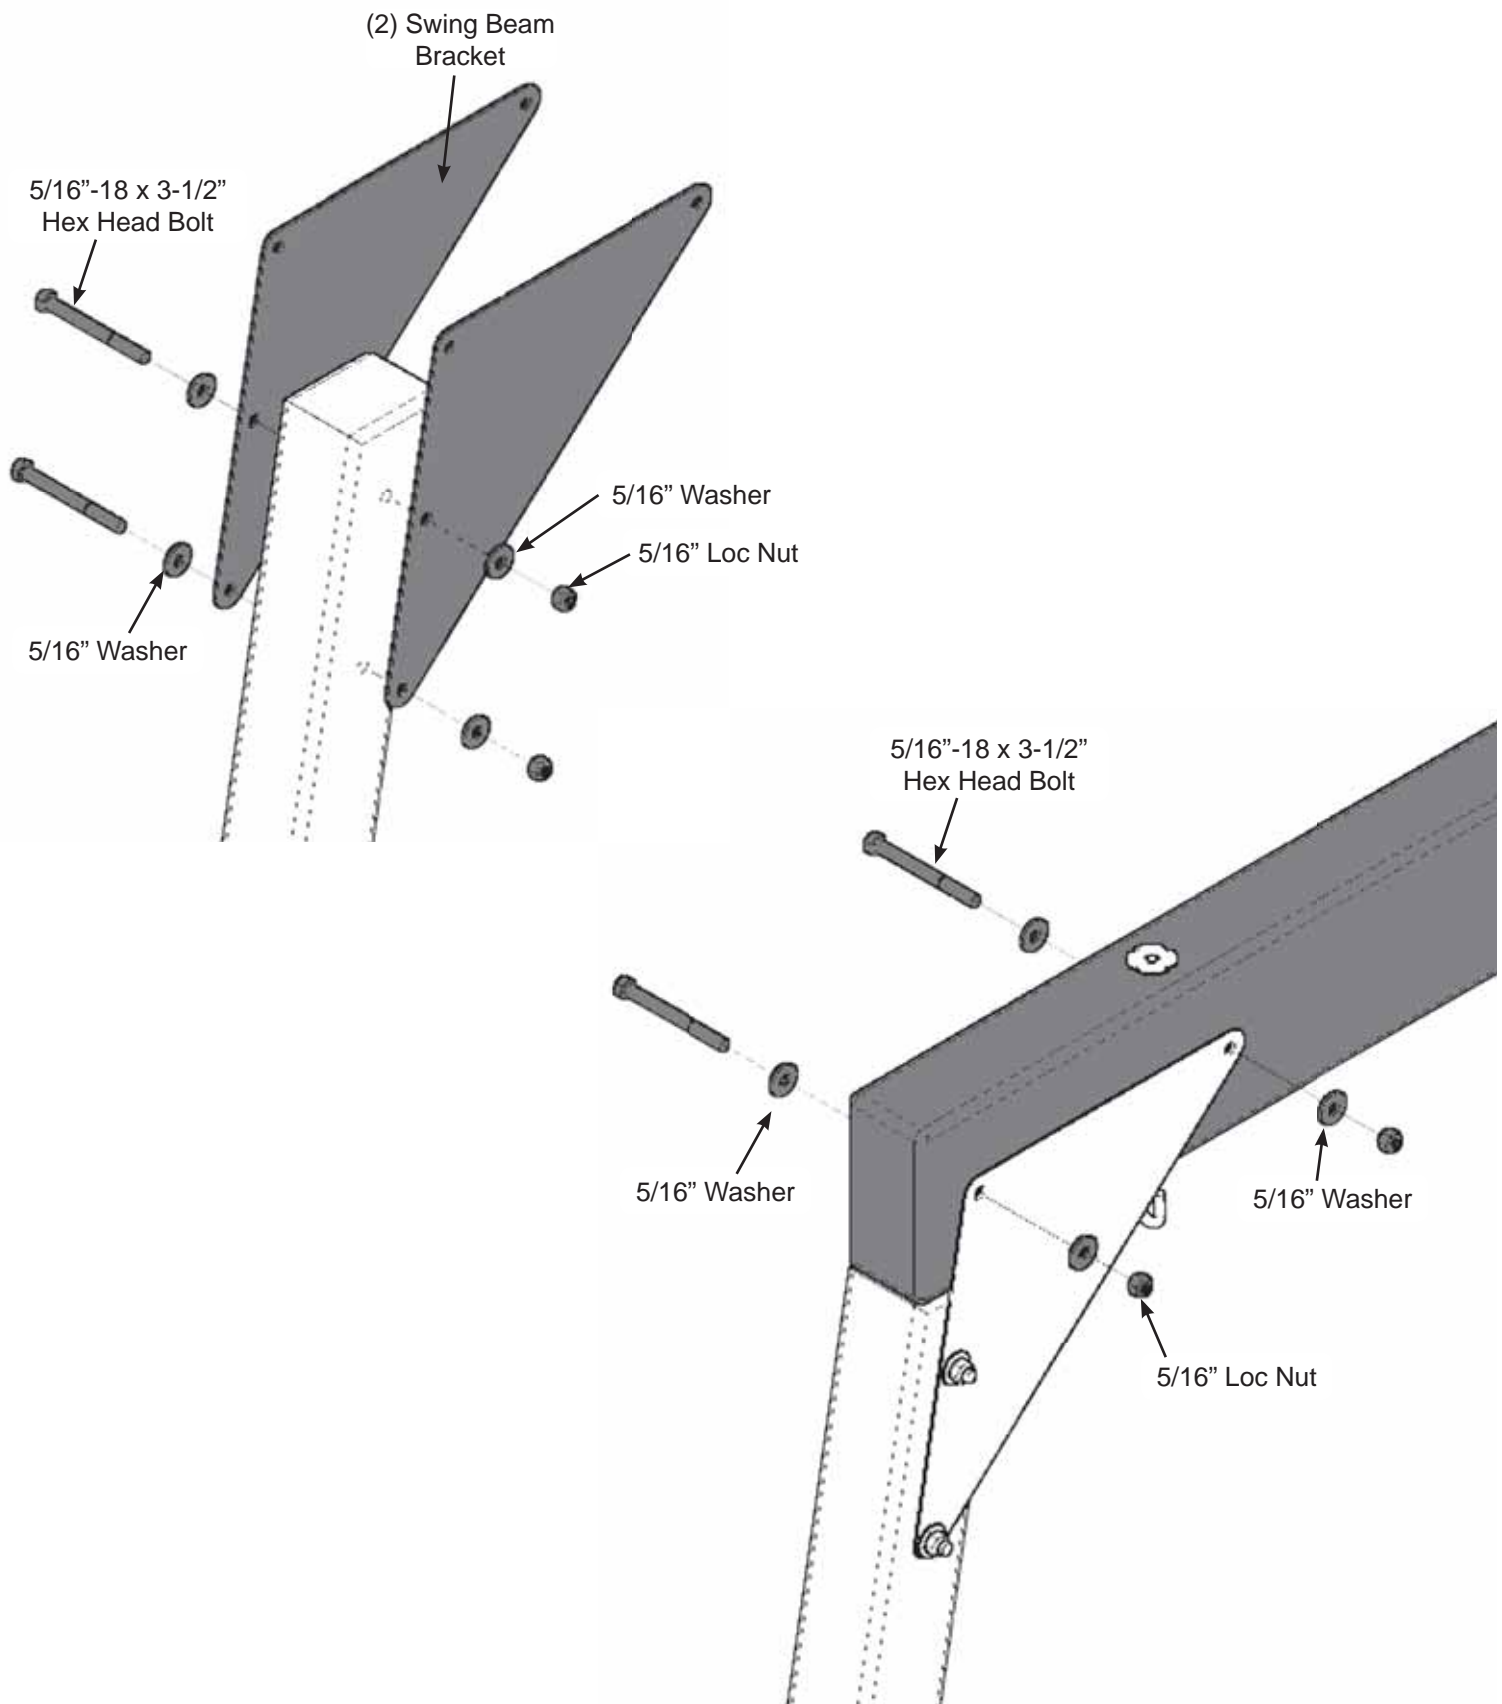


1. Attach Swing Beam Bracket to A-Frame & Swing Beam as shown.

STEP 19

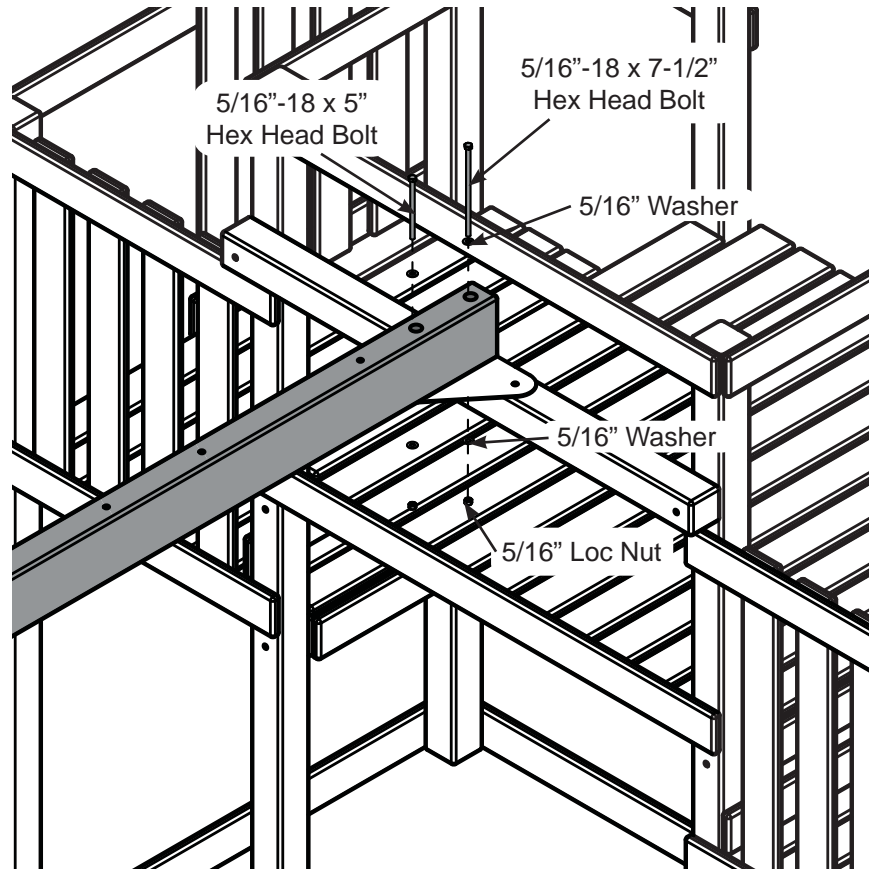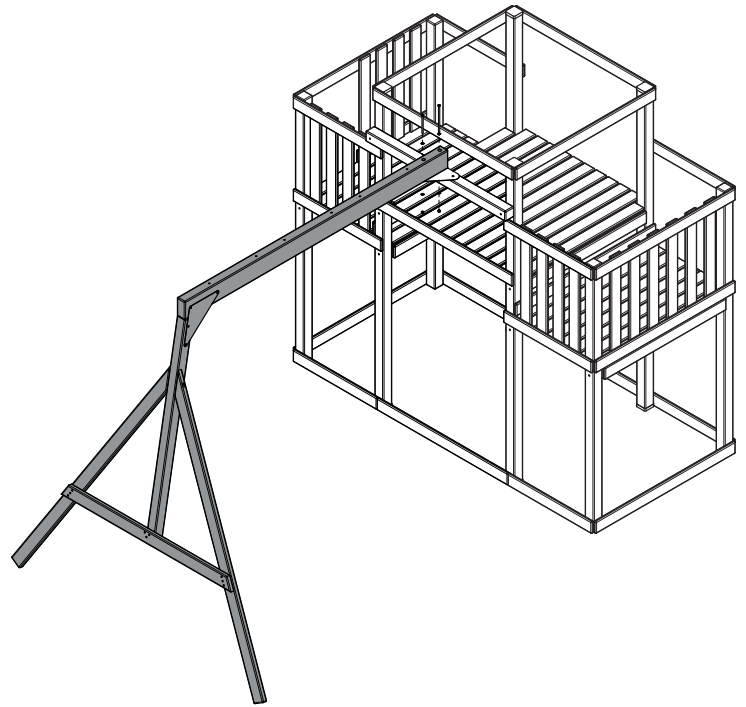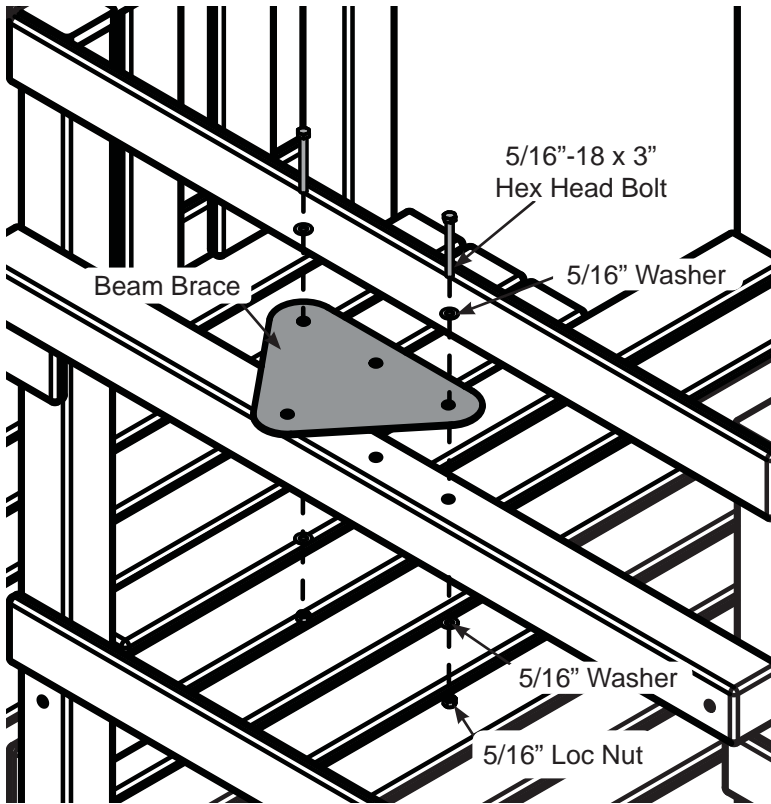

1. Attach Swing Beam to tower as shown.

STEP 20

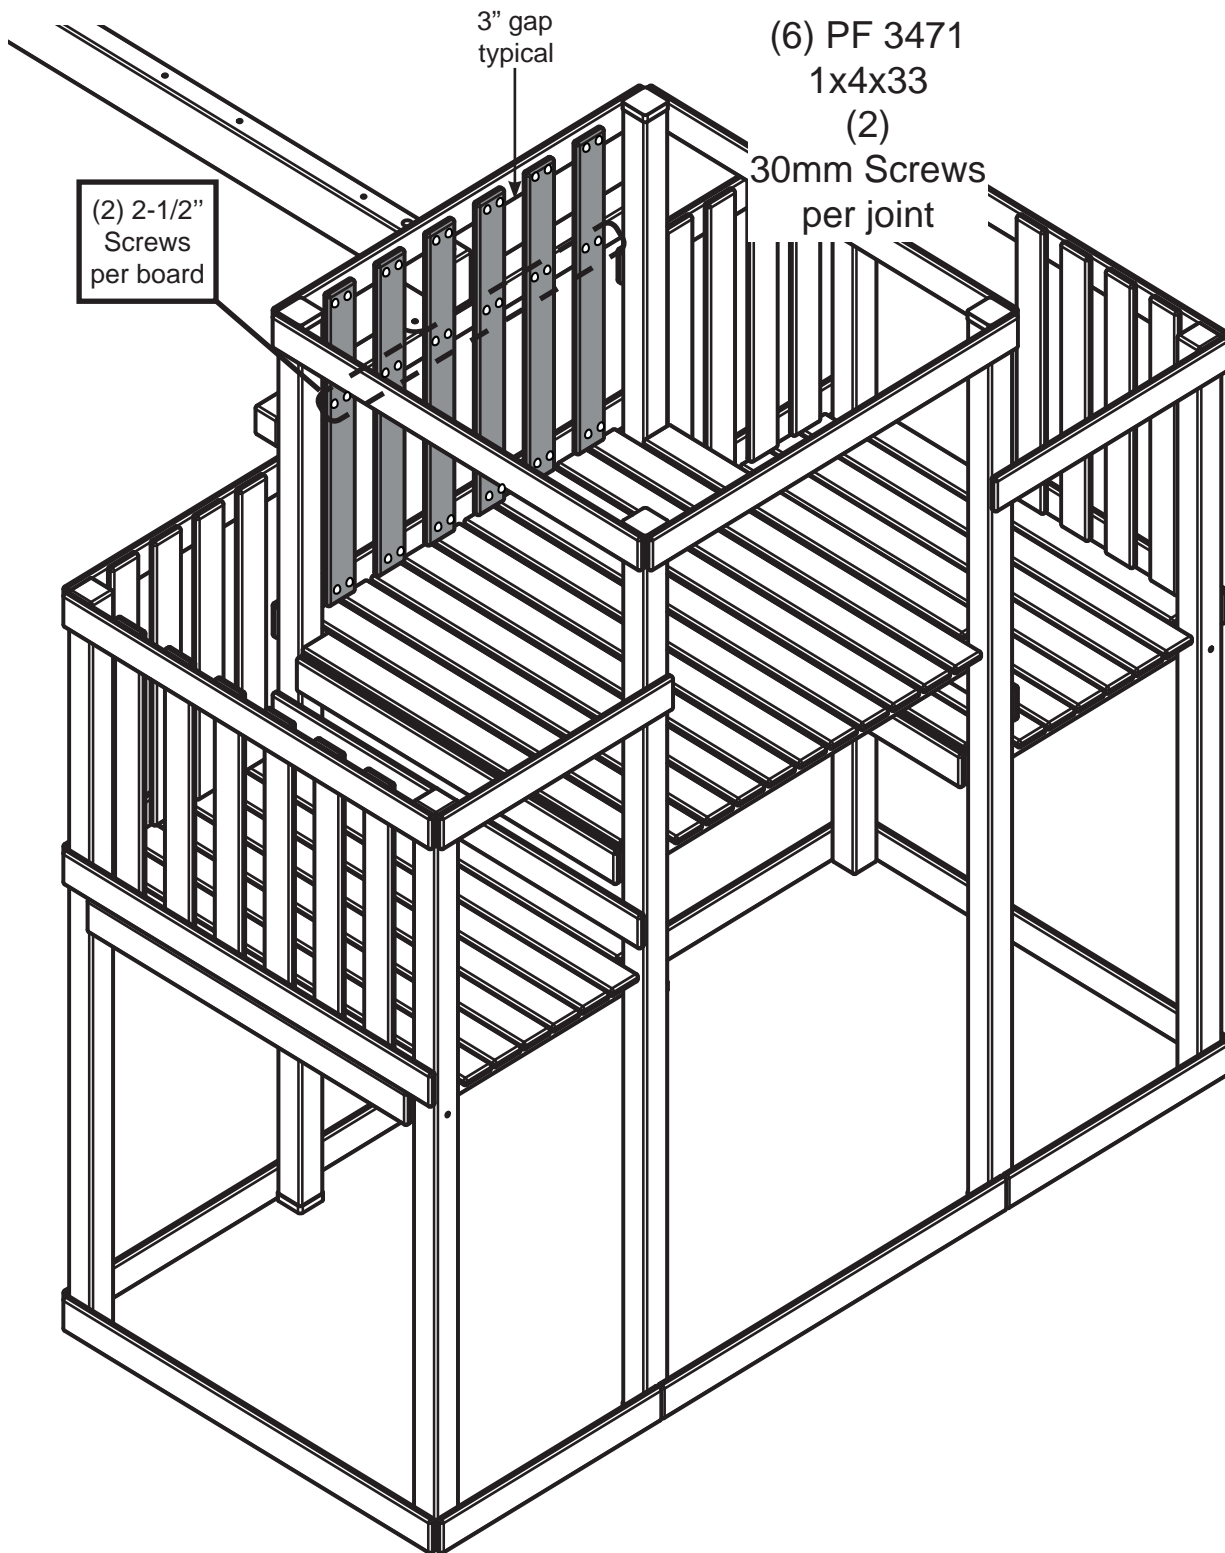


30mm Deck Screw (x24)



2-1/2" Deck Screw (x12)

1. Attach boards as shown.



STEP 21

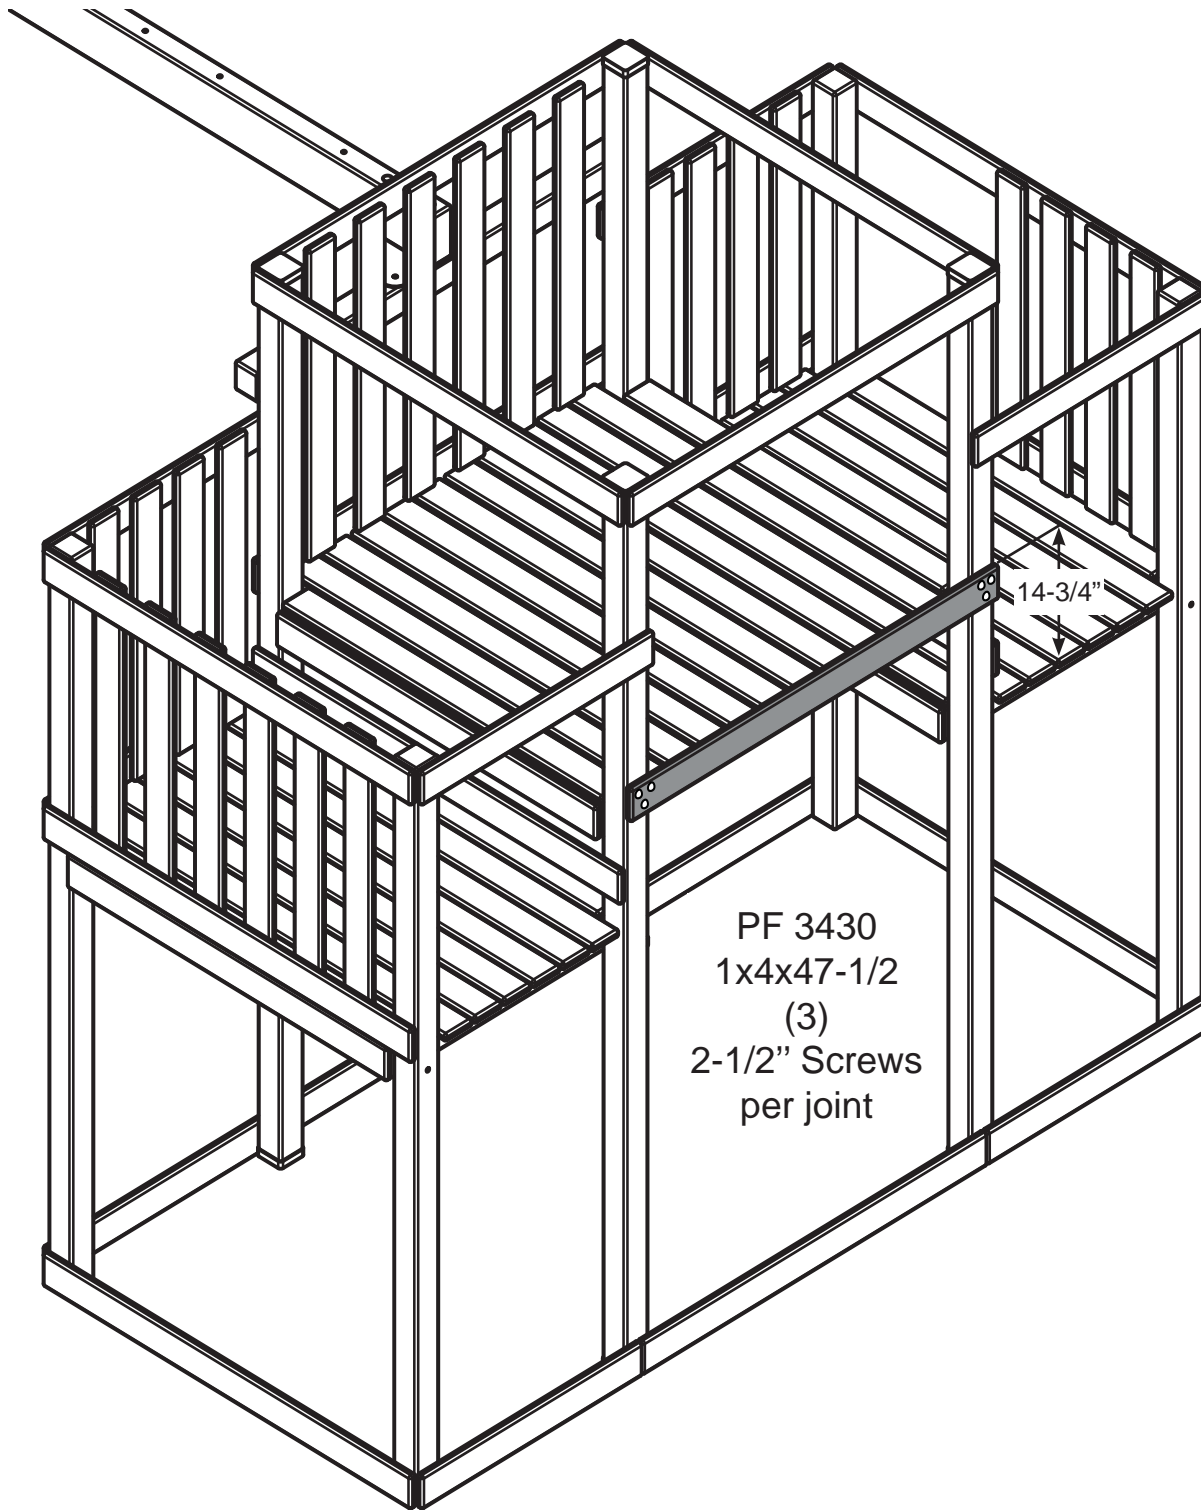

2-1/2" Deck Screw (x6)

1. Attach board as shown.

STEP 22

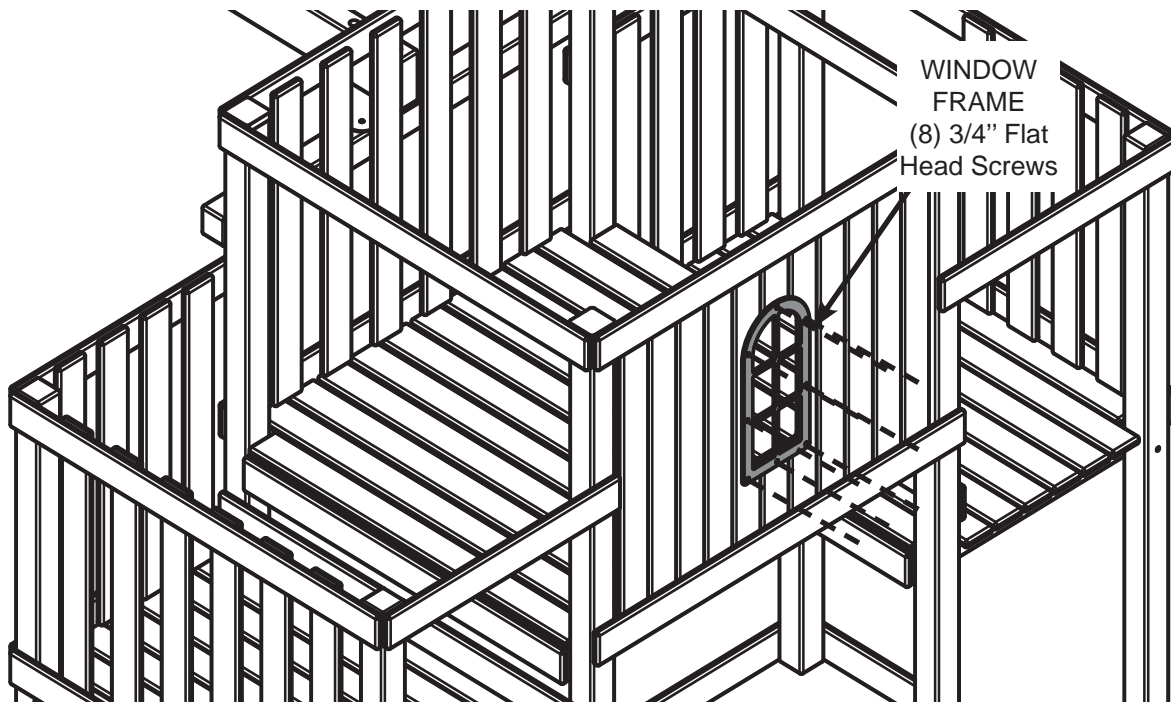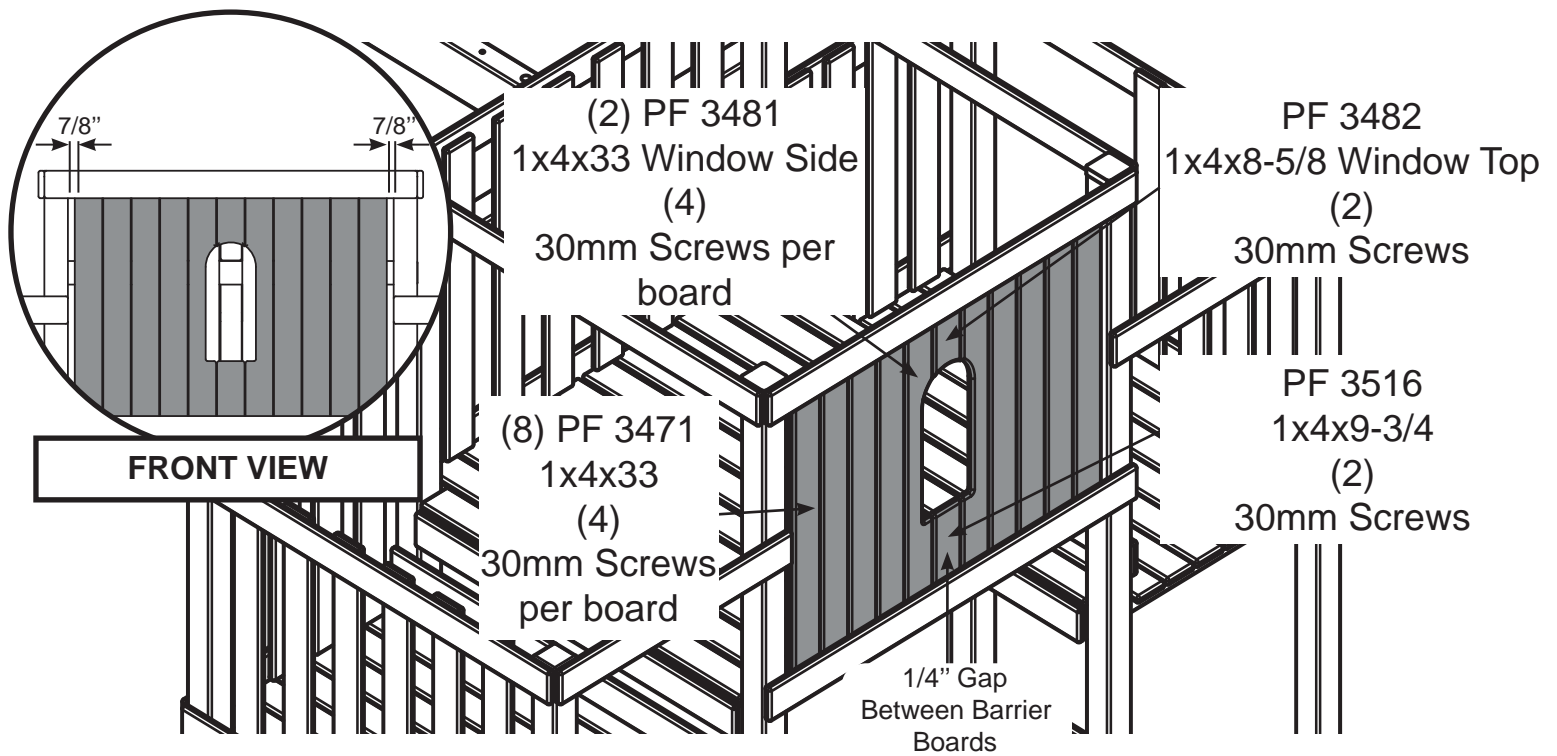


30mm Deck Screw (x44)



3/4" Flat Head Screw (x8)

1. Attach board(s) and Window Frame as shown.

STEP 23

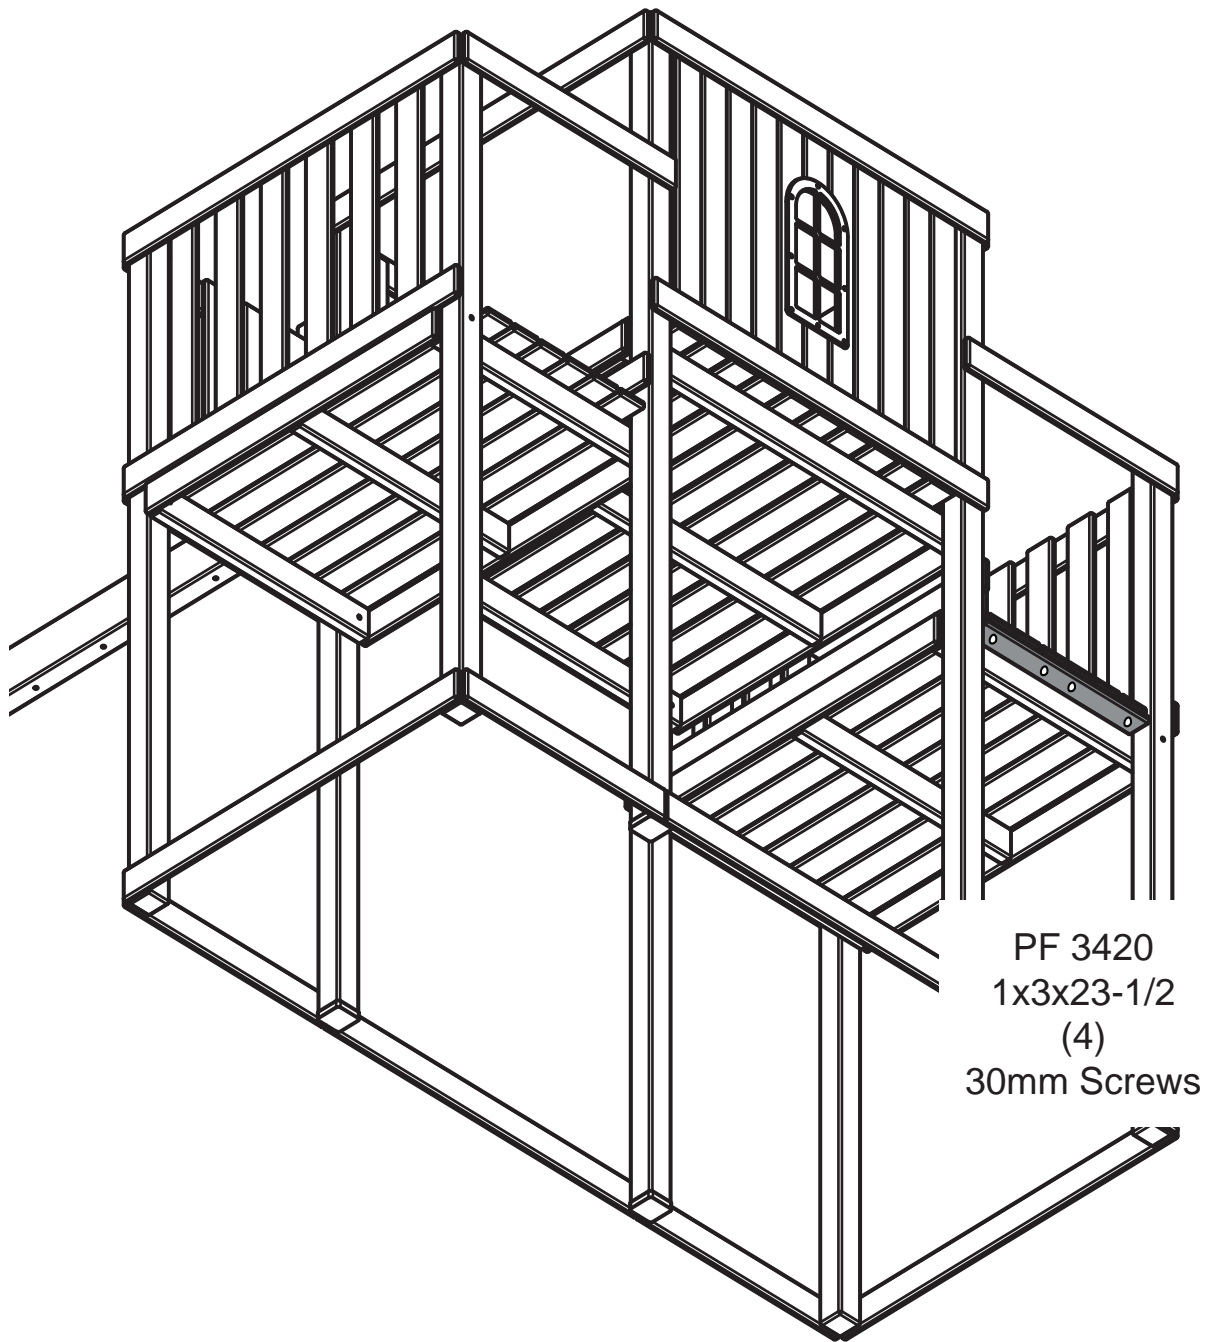

PF 3420
1x3x23-1/2
(4)
30mm Screws




UNDER DECK VIEW





30mm Deck Screw (x4)

1. Attach board as shown.

STEP 24

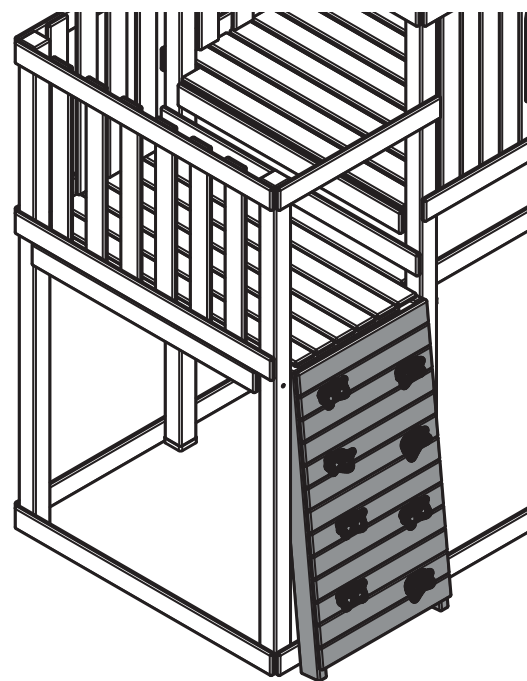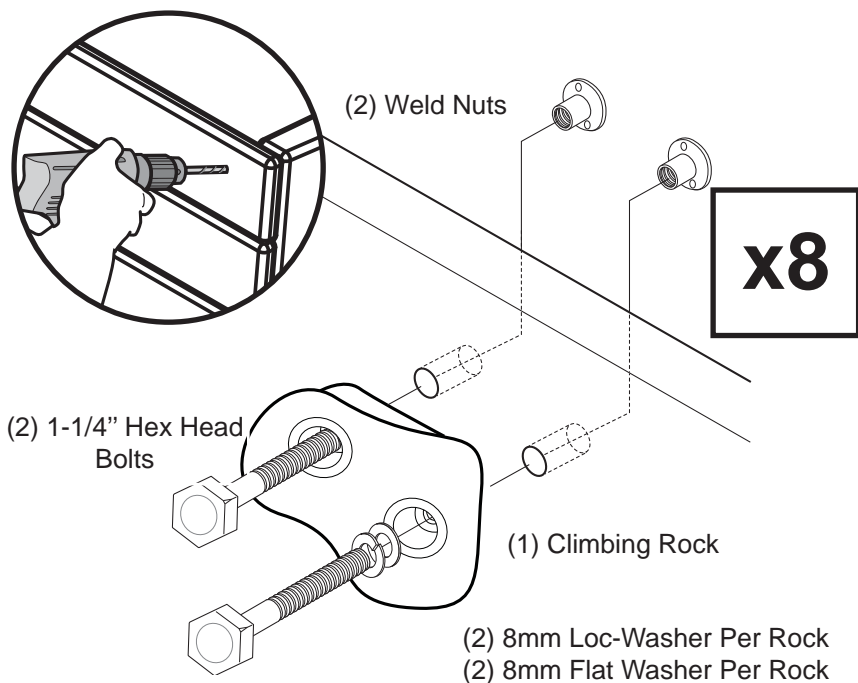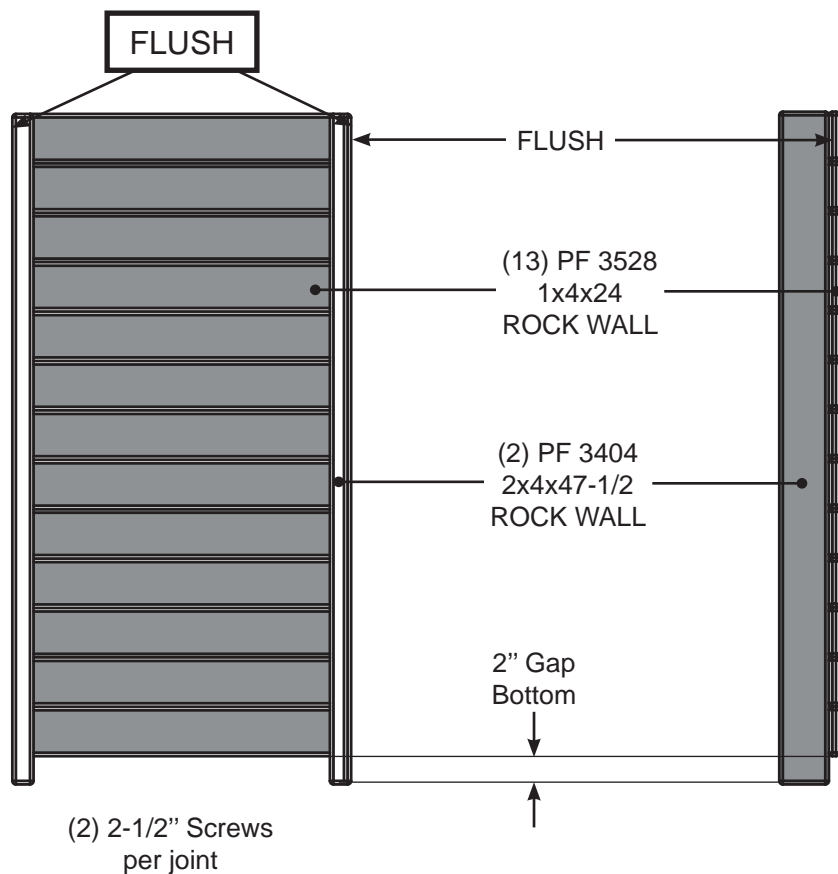


(3) 2-1/2"
Screws
per joint

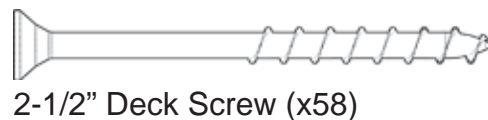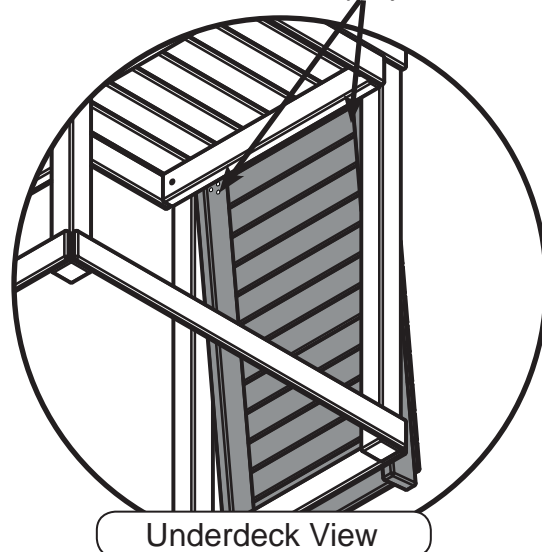

1. Assemble Rock Wall as shown.
2. Mark locations of Climbing Rocks on the Climbing Wall in a pattern that will easily allow your child to climb to the deck.
Make sure the bolt hole locations are clear of wall supports before drilling.
3. Drill holes through the wall at the desired locations using a 3/8" drill bit.
4. Attach Climbing Rocks as shown.
5. Attach Rock Wall as shown.


STEP 25

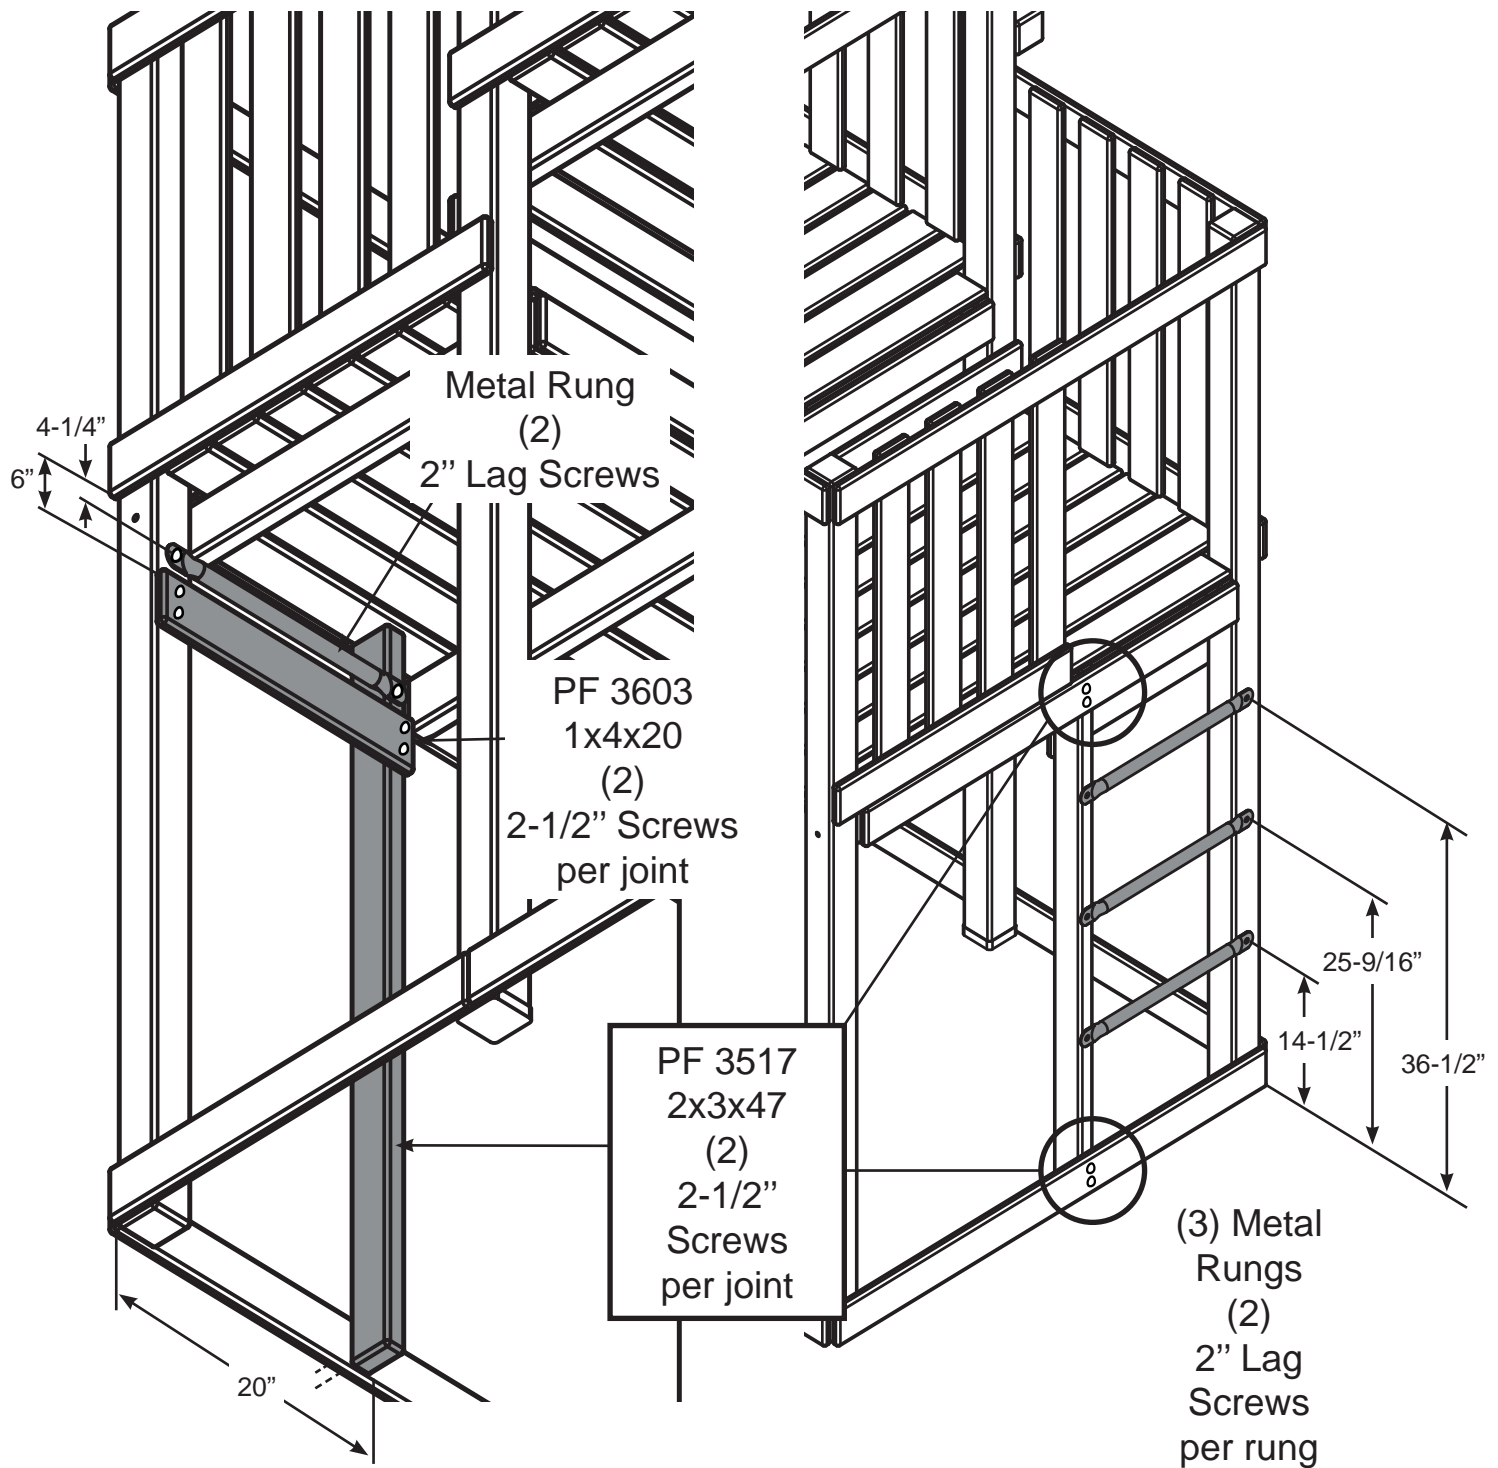

UNDER DECK VIEW



 
2-1/2" Deck Screw (x8)




2" Lag Screw (x8)

1. Attach Ladder Support Boards and Metal Rungs as shown.



x2

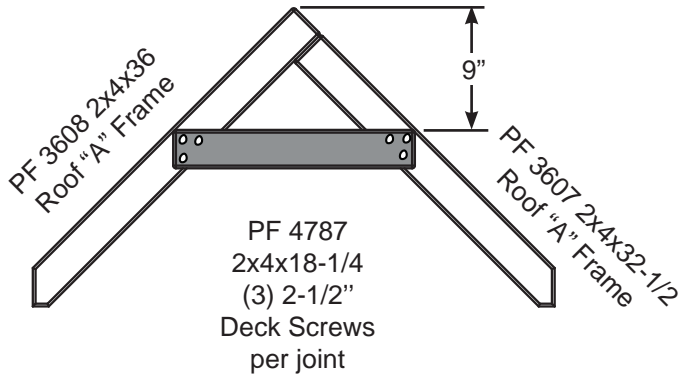


(4) PF 3609 5/8x5x47-1/2
SHINGLE

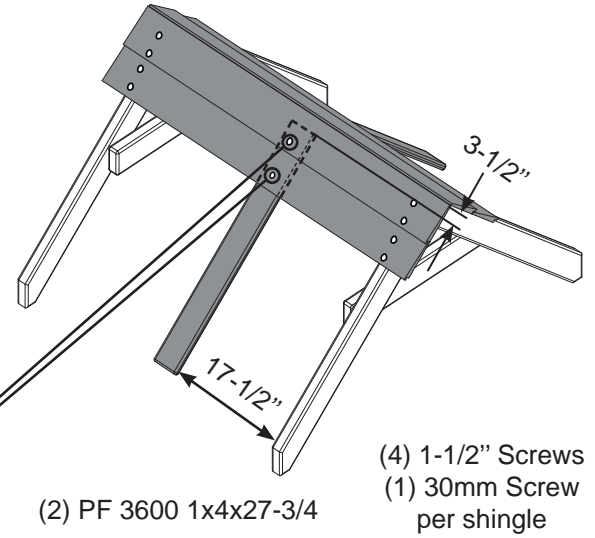

(2) PF 3600 1x4x27-3/4

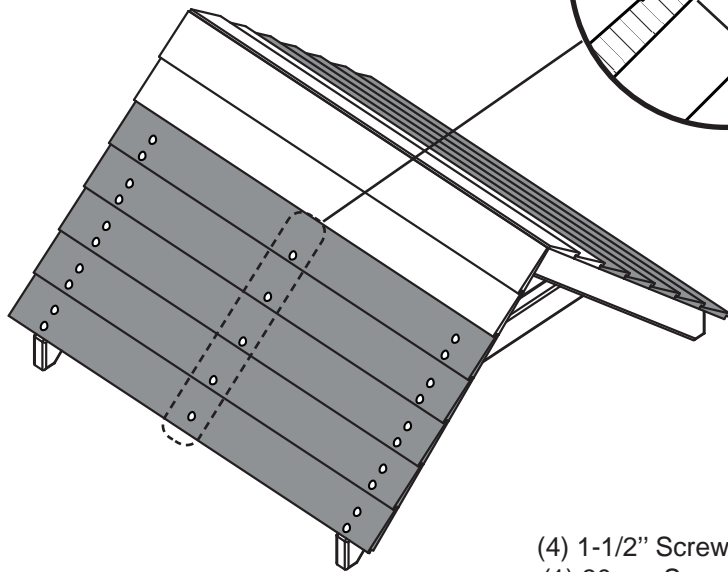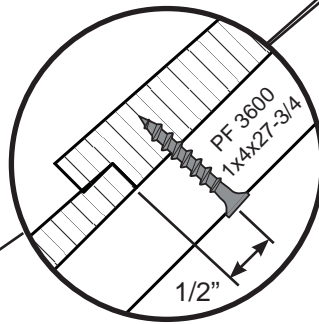


(4) 1-1/2" Screws
(1) 30mm Screw
per shingle

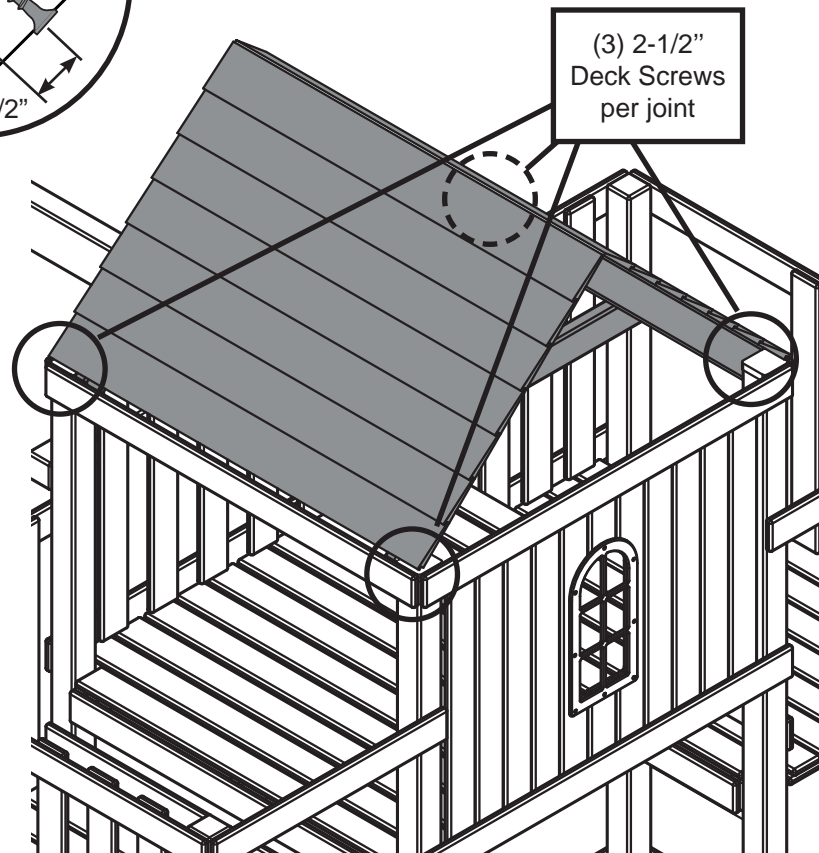

2-1/2" Deck Screw (x24)



 
30mm Deck Screw (x14)



1-1/2" Deck Screw (x56)





1. Assemble and attach Roof as shown.

STEP 27

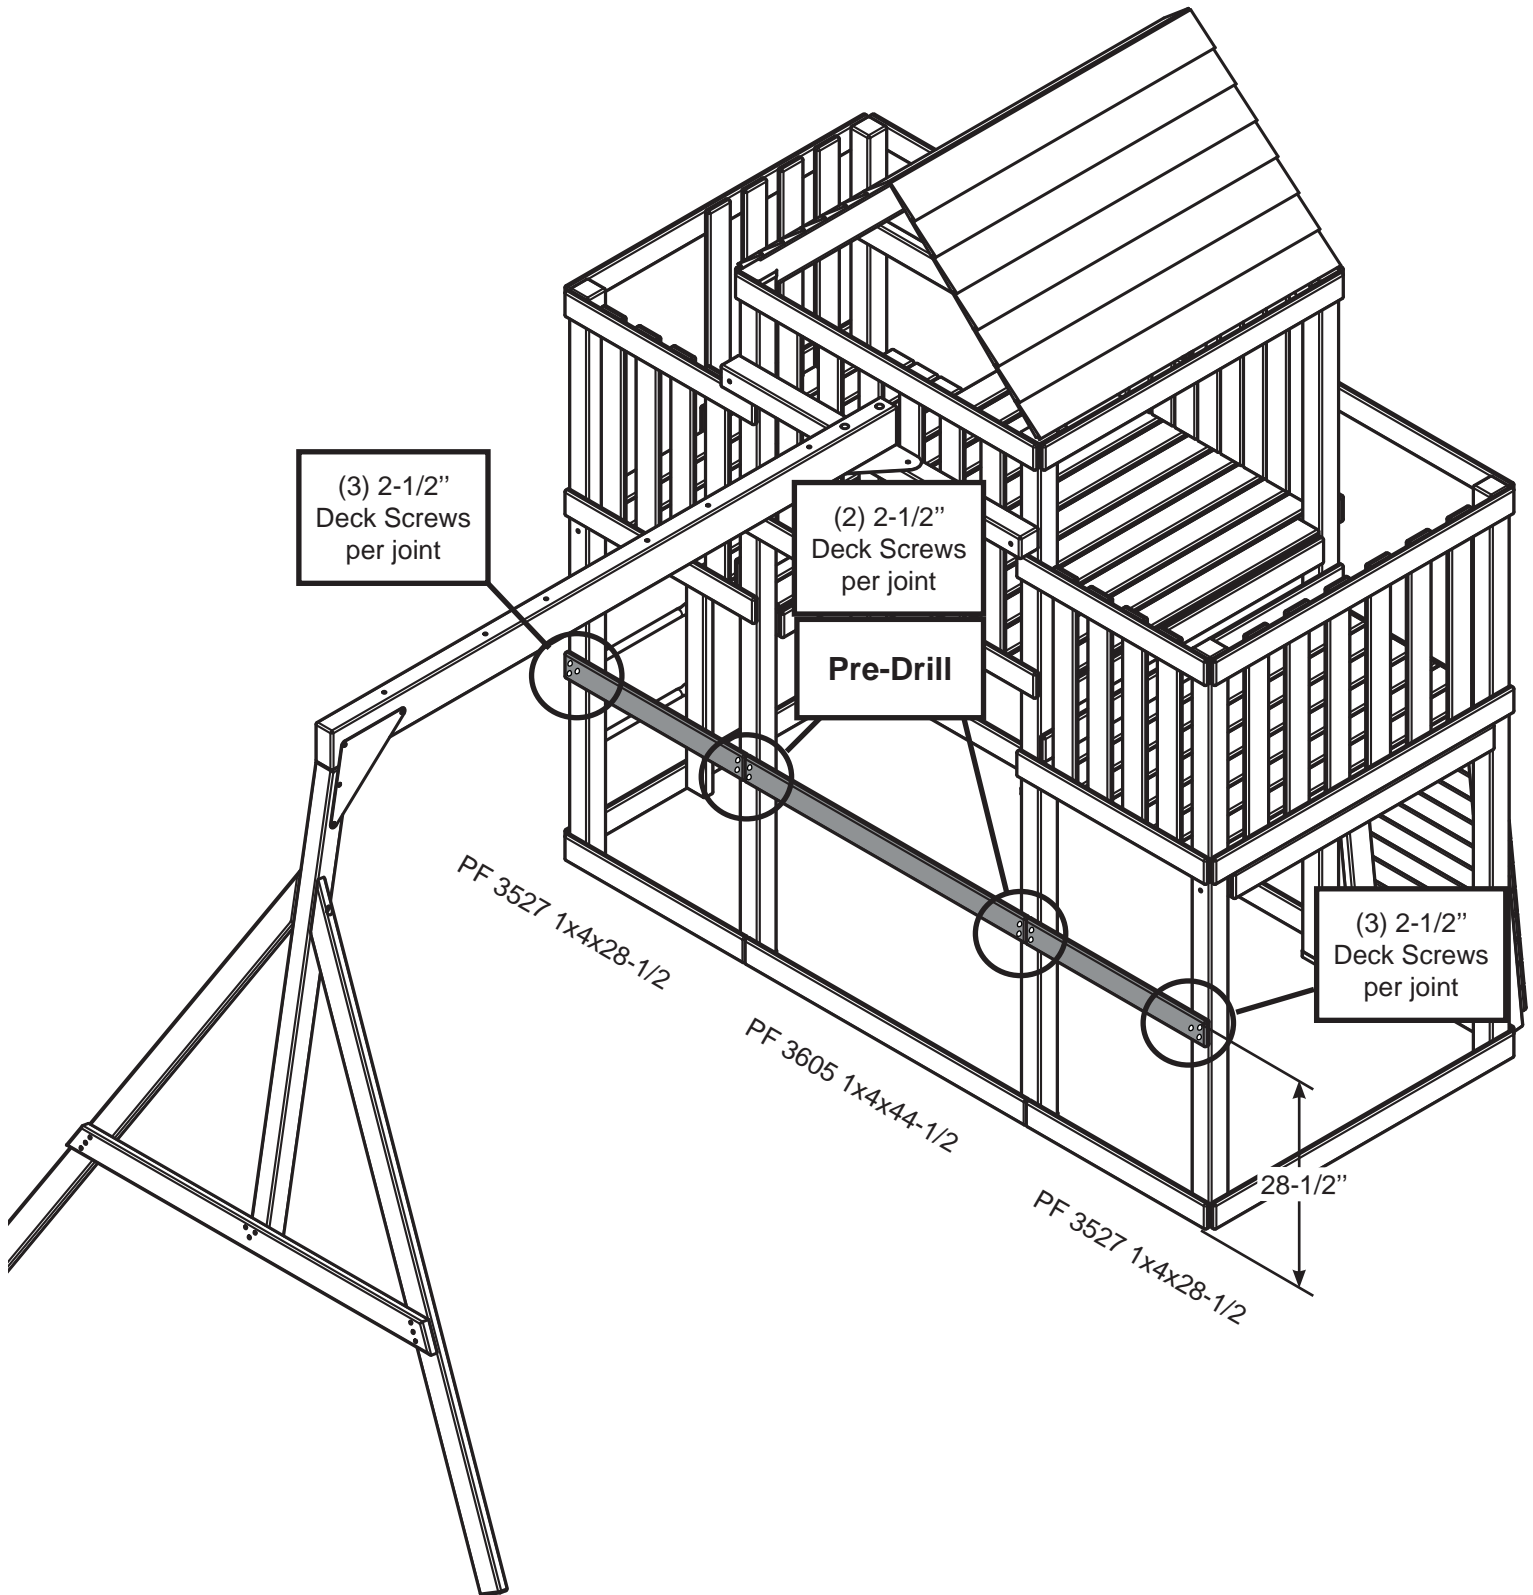


2-1/2" Deck Screw (x14)

1. Install Safety Barrier as shown.

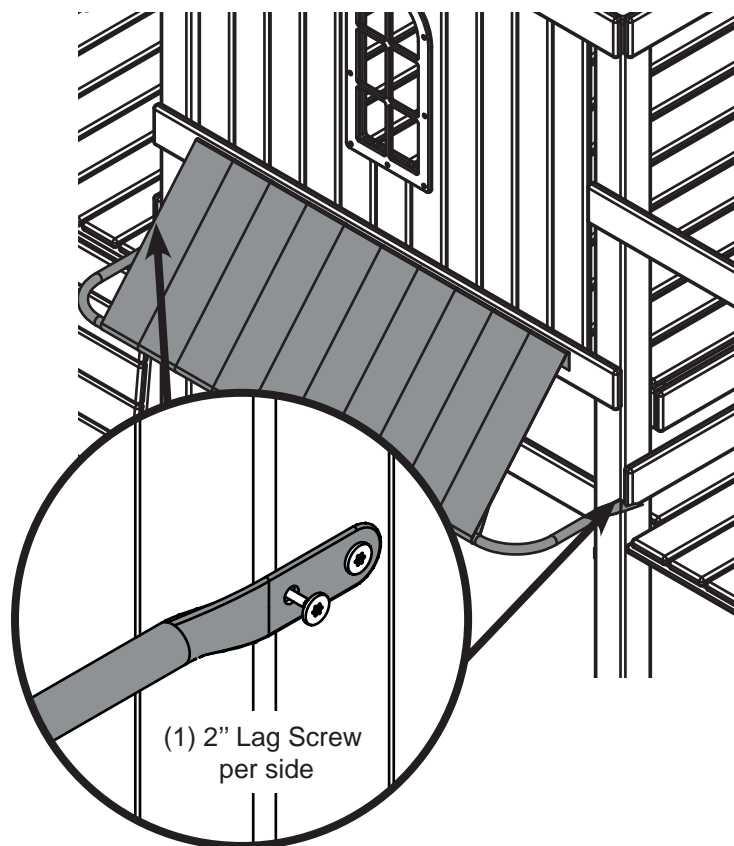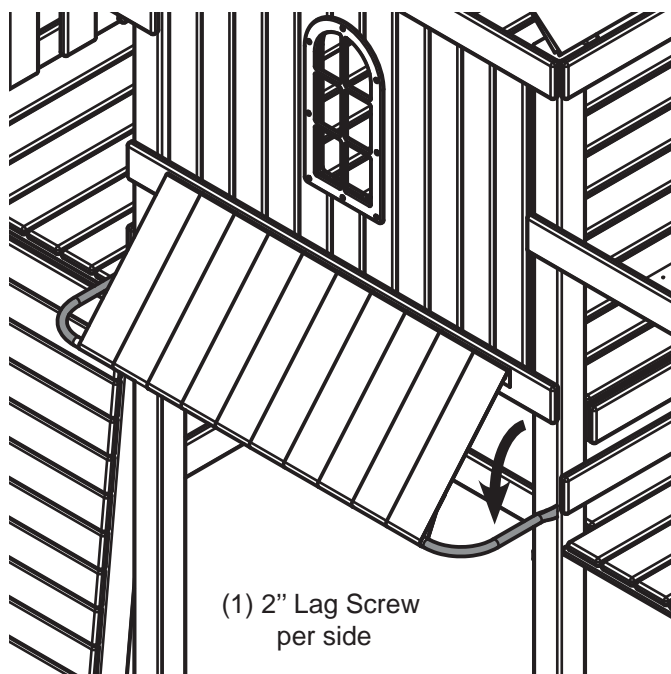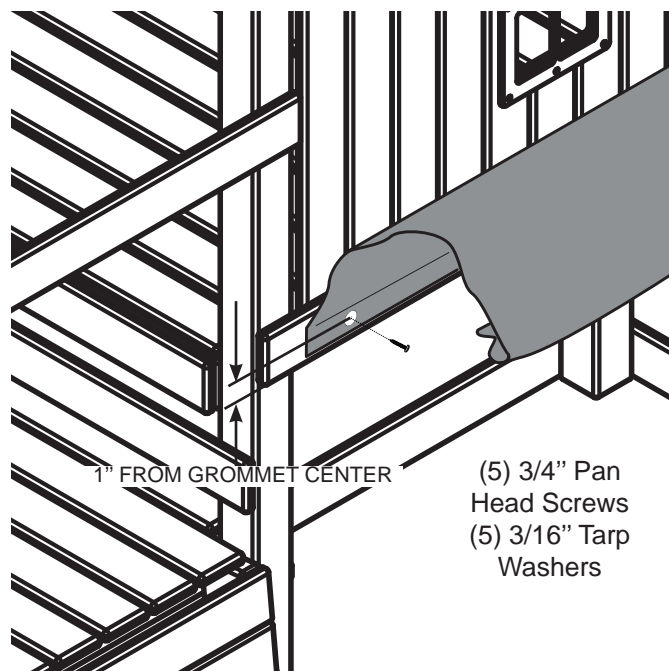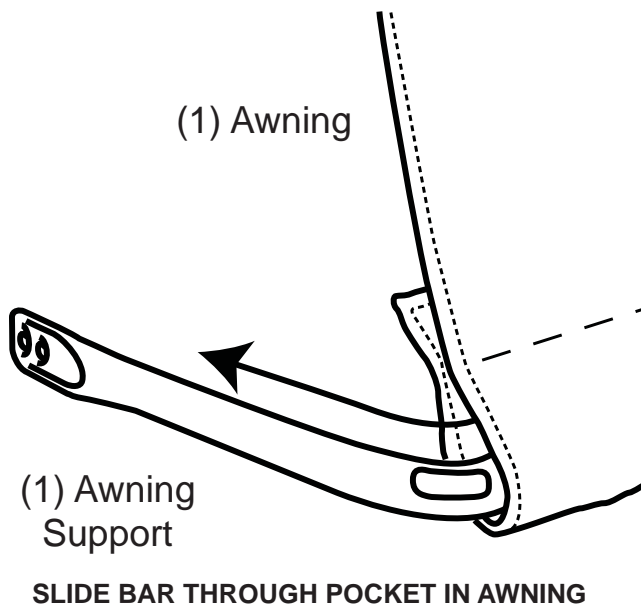


2" Lag Screw (x4)

 


3/4" Pan Screw (x5)

1. Slide Awning Support through pocket on Awning bottom as shown.
2. Attach the top of the Awning to the top board using (5) 3/4" screws and washers as shown.
3. Attach Awning Support to 3" x 3" uprights with (1) 2" Lag Screw per side.
4. Push lightly down on the Awning Support to make the Awning taut, as shown. While one person maintains the pressure on the Awning, have a helper secure the Awning Support in place with (1) additional 2" Lag screw on each side of the Awning Bar, as shown.

STEP 29

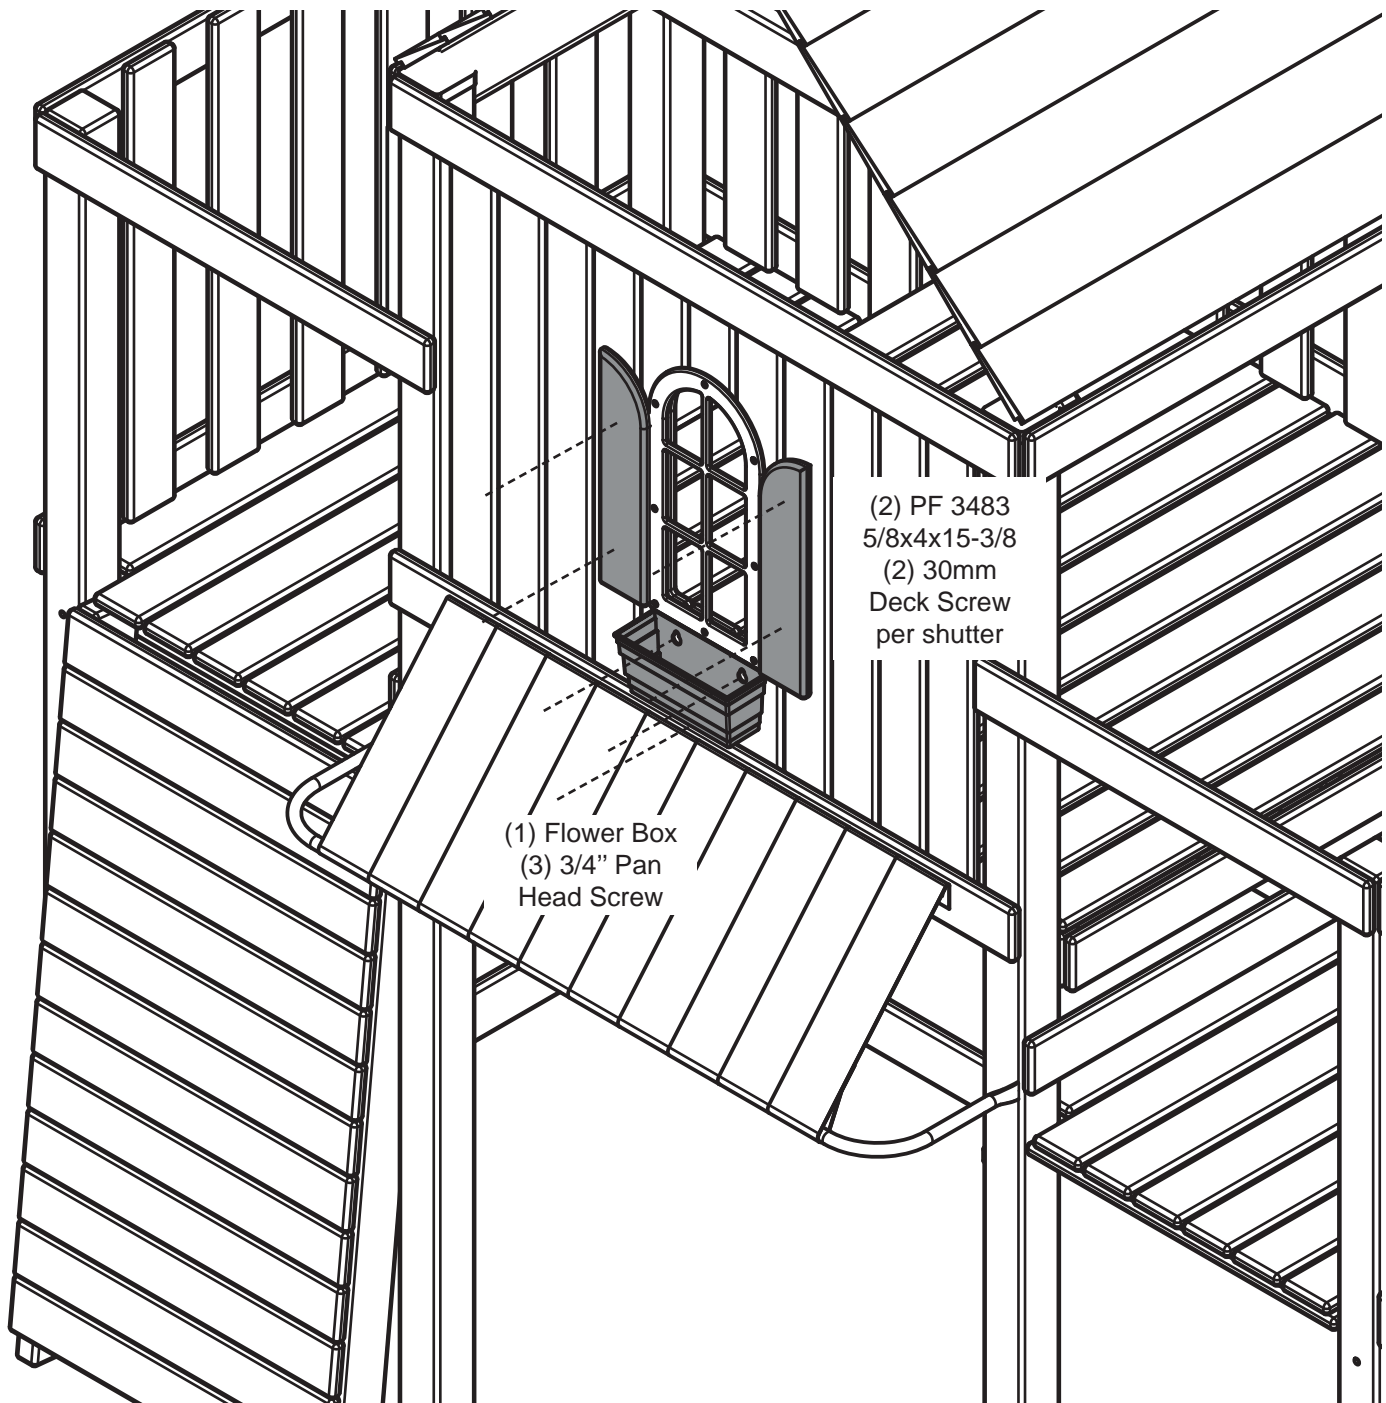


30mm Deck Screw (x4)

 

#12 x 3/4" Pan Screw (x3)

1. Install Shutters and Flower Box as shown.


STEP 30

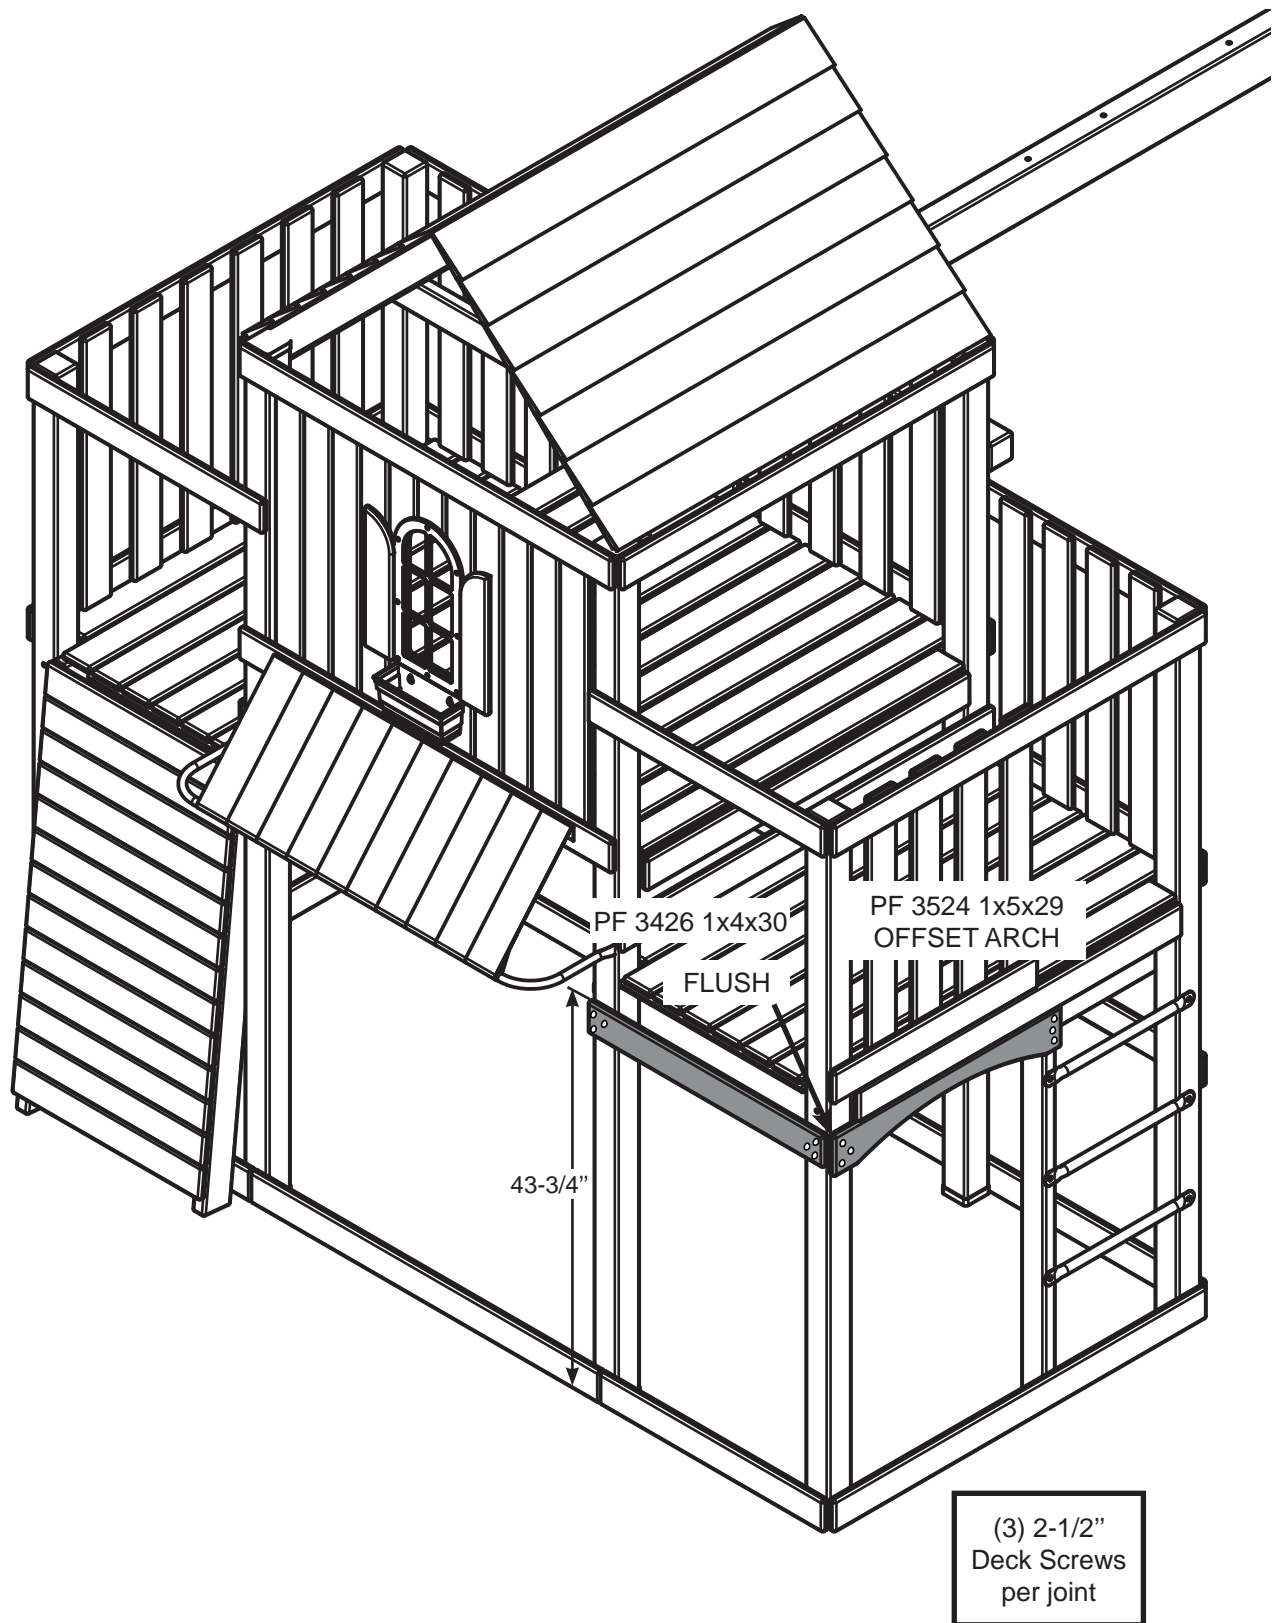

2-1/2" Deck Screw (x12)

1. Install Boards as shown.


STEP 31

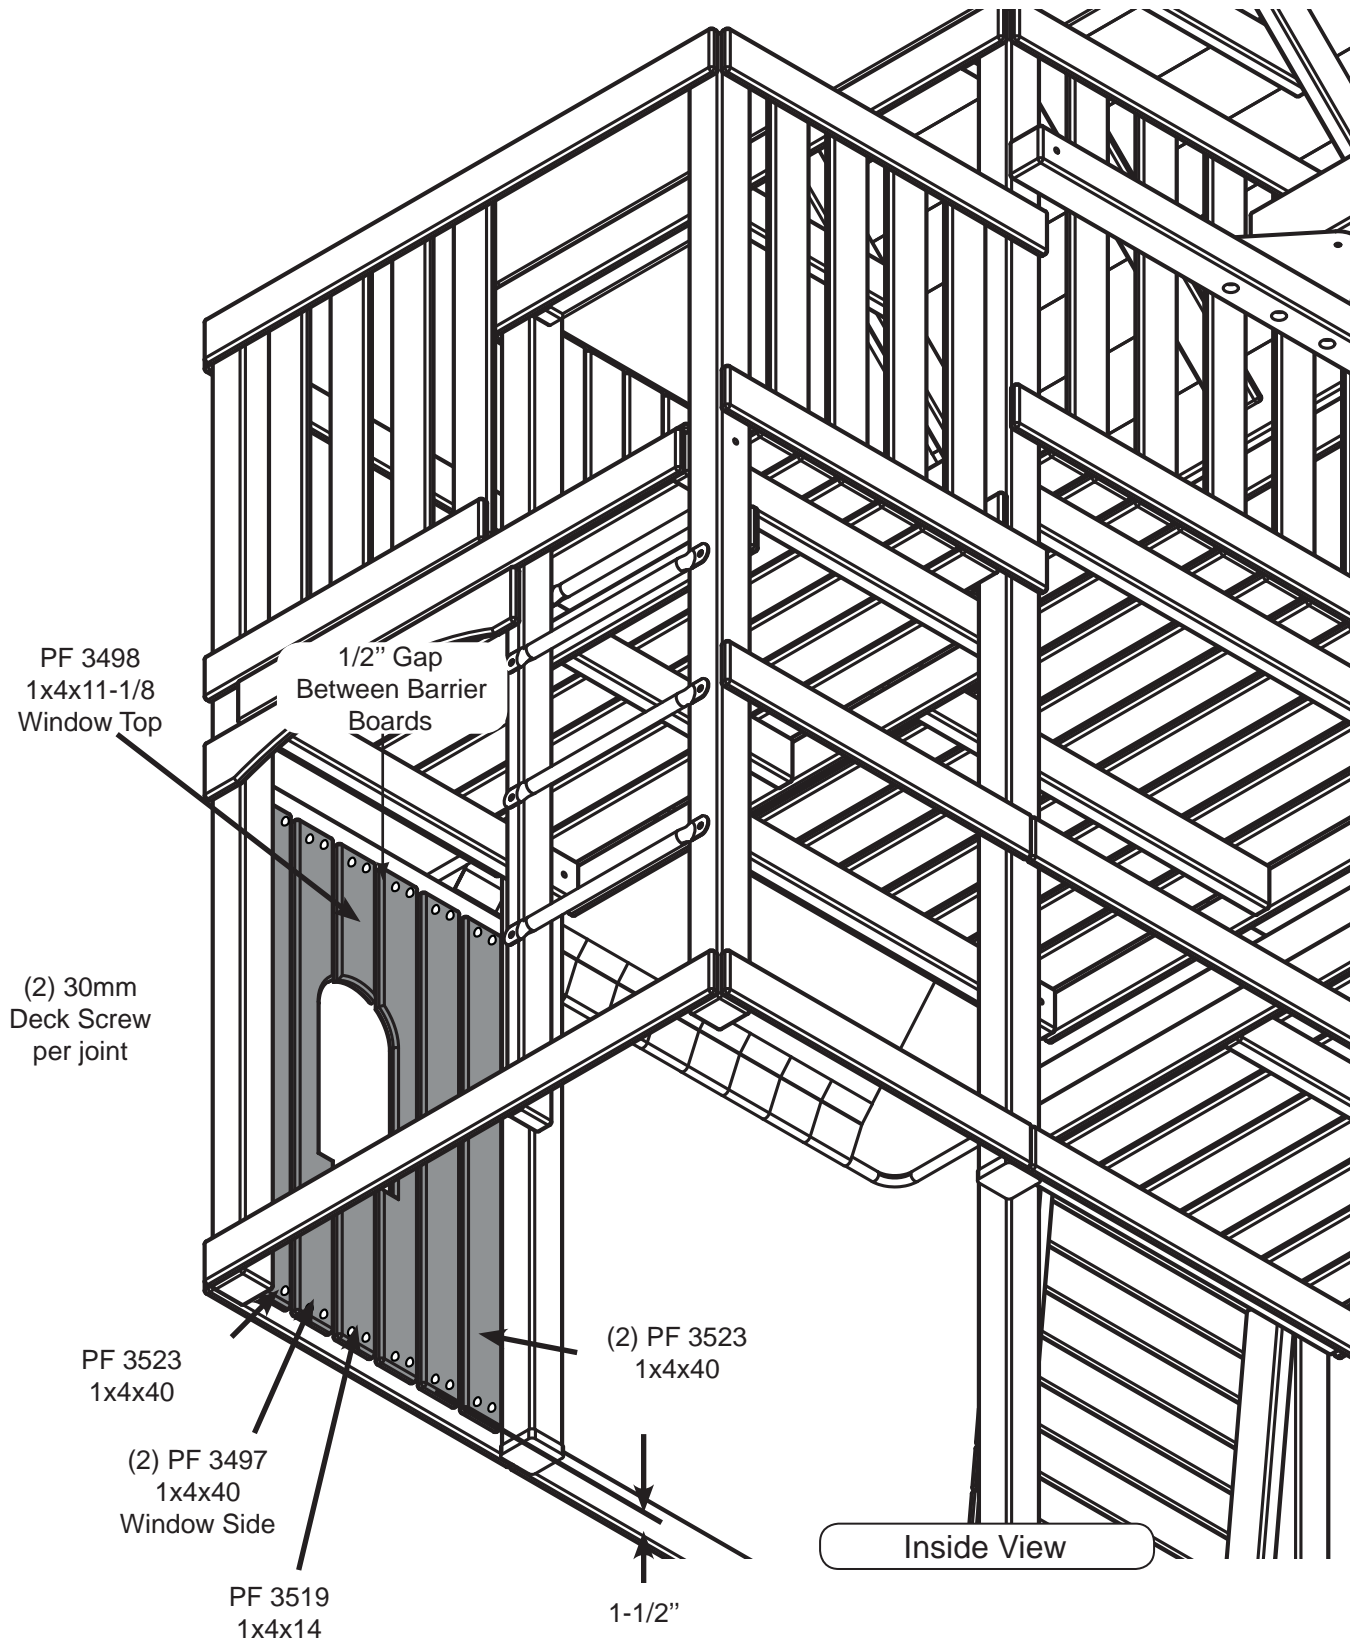

30mm Deck Screw (x24)

1. Install Window Barrier as shown.


STEP 32

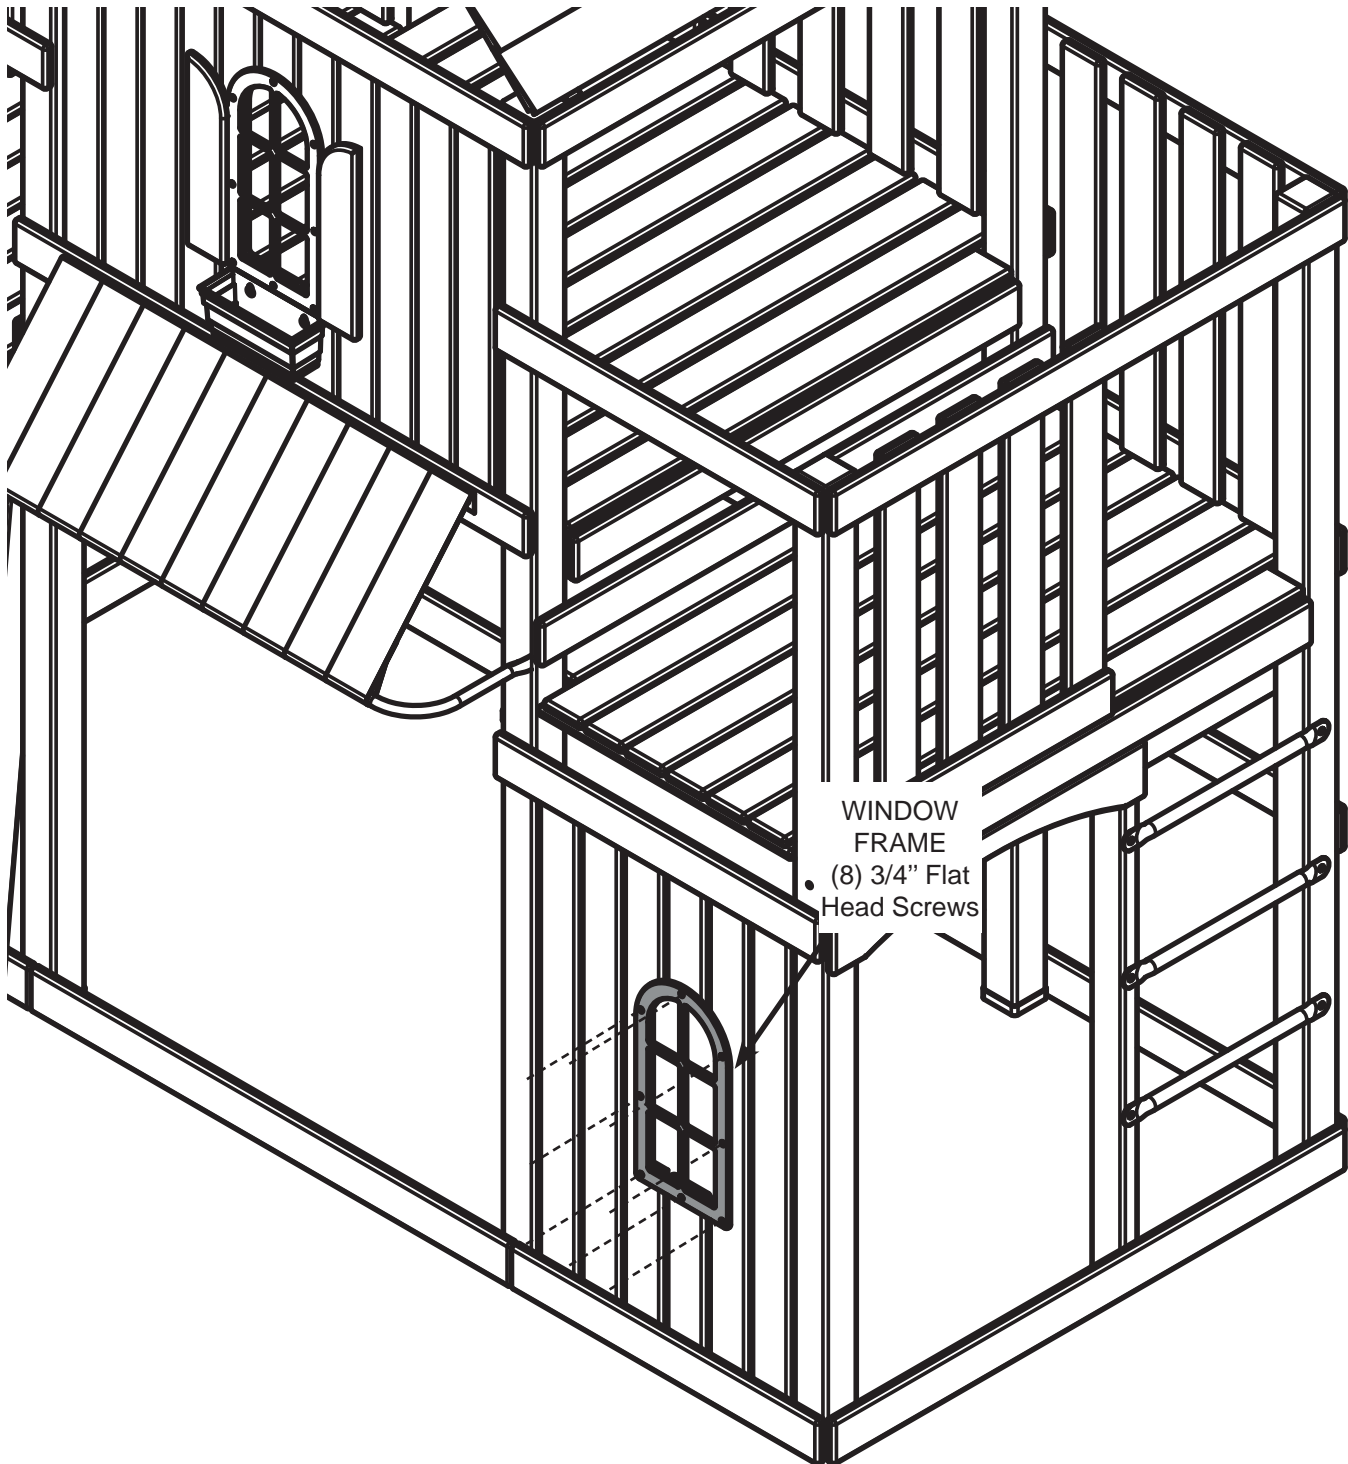

3/4" Flat Head Screw (x8)

1. Attach Window Frame as shown.

STEP 33

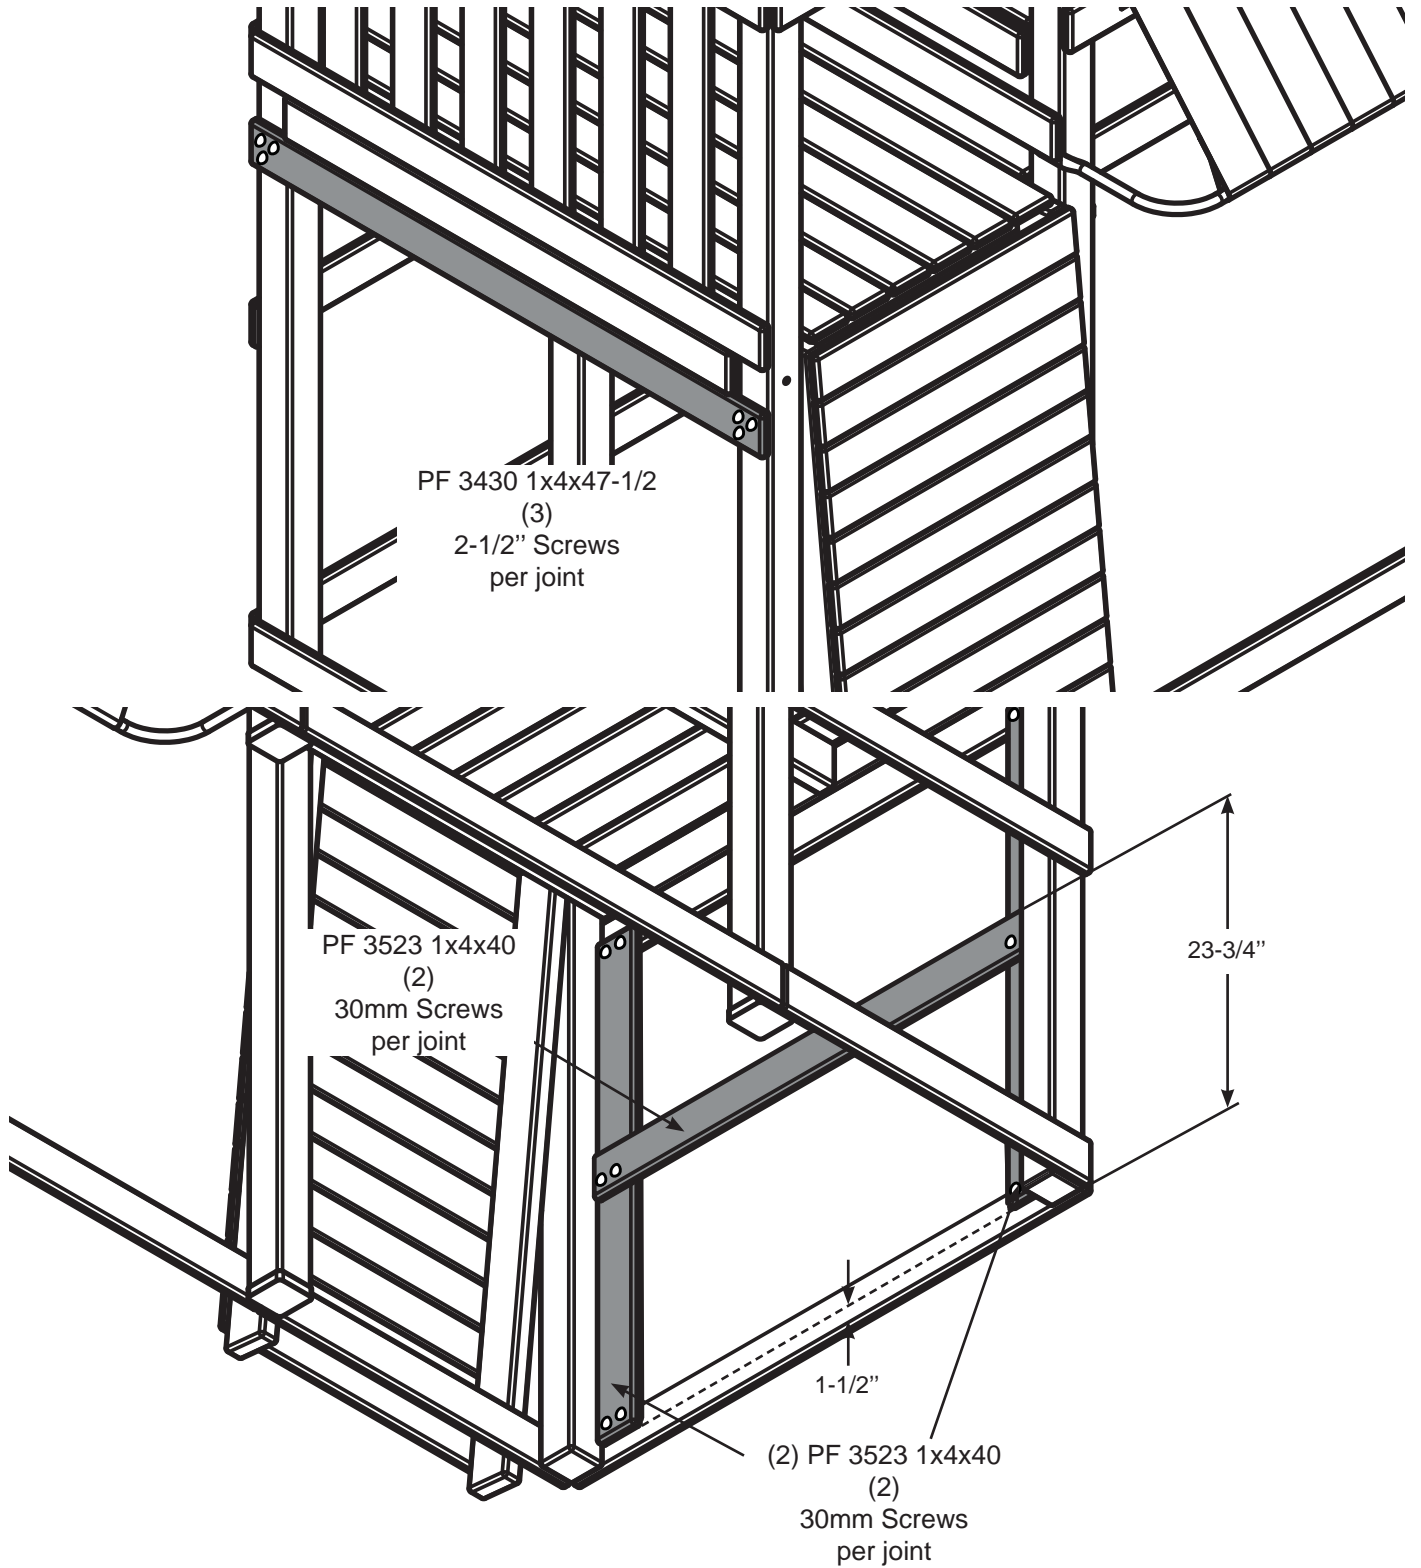




2-1/2" Deck Screw (x6)



30mm Deck Screw (x12)

1. Install Barrier Support Boards as shown.

 STEP 34

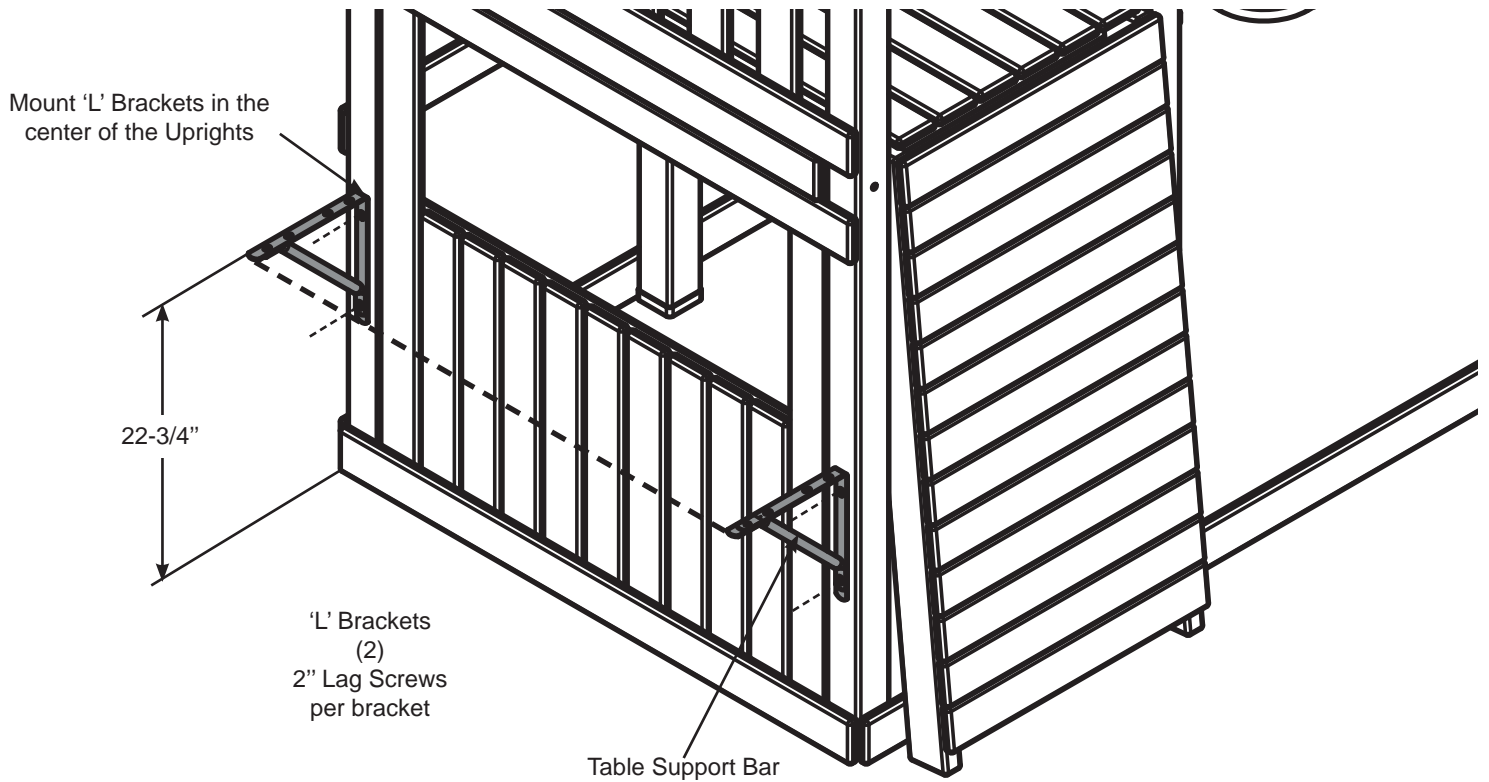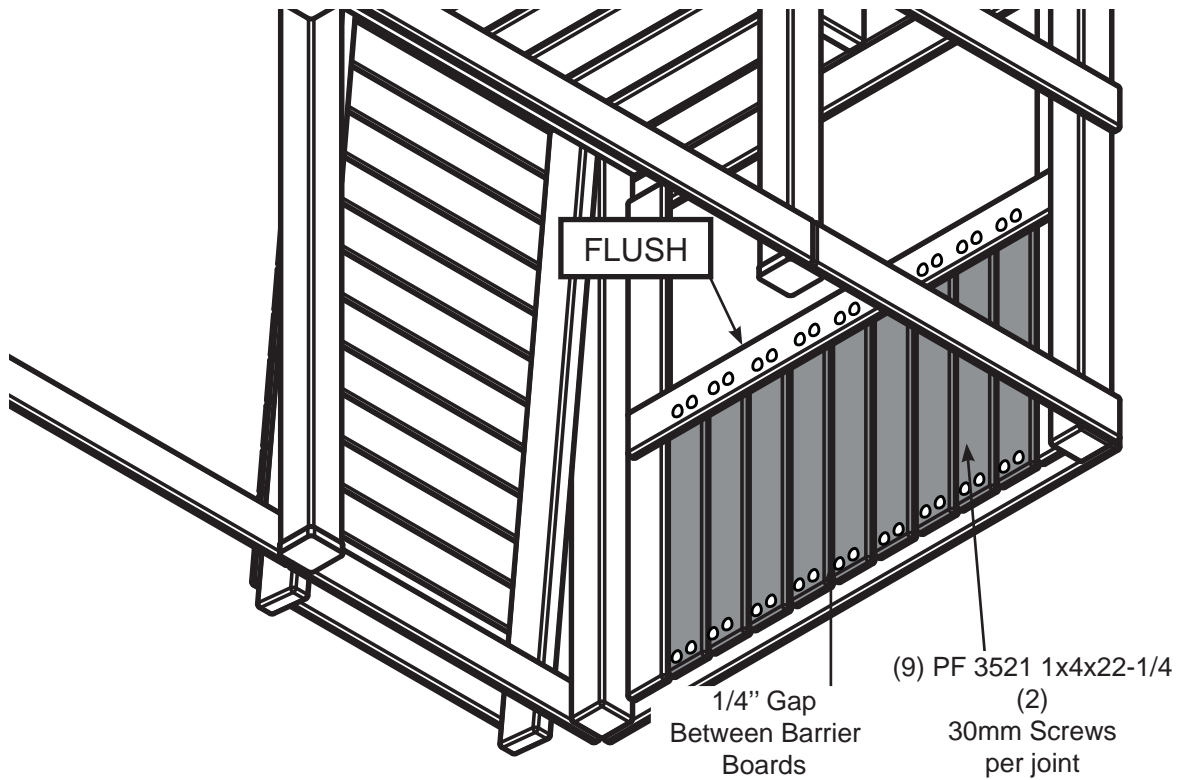


2" Lag Screw (x4)



30mm Deck Screw (x36)

1. Install Barrier Boards and Brackets as shown.
2. Install 'L' Brackets and Table Support Bars as shown.

STEP 35

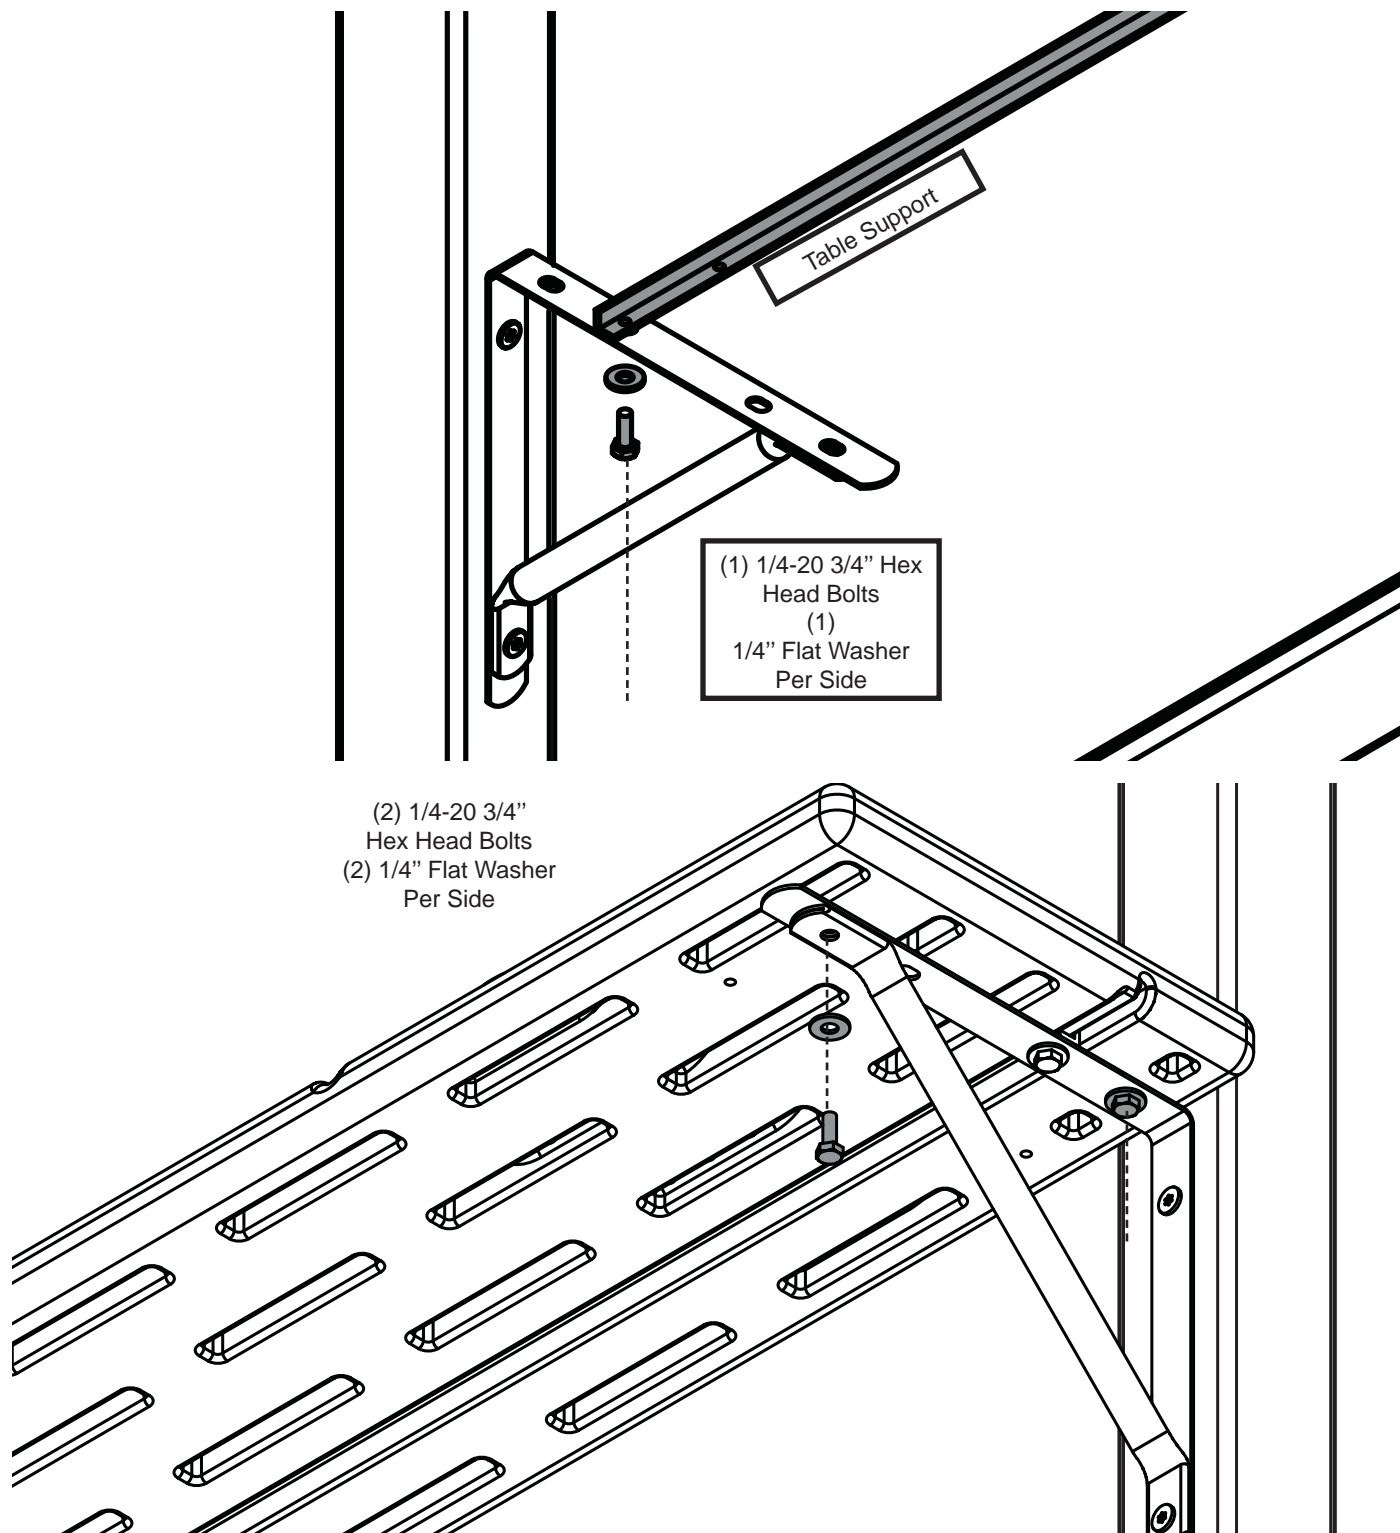

1. Install Table Support and Discovery Table as shown.

STEP 36

(2) Bench Supports

(2)
2" Lag Screws
per bracket

Center of Uprights

PF 3981 5/4x6x47-1/2

5/16-18 2-1/2" Carriage Bolt

(2) 5/16" Washer
(Use washers from SA 3212
Hardware Bag)


5/16" Loc Nut

NOTE: To start Loc Nut, hold
Carriage Bolt with pliers.





2" Lag Screw (x4)

1. Install Picnic Bench as shown.

STEP 37

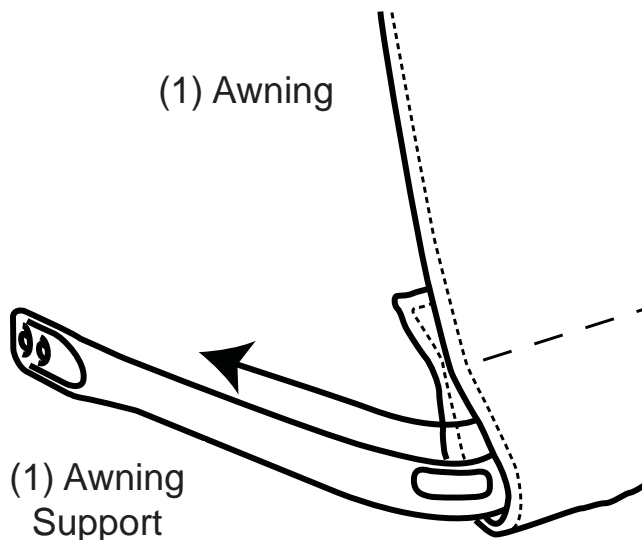

SLIDE BAR THROUGH POCKET IN AWNING

 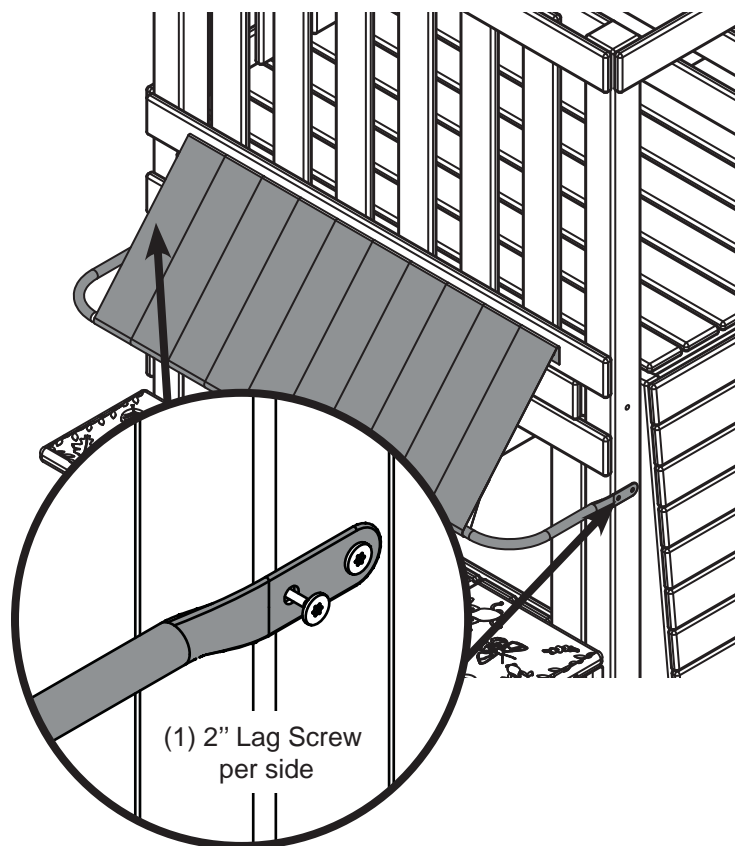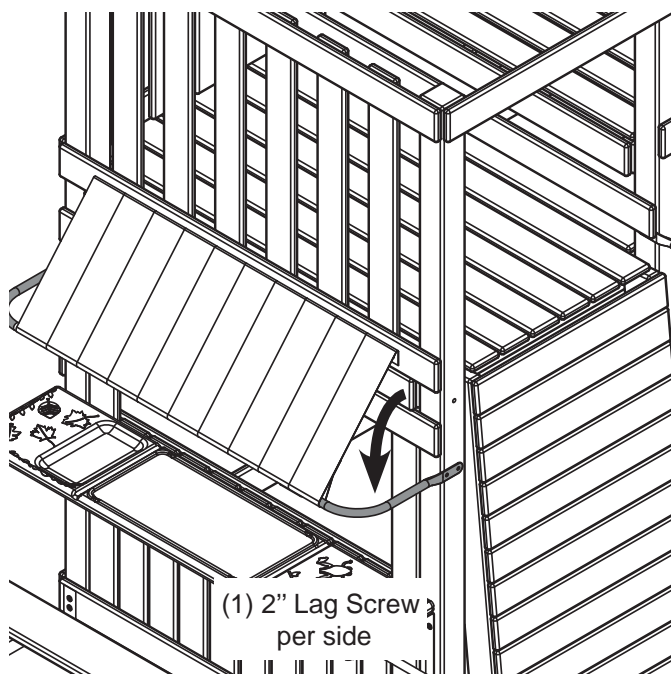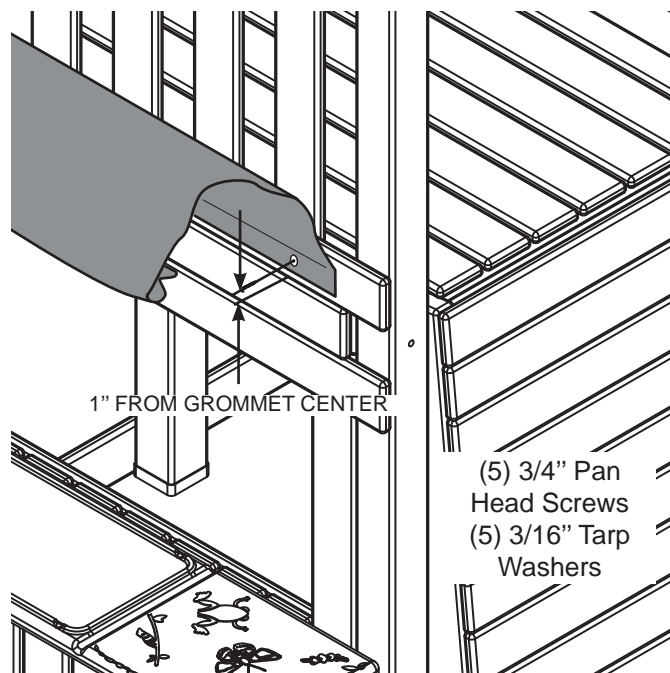


2" Lag Screw (x4)



3/4" Pan Screw (x5)

1. Slide Awning Support through pocket on Awning bottom as shown.
2. Attach the top of the Awning to the top board using (5) 3/4" screws and washers as shown.
3. Attach Awning Support to 3" x 3" uprights with (1) 2" Lag Screw per side.
4. Push lightly down on the Awning Support to make the Awning taut, as shown. While one person maintains the pressure on the Awning, have a helper secure the Awning Support in place with (1) additional 2" Lag screw on each side of the Awning Bar, as shown.

STEP 38

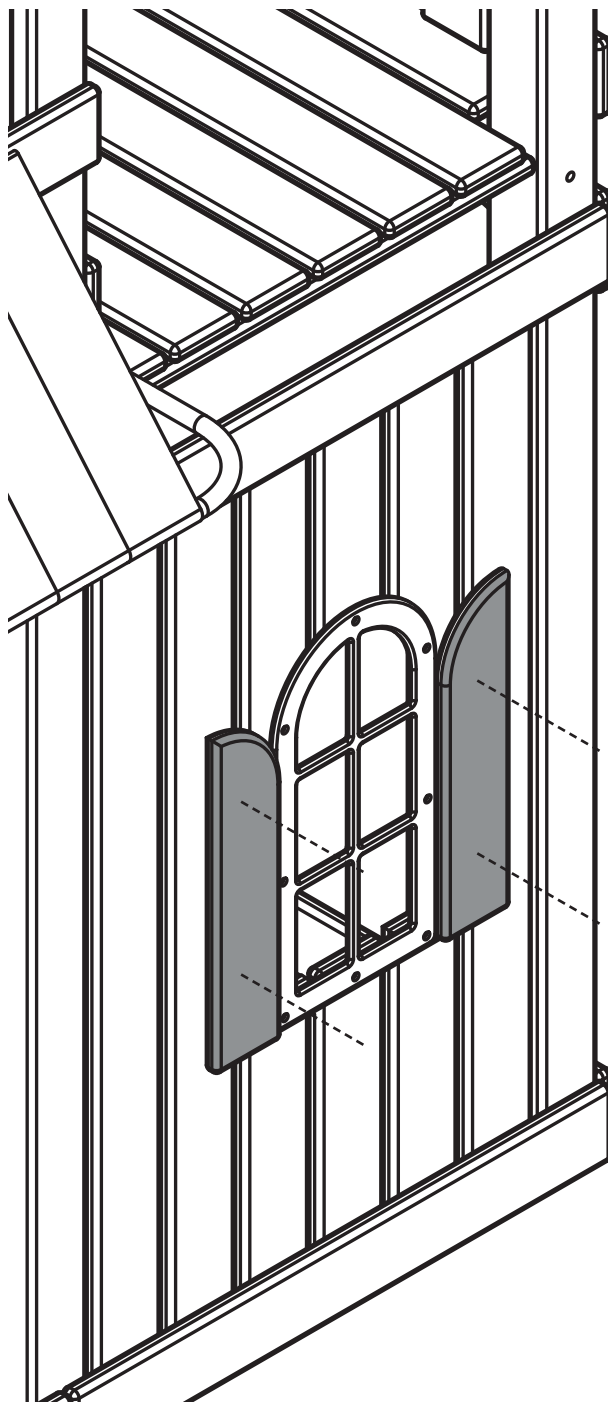


PF 3483 5/8x4x15-3/8
(2)
30mm Screws
per shutter



30mm Deck Screw (x4)


1. Install Shutters as shown.

STEP 39

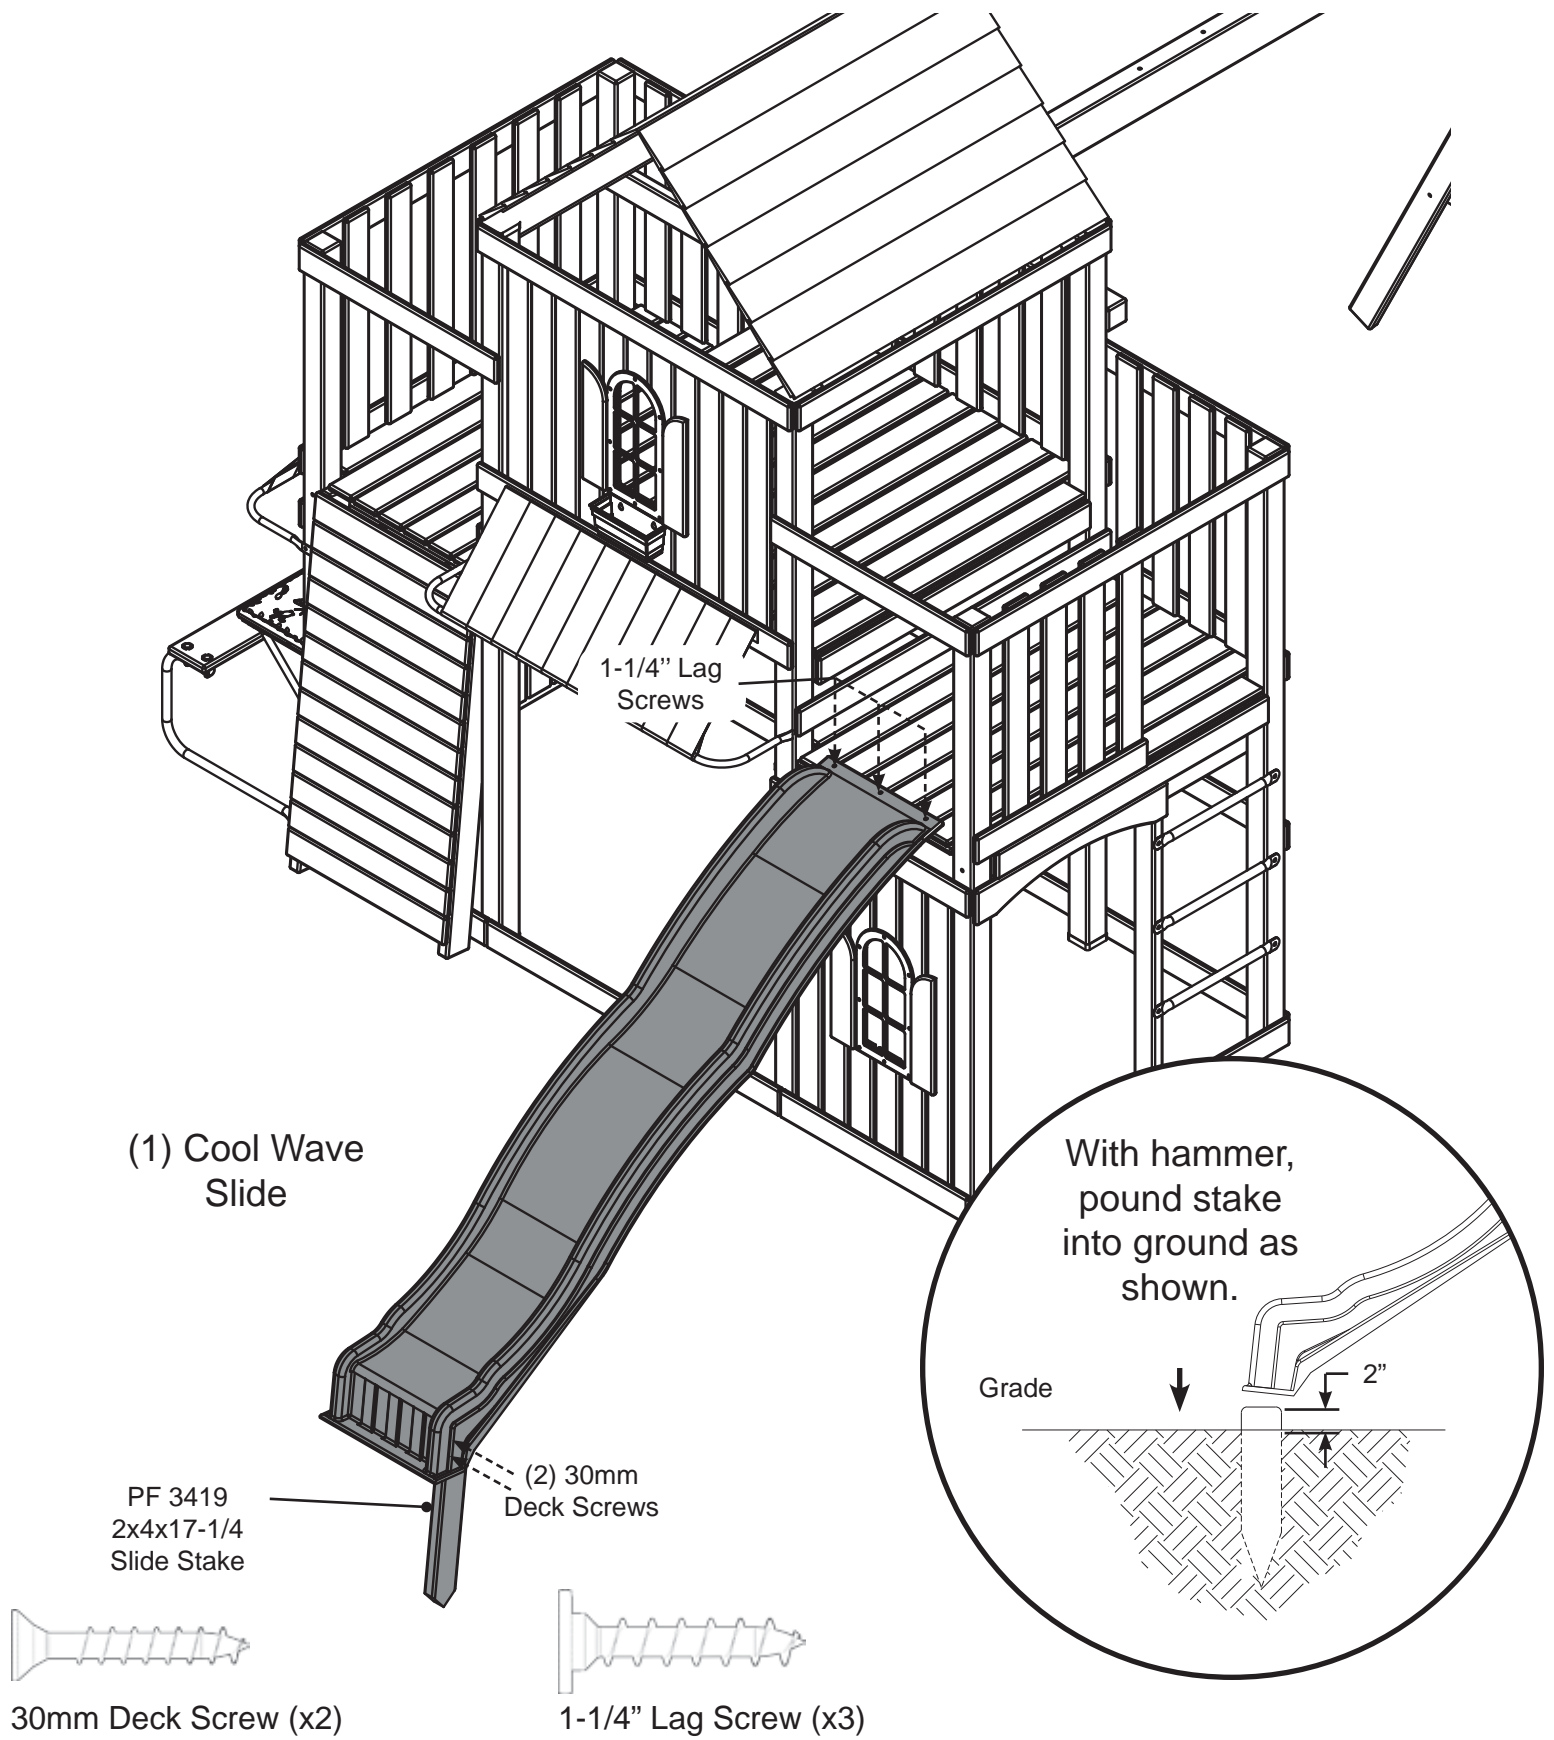


1. Attach slide as shown.

STEP 40

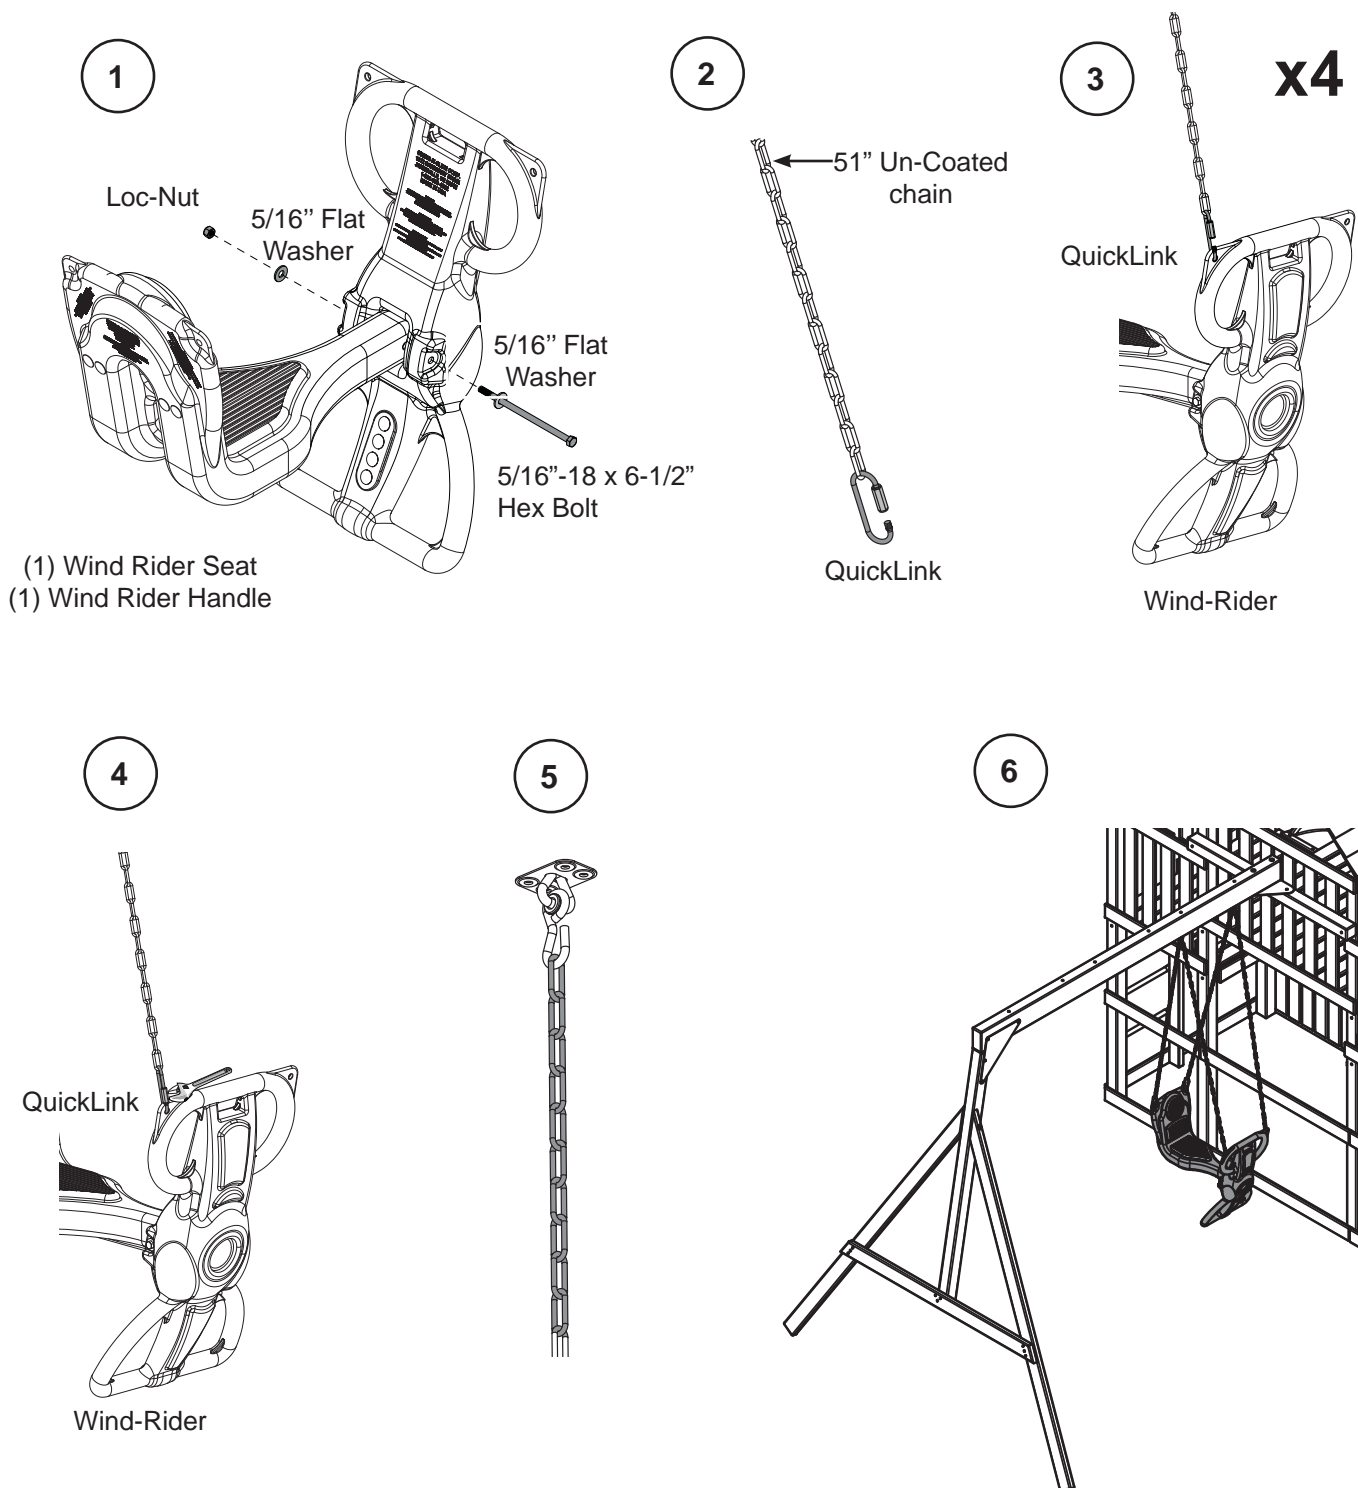


1. Insert Seat into Handle as shown in (Step1). Secure in place with hardware shown.
Note: Make certain no more than two bolt threads protrude from the Loc-Nut once fully tightened.
2. Insert (1) Quick Link into the end of each length of chain, as shown in (Step 2). Make certain the Quick Link is positioned as shown.
3. Using the Quick Link, attach each length of chain to the (4) corners of your swing as shown in (Step 3). Make certain Quick Link is positioned as shown.
4. Close and tighten all four Quick Links with a suitable wrench, as shown in (Step 4).
5. Attach (2) Chains per Swing Hanger, as shown in (Step 5) and (Step 6).


STEP 41

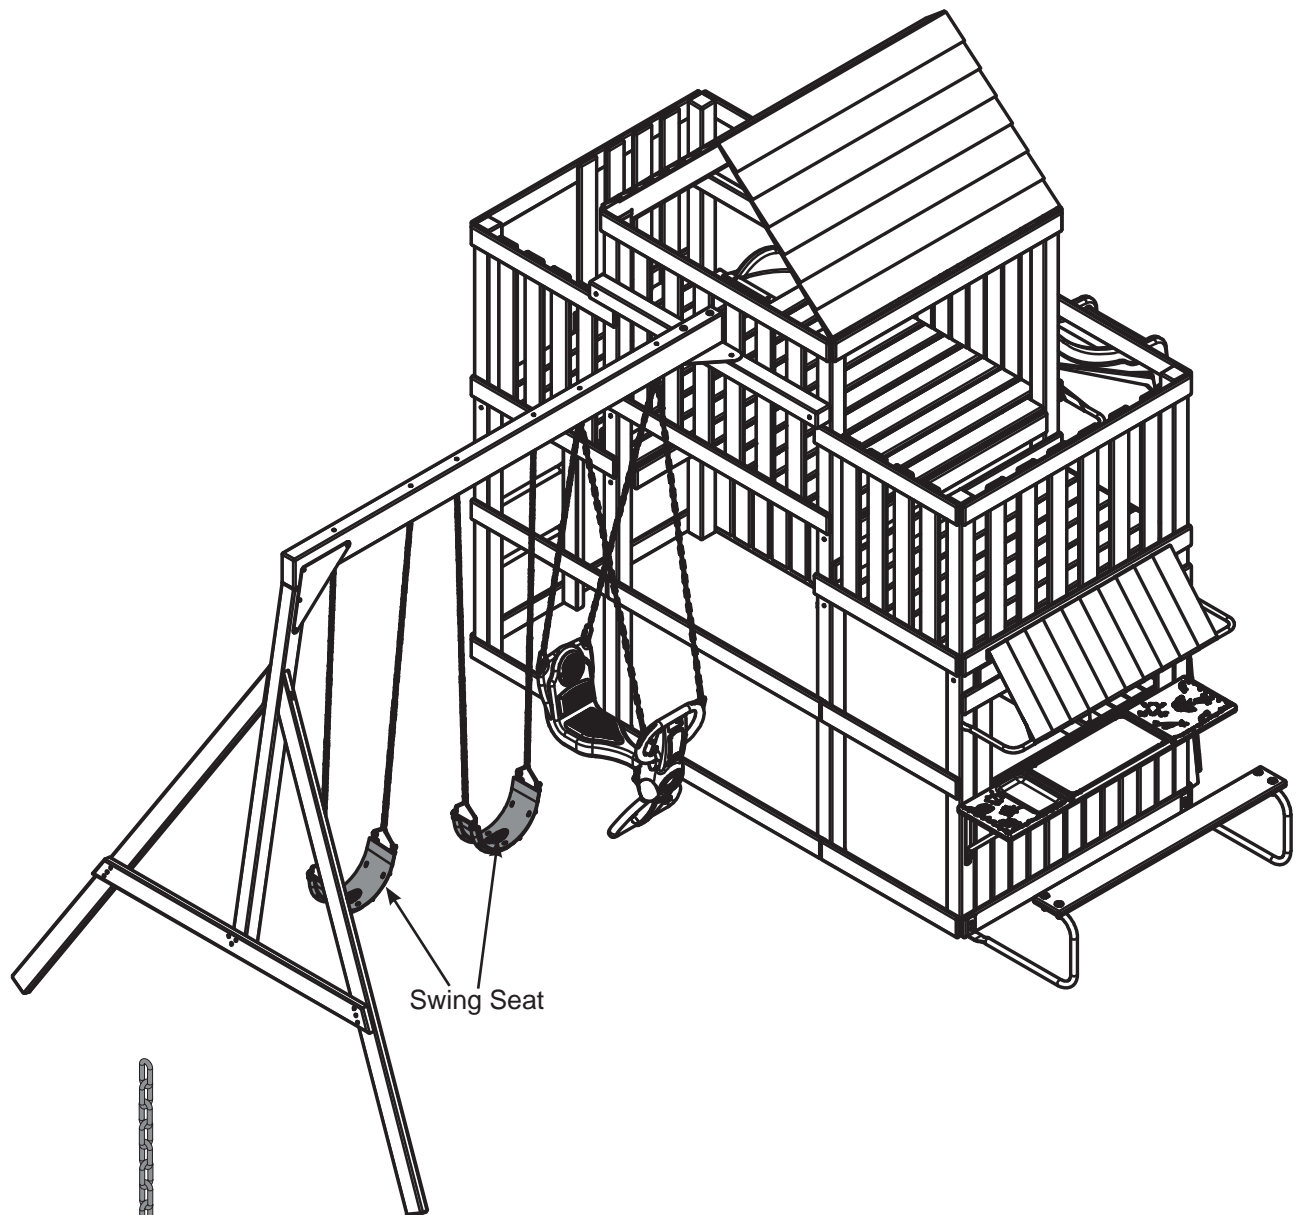


Swing Seat

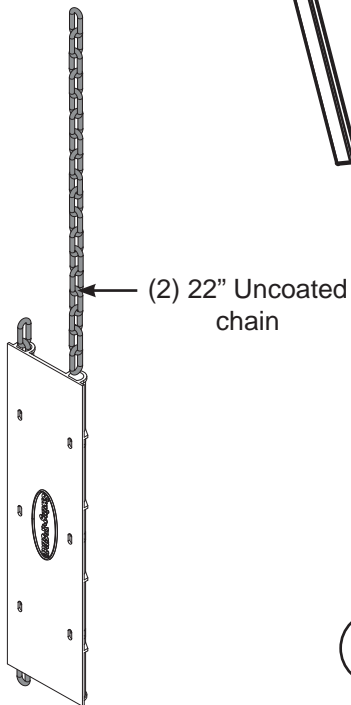

1 x2

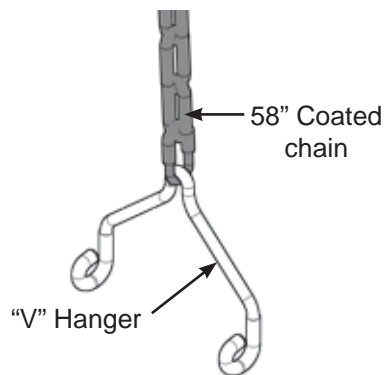


2 x4

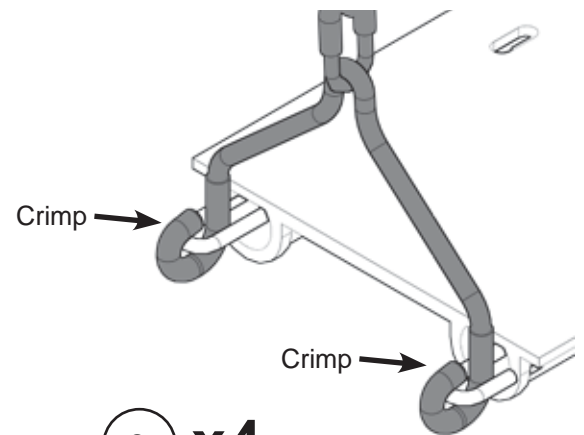

3 x4





1. Assemble Swing Seat(s) and attach to swing hangers as shown.

SWING HANGERS

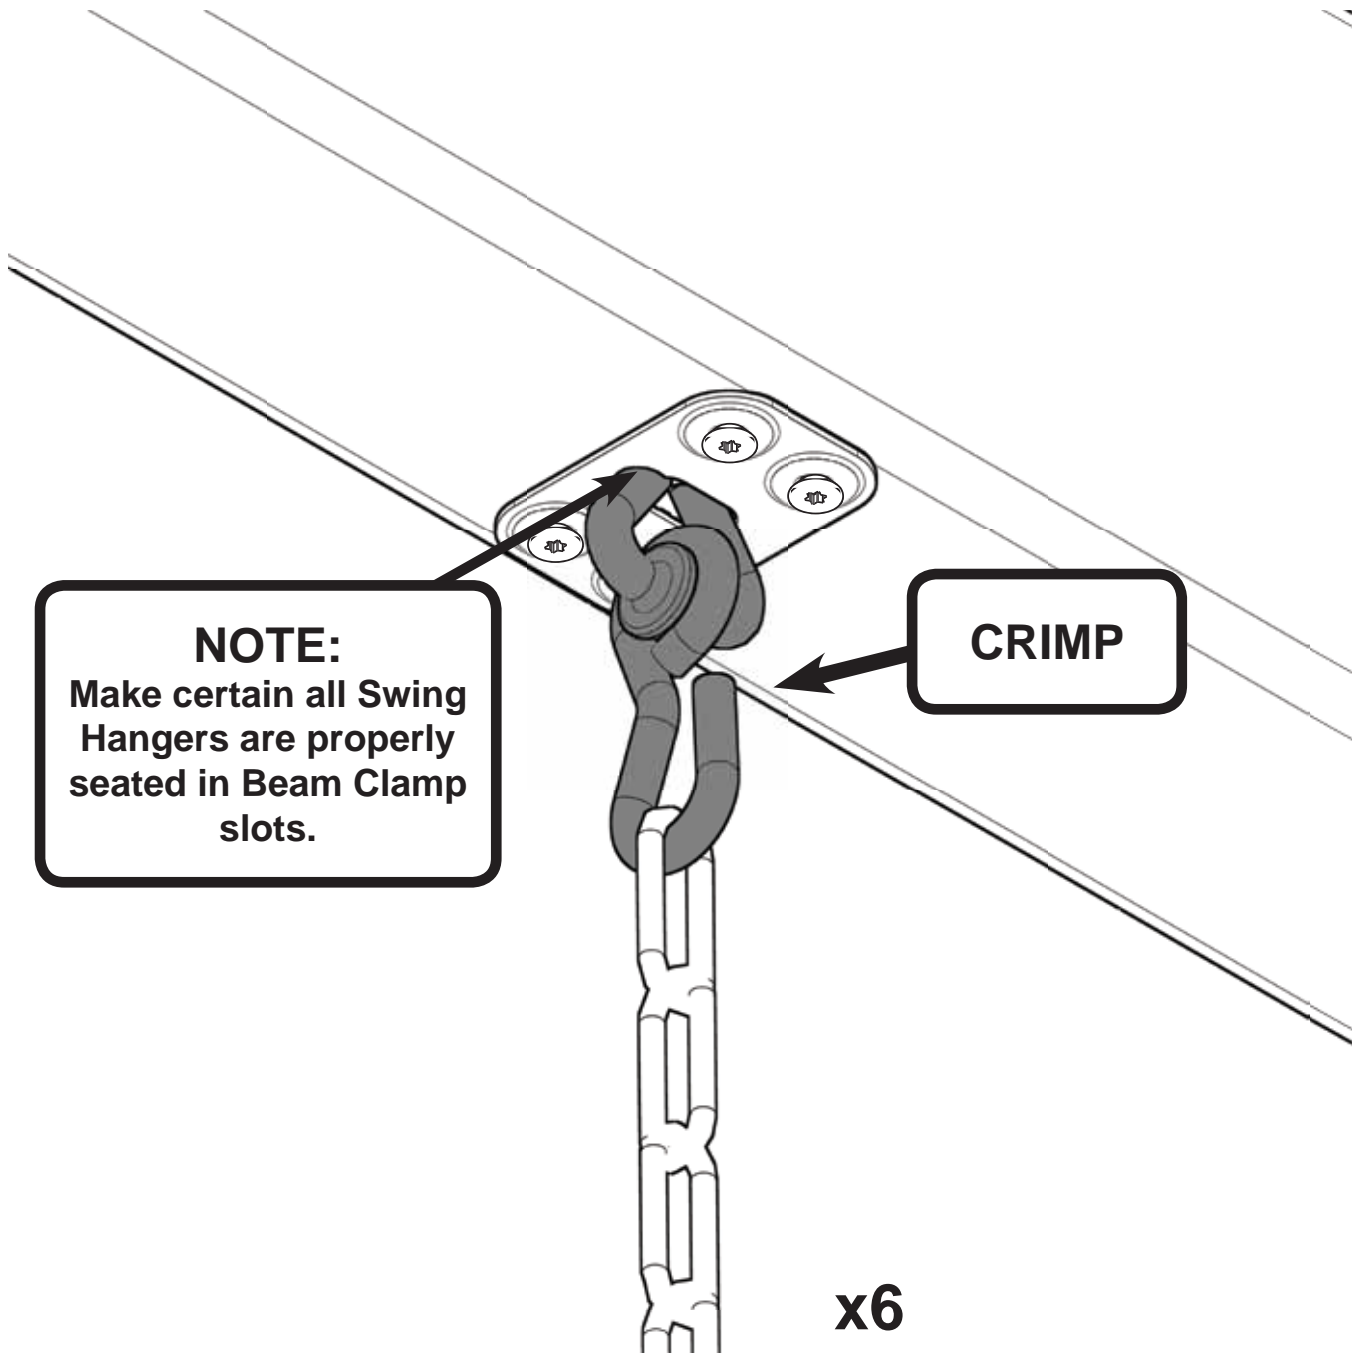

1. Crimp all swing hangers closed after Swing Accessories have been attached.

ANCHOR-ITS

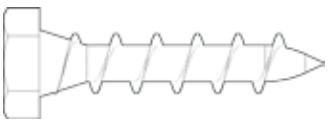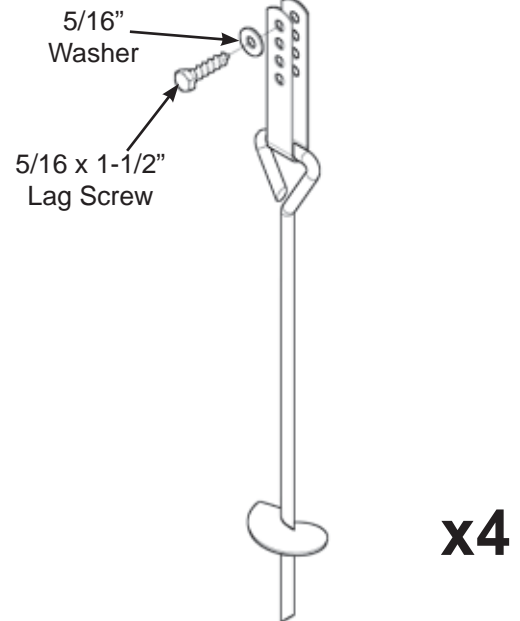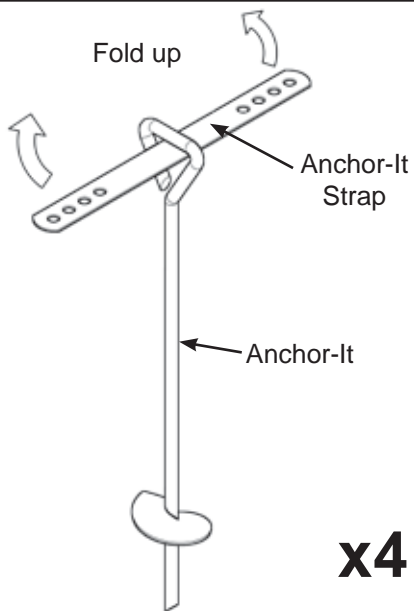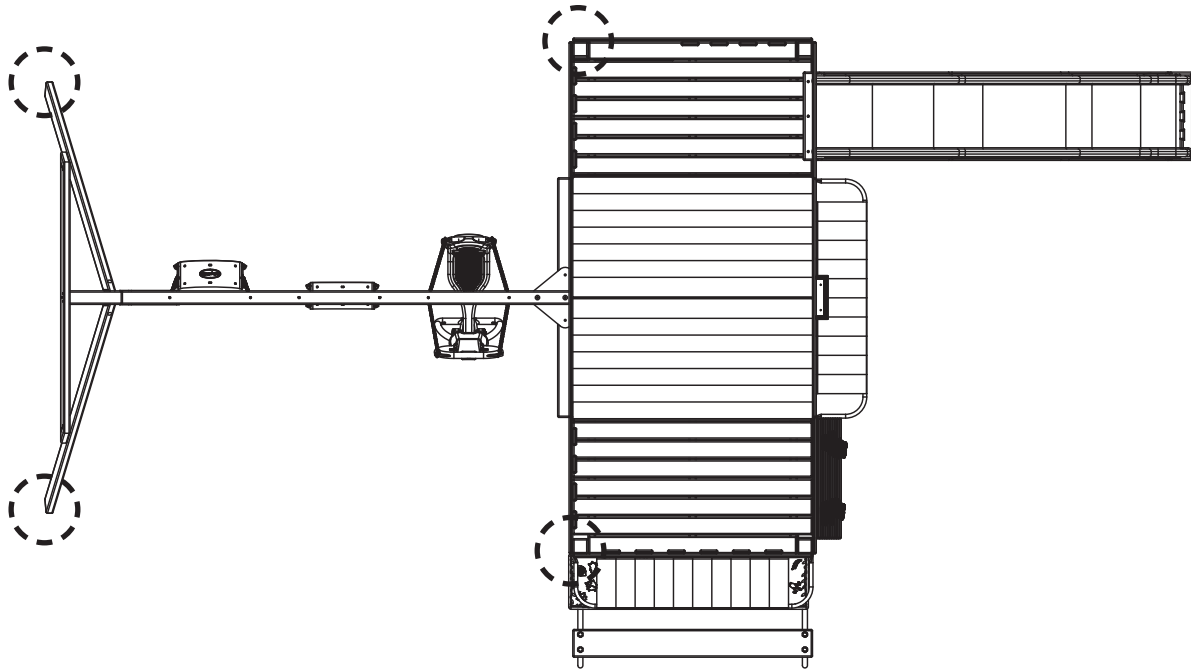




5/16 x 1-1/2" Lag Screw (x4)

1. Place swing set in final location and mount Anchor-It(s) at locations circled above.
2. Twist the Anchor-It into the ground until only the loop is exposed.
3. Place Anchor-It Strap thru loop, fold the ends together and attach to the unit as shown.

Note: Keep as little play as possible using any of the holes in the strap that work best.

TIP: When installing Anchor-Its in rocky or hard soil, create a starter hole at the desired locations using either a 16" Concrete Drill Bit, or a long screw driver then insert and install the Anchor-Its as shown. This will allow you to get traction with the Anchor-It faster and allow the device to seat more securely.

 
SAFETY HANDLES

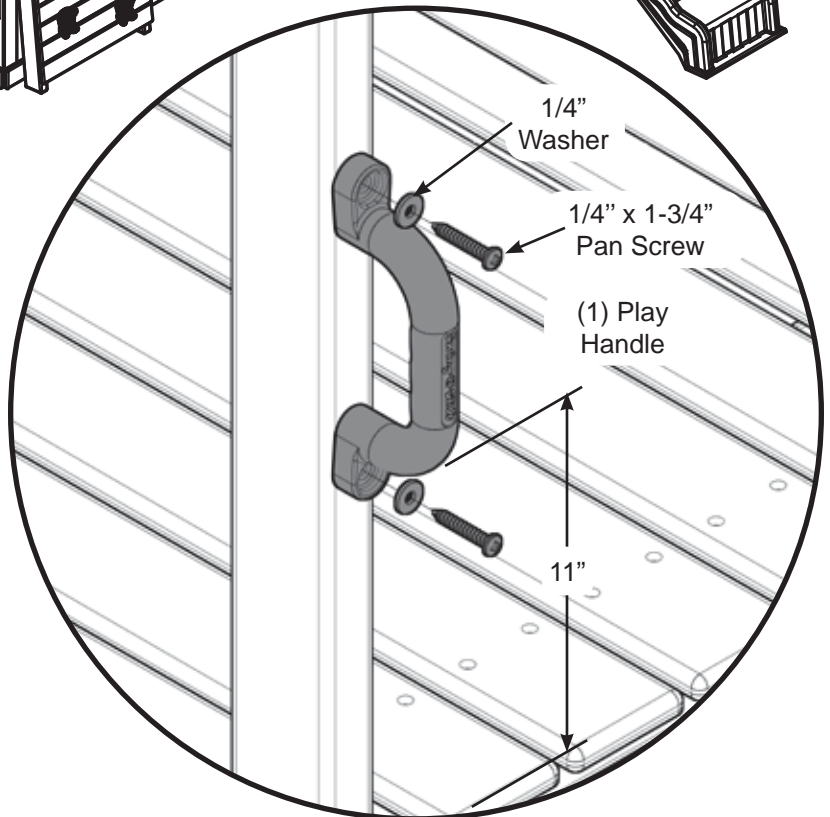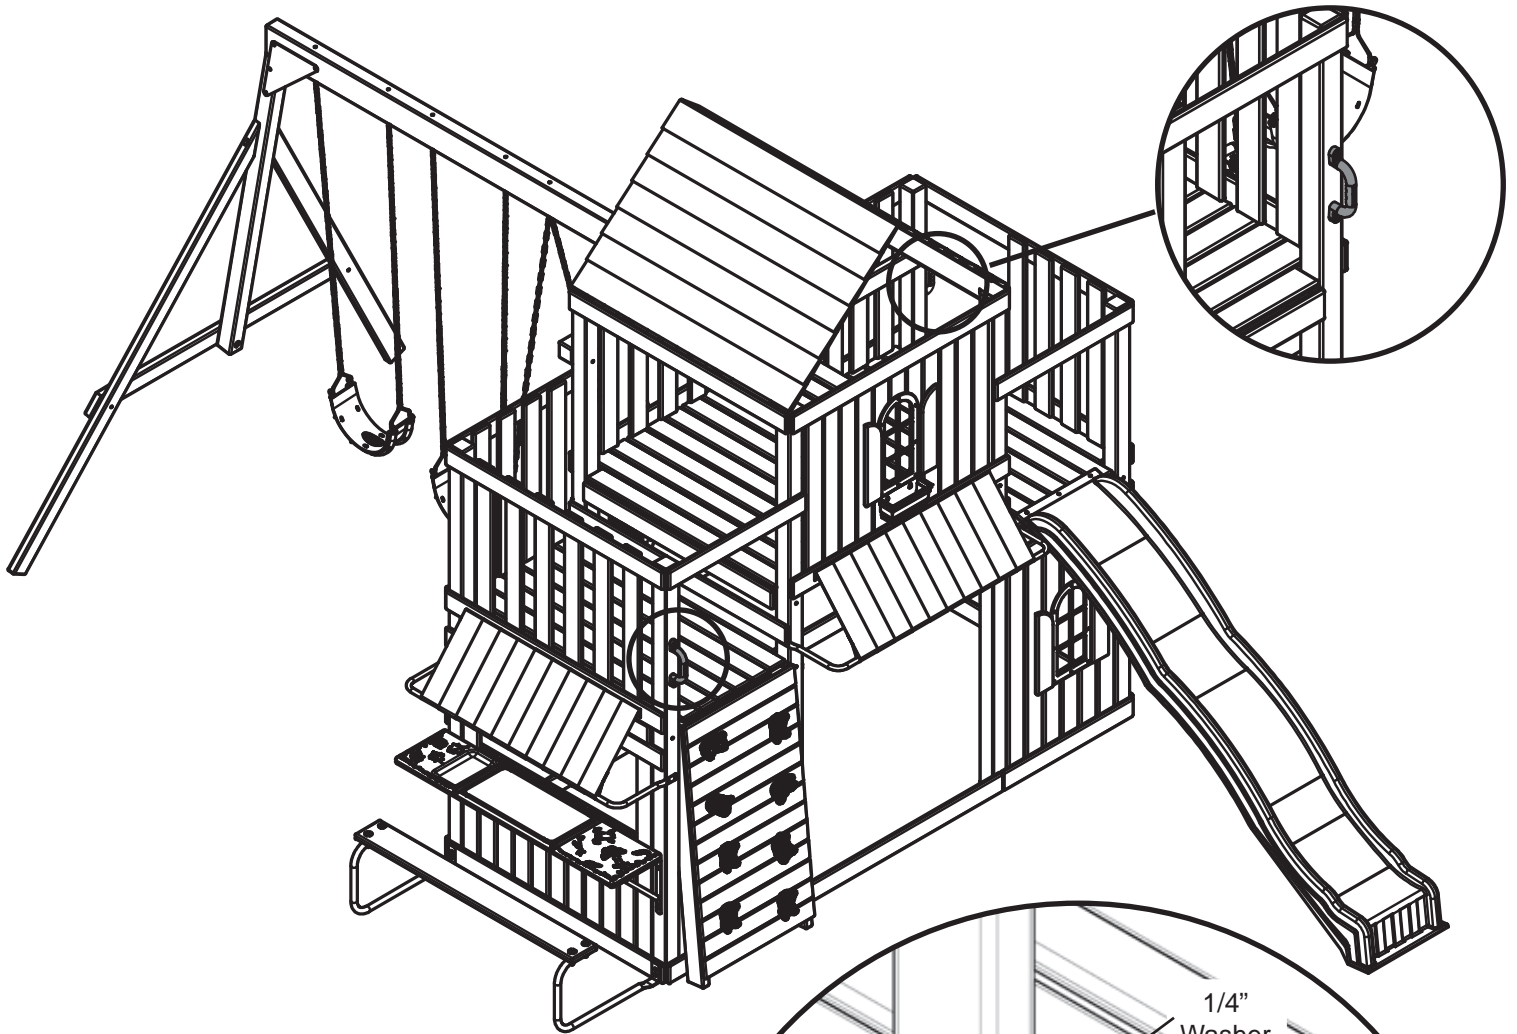


1-3/4\" Pan Screw (x4)

1. Attach Play Handle as shown

ID TAG

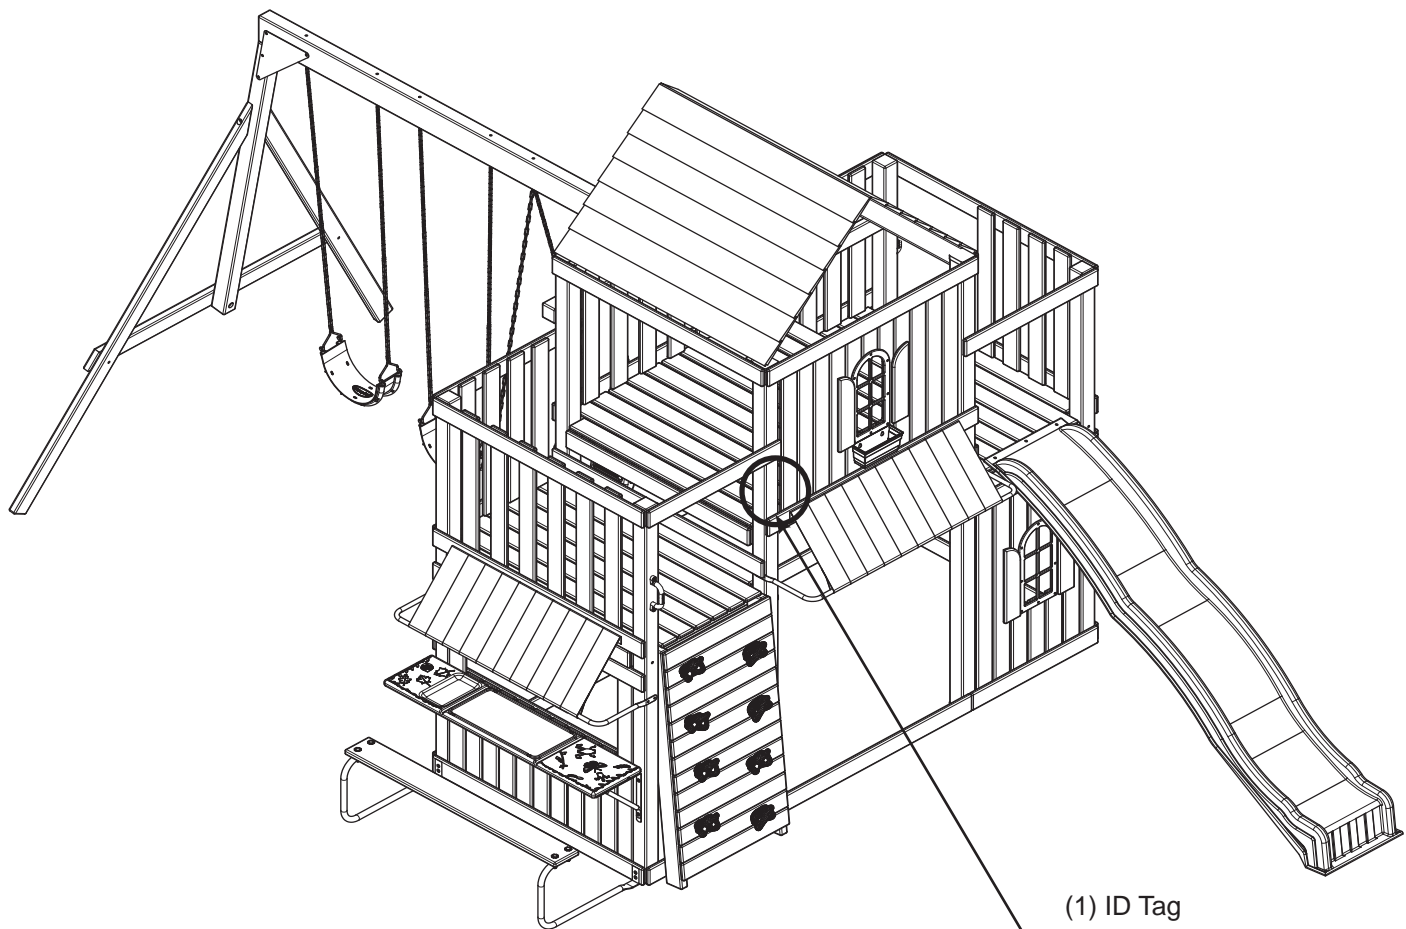

(1) ID Tag

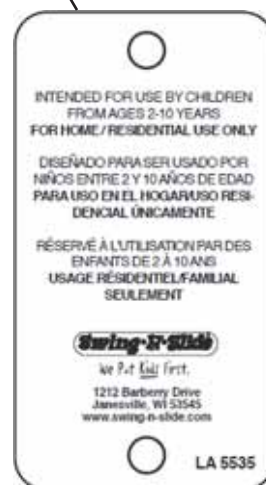

1/2" Pan Screw (x2)

1. Attach ID Tag as shown.



800•888•1232

Got Questions? We've got answers!

Call our Customer Support Representatives

Available Monday - Friday, 7am - 5pm (CST)

Weekend support available April through Labor Day

Also available on Memorial Day, Fourth of July & Labor Day

Technical Support from experienced Swing-N-Slide Customer Service
Representatives who have actually built a swing set themselves.