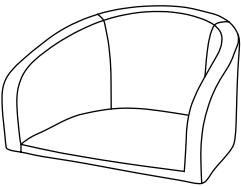 
 
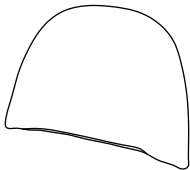 
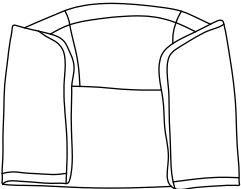 
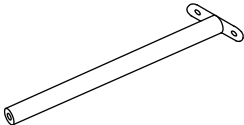 
 
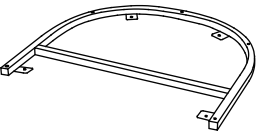 
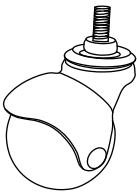 
 
 
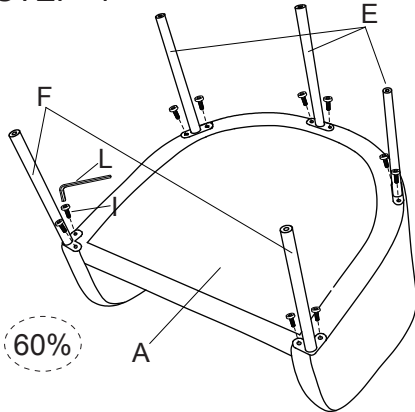 
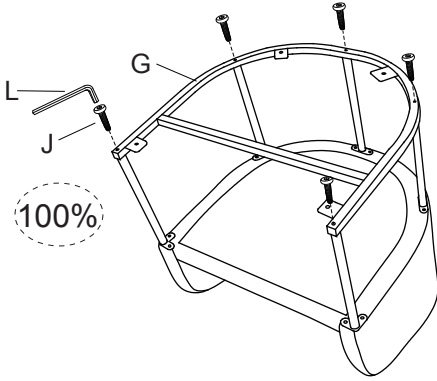 
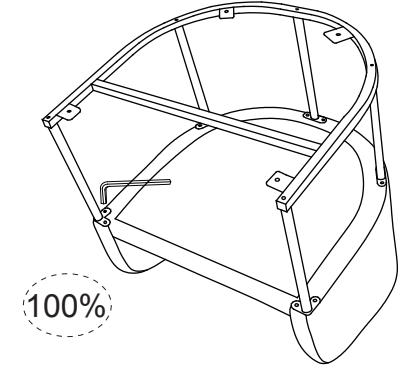 
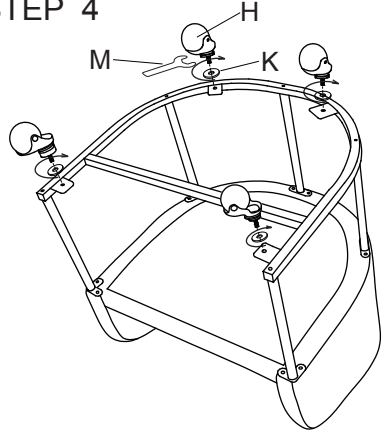 
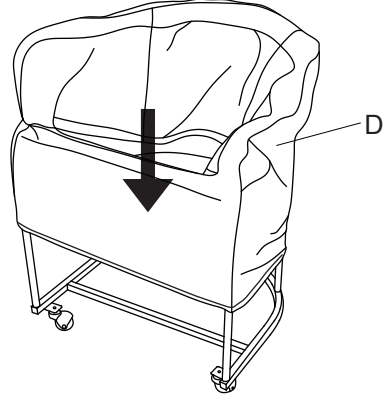 
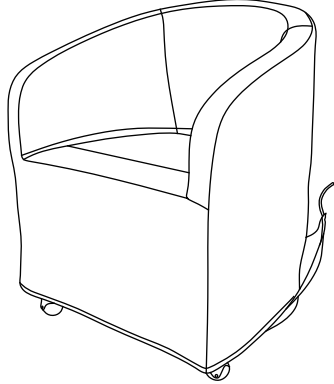 
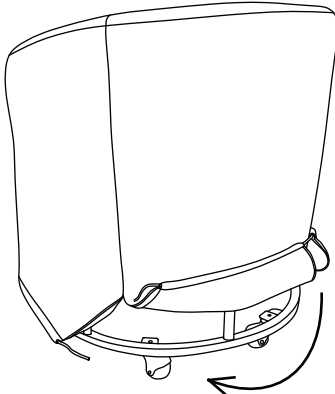 
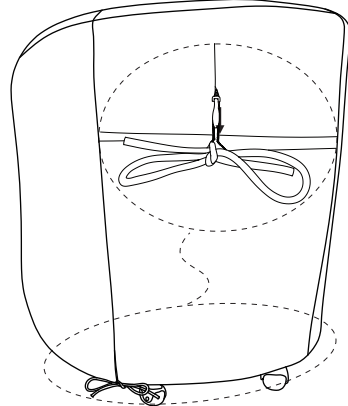 


ASSEMBLY INSTRUCTION

NO.: DK-240646

A  x1	B  x1	C  x1
D  x1	E  x3	F  x2
G  x1	H  x4	I  M6*20mm x10
J  M8*40mm x5	K  M8*22*2mm x4	L  M6 x1 M  M14 x1

STEP 1 	STEP 2 	STEP 3 
STEP 4 	STEP 5 	STEP 6 
STEP 7 	STEP 8 	STEP 9 