

Assembly Instructions

Living Room Accent Furniture



⚠ WARNING:




- Read all instructions carefully and completely before assembly and use.
- Retain for future reference.
- **DO NOT use power tools.**
- **DO NOT over-tighten hardware.**
- Periodically check all hardware and re-tighten as necessary.
- DO NOT use product if any component becomes damaged.
- For residential (non-commercial) use only.
- DO NOT sit or stand on product. Use only for intended purpose.
- DO NOT exceed 80lbs for the tabletop and 30lbs for the shelf, evenly distributed.

Thank you for purchasing this Living Room Furniture.

If you encounter any issues during installation or use, including your order ID and a detailed description of the problem. If possible, please provide relevant images to expedite assistance. We will strive to resolve any issues promptly.

Parts List

Check all parts before assembly

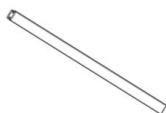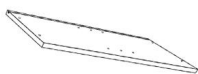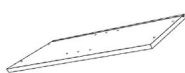
<u>Item no.</u>	<u>Reference image</u>	<u>QTY.</u>	<u>Item no.</u>	<u>Reference image</u>	<u>QTY.</u>	<u>Item no.</u>	<u>Reference image</u>	<u>QTY.</u>
A.		1	E.		1	I.		4
B.		1	F.		1	J.		1
C.		1	G.		1	K.		1
D.		2	H.		4	L.		1
H1.		3+1	H5.		4+1	H9.		8+2
H2.		6+2	H6.		3+1	H10.		8+2
H3.		4+1	H7.		2+1	H11.		4+1
H4.		1	H8.		4+1	H12.		4+1

H2: M4x6mm, H7: M4x22mm, H12: M3x14mm


Step 1: Place the tabletop (A) upside down on a clean, soft surface to protect the finish.

Attach two magnets (H1) to the pre-drilled holes in the tabletop (A) using screws (H2) and the screwdriver (H4), as shown on the left.


Install the cam bolts (H9) in the tabletop (A) using the screwdriver (H4), as shown on the right.

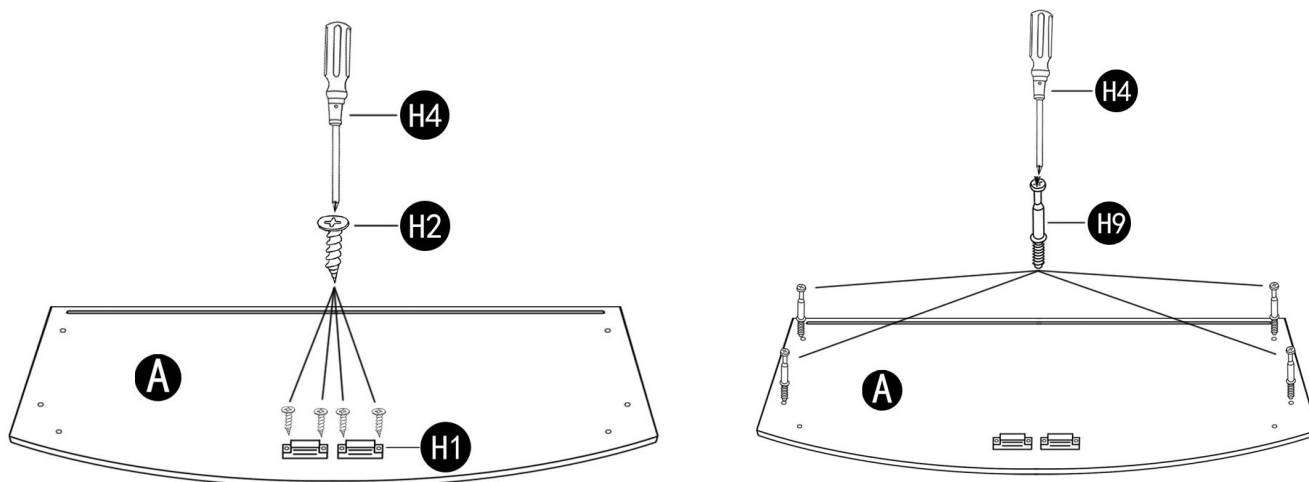


Step 2: Fit the side panels (B and C) onto the tabletop (A), then engage the cam locks (H10) using the screwdriver (H4). Make sure both side panels are seated in the grooves in the tabletop (A). **Do not fully tighten the cam locks at this stage.**

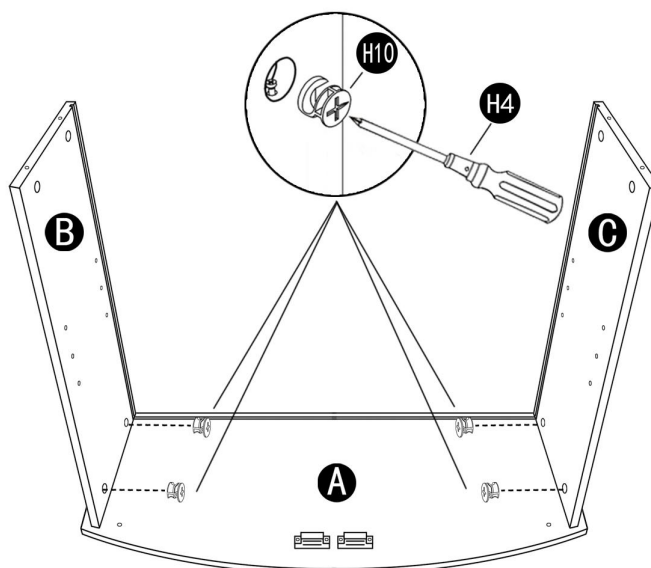


Step 3: Insert the two back panels (D) and the back strip (E) as shown. Make sure the back panels slide fully into the grooves in side panels (B and C).

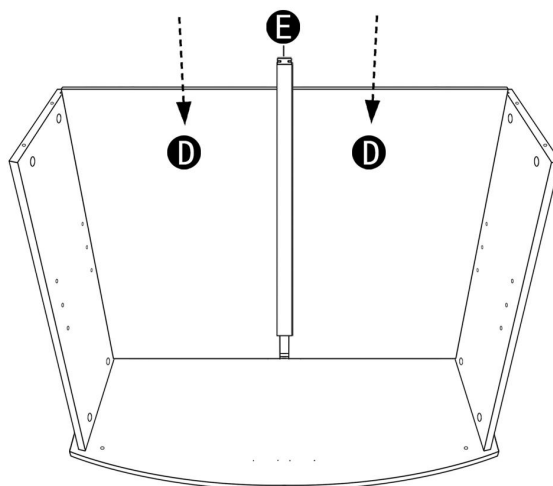


Step 4: Attach one magnet (H1) to the bottom panel (F) using screws (H2) and the screwdriver (H4).
 Install the cam bolts (H9) in the bottom panel (F).
 Fit the bottom panel (F) onto the cabinet body, then engage the cam locks (H10) using the screwdriver (H4).
Fully tighten all cam locks installed in Steps 1-4.

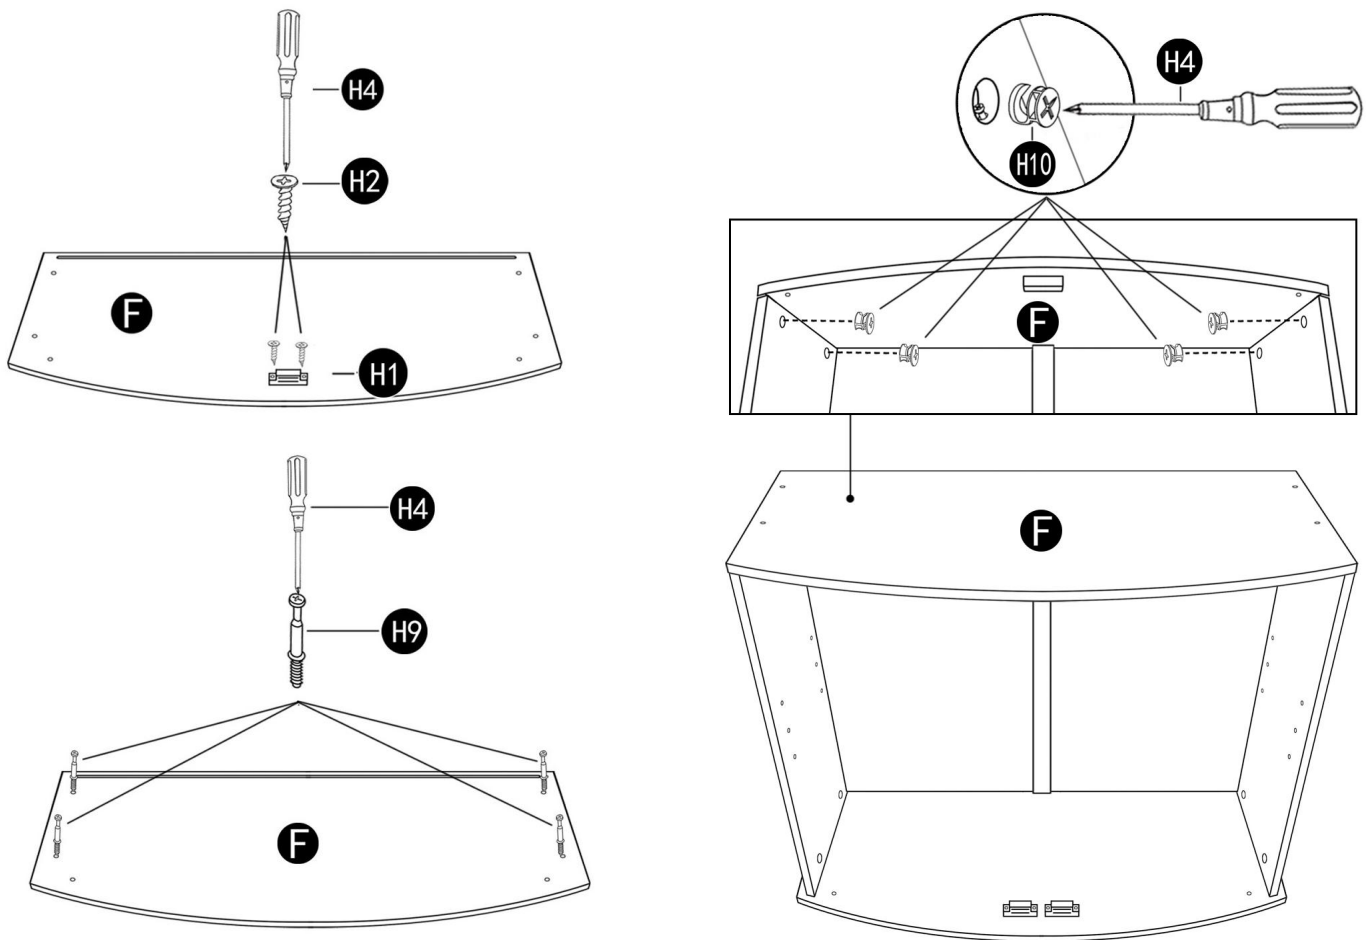


Step 5: The upper legs (H) and lower legs (I) are pre-assembled for packaging. First, unscrew and separate each lower leg (I) from the upper leg (H). Screw the upper legs (H) clockwise into the bottom panel (F) until secure. Position the bottom shelf (G) over the upper legs (H). Insert the threaded ends of the lower legs (I) through the shelf (G), then screw them clockwise back into the upper legs (H) until secure. Screw a foot pad (H3) into the bottom of each lower leg (I).

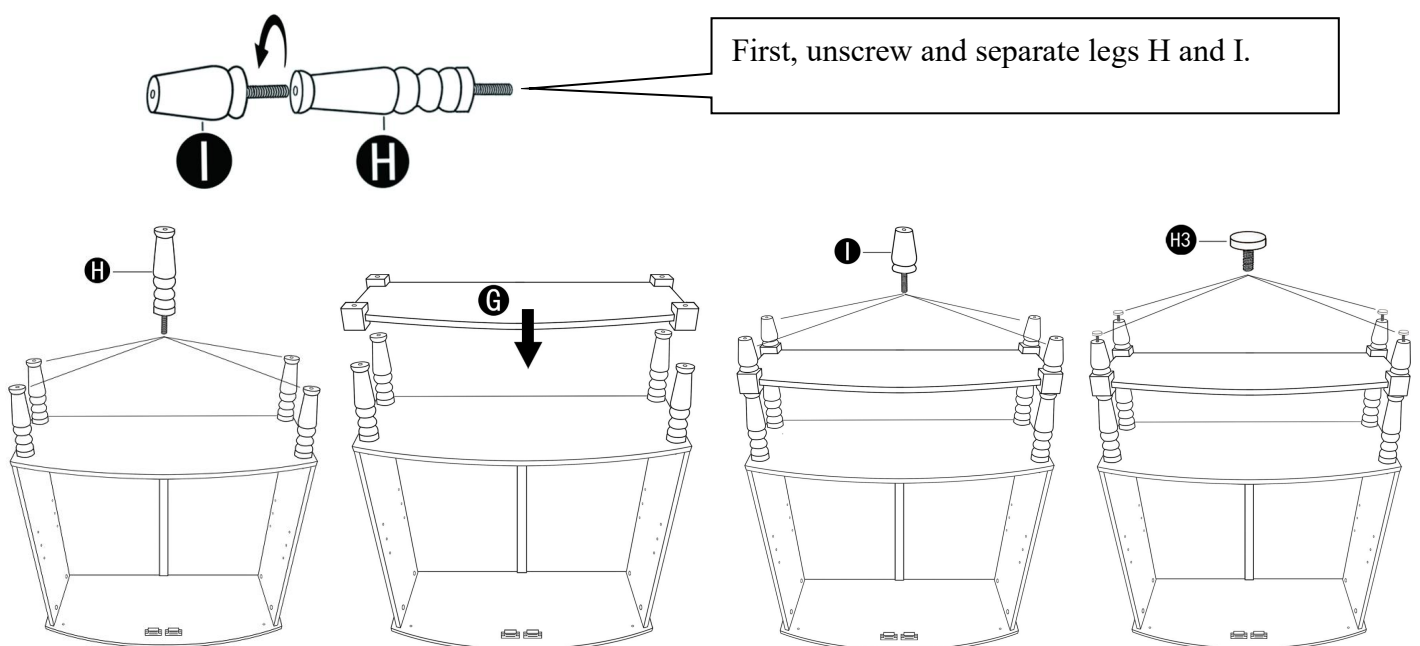


Step 6: **TWO PEOPLE ARE REQUIRED** to carefully turn the cabinet upright. Lift and rotate the cabinet; do not pivot it on the legs. Insert four shelf pins (H5) at the same height, then place the adjustable shelf (L) on the pins as shown. Each side panel has six shelf-height positions.

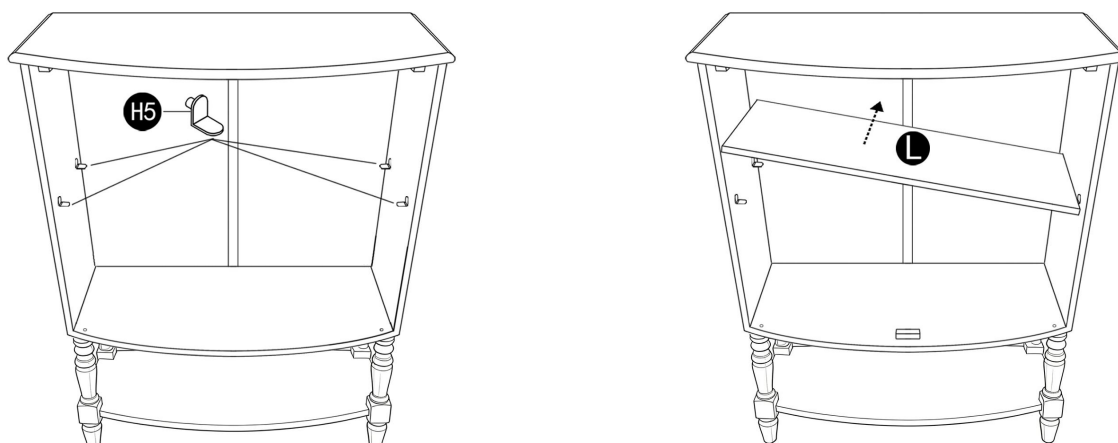

Step 7: Attach the door knob (H6) to each door using screw (H7) and tighten with (H4). Insert the bottom door pin (H8) and top door pin (H8) into the corresponding holes on the doors. Insert the **bottom** door pin (H8) into the hole on the cabinet first, then press down the top door pin (H8) to secure the door in place.

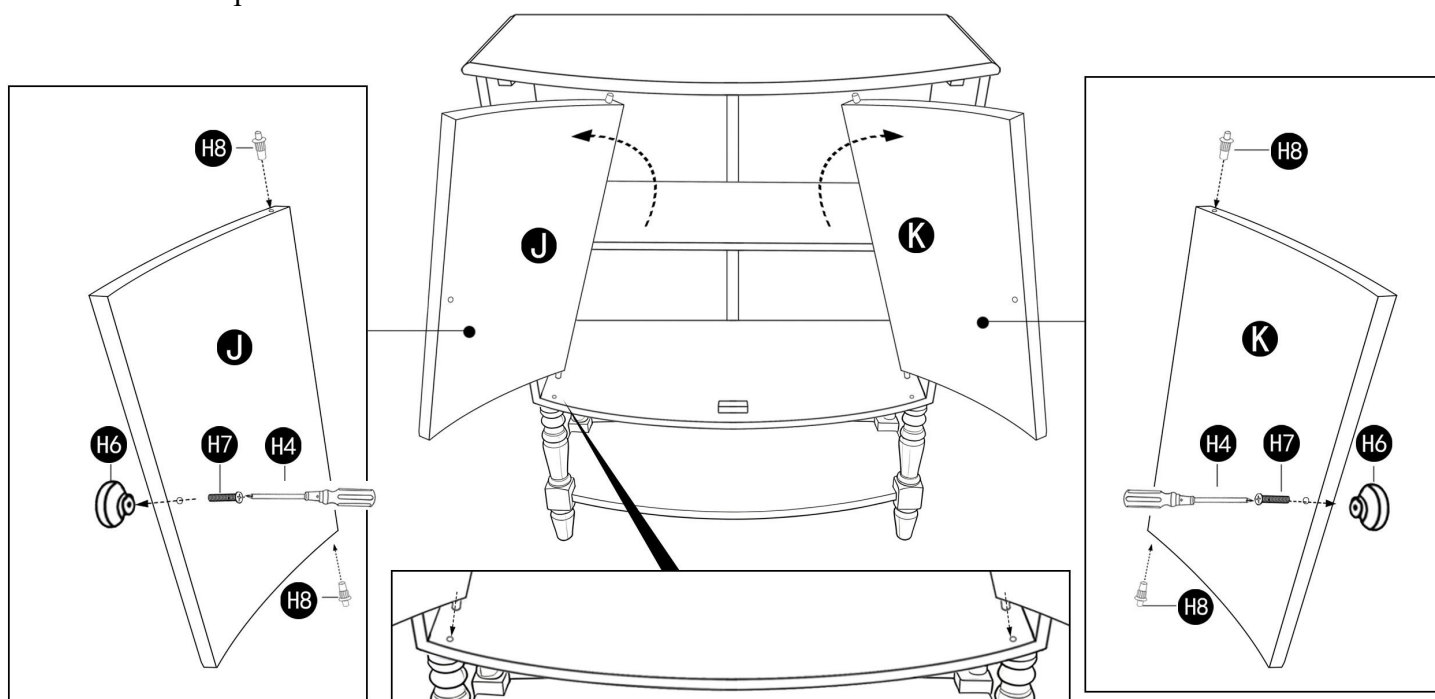

Step 8: Attach the four back holders (H11) to the rear of the cabinet using screws (H12) and the screwdriver (H4), as shown below. The holders secure the back panels and improve cabinet stability.

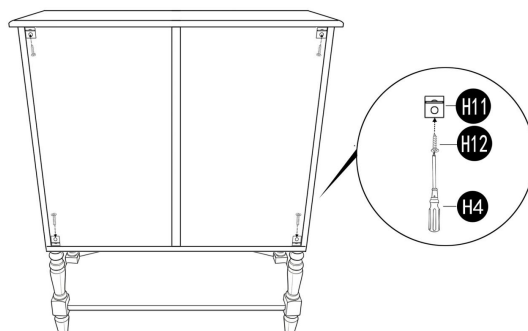

Assembly finished.