

## **ASSEMBLY INSTRUCTIONS**

<<Before assembling, read all instructions>>

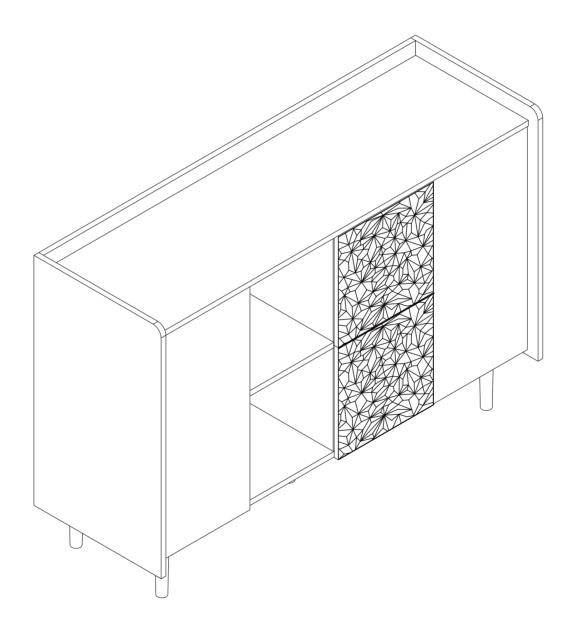


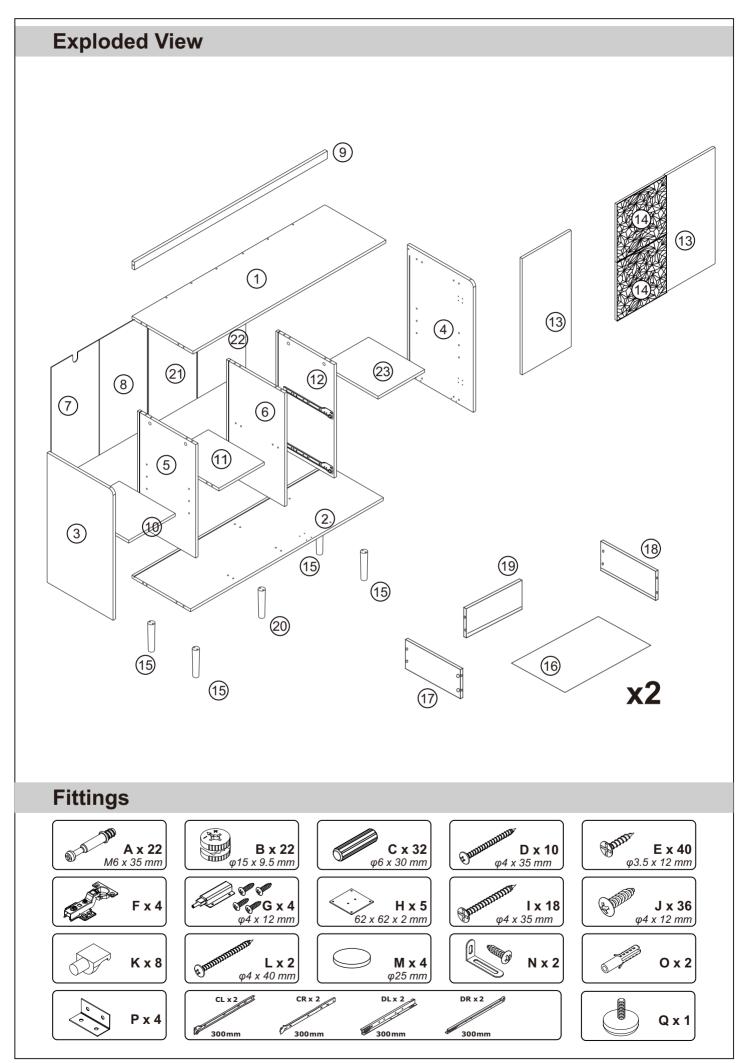



## Step 1 ₽E ₽E E₽ E∰ CL CR ٥٥ 00 0 60 0 000 0 000 0 0 0 6 6 12 CR CR CL CL


**E x 8** φ3.5 x 12 mm




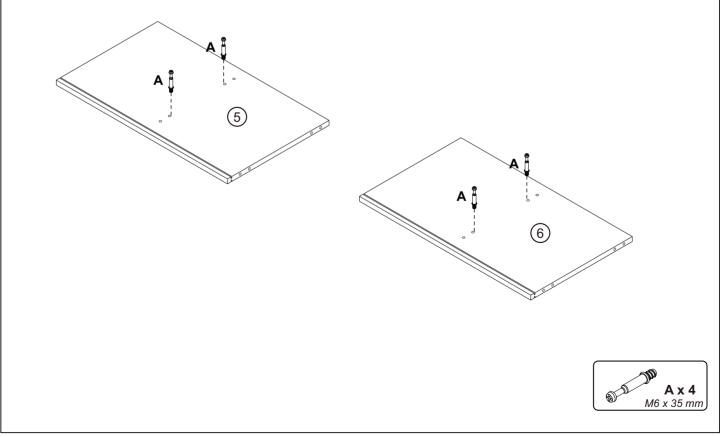

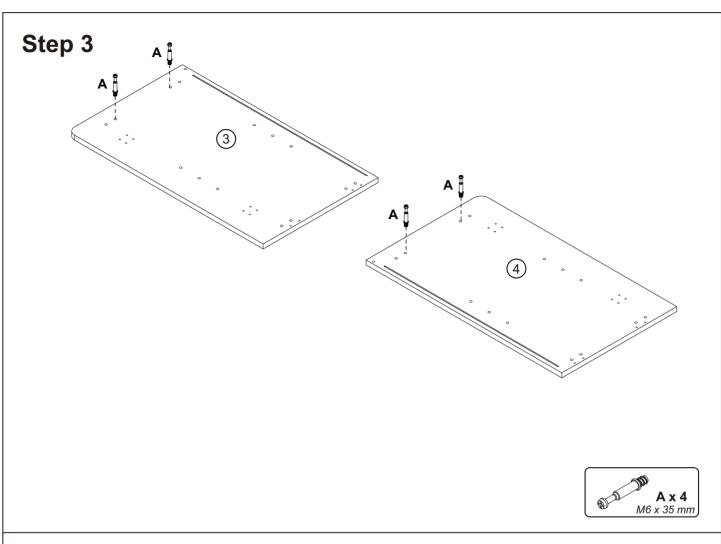

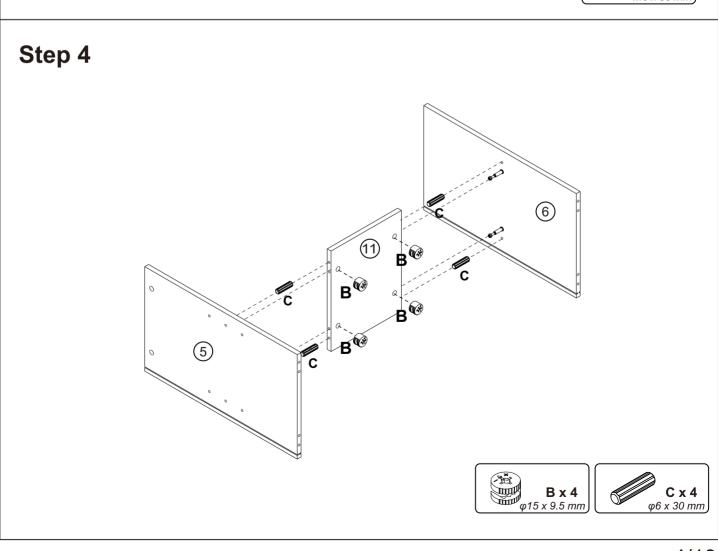


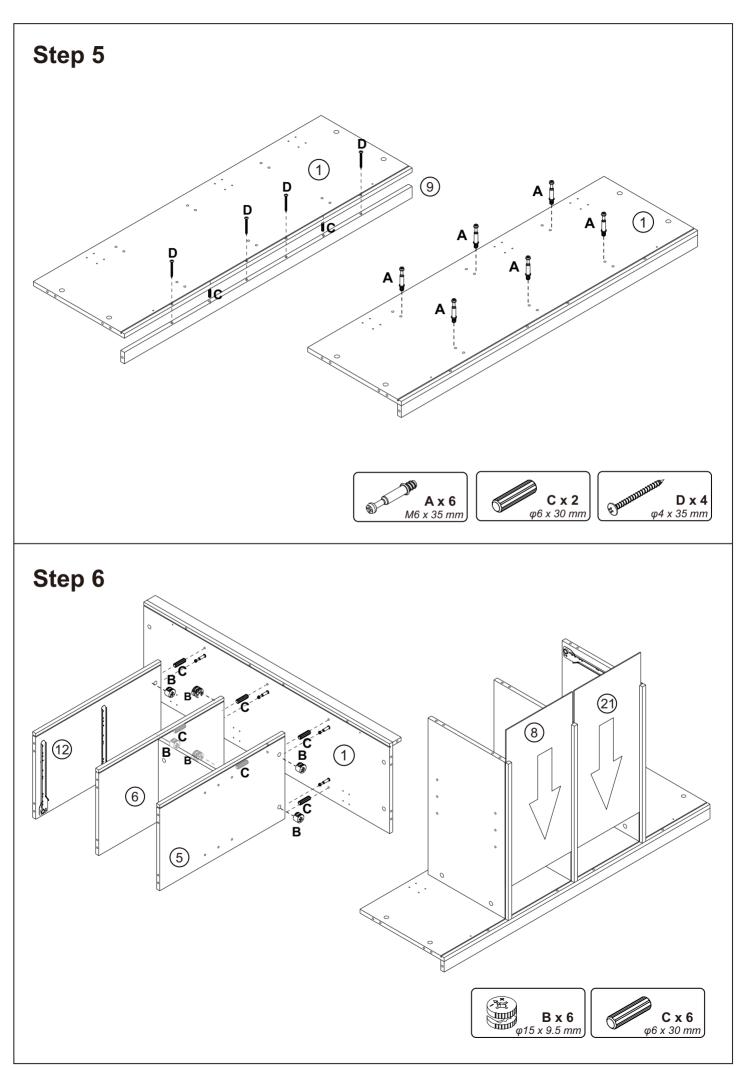


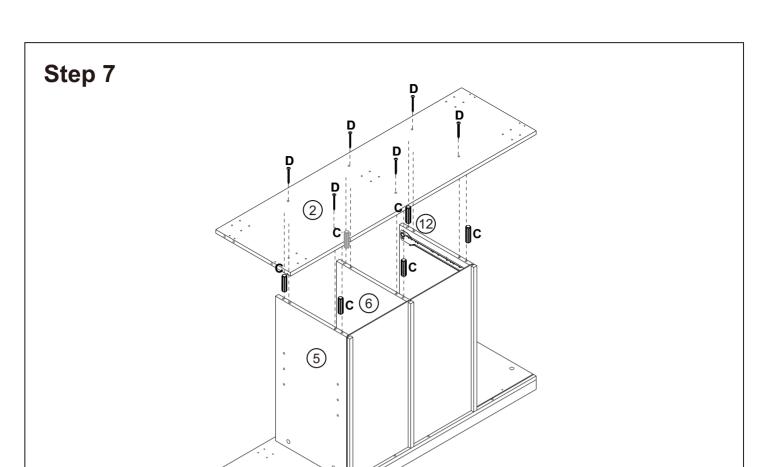



**C x 6** φ6 x 30 mm


**D x 6** φ4 x 35 mm

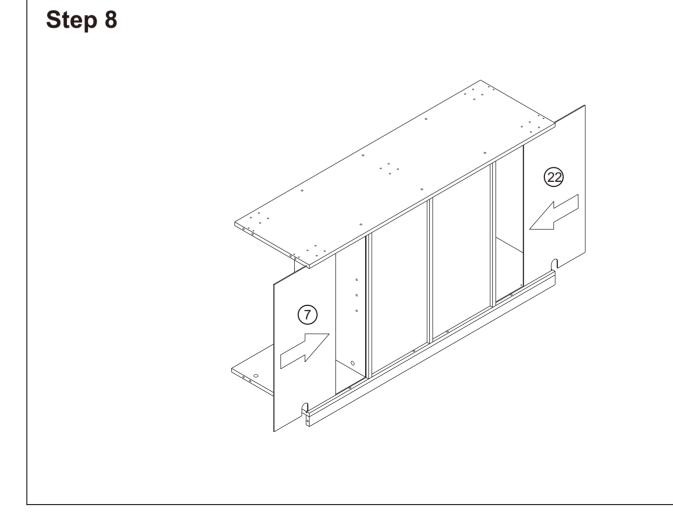

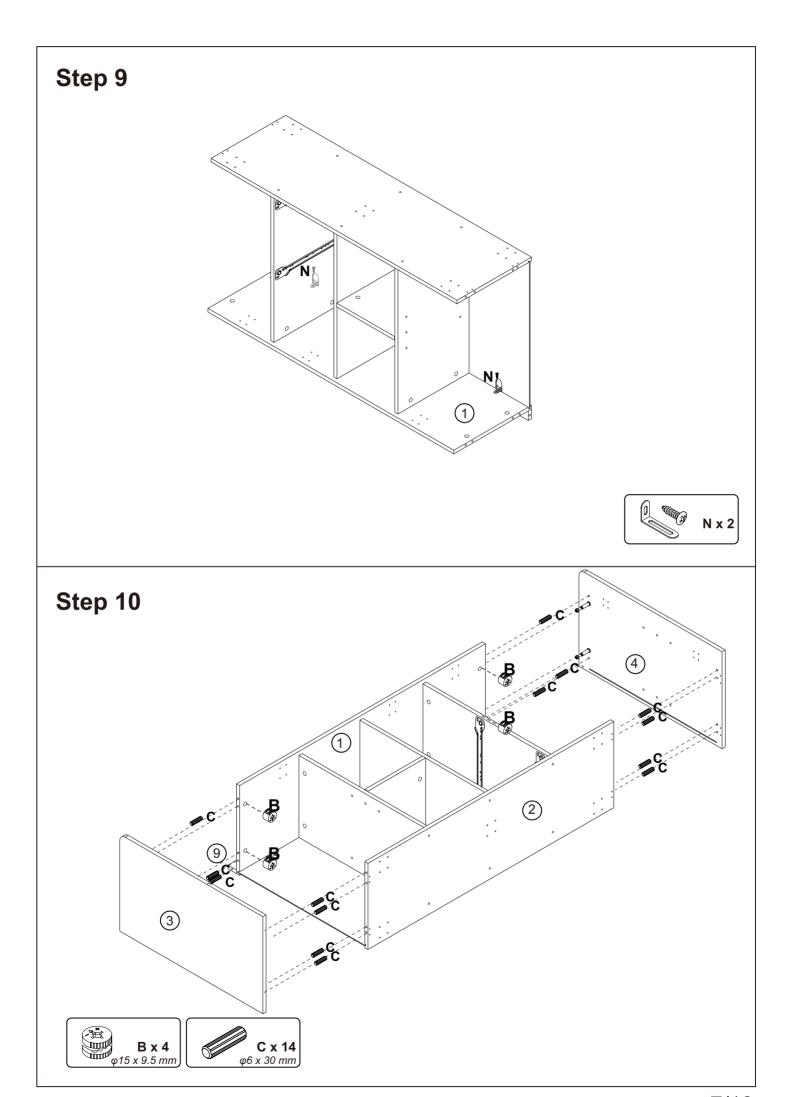


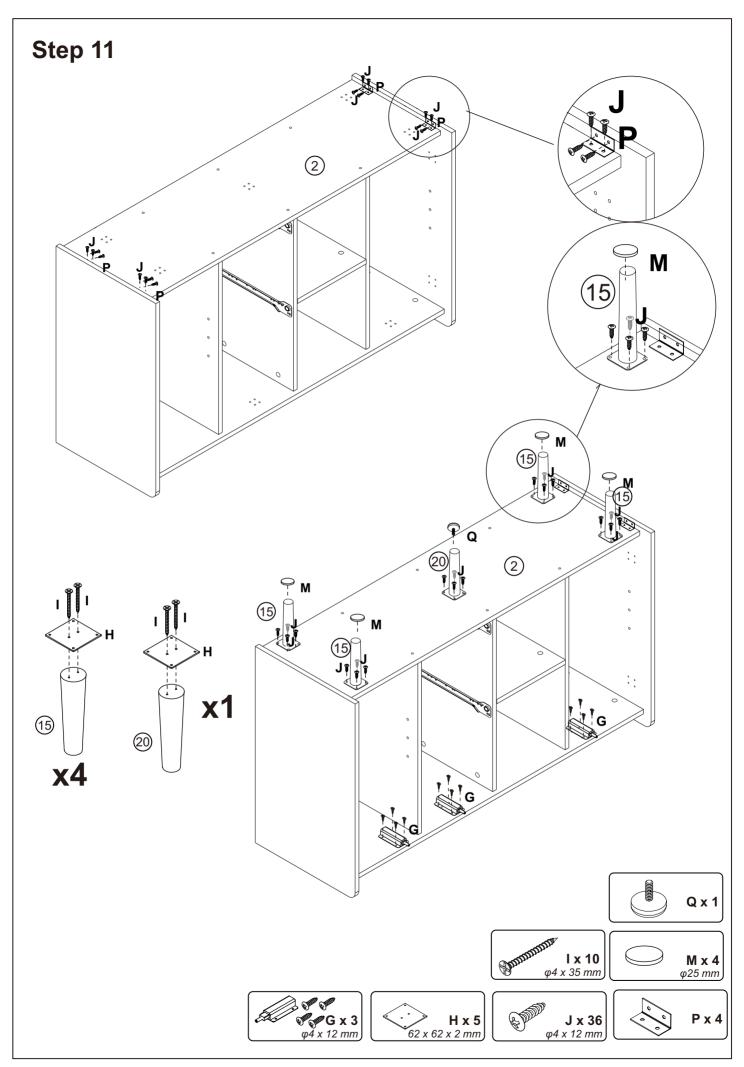

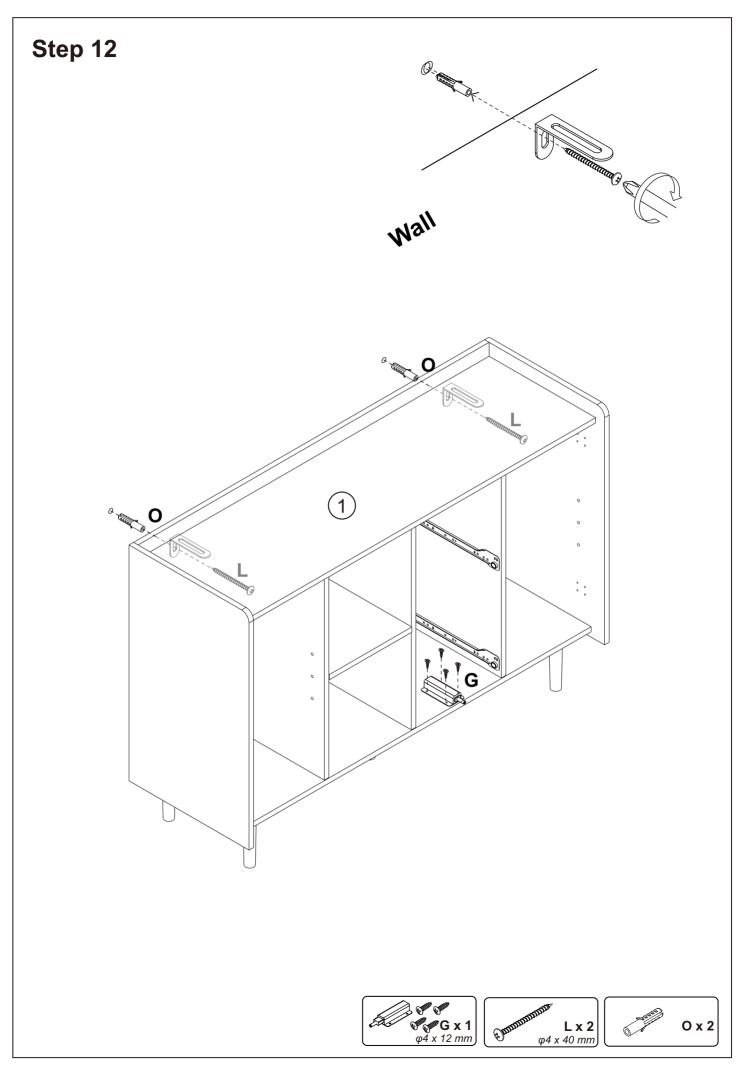

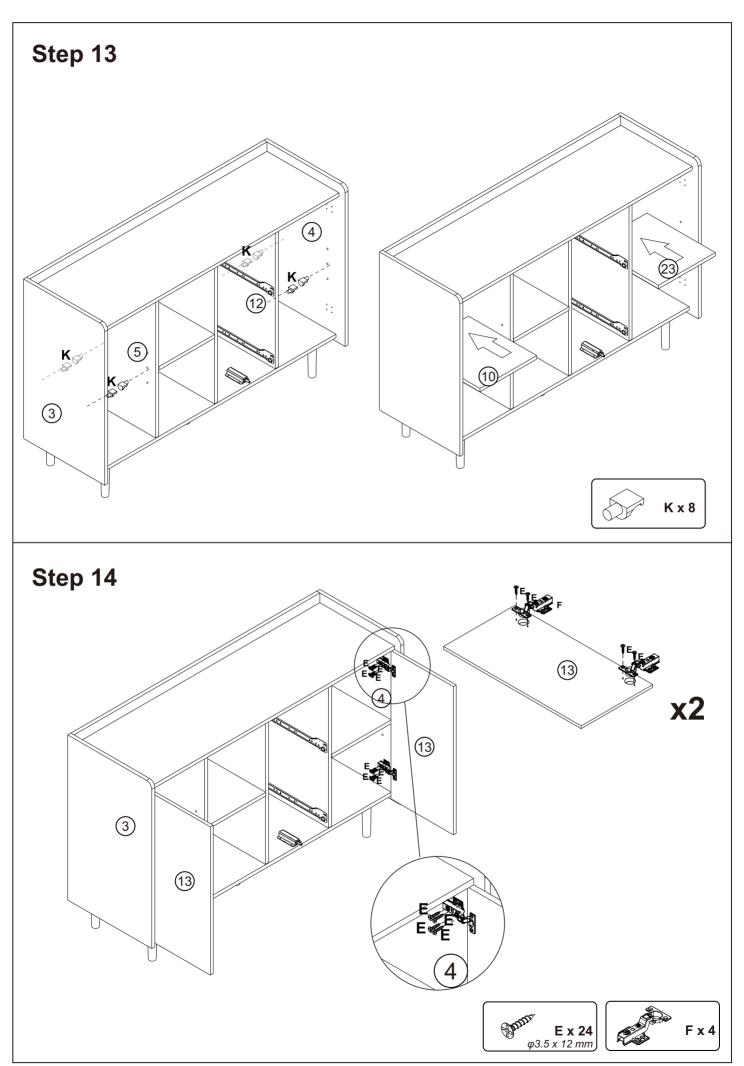

## Step 15

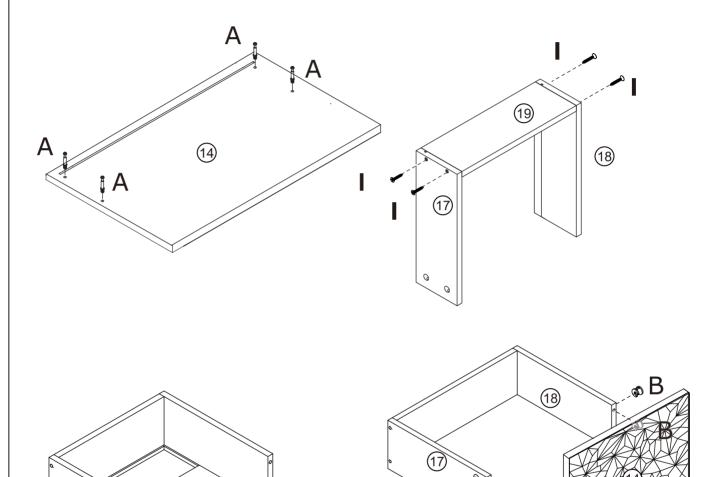







B



 

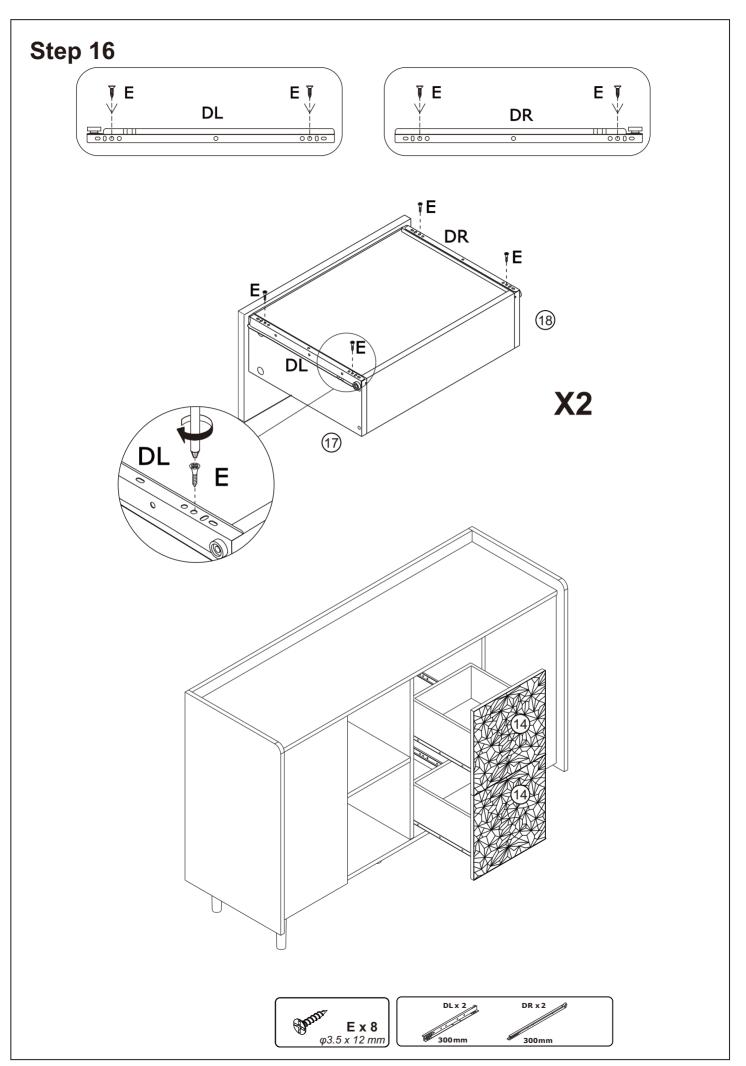



## **Customer Attention:**

To align doors and contr ol gap in between doors. Pr oduct doors may need adjusting during and after assembly .

This can be done by adjusting appr opriate screws. See below illustration.

