



CLASSIC FROSTED PRE-LIT WALL TREE 28 INCH
Item # DCWD0008



Instructions:

- 1) Place the wall tree on a flat surface. Straighten and separate all branch tips. To achieve maximum fullness, tips should not touch one another. To shape the bow, slip fingers into the loop molding the loop into a rounded shape, straighten tails so they are hanging down. To remove white flocking from the bow, use a lint roller or sticky side of a piece of tape.
- 2) From back of the wall tree, find the battery box and open it. Insert 3 C batteries into the battery box then close it (see Figure A, B, C, D & E).
- 3) The battery box has a push button. Press the button once to activate the timer. After pressing the button once, the lights will turn on and remain on for 6 hours, then they will turn off automatically for 18 hours. They will turn on again automatically in 18 hours (at the same time you first pressed the button). This will repeat daily.
- 4) Press the button 2 times to have the lights turn on continuously.
- 5) Press the button 3 times to turn off the lights.
- 6) Hang the tree using the garland loop tie located on the back of the tree.
- 6) Hang the tree using the loop located on the back of the tree.

Battery Warning:

1. Adult supervision is necessary when changing and disposing of batteries.
2. Slide switch to "OFF" position when changing batteries.
3. Confirm proper polarity when inserting batteries.
4. Do not attempt to charge non-rechargeable batteries. Only recharge rechargeable batteries and do it under adult supervision.
5. Do not mix old and new batteries. Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
6. Replace batteries when the light is faint.
7. Replace all batteries at the same time.
8. Remove exhausted/dead batteries from unit.
9. Do not short circuit terminals under any circumstances.
10. Do not allow the bottom of the unit to come in contact with heat.
11. Never throw batteries in a fire or attempt to open batteries. Batteries may explode or leak.
12. Remove all batteries from unit before storage.
13. Batteries are harmful if swallowed. Keep away from young children.

THANK YOU FOR YOUR PURCHASE

Comments or questions?

Call us at 1-877-359-0115 or

Contact us at customerservice@haute-decor.com

Haute Decor
PO Box 1594
Allen, TX 75013

