

# *ASSEMBLY INSTRUCTIONS*



## ***MEDIA TOWER***

# ASSEMBLY INSTRUCTIONS

 
## ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



### WARNING!

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.

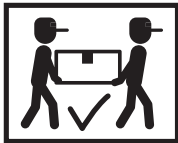

ASSEMBLY TIME

60 MINUTES

 

 

 
 



 




## PARTS IDENTIFICATION

A	LEFT SIDE PANEL		1 PC	H	LOWER BACK PANEL		1 PC
B	RIGHT SIDE PANEL		1 PC	I	DRAWER FRONT PANEL		2 PCS
C	BOTTOM PANEL		1 PC	J	DRAWER BACK PANEL		2 PCS
D	CROSS BRACE		2 PCS	K	LEFT DRAWER SIDE PANEL		2 PCS
E	TOP PANEL		1 PC	L	RIGHT DRAWER SIDE PANEL		2 PCS
F	ADJUSTABLE SHELF		2 PCS	M	DRAWER BOTTOM PANEL		2 PCS
G	UPPER BACK PANEL		2 PCS				

**NOTE:**  
Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

**Z**

  
**HARDWARE IDENTIFICATION**

NO	DESCRIPTION	FIGURE	Q'TY	NO	DESCRIPTION	FIGURE	Q'TY
1	GLUE 40g		1 PC	8	SCREW FOR RAIL Ø 3x12mm		20 PCS
2	WOODEN DOWEL Ø 8x30mm		24 PCS	9	PIN Ø 4.9x8mm		8 PCS
3	CAM BOLT Ø 7x35.5mm		16 PCS	10	HANDLE L=120mm		2 PCS
4	CAM LOCK Ø 15x12mm		16 PCS	11	HANDLE BOLT Ø 4x28mm		4 PCS
5	BOLT Ø 9.5x55mm FOR BOTTOM PANEL		4 PCS	12	FOOT 50x50x70mm		4 PCS
6	SCREW Ø 4.3x35mm FOR DRAWER		8 PCS	13	BOLT Ø 6.35x41mm FOR FOOT		4 PCS
7	RAIL L = 250mm		2 SET	14	STICKER Ø 20mm		3 PCS


**Z7,Z10,Z11,Z12 not included in blister packaging.**

 **NOTE:**  
Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.


**STEP 1**

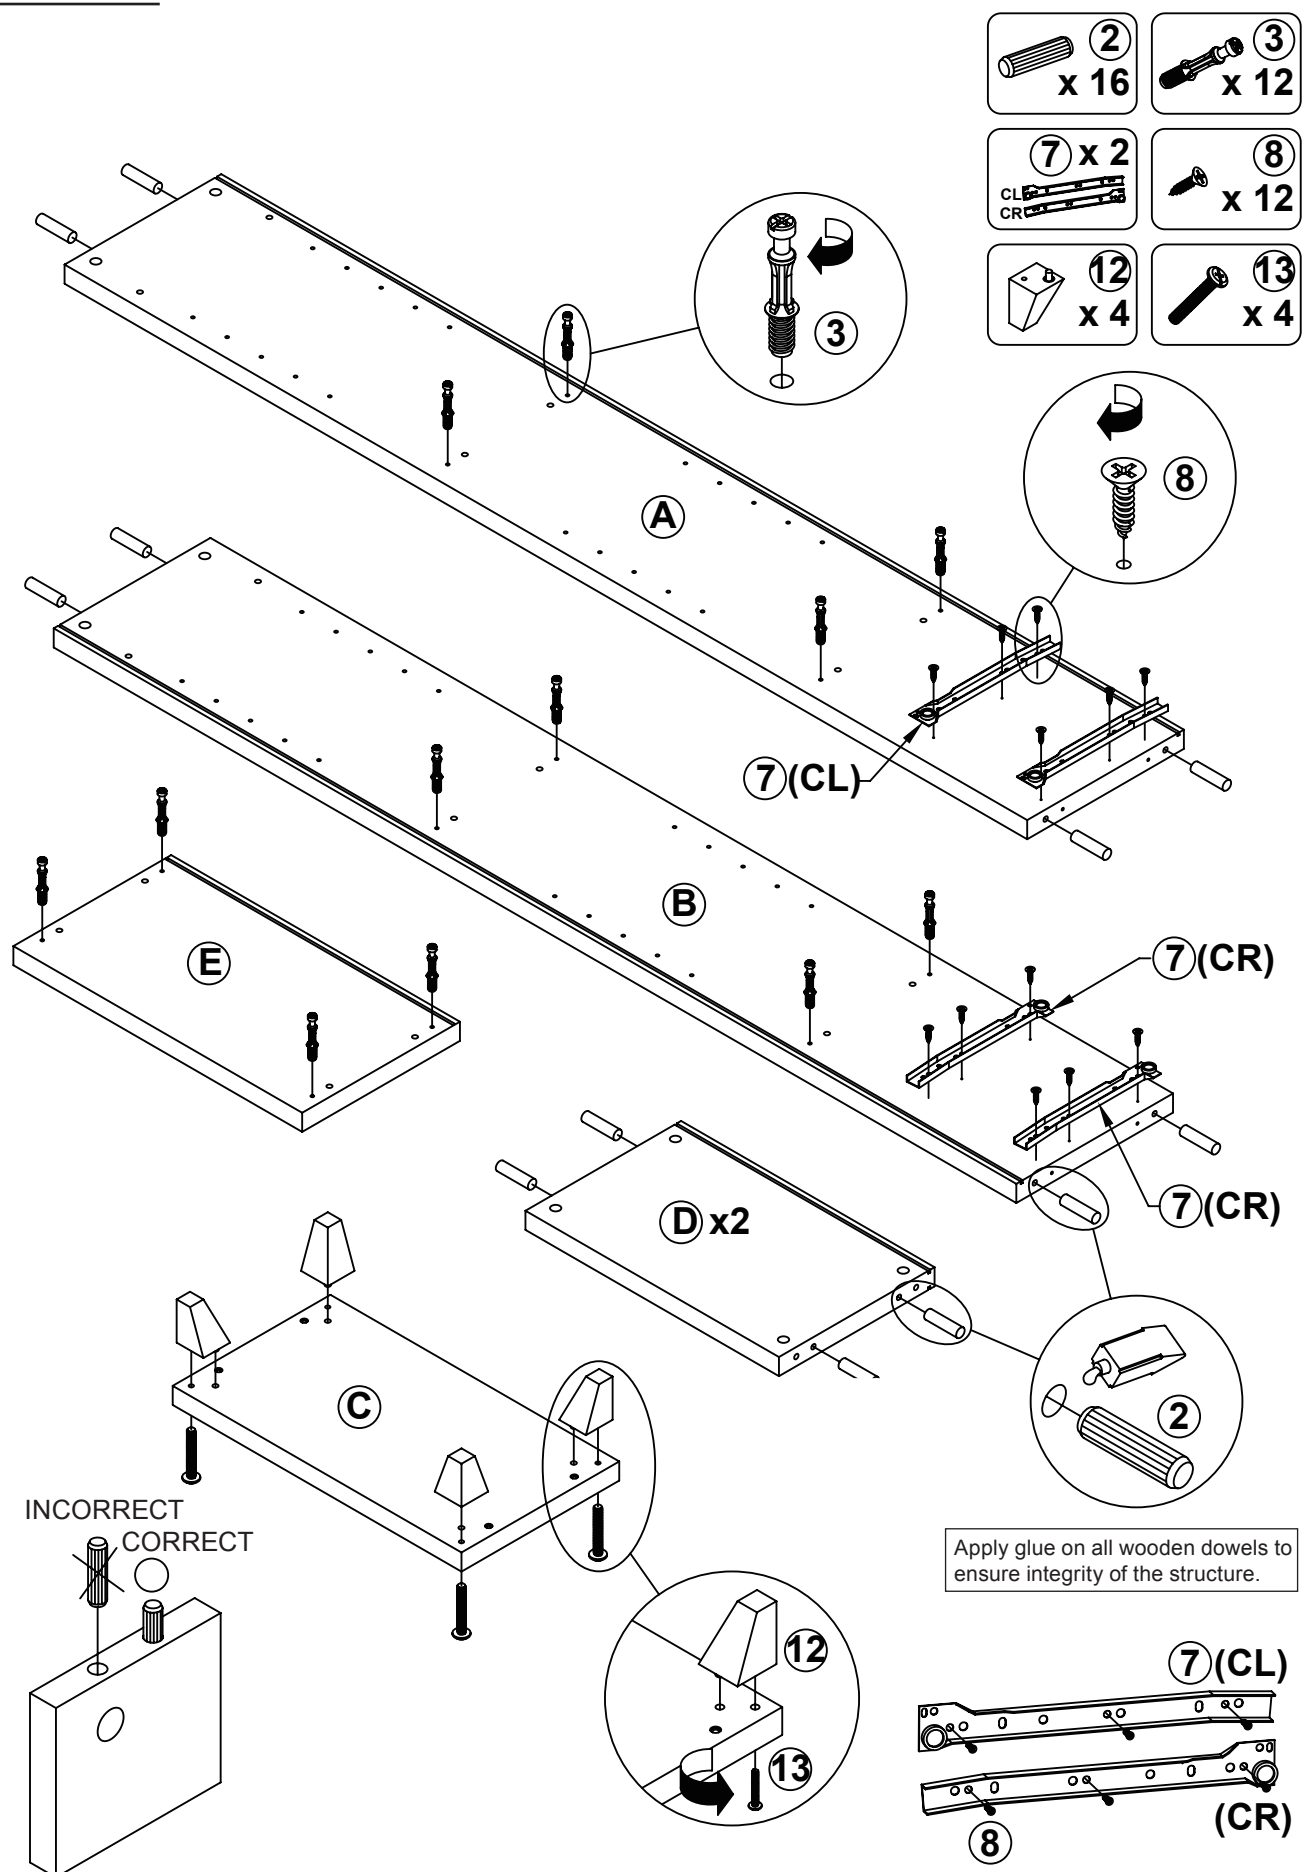


**STEP 2**

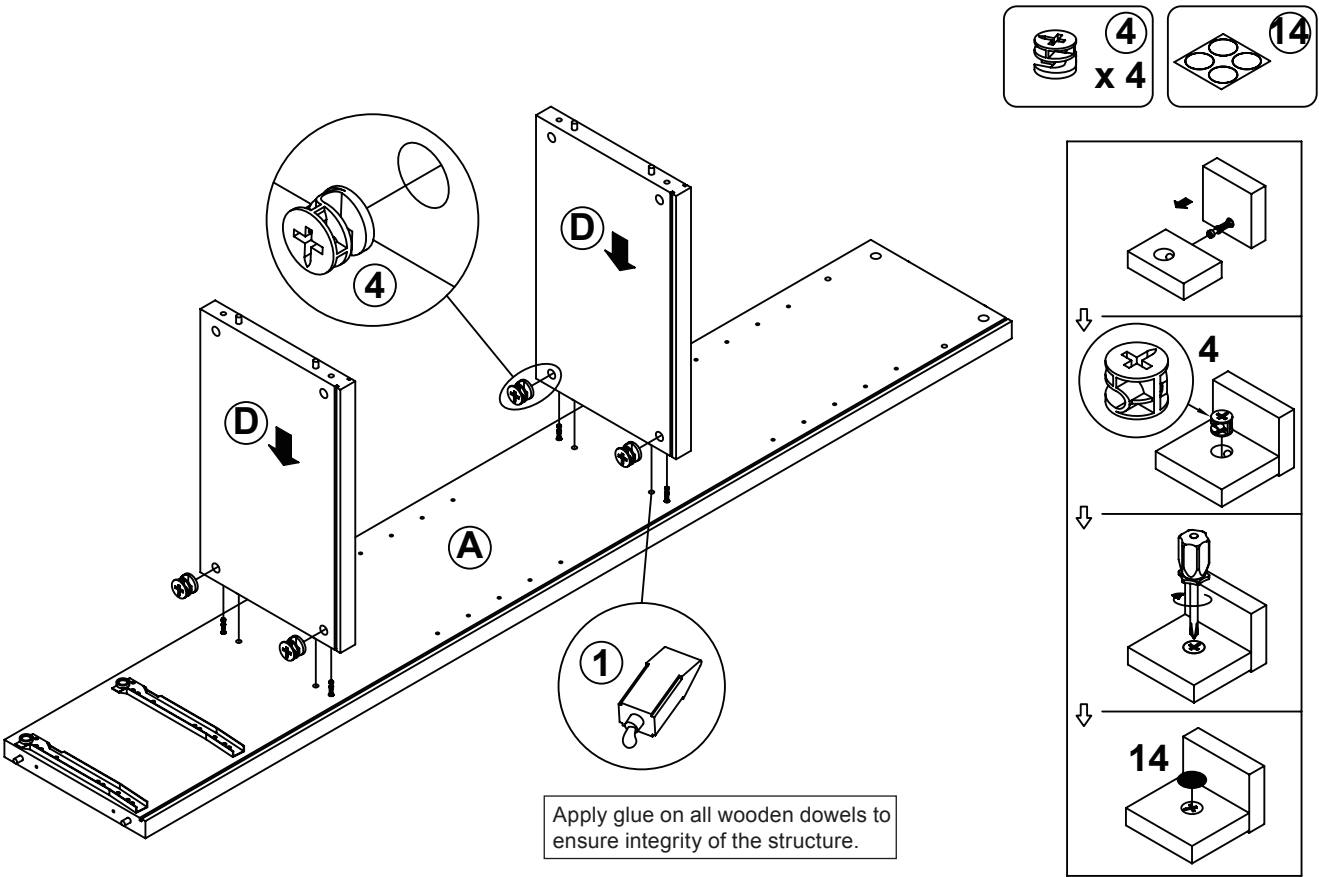 


**STEP 3**

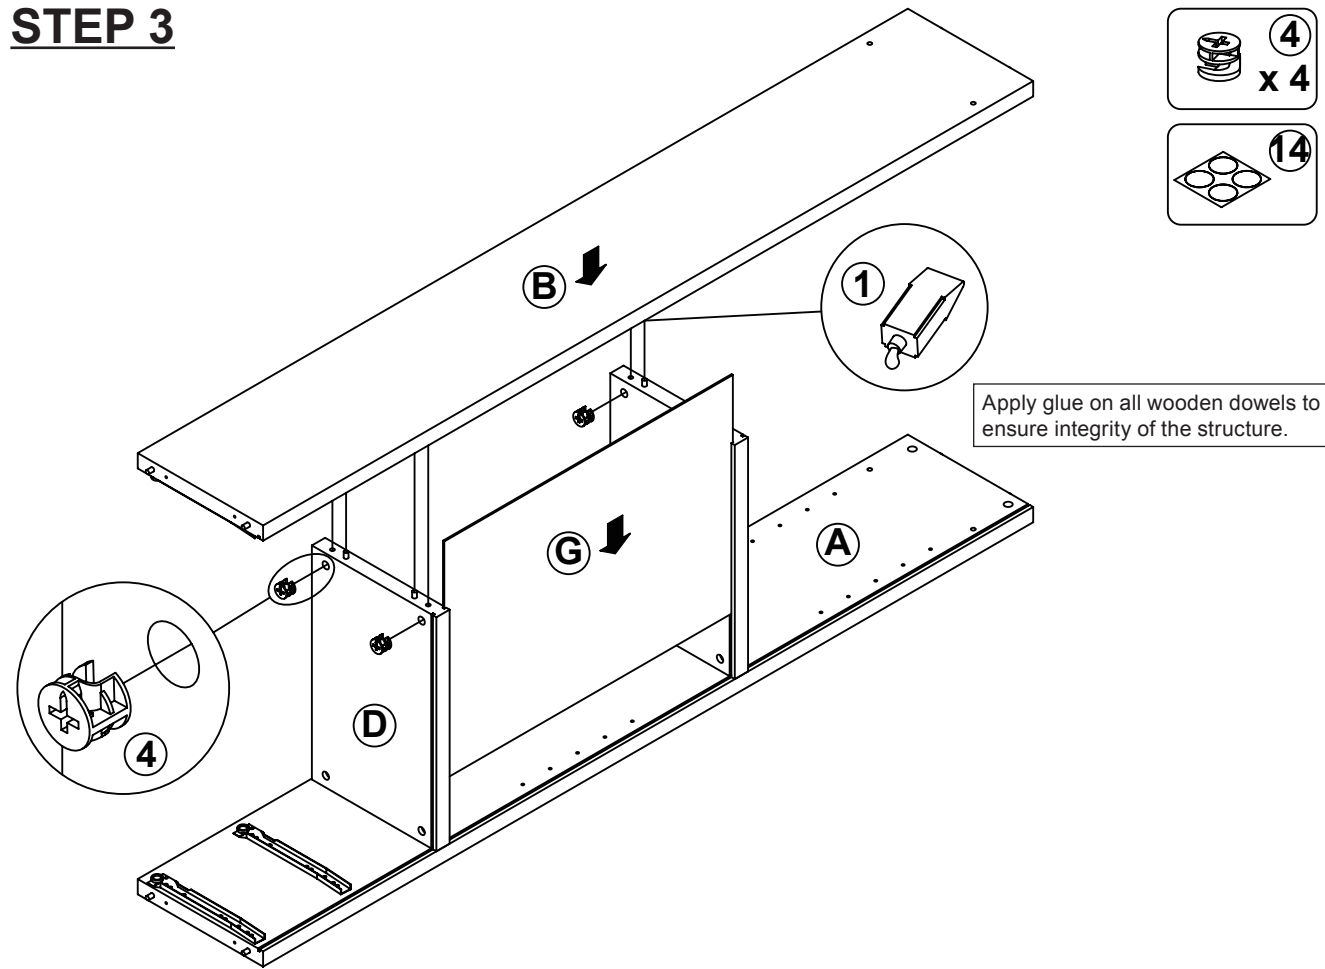 




**STEP 4**

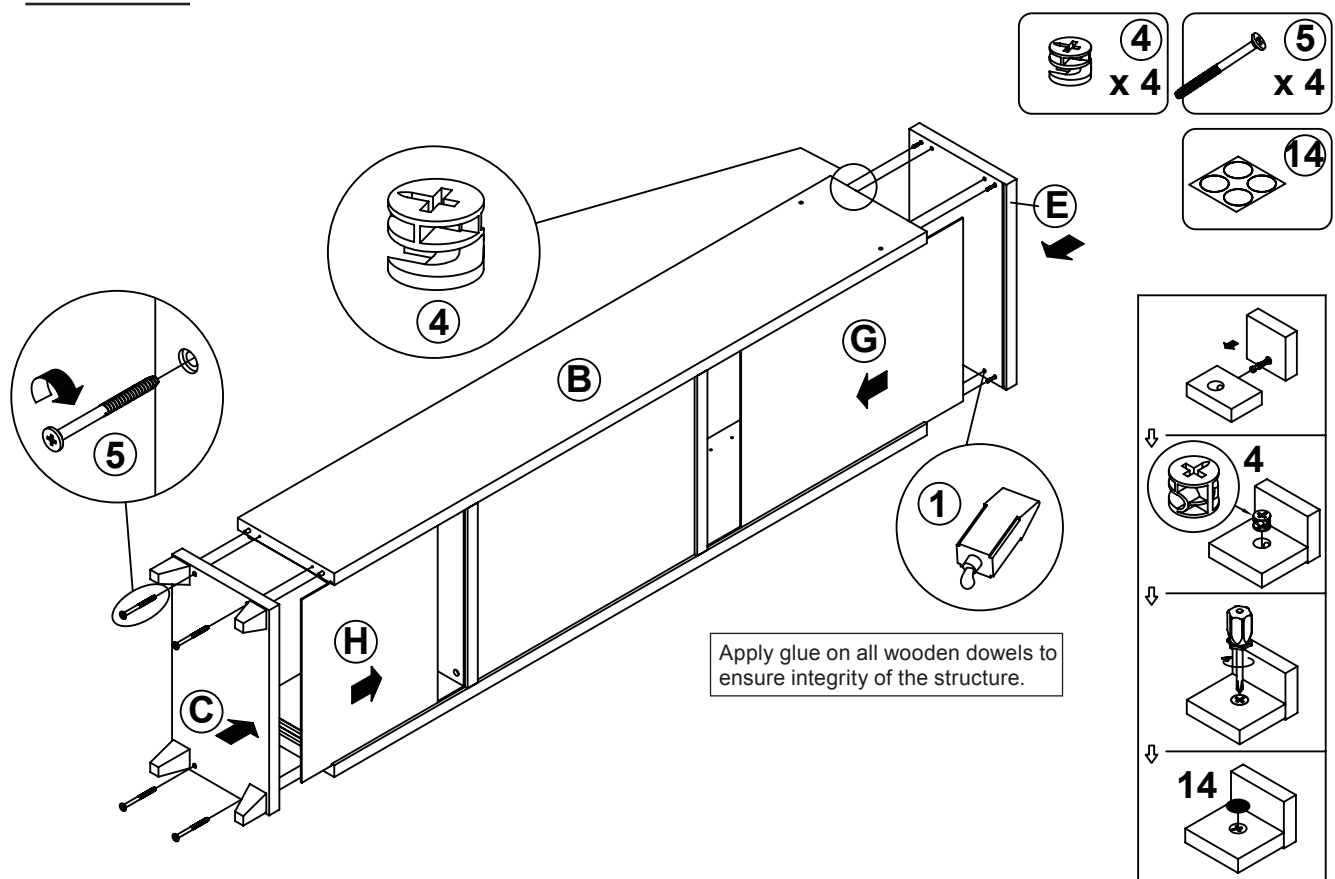 



**STEP 5**

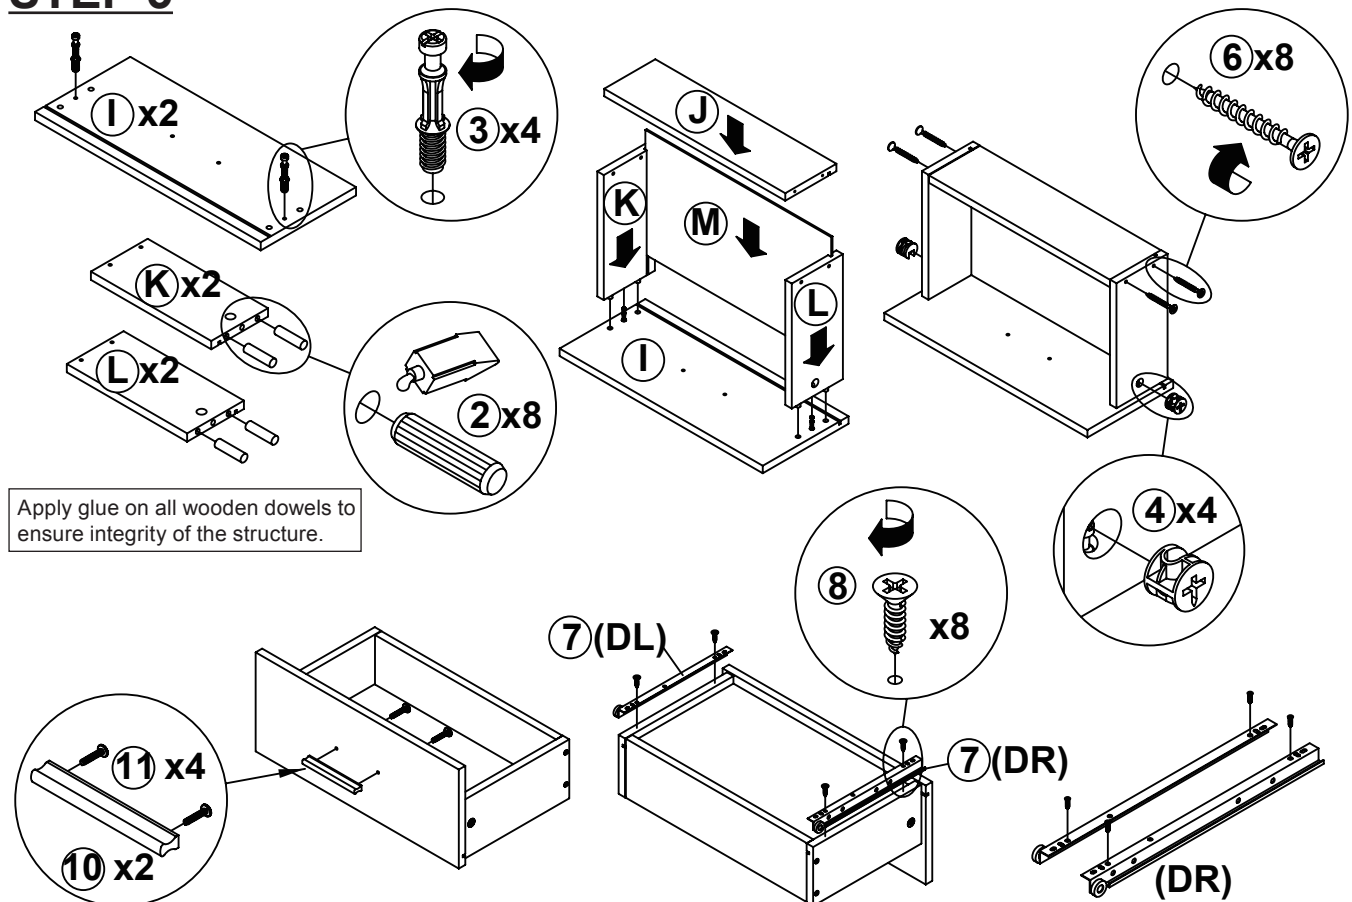 


**STEP 6**

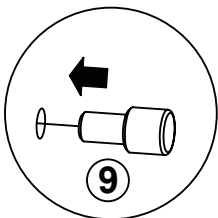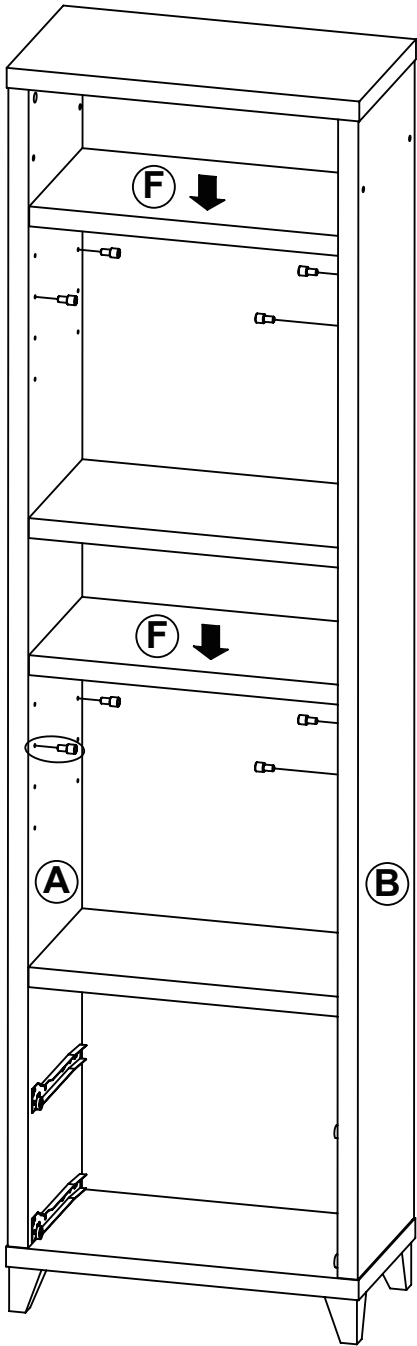   

**STEP 7**

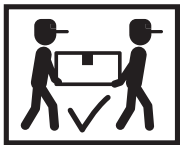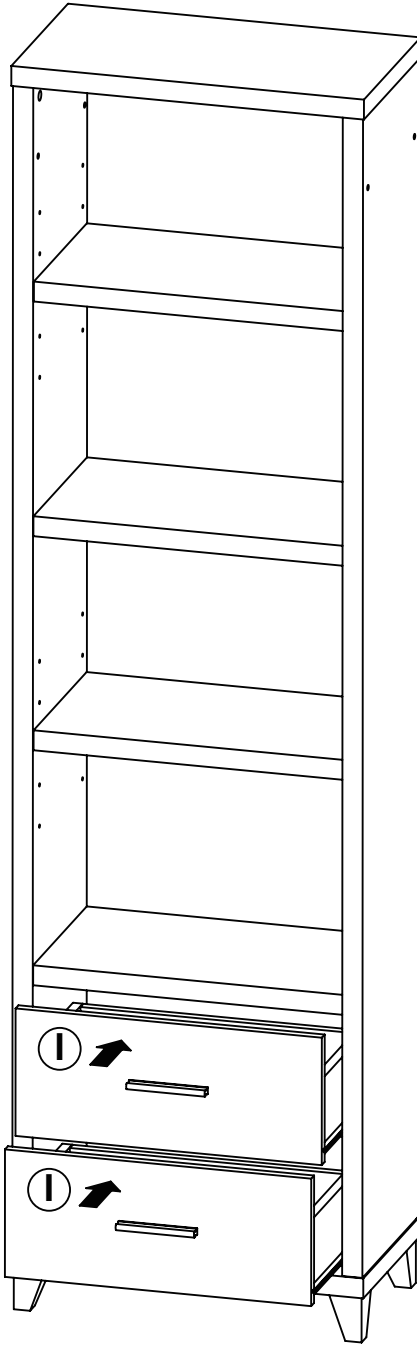  

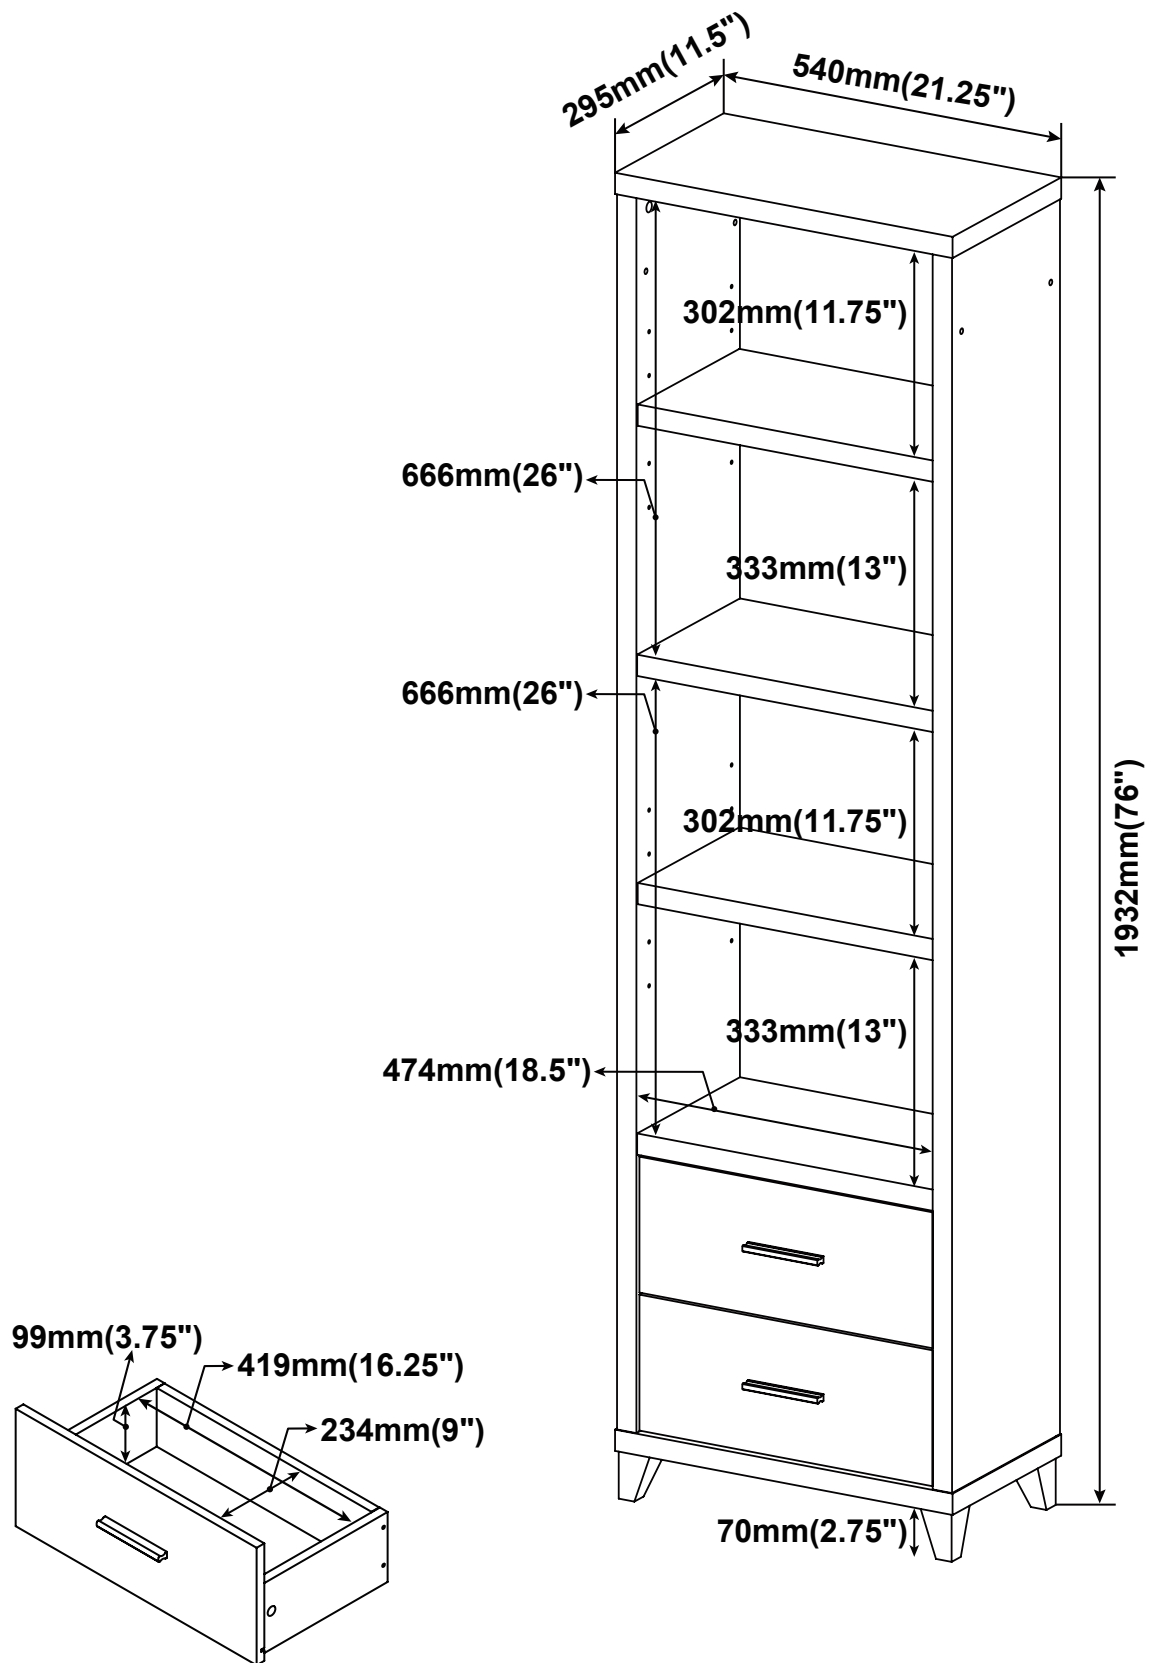 

**Note :** Dimension tolerance  $\pm 5\%$



# ANTI-TIPPING INSTALLMENT INSTRUCTIONS

## FURNITURE TIPPING RESTRAINT

### WARNING

Injury may result from tipping furniture.  
This restraint may protect against tipping furniture.  
Do not allow children to climb on furniture.  
This restraint is not a substitute for proper adult supervision.  
Failure to detach this restraint before moving the furniture  
may result in injury and damage.

1. To attach the anti-tip strap, securely mount one end to the top of the case piece with the 5/8" screw.
2. Position the case piece against the wall in the desired location.
3. Pull the anti-tip strap taut and mark the position of where you will secure the other end on the wall.
4. Drill a 1-1/4" hole in the spot you marked.
5. Tap in plastic wall plug.
6. Fasten anti-tip strap with wall screw provided.

**(Please install the anti-tipping kit in the middle of the case piece if only have one set of anti-tipping kit.)**

