

# User Manual

Towel Warmer Dryer

E1672



Sincerely thank you for choosing this product.

Please read this manual carefully before use and keep it properly for future inquiries. Safety Precautions.

## Before You Start

- Please read all instructions carefully.
- Retain instructions for future reference.
- Separate and count all parts and hardware.
- Read through each step carefully and follow the proper order.
- We recommend that, where possible, all items are assembled near to the area in which they will be placed in use, to avoid moving the product unnecessarily once assembled.
- Always place the product on a flat, steady and stable surface.
- Keep all small parts and packaging materials for this product away from babies and children as they potentially pose a serious choking hazard.

## Important safety instructions

**WHEN USING ELECTRICAL PRODUCTS, BASIC SAFETY PRECAUTIONS SHOULD ALWAYS BE FOLLOWED, INCLUDING THE FOLLOWING:**

Read all instructions before using

## Specification

Rated Voltage	120VAC
Frequency	60Hz
Wattage Max	900W
Net weight	5.7kg/ 12.5 lbs
Gross weight	7.3kg/ 16 lbs

## DANGER

TO REDUCE THE RISK OF ELECTRIC SHOCK:

- ALWAYS place the towel warmer on a firm flat surface.
- ALWAYS unplug the unit from the electrical outlet immediately after using and before cleaning.
- Do NOT expose this unit to rain or moisture.

**NOTE:** The towel warmer has a 3-prong grounding to reduce the risk of electric shock, plug the power cord into a standard 120Vac electrical outlet that is easily accessible.

**CAUTION:** DO NOT attempt to defeat this safety feature. To do so could result in an electric shock hazard.

## WARNING

TO REDUCE RISK OF FIRE, ELECTRIC SHOCK, OR SERIOUS INJURY TO PERSONS WHEN USING THE APPLIANCE FOLLOWS BASIC PRECAUTIONS INCLUDING THE FOLLOWING:

- Be sure to read all instructions, warnings, and precautions carefully before using this product. Failure to do so could result in injury to you or damage to the unit.
  - Always unplug the unit from the electrical outlet immediately after use.
  - DO NOT use an appliance for anything other than its intended use.
  - DO NOT place or store the unit where it can fall or be pulled into a tub or sink.
  - DO NOT use an appliance for anything other than its intended use.
  - DO NOT place or store the unit where it can fall or be pulled into a tub or sink.
  - DO NOT place in or drop into water or other liquid.
  - DO NOT reach for a unit that has fallen into the water. Unplug it immediately.
  - Care should be taken so that objects do not fall into and/or liquids are not spilled onto the unit.
  - This unit should never be left unattended when plugged in.
  - Close supervision is necessary when this unit is used near children or disabled persons.
  - Use this unit for its intended use as described in this manual
- 
- NEVER operate this unit if it has a damaged cord or plug, if it is not working properly, or if it has been dropped, or damaged. Return the unit to a service center for examination and repair.
  - Keep cords away from heated surfaces. Do not wrap the cord around the exterior of the appliance or let the cord hang over a table or counter edge.
  - DO NOT use outdoors.
  - DO NOT alter the safety plug or use an extension cord with this device.
  - DO NOT operate with a voltage converter.
  - DO NOT touch hot surfaces.
  - DO NOT use accessory attachments not recommended by the manufacturer as this may cause injuries.

## CAUTION

PLEASE READ ALL INSTRUCTIONS CAREFULLY BEFORE OPERATING.


- This product is intended for household use only.
- To reduce the risk of injury, please note that this is not a toy. DO NOT allow children to operate or play near the towel warmer.
- NEVER cover the unit while it is operating.
- Always keep the cord away from high temperatures and fire. Perform regular recommended maintenance.
- DO NOT attempt to adjust or repair the unit. Servicing must be performed by professional or qualified personnel.
- Stop using this unit if there is an unusual noise or smell.
- Unplug this unit when not in use for a long period of time,
- To reduce the risk of fire or electric shock, do not expose this unit to rain or moisture.

- Keep this unit out of reach of children. DO NOT allow children to use this unit without supervision.
- DO NOT use outdoors. For indoor use only.
- Condensation on the lid and interior of the unit is normal.


## Unique features and specification

Large capacity accommodates 4 large bath towels (45" X 70"), a bathrobe, or personal blanket.

Set the lid vertically onto the flat sidewall on the backside of the towel warmer Hang your towel from the top towel hanging hook to air dry for it's next use. PTC air heater Double-walled insulated lid keeps heat in while staying cool to the touch.

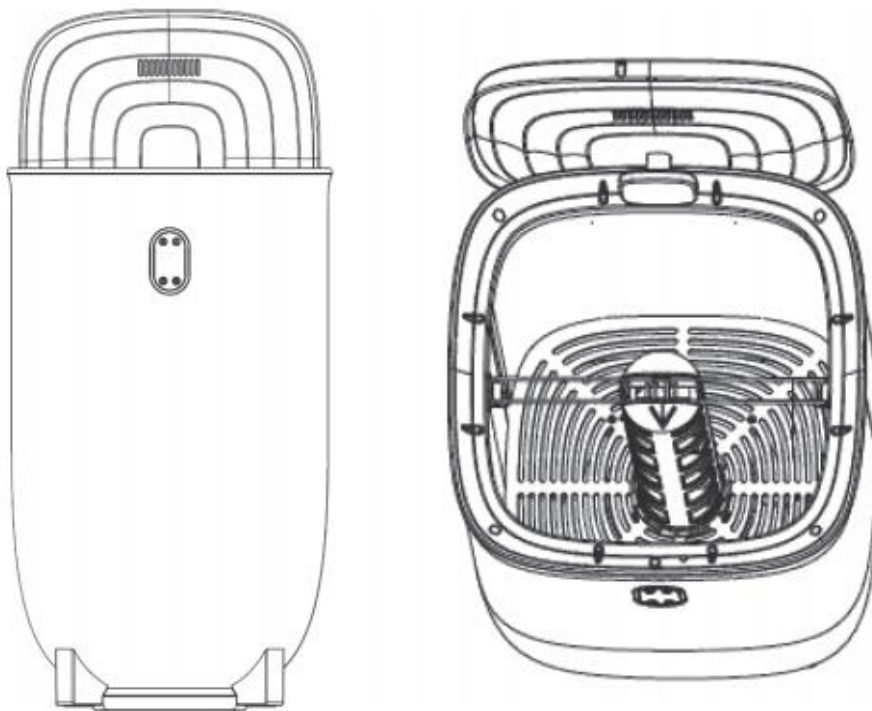

## Location of parts and controls

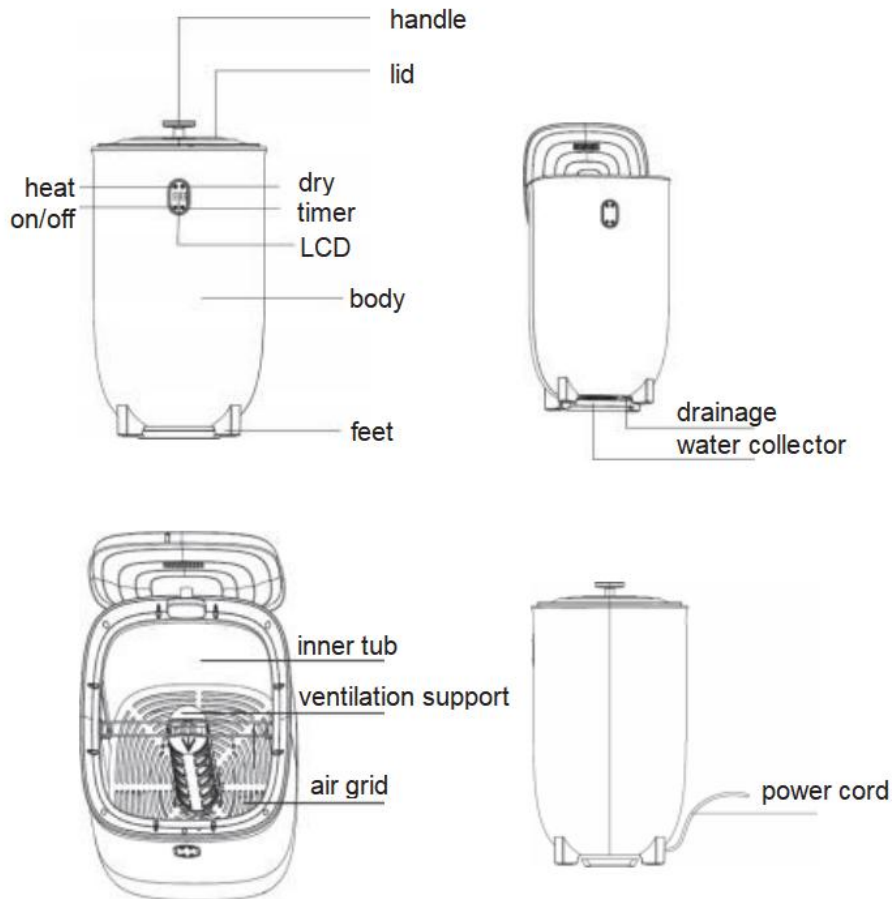


## Fragrant disc instruction

PS: Aromatherapy tablets, fragrance disc or essential oils are not included with the product.

### Operation Methods:

1. Remove the Fragrance Disc from its sealed plastic bag.
2. Slide it into the Fragrance Disc Holder located on the underside of the lid.

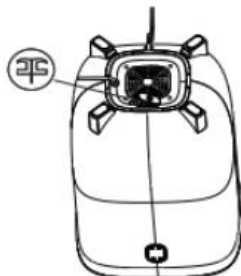

The Fragrance Disc is an innovative air freshener for your home, which also effectively eliminates odors.

## Set up instructions

1. Open the lid and remove any packaging contents.

2. Place the towel warmer on a hard, level, dry surface.
3. Insert the plug into a standard 120V outlet.

## How to use

Digital display with 4 buttons for intelligent switching between heating and drying modes.

### 4 timer settings:

Heating mode : 20min-30min-40min- 90 minutes (default 60 minutes);

Drying mode : 2hrs- 3hrs- 4hrs-5 hrs (default 3 hours).

1. The product power cord is connected to the power socket.
2. Open the lid, put towels, bathrobes, and blankets in the bucket and spread them flat on the rack inside the bucket.
3. Short press the power button, the product will work in the default heating mode, and the system will default to a heating working time of 60 minutes.
4. In heating mode, short press the time setting button, 20min-30min-60min-90min, to set 4 heating working times in sequence.
5. Short press the drying mode button to enter the drying mode. The system defaults to a drying working time of 3 hours.
6. In drying mode, short press the time setting button, 2h-3h-4h-5h, to set 4 drying working times in sequence.
7. Indicator light: Operation button, the white backlight of the corresponding button is retained.
8. LCD screen: time setting and countdown display.
9. Shut down, automatically shut down during scheduled work countdown, or short press the switch key to shut down.

Notice:

1. In heating mode, please put dry towels, bathrobes or blankets into the bucket to heat.
2. In drying mode, please dehydrate the wet towel and then put it into the bucket to dry for better effect. It is not recommended to put the soaked and dripping towel directly into the bucket.

## Troubleshooting

Problem	Possible Cause	Solution
Power	Unit is not plugged in	Plug unit in
	Unit is not turned on	Press the power button
	No power at unit	Check circuits and fuses or try a different outlet
Peculiar odor	Unit is new	Open the lid and let the product air out in a cool, dry place for 12 hours.
	If unit has been used regularly, the odor may be coming from inside the unit	Remove the power cord from the electrical outlet, wipe inside unit with a dry cloth.

## Tips for best results

1. Use cotton or cotton blend towels, bathrobes, or fabrics.
- 2 For fast and even heating, loosely pile 1 towel into the towel warmer. Tightly rolled or folded towels will take longer to heat thoroughly. Two towels will take longer to heat than one.
3. Avoid using delicate fabrics that cannot withstand high heat. Any fabric indicating that a cool iron must be used may not be able to withstand the heat of the towel warmer, resulting in damage to the fabric and the towel warmer.
4. Once the heating cycle has begun, keep the lid closed. This will prevent heat from escaping. Opening the lid midcycle may result in slower heating times.

NOTE: Condensation on the lid and interior of the unit is normal

## Clean and care

CAUTION: Before cleaning the unit, turn the power off and unplug the unit from the outlet.

- Remove the power cord from the electrical outlet before cleaning.
- Wipe with a soft, dry cloth only when the unit is cool to the touch.

## Box contents:

Product host\*1

Leaky sink\*1

User manual\*1

PE bag\*1

Kraft paper packaging box\*1