

ASSEMBLY INSTRUCTIONS

BUFFET

ASSEMBLY

1.5 Hours

2 -Person Assembly

Tools Required (Not Provided):

REQUIREMENTS

Assembly Time



(Approximate)

Phillips Screwdriver



Flat Head Screwdriver



Thank you for purchasing our product!

Please refer and use this assembly instruction to assemble the product.
Contact our customer service department in case there are any missing or damage parts or hardware.
Replacement parts are normally shipped within 2 or 3 days.

PRODUCTS PURCHASED THROUGH OUR AUTHORIZED VENDORS ONLY ARE ELIGIBLE FOR REPLACEMENT PARTS.

We appreciate your business!

THIS PRODUCT IS FOR INDOOR AND HOUSEHOLD USE ONLY - NOT FOR COMMERCIAL USE.

ASSEMBLY PREPARATION

1. Remove all packaging materials, staples and packing straps from the carton.
2. Refer to Parts List and Hardware List and ensure they are correct before assembly.
Contact customer service for missing parts.
3. Place all wooden parts on a clean, flat and soft surface (e.g. carpet or rug) to prevent parts from getting scratched.

SAFETY PRECAUTION

1. KEEP ALL HARDWARE PARTS OUT OF REACH OF CHILDREN.
2. DISPOSE PLASTIC PACKAGING MATERIAL IMMEDIATELY TO AVOID ANY RISK OF SUFFOCATION TO CHILDREN AND ANIMALS.


TIPS FOR ASSEMBLY

1. Allow ample room for assembly and in close proximity to where product will be placed.
2. Assemble the product on a surface that does not scratch or damage the exterior gloss and finish of the furniture.
3. Identify all of the parts, hardware and quantities required for each step.
4. During assembly, do not over-tighten any fittings as this may cause damage.
5. DO NOT USE POWER TOOLS TO ASSEMBLE THIS PRODUCT.
6. Always place the product on a flat, level surface.
7. Do not sit or stand on the partially assembled product; only use the product for which it is intended.







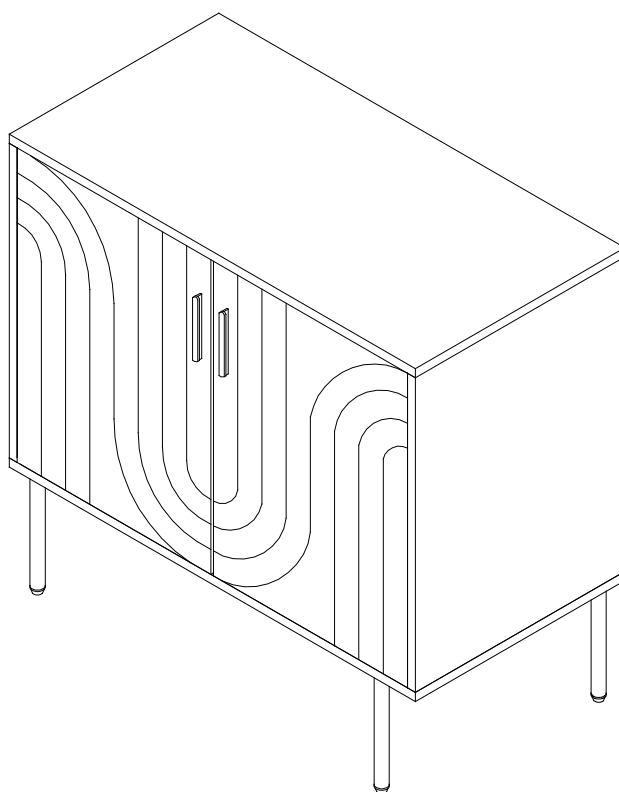












CARE AND MAINTENANCE

1. Wipe clean with a soft, dry cloth; avoid the use of harsh chemicals or household cleaners as they may damage the exterior finish of the furniture.
2. Hardware may loosen over time. Periodically, check that all connections are tight; re-tighten as necessary.
3. Solid wood is impacted by heat and humidity fluctuations which may cause small joint separations or hairline cracks; place the furniture away from direct sunlight and air conditioning vents, heating vents or units to protect the furniture.

  ASSEMBLY INSTRUCTIONS


 


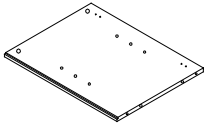
 
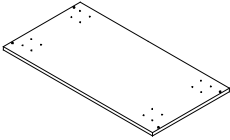
 
 
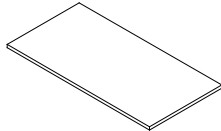


Hardware List

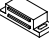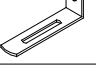ITEM	DESCRIPTION	PART	QTY	ITEM	DESCRIPTION	PART	QTY
A	Cam-bolt	 6*35mm	4 pcs	K	Shelf Pin		4 pcs
B	Cam-lock	 15*10mm	4 pcs	L	Handle		2 pcs
C	Wood Dowel	 8*30mm	8 pcs	M	Handle Bolt	 4*16mm	4 pcs
D	Bolt	 6*16mm	16 pcs	N	Screw	 7*40mm	4 pcs
E	Screw	 3*12mm	2 pcs	O	Allen Key		1 pc
F	Screw	 3*14mm	2 pcs	P	Hinge		4 pcs
G	Screw	 3.5*12mm	25 pcs	Q	Plastic Anchor		1 pc
H	Magnetic Plate		2 pcs	R	Screw	 3.5*40mm	1 pc
I	Magnetic Catch		1 pc	S	Bracket		1 pc
J	Screw	 2.5*10mm	14 pcs				

ASSEMBLY INSTRUCTIONS


Parts List

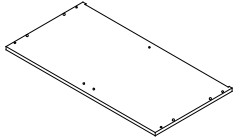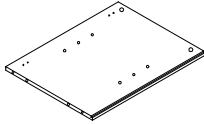ITEM	DESCRIPTION	PART	QTY	ITEM	DESCRIPTION	PART	QTY
1	Top Panel		1 pc	6	Right Door		1 pc
2	Left Panel		1 pc	7	Leg		4 pcs
3	Right Panel		1 pc	8	Back Panel		2 pcs
4	Bottom Panel		1 pc	9	Back Panel Connect Bar		1 pc
5	Left Door		1 pc	10	Adjustable Shelf		1 pc

ASSEMBLY INSTRUCTIONS



ASSEMBLY OVERVIEW

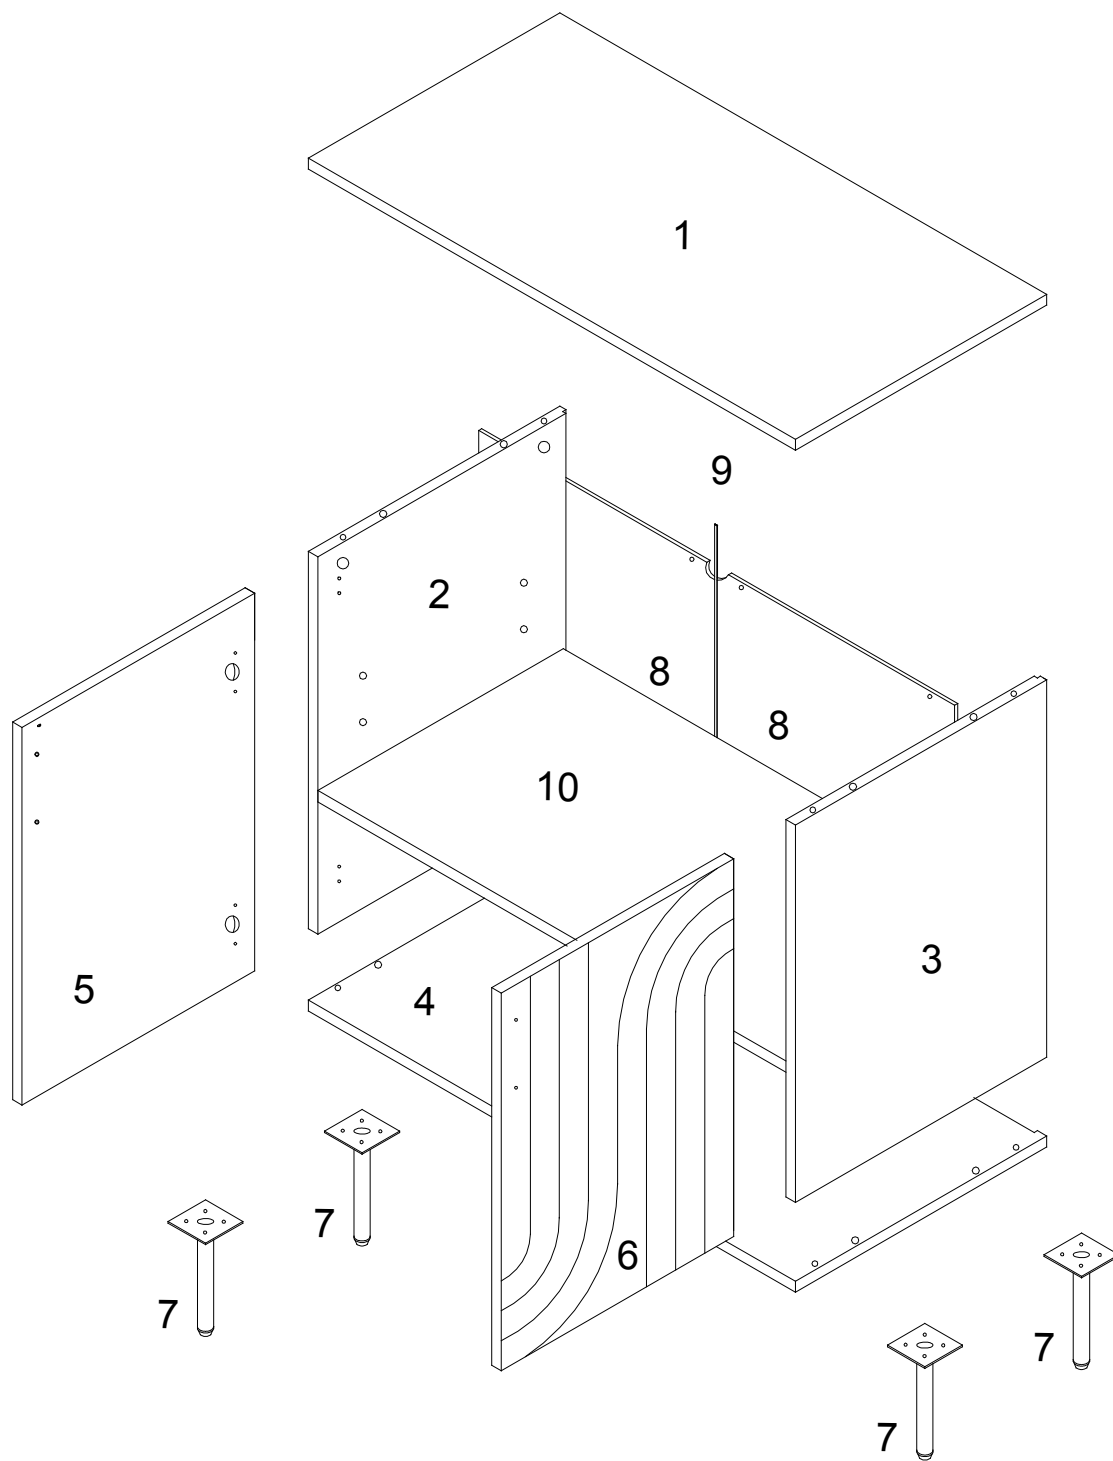

Instructions For Fastening CAM-BOLT AND CAM-LOCK

 


CAM-BOLT




CAM-LOCK


Tools Required

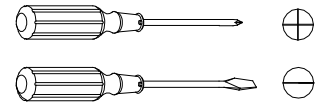


INSERTING AND TIGHTENING CAM-BOLT

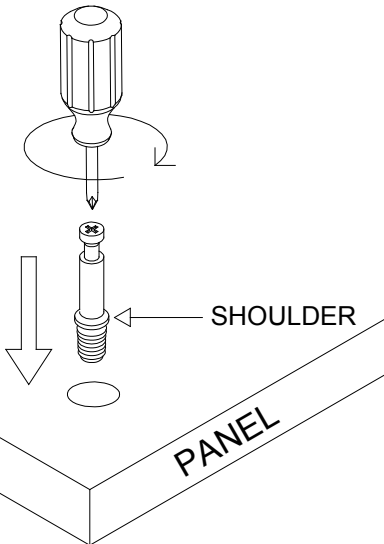

Place Cam-bolt on pre-drilled hole and screw in vertically.

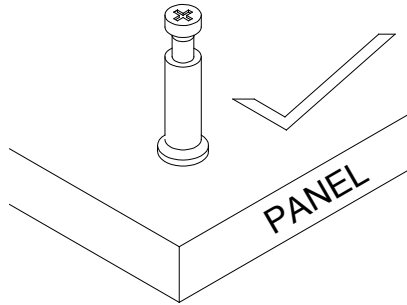


Shoulder is flushed (on the same level) with the panel.

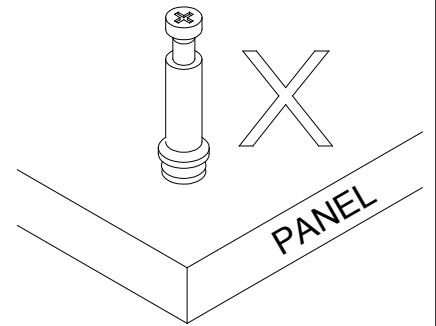


Shoulder is above the panel.

Place Cam-bolt to the designated pre-drilled holes on the panel. Use a Phillips Screwdriver to tighten Cam-bolt vertically until shoulder is flushed (on the same level) with panel. Do not over-tighten or under-tighten.

INSERTING CAM-LOCK

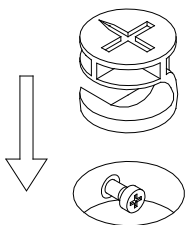

 Insert Cam-lock with arrow align to Cam-bolt head.

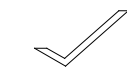


CORRECT



WRONG


Align the arrow on the Cam-lock to the Cam-bolt head and insert the Cam-lock. Ensure Cam-lock is fully inserted.



TIGHTENING CAM-LOCK

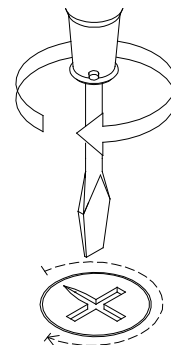

Use a Flat-head Screwdriver to turn Cam-lock clockwise so it locks onto the head of the Cam-bolt. Turn until it is snug (about 3/4ths of a turn) -- over-tightening could damage Cam-lock or/and Cam-bolt.





STEP 1

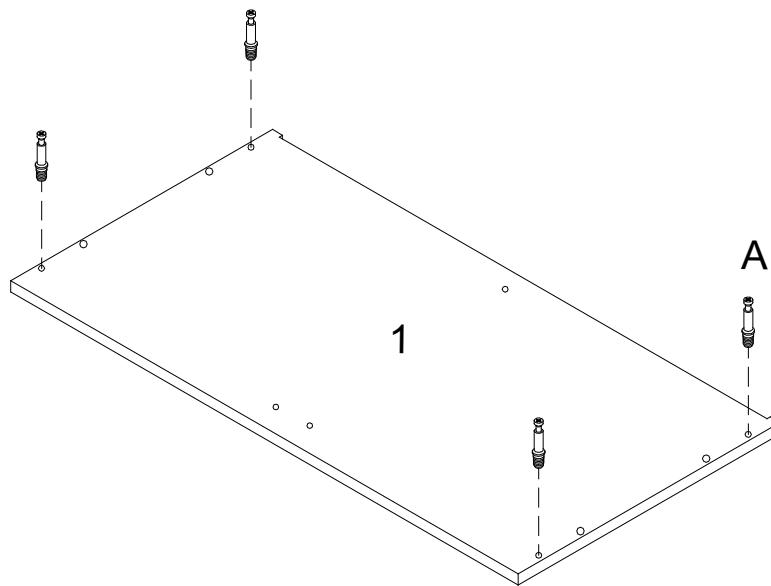

A		4 pcs
---	--	-------



 - a) Lay Top Panel (1) bottom-side up on a material that does not scratch or damage the part.
- b) Screw in Cam-bolt (A) into the designated holes on (1). Refer to Page 5 for instructions on inserting and tightening Cam-bolt.

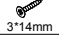

STEP 2

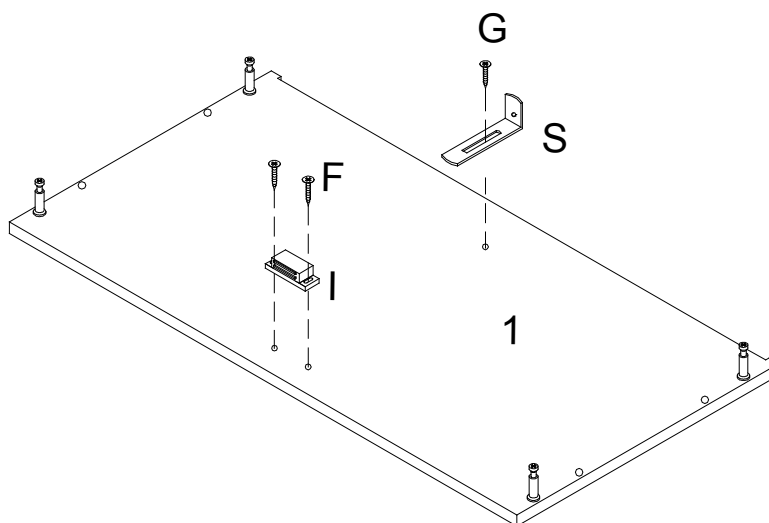
F		2 pcs
G		1 pc
I		1 pc
S		1 pc



- a) Attach Bracket (S) to Top Panel (1) by using Screw (G) as shown.
Do not tighten screw completely to allow the bracket to slide.
- b) Affix Magnetic Catch (I) to designated screw hole on front edge of (1) with Screw (F).



STEP 3


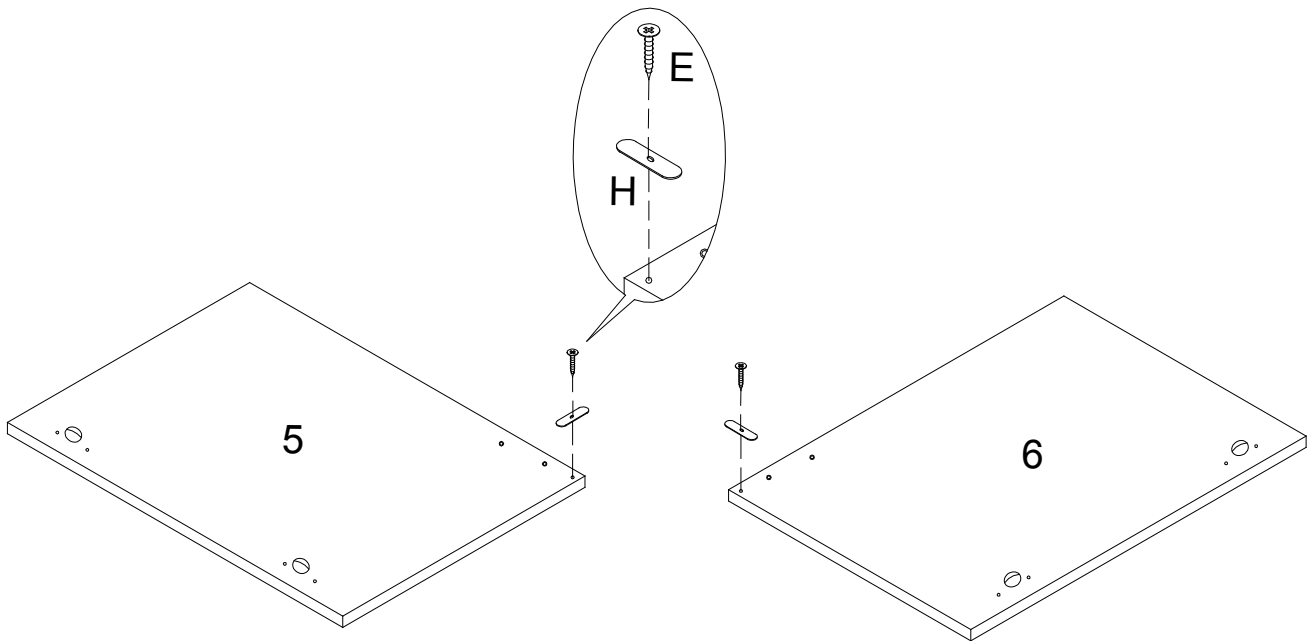
E	 3*12mm	2 pcs
H		2 pcs



- a) Lay Left and Right Door (5 & 6) bottom-side on a material that does not scratch or damage the part.
- b) Affix Magnetic Plate (H) to Door (5 & 6) with Screw (E) as shown.


STEP 4

G	 3.5*12mm	8 pcs
P		4 pcs

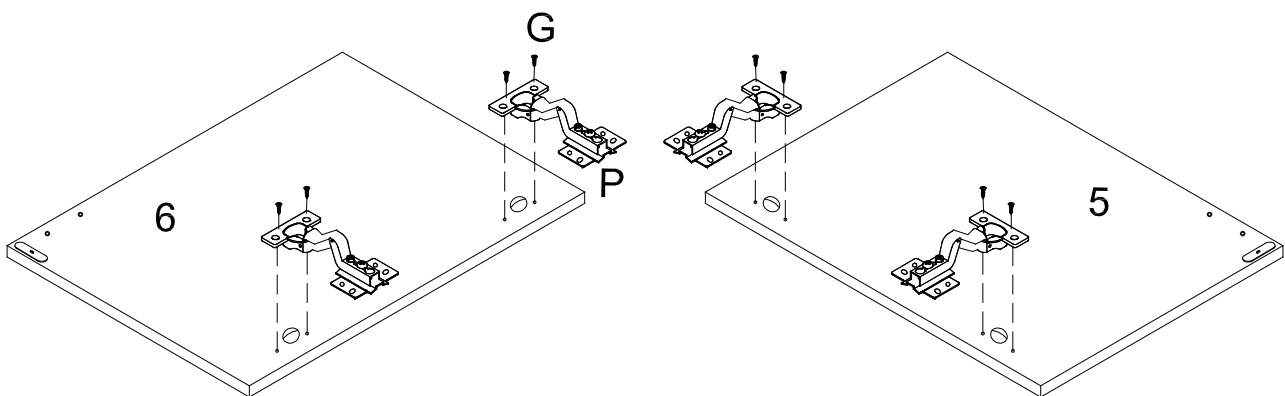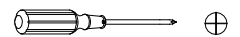 

Attach Hinge (P) to Door (5 & 6) with Screw (G) as shown.

STEP 5

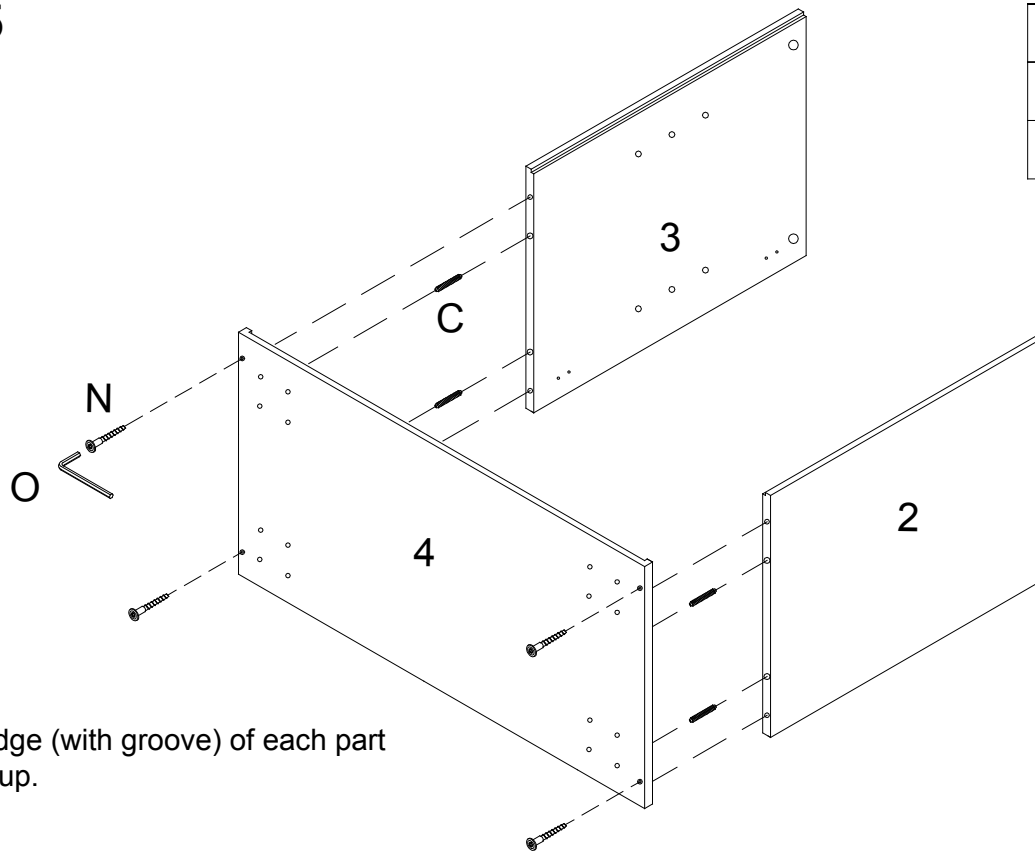


C		4 pcs
N		4 pcs
O		1 pc

Note:

The back edge (with groove) of each part has to face up.

- Prepare and position the parts as shown on a material that does not scratch and damage the parts.
- Insert Wood Dowel (C) to the inner two holes on bottom edge of Left Panel (2) and Right Panel (3).
- With assistance, attach Bottom Panel (4) to (2 & 3) via wood dowels.
- Use Screw (N) to fasten (4) to (2 & 3) and tighten with Allen Key (O).

STEP 6

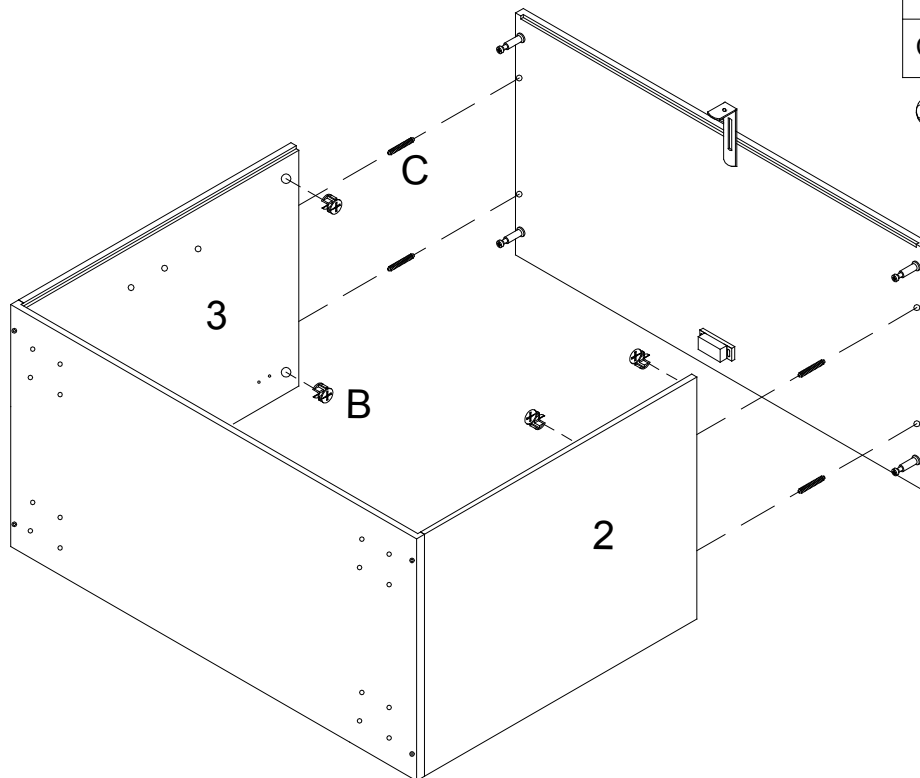


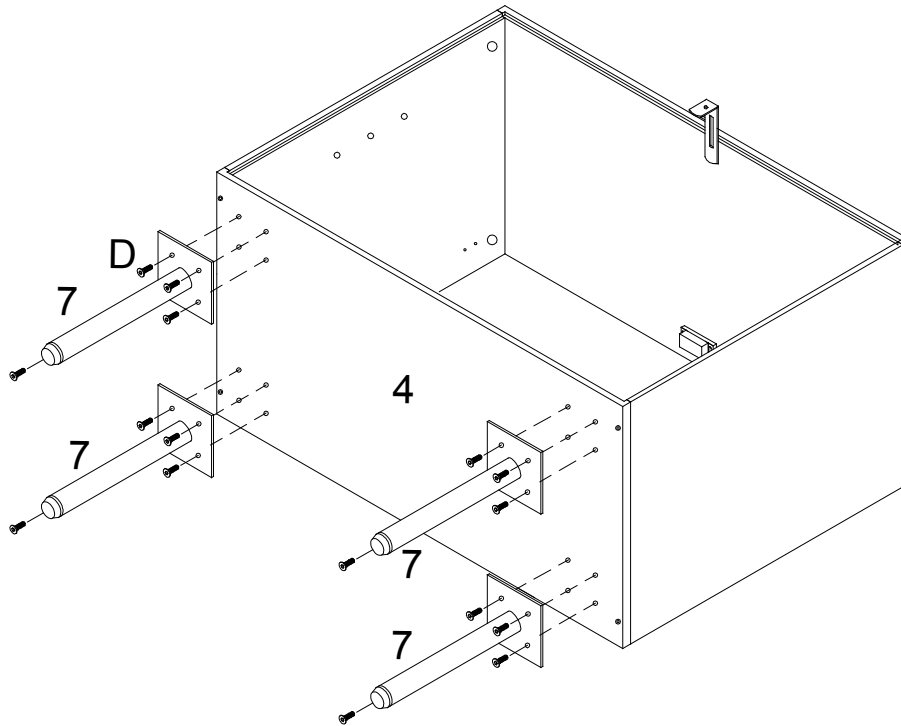
B		4 pcs
C		4 pcs



- Insert Wood Dowel (C) to the inner two holes on the top edge of Side Panel (2 & 3).
- Attach Top Panel (1) from STEP 1 to (2 & 3) via wood dowels and cam-bolts on (1).
- Insert Cam-lock (B) into the holes on (2 & 3) then turn clockwise to lock onto cam-bolt.
Refer to Page 5 for instructions on inserting and tightening cam-lock.

STEP 7


D		16 pcs
---	--	--------



- Align screw holes on Leg (7) to screw holes on Bottom Panel (4) and fasten (7) to (4) with Bolt (D). Use Allen Key to drive (D).
- Do not tighten bolts completely until all 4 bolts are in place on each leg.



STEP 8


J		14 pcs
---	---	--------

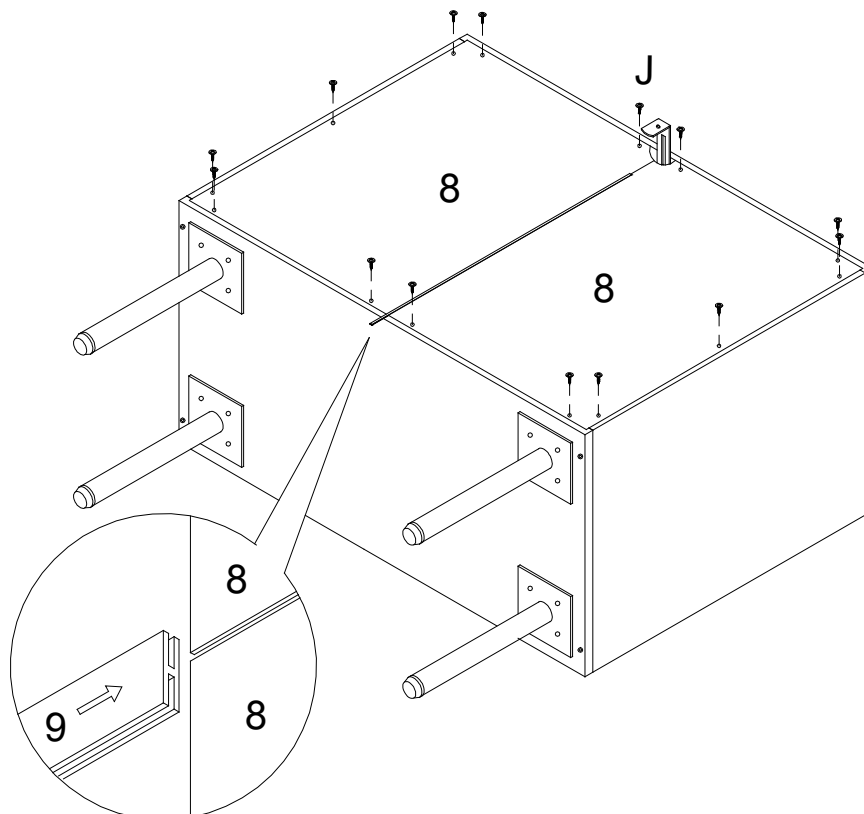

 - Use Back Panel Connect Bar (9) to join the 2 pieces of Back Panel (8).
- Fit the joined Back Panel (8) squarely to the back of the unit and fasten with Screw (J) at each pilot hole location as shown.

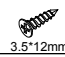

STEP 9

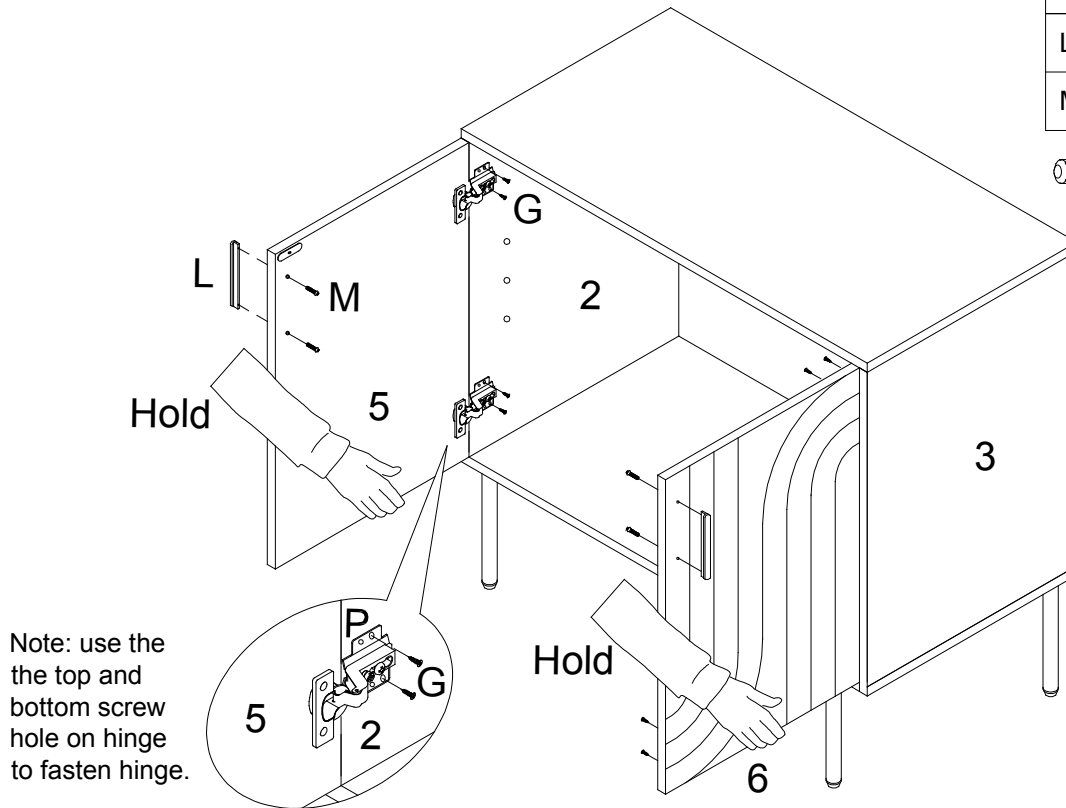G	 3.5*12mm	8 pcs
L		2 pcs
M		4 pcs




- Use assistance to hold Door (5 & 6) and use 2x Screw (G) to fasten Hinge (P) on (5 & 6) to Side Panel (2 & 3). Note: use the the top and bottom screw hole on (P) as shown in the enlarged drawing.(See STEP 14 on using the remaining 2x Screw (G) to fasten Hinge (P).
- Attach Handle (L) to Door with Handle Bolt (M).

STEP 10

Q		1 pc
R		1 pc




- Drill a hole in the dry wall to fit Plastic Anchor (Q) and the height need to the same as the screw hole on Bracket (S) on the underside of Top Panel.

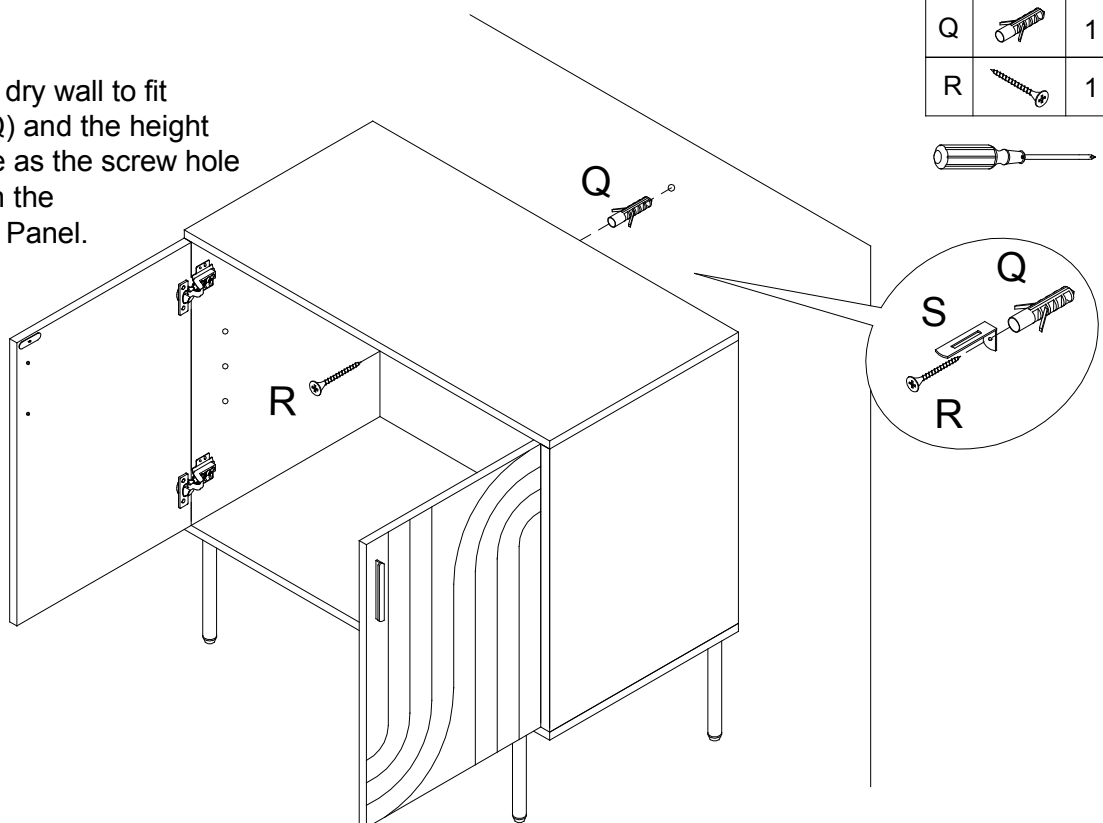


- Press Plastic wall anchor (Q) into the drilled hole. Ensure that the anchor fits securely in the wall.
- Drive Screw (R) through the Back Panel onto the screw hole on adjustable Bracket (S) into the screw hole on (Q) to secure the Buffet to the wall.


STEP 11

K		4 pcs
---	--	-------

- a) Insert Shelf Pin (K) into the designated holes on the same level at the desired height on side panels.
- b) Place Adjustable Shelf (10) by tilting it to fit between Side Panels and then level the shelf to sit on Shelf Pin (K).

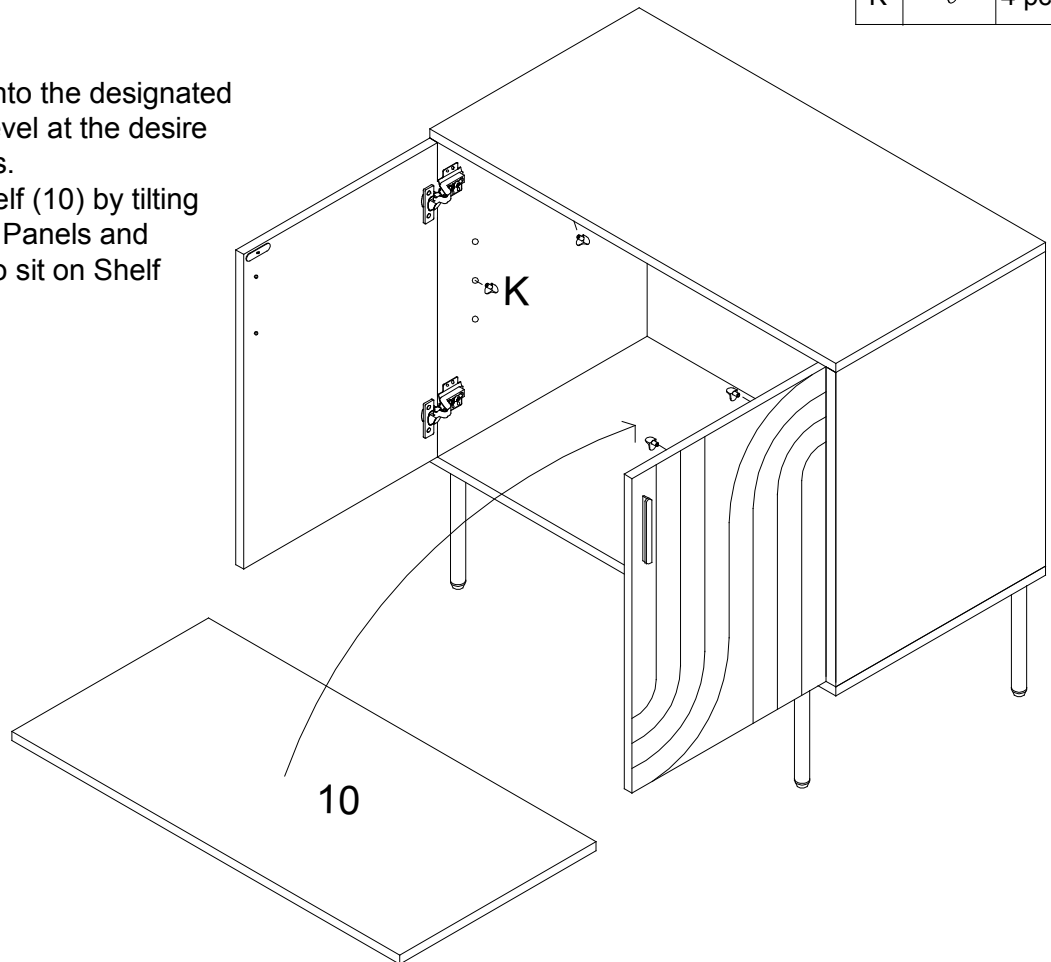



STEP 12

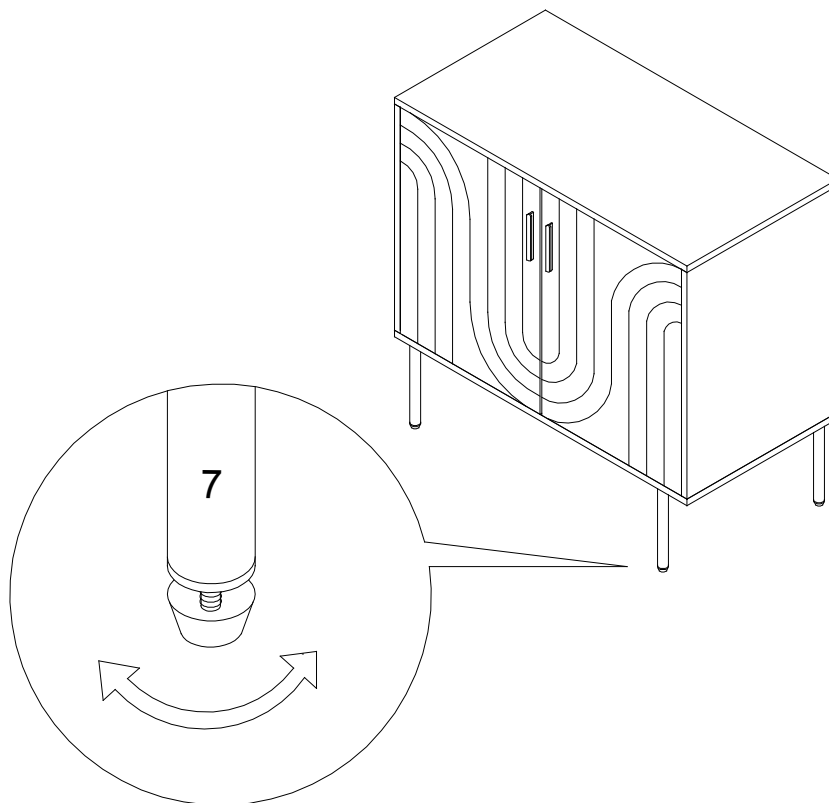



Adjust the adjustable Leg Stud on Leg (7) to level the buffet unit if necessary.

STEP 13



Door Adjustments - If necessary, adjust the doors to reduce gap between doors and also for a better fit.

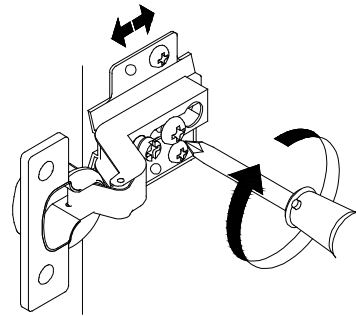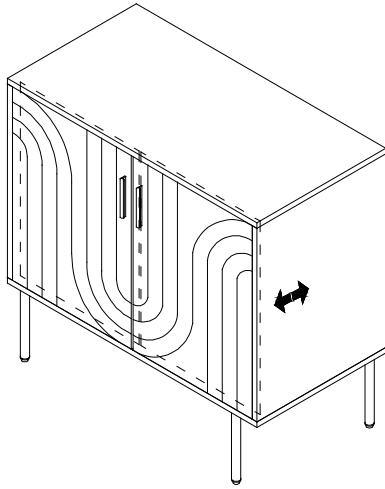

Adjust the back screw as shown to adjust the door front and back.

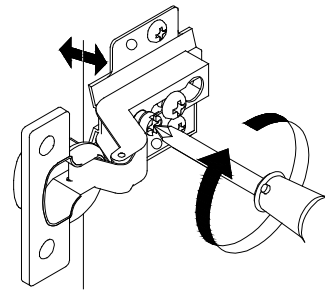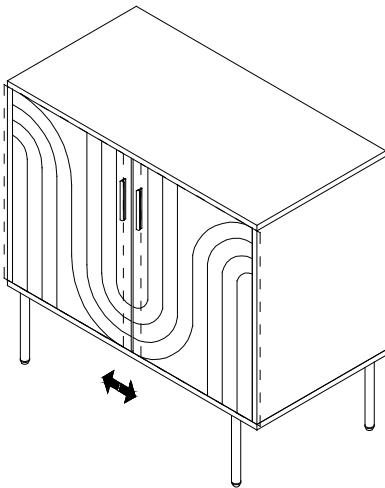



Adjust the front screw as shown to adjust the door left and right.

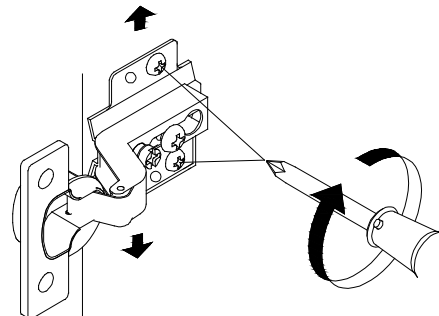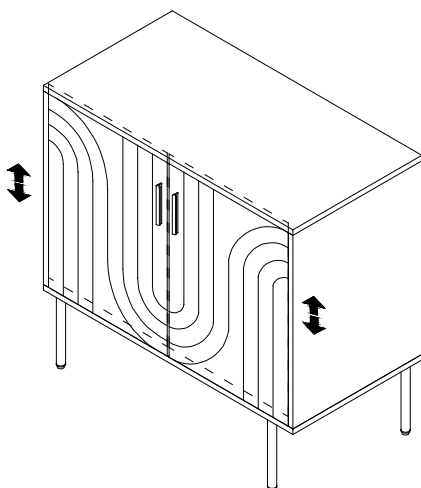

Adjust two screws as shown to adjust the door up and down.

 STEP 14

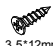G	 3.5*12mm	8 pcs
---	--	-------

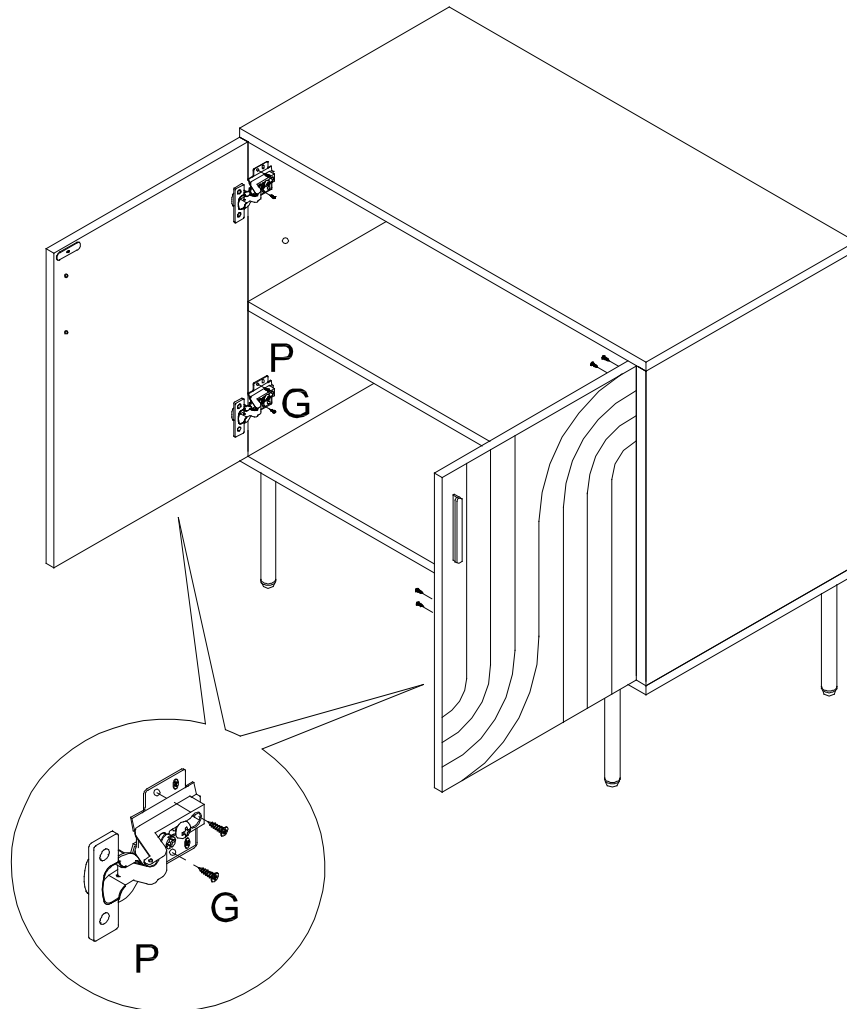

After the door adjustment is complete, use 2x Screw (G) to fixed the position of the hinge.

The assembly of the Buffet is complete.