


Customer Service

Contact us through our website: www.tamcustomerservice.com
 If you have a question about assembly, use or a possible missing part, Please contact us and we will be glad to assist you.

Perfect Popper INSTRUCTION MANUAL

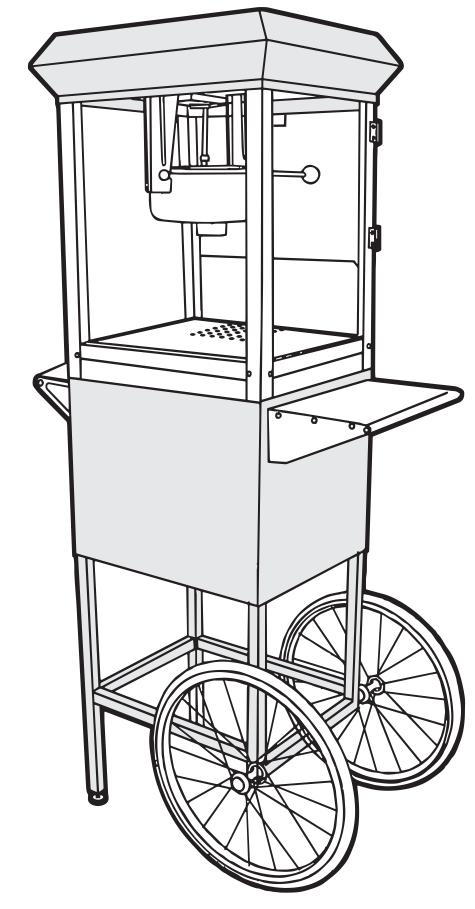

THE PERFECT POPPER POPCORN MACHINE

You have purchased our best selling popcorn popper for personal use. By purchasing the Perfect Popper you have joined an elite group of popcorn aficionados in the world of popcorn you have now mastered the art of popcorn. You have left behind the store bought popcorn with a pop of white churning salt and a handful of popcorn. This is a guaranteed-taste popcorn. The same recipe used by spot vendors, theaters, concession stands, convenience stores and restaurants. Fresh popcorn for every event is just minutes. A professional popcorn recipe and bags are included. Just from an ordinary tin, there is plenty for everyone.

We use only the finest grain, material and technology when manufacturing our popcorn. If for any reason our popcorn doesn't live up to these standards, we'll replace it. Please contact our Customer Service.

IMPORTANT SAFEGUARDS and DO NOT'S

READ ALL INSTRUCTIONS BEFORE USING YOUR POPCORN MACHINE

⚠ DANGER! HOT!

EXTREME CAUTION must be used when handling the popping kettle. A heat resistant mat is recommended. Do not touch hot surfaces. Always use handles to operate. Touching the kettle directly **WILL RESULT IN BURNS**.

KEEP CHILDREN and other farmhands away from hot kettles to avoid combustion, melting, or burns.

KEEP PLASTIC BAGS or other containers not recommended to use away from hot kettles to avoid melting, combustion, or burns from melted plastic.

STEAM IS HOT! It is **NOT** recommended that you open the lids of the kettles when in use or when hot. Escaping steam can **BURST**. Use only the kettle handle to lift the kettles to extract any hot contents.

DO NOT use this appliance for anything other than the intended usage. This Popcorn Popper is intended for residential or personal use only. This appliance is **NOT** intended for commercial use.

The popper must be properly assembled before using. Follow the instructions and recommendations carefully.

ONLY connect to an electrical outlet with the correct electrical supply and proper grounding to reduce the risk of shock and fire. **Do Not** cut or remove the grounding. If you do not have a three-prong electrical receptacle outlet available, have a certified electrician install a proper outlet. **DO NOT** use a wall receptacle that is not properly grounded. Ground a qualified electrician to make sure your wiring and circuit can handle the **Popcorn Popper**.

PLEASE NOTE: First time use, clean inside glass and wipe inside area with damp sponges. Thoroughly wipe inside of stainless steel pot with clean damp sponge before heat is applied.

IMPORTANT KNOWLEDGE FOR UNPACKING

Part No.	Part Name	Qty	Part No.	Part Name	Qty
1	Front Panel	1	1	Power Cord	1
2	Power Cord	1	2	Power Cord	1
3	Front Wheel Base	1	3	Wheels	3
4	Back Panel	1	4	Back Panel	1
5	Cart	1	5	Cart	1
6	Cart	1	6	Cart	1
7	Cart	1	7	Cart	1
8	Cart	1	8	Cart	1
9	Cart	1	9	Cart	1
10	Cart	1	10	Cart	1
11	Cart	1	11	Cart	1
12	Cart	1	12	Cart	1
13	Cart	1	13	Cart	1
14	Cart	1	14	Cart	1
15	Cart	1	15	Cart	1
16	Cart	1	16	Cart	1
17	Cart	1	17	Cart	1
18	Cart	1	18	Cart	1
19	Cart	1	19	Cart	1
20	Cart	1	20	Cart	1

Note: Some models include popcorn serving bags, serving buckets and a decorative magnet sticker.

Note: The cart comes with puncturing number, it's for manufacturer labeling use only, not for consumer assembly.

A. Cart Assembly

The cart box is shipped un-assembled. It consists of five pieces. It is easy to assemble. Take care not to scratch the surface of cart box. The art on the cart box makes this machine spot-cleaning.

- Lay the Front Panel (17) down on a flat clean carpeted surface. Place the Bottom Panel (16) even with the screw holes found near the bottom (illustrated). Use the nuts and screws provided to secure (Package 4).
- Next place the bottom of the back panel (single holes) down even with the screw holes. (Illustrated) Use the one nut and screws provided to secure both sides (Package 4).
- The two side panels simply hooked at the top of the front and rear panels. Note: Do not back into place until all the side lock catches are in a hole. Snap into place. The four pre-drilled holes on each side are designed for installation of the side handles.
- Finished assembly.

B. ASSEMBLY FULL CART

- Install the hardware (7) into the right hand side of the storage unit (8) and the working platform (9) on the left hand side with the nuts, bolts and washers included (Package 4). Tighten nuts with wrench provided.
- Next assemble the cart. Use two 3/16" x 1-3/8" bolts (Package 5) provided to connect the long stand (1) and the 2" square plate (2) together.
- Connect the assembly to (6) with the short stand (3) it comes with Axle (4) together by using two 3/16" x 1-3/8" bolts (Package 5).
- Remove two black rubber protectors which on the end of Axle (4). Place two wheels on the two ends of Axle (4). Next place Cap Nut and Washer provided (Package 4) onto the exposed end of the Axle (4). Tighten cap nut with wrench provided (Package 4). Check cap nut tightness periodically during routine maintenance.

Note: The diagram is for reference only.

C. ASSEMBLY MAIN POPPER

- Place the pot (1) onto the hinges (2) on the right side. Use the bottom pot (1) into the hole of the pot (1) centered at approximately a 70 degree angle to the bottom hole. Use the large pin and the split pin to connect and place the pot on the left hanger. Wave the handle of pot up, make sure the right side is well seated on the side of right hanger. Pull the handle of pot down, let it sit for an instant, tighten before starting the motor. Plug the pot into the outlet located on the bottom (illustrated). Use the one nut and screws provided to secure both sides (Package 4).
- Align the two bottom legs on the bottom plate of the popper unit. The side panels will bech slightly to maintain and the corner.
- The glass door (12) simply slides into the two anchor hinges on the popping unit. (3). The door is easy to release for cleaning.

Note: Some models come with single door. The rear handle should align with the magnetic lock on the popping unit (3).

CAUTION: The pot on this popper will become extremely hot when in use.

DO NOT remove the pot until it is completely cooled off.

DO NOT load pot before heating or while hot. Avoid steam released from the pot. It can build and cause severe burns.

KEEP CHILDREN AWAY FROM HOT POT!

LESSON ONE: HOW TO MAKE GREAT POPCORN

Important: NEVER POUR CORN INTO A DRY POT. TURN POT OFF WHEN HOT IN USE.

OPERATING INSTRUCTIONS:

- Switch on the LIGHT and HEATER and set it TSP or 10 for every 1/2 cup of popcorn, let heat for 3 to 4 minutes.
- Once it is heated, turn on the STIRRER switch and add popcorn kernels.
- Do not exceed 1 cup of popcorn per batch.
- Once popping has completed, turn off the STIRRER and HEATER switches, carefully dump all popcorn from the kettle.

Caution: Kettle will be HOT!

LESSON TWO: CLEANING AND MAINTENANCE

After popping cycle is complete, the popping kettle will be very hot. Use extreme care when handling.

CAUTION:

- Remember to turn the pop, or heat switch to the OFF position after the finish of the pop cycle.
- Unplug unit BEFORE removing heat kettle from hanger. Use caution not to bump heat lamp bulb during kettle removal.
- To maintain quality taste and popping conditions in your popper, we recommend that you thoroughly clean the heat kettle after using 3 to 4 times or before prolonged periods of storage.
- Turn all switches OFF (A, B, C, D) and unplug popper from outlet. Allow the popper to thoroughly cool before cleaning.
- Clean all surfaces with a damp cloth. Caution: DO NOT immerse the kettle or any other part of the popper in water. Do not use abrasive cleaners on any part of your machine.

CAUTION: HOT KETTLES! Handle with oven mitts. Keep children at a safe distance from popper during procedure.

For consistent and easiest maintenance, use a damp sponge to clean up the main unit, including the body and glasses, after each use.

Function Switch B

Light

The light switch operates the light in the back of the popper unit. The light is on when the popper is on. The light is off when the popper is off. The light is on when the popper is on. The light is off when the popper is off.

Pot

The Pot switch operates the pot. The pot is on when the popper is on. The pot is off when the popper is off. The pot is on when the popper is on. The pot is off when the popper is off.

Function Switch A

Stirrer

The Stirrer switch operates the stirrer. The stirrer is on when the popper is on. The stirrer is off when the popper is off. The stirrer is on when the popper is on. The stirrer is off when the popper is off.

Pot Heater

The Pot Heater switch operates the pot heater. The pot heater is on when the popper is on. The pot heater is off when the popper is off. The pot heater is on when the popper is on. The pot heater is off when the popper is off.

LESSON ONE: HOW TO MAKE GREAT POPCORN

Important: NEVER POUR CORN INTO A DRY POT. TURN POT OFF WHEN HOT IN USE.

OPERATING INSTRUCTIONS:

- Switch on the LIGHT and HEATER and set it TSP or 10 for every 1/2 cup of popcorn, let heat for 3 to 4 minutes.
- Once it is heated, turn on the STIRRER switch and add popcorn kernels.
- Do not exceed 1 cup of popcorn per batch.
- Once popping has completed, turn off the STIRRER and HEATER switches, carefully dump all popcorn from the kettle.

Caution: Kettle will be HOT!

LESSON TWO: CLEANING AND MAINTENANCE

After popping cycle is complete, the popping kettle will be very hot. Use extreme care when handling.

CAUTION:

- Remember to turn the pop, or heat switch to the OFF position after the finish of the pop cycle.
- Unplug unit BEFORE removing heat kettle from hanger. Use caution not to bump heat lamp bulb during kettle removal.
- To maintain quality taste and popping conditions in your popper, we recommend that you thoroughly clean the heat kettle after using 3 to 4 times or before prolonged periods of storage.
- Turn all switches OFF (A, B, C, D) and unplug popper from outlet. Allow the popper to thoroughly cool before cleaning.
- Clean all surfaces with a damp cloth. Caution: DO NOT immerse the kettle or any other part of the popper in water. Do not use abrasive cleaners on any part of your machine.

CAUTION: HOT KETTLES! Handle with oven mitts. Keep children at a safe distance from popper during procedure.

For consistent and easiest maintenance, use a damp sponge to clean up the main unit, including the body and glasses, after each use.

Function Switch B

Light

The light switch operates the light in the back of the popper unit. The light is on when the popper is on. The light is off when the popper is off. The light is on when the popper is on. The light is off when the popper is off.

Pot

The Pot switch operates the pot. The pot is on when the popper is on. The pot is off when the popper is off. The pot is on when the popper is on. The pot is off when the popper is off.

Function Switch A

Stirrer

The Stirrer switch operates the stirrer. The stirrer is on when the popper is on. The stirrer is off when the popper is off. The stirrer is on when the popper is on. The stirrer is off when the popper is off.

Pot Heater

The Pot Heater switch operates the pot heater. The pot heater is on when the popper is on. The pot heater is off when the popper is off. The pot heater is on when the popper is on. The pot heater is off when the popper is off.