


STUDIO DESK

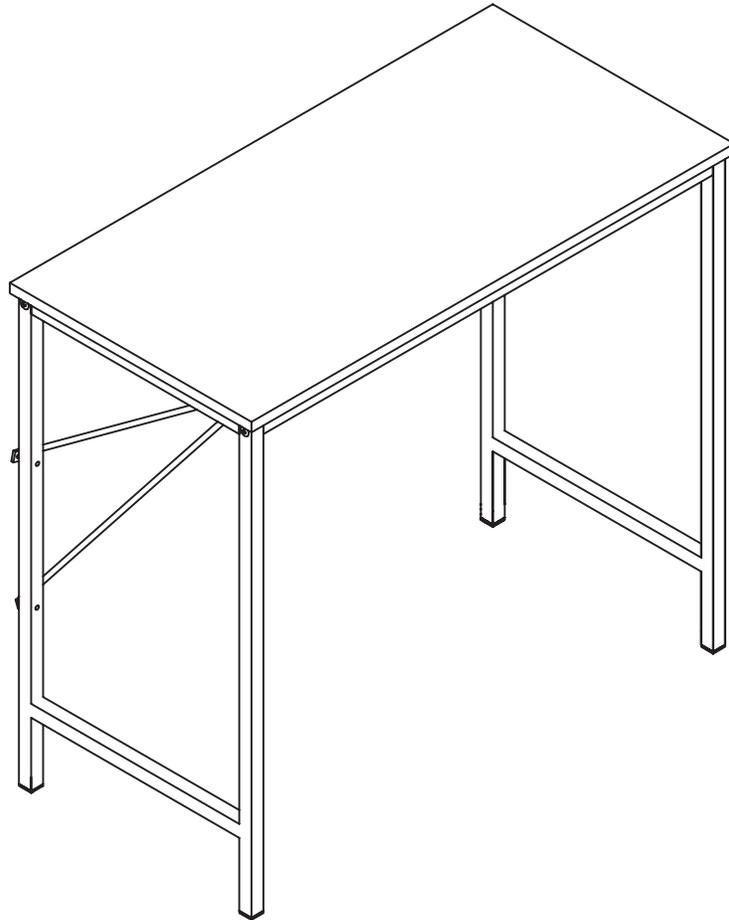

ATTACH YOUR RECEIPT HERE

Keep a copy of your proof of purchase or order confirmation which will be needed if you need to contact us about warranty coverage.

Purchase Date: _____



SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE.



Questions, problems, missing parts?

Before returning to your retailer, our exceptional customer service is available.

INFORMATION



BEFORE YOU BEGIN

Before beginning assembly, make sure all parts are present. Compare parts received with the “Parts List.” If any part is missing or damaged, do NOT attempt to assemble the product. Please read and understand this entire manual before attempting to assemble, operate or install this product. If you have any questions regarding the product, please call us toll-free, email us , or go online and live chat.



GENERAL INFORMATION

This item is made of a hollow board and a metal frame. For safe assembly, set up on a dry, soft, secure and clean surface. Do not clean with detergent or chemicals. Do not sit or stand on the table. Do not place hot items such as coffee cups directly on the surface of this furniture item. Keep away from direct sunlight and water. Do not drag the desk. For indoor use only.



SAFETY INFORMATION

WARNING


DO NOT sit or stand or allow children to sit or stand on the assembled product. Make sure connectors are securely in place. Perform periodic checks to make sure the connectors are secure and adjust if needed. Keep unassembled parts and hardware away from children and infants. This package contains small parts and sharp points. Adult assembly required.

CAUTION

READ all instructions before beginning assembly. Failure to do so may result in faulty assembly and potential injury. Assemble the item on a soft, non-abrasive surface such as carpet or cardboard to avoid damaging the item.

Max safe load limit: 30 KG / 66 LB.

PARTS LIST

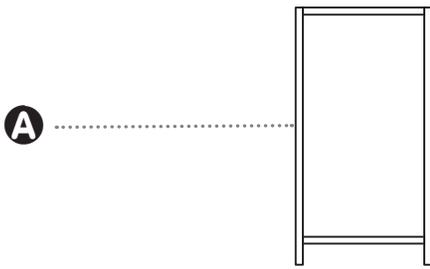

PART	DESCRIPTION	QUANTITY
A	Leg Frame	2
B	Tabletop Support	2
C	X Brace	1
D	Tabletop	1




HARDWARE CONTENTS




E
M6x30mm Screw
Qty: 10



F
M4x27MM Screw
Qty: 4

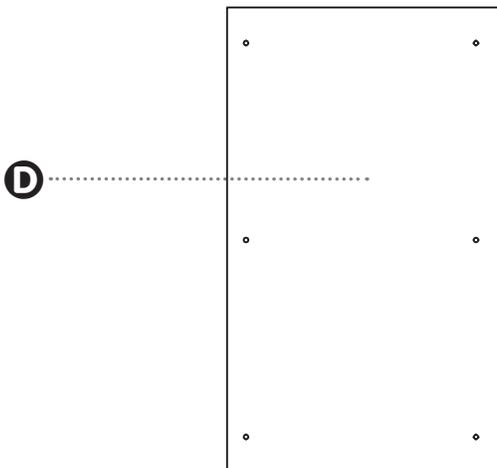

G
4mm Screw Cap
Qty: 4

 

H
Wrench
Qty: 1


ASSEMBLY

You will need a Phillips Head Screwdriver for assembly.

1 Assemble the base: you will need both **Leg Frames A** and both **Tabletop Supports B**. Attach one **Tabletop Support** to a corner of the first **Leg Frame** using 1 **Screw E**. Check that the three drilled holes face up and down, not toward the sides. Tighten using your Screwdriver. Repeat to attach the other **Tabletop Support** to the other corner.


Locate the holes drilled on the inside of each **Frame** along one side (see enlargements) and ensure that the drilled sides are aligned as shown. Attach the second **Leg Frame** to the opposite ends of the **Tabletop Supports** as before and tighten.

Hardware Used: **E M 6x30 Screw x 4**

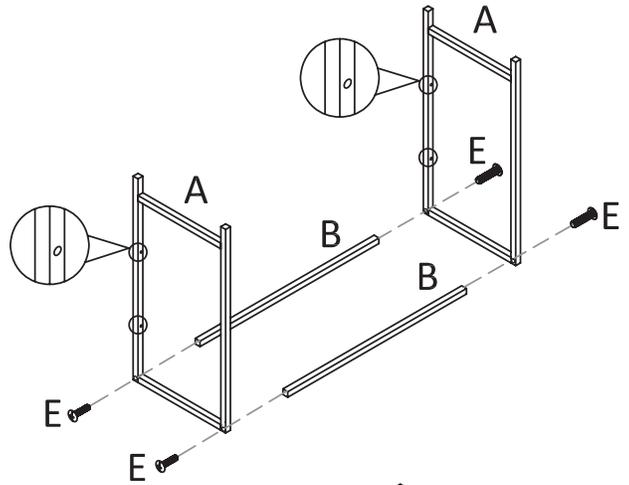


2 Join the base to the tabletop: Place the **Tabletop D** upside-down (drilled holes should face UP) on a soft, level surface. Align the drilled holes in the **Tabletop Supports** with the holes in the underside of the **Tabletop**. Using 6 **Screws E**, fasten the pieces together as shown.

Hardware Used: **E M 6x30 Screw x 6**

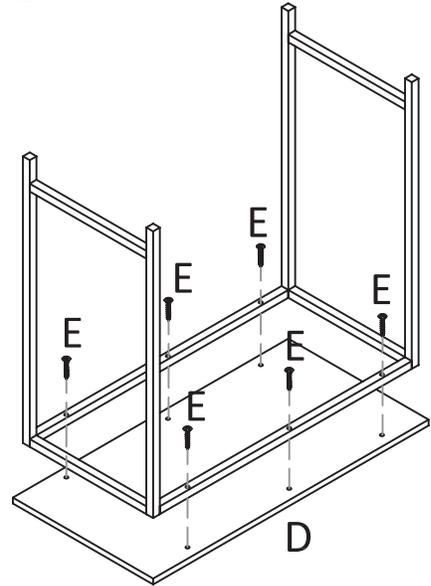


3 Brace the base: align the hole in each end of the **Metal X Brace C** with the pre-drilled holes in the **Leg Frames**. Insert a **Screw F** through each hole into and through the **Leg Frame**. Fasten using a **Screw Cap G** on the end of each **Screw**. Tighten with the **Wrench H**. Check all hardware for tightness, then carefully turn the desk upright.

Hardware Used: **F M4x27mm Screw x 4**
G Screw Cap x 4

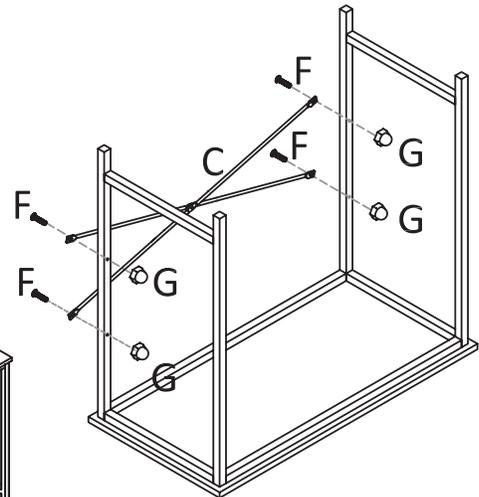

Your **Studio Desk** is ready to use!

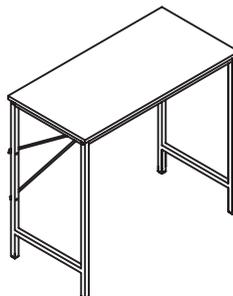



LIMITED WARRANTY

Customers in the Contiguous US

This product is warranted for a period of 1 year from original purchase date against defects in materials and workmanship under normal use. This warranty does NOT cover normal wear/weathering, exposure to water, freezing temperatures, oils, fluids, or chemicals. OR use in a commercial application if model is not designated as a commercial model. At our sole discretion, products under warranty will be repaired and/or replaced at no charge to the customer. Returns sent back to us must be sent via prepaid freight in the original retail packaging.



Important Notice

Do NOT return to place of purchase—for customer service and warranty issues contact our Customer Service Center or go online and live chat.