 
 
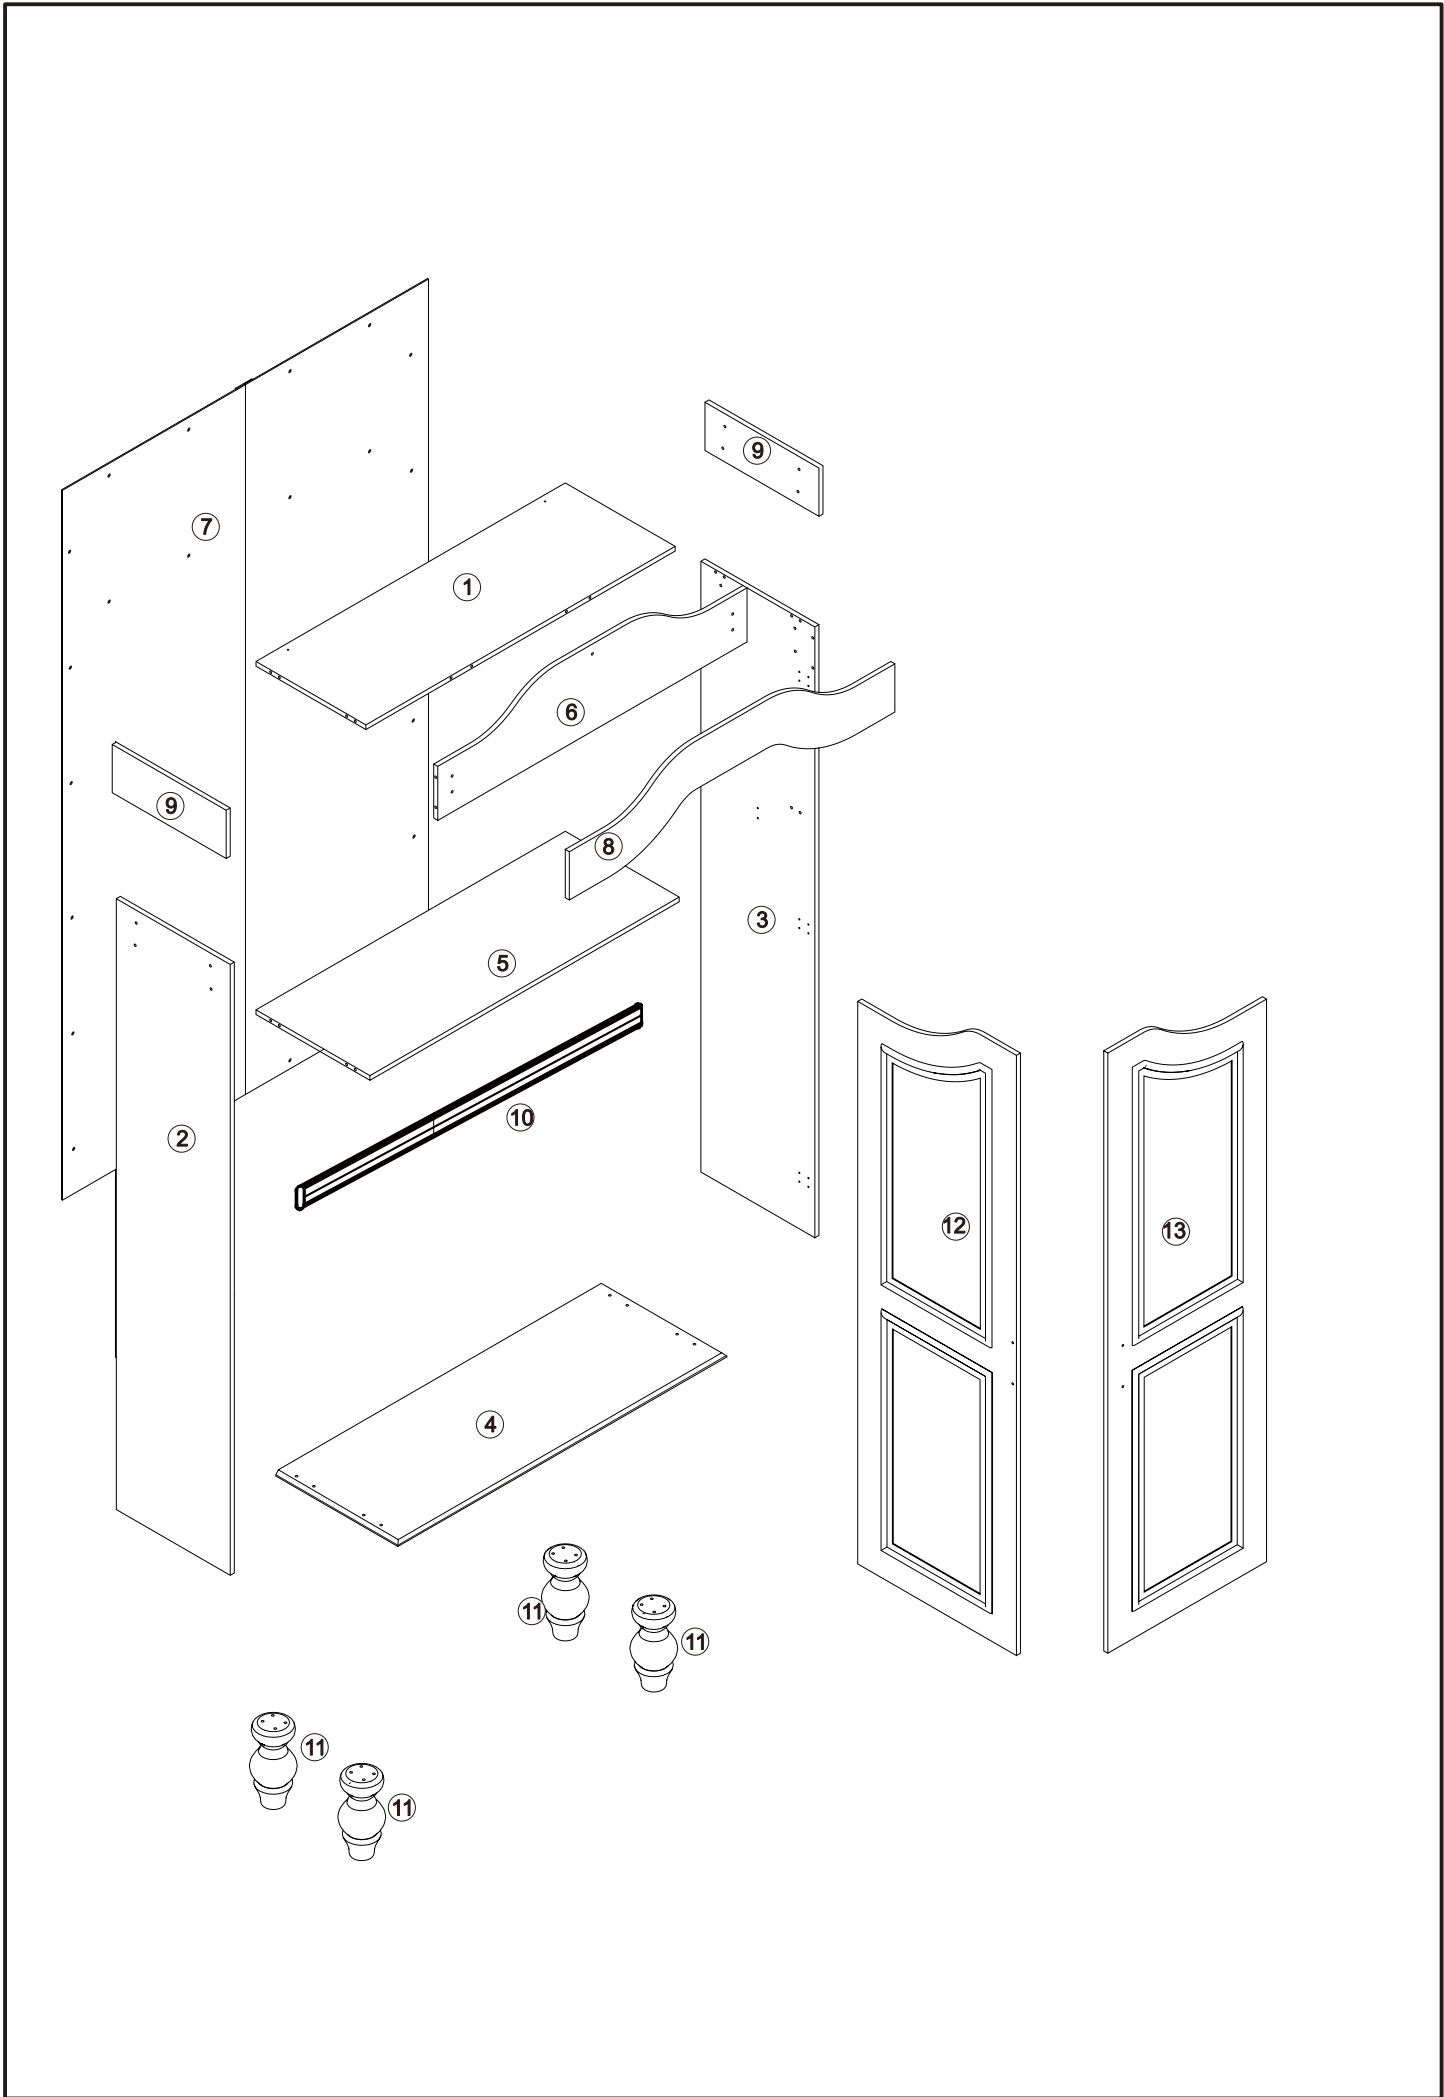 
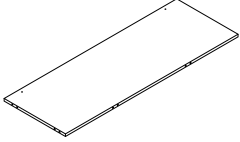 
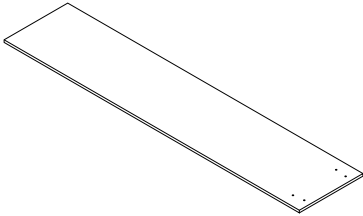 
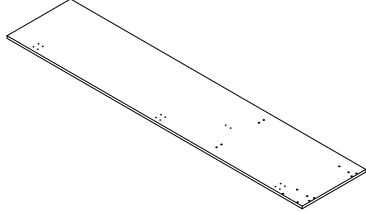 
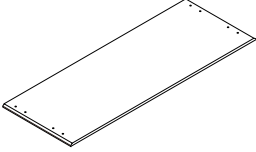 
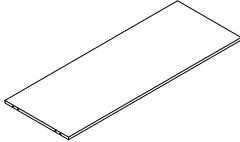 
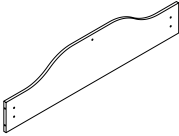 
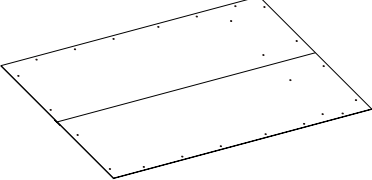 
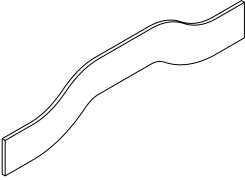 
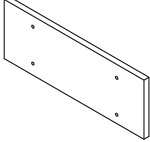 
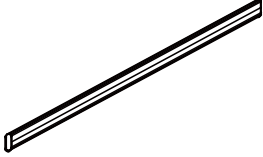 
 


 

 
 
 

 


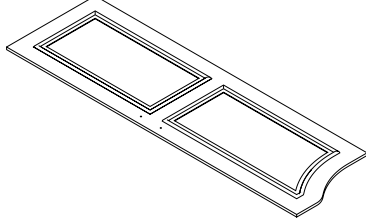



Installation instruction

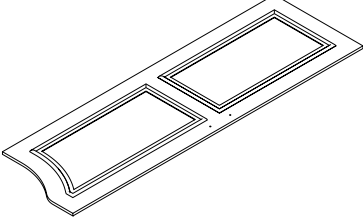

Parts and Operation Elements

					
①	1pc	②	1pc	③	1pc
					
④	1pc	⑤	1pc	⑥	1pc
					
⑦	1pc	⑧	1pc	⑨	2pcs
					
⑩	1pc	⑪	4pcs	⑫	1pc
					
⑬	1pc				

  
Hardware

			
A 14+1pcs	B 14+2pcs	C 14+2pcs	D 20+2pcs
			
E 24pcs+2	F 40+3pcs	G 6 pcs	H 2pcs
			
I 2pcs	J 2pcs	L 16+1pcs	M. 4pcs
			
N 13pcs			








SPARE BAG




 
THE SPARE BAG INCLUDED EXTRA HARDWARE FOR DAMAGED OR MISSING SMALL HARDWARE WHILE YOU ARE ASSEMBLING

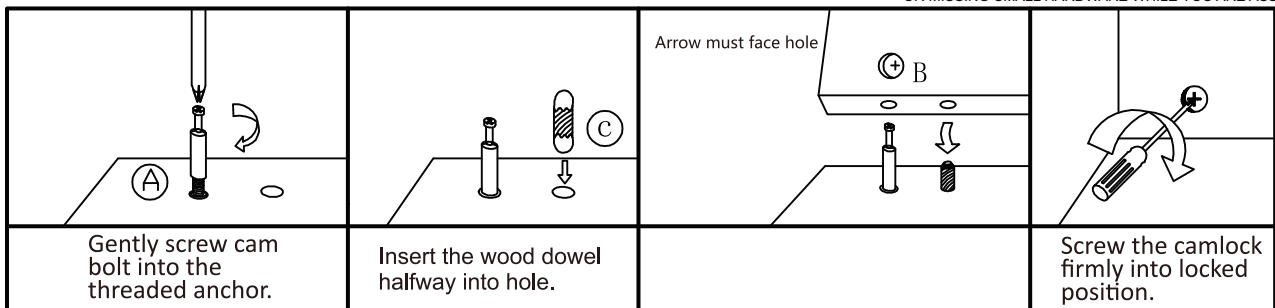

1

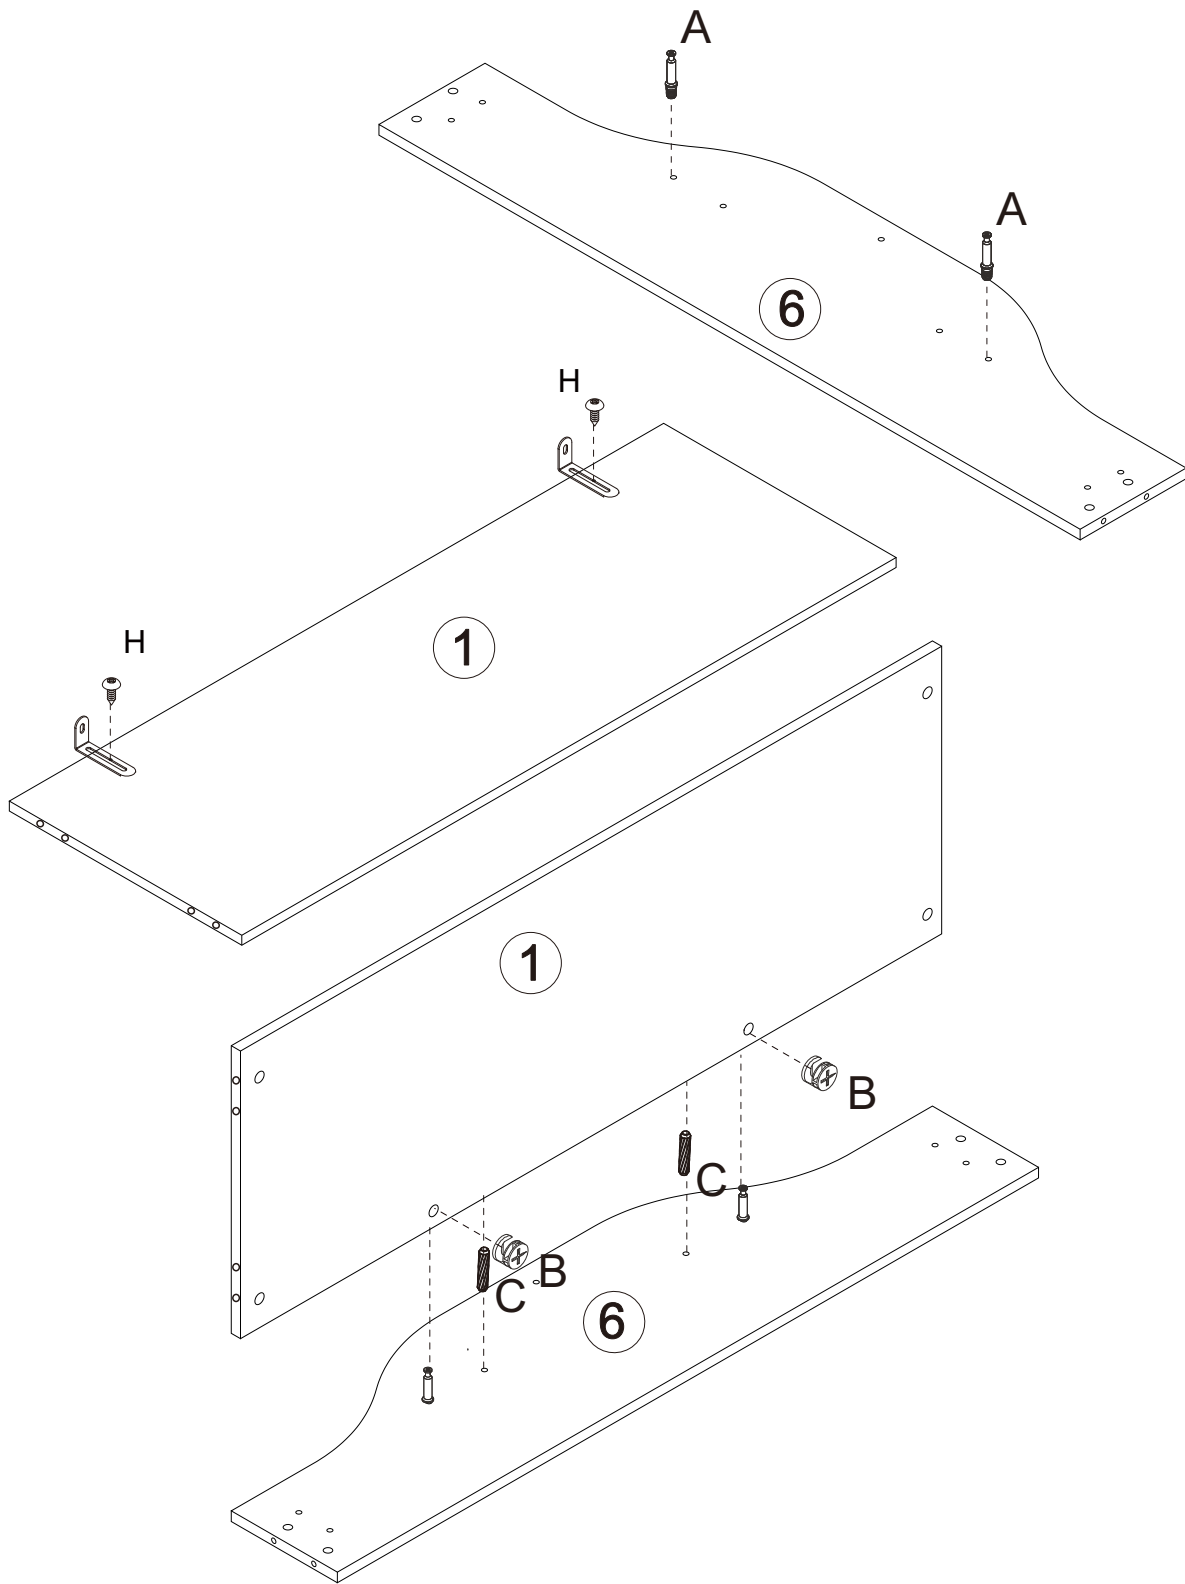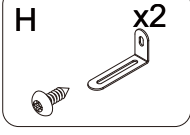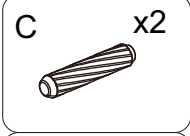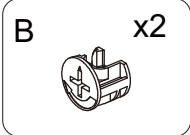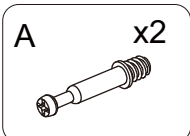     




2

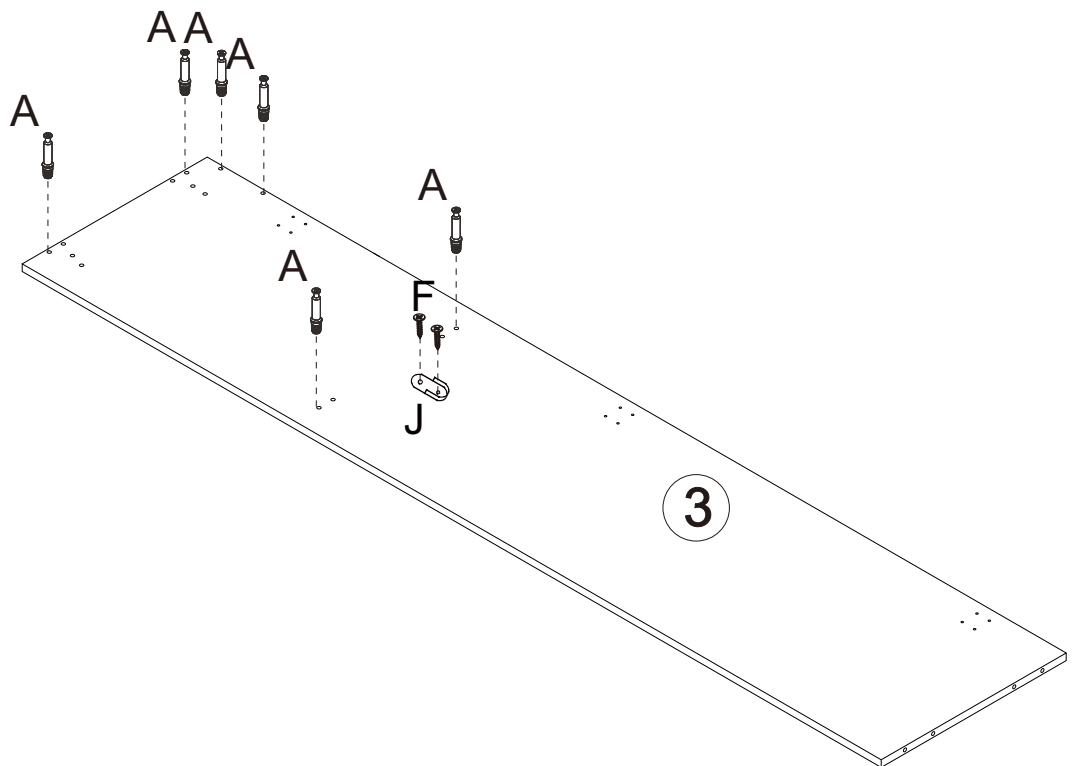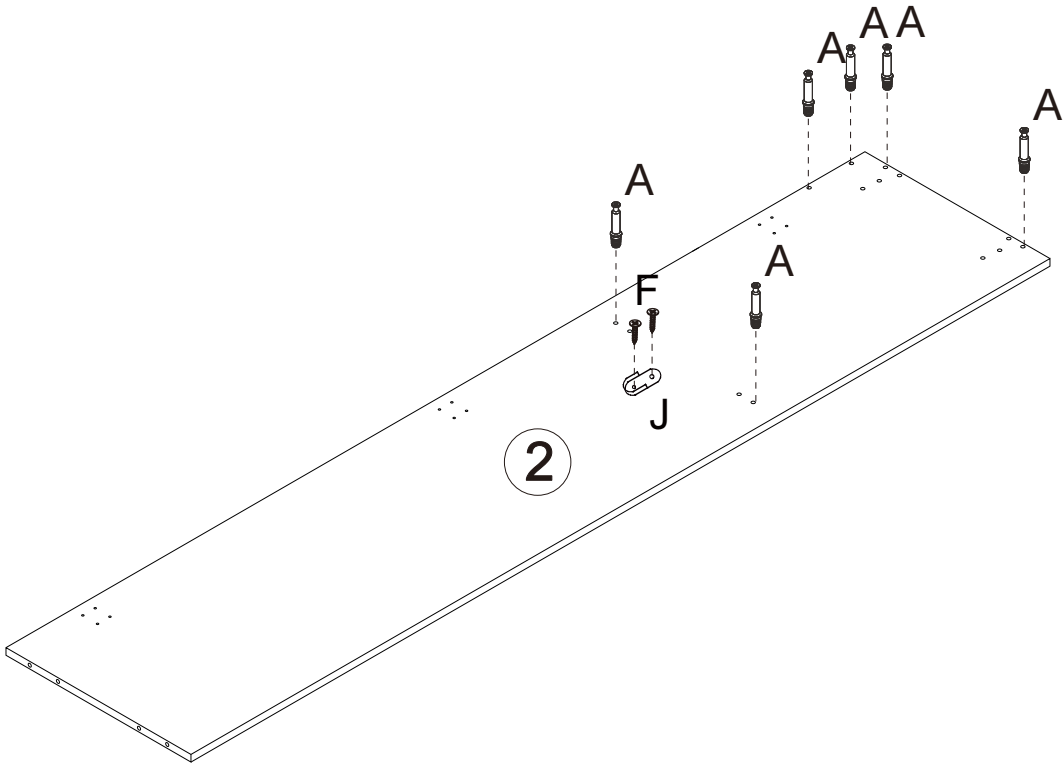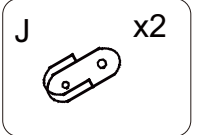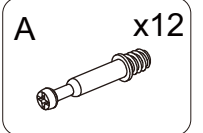    

3



B x12

   C 8

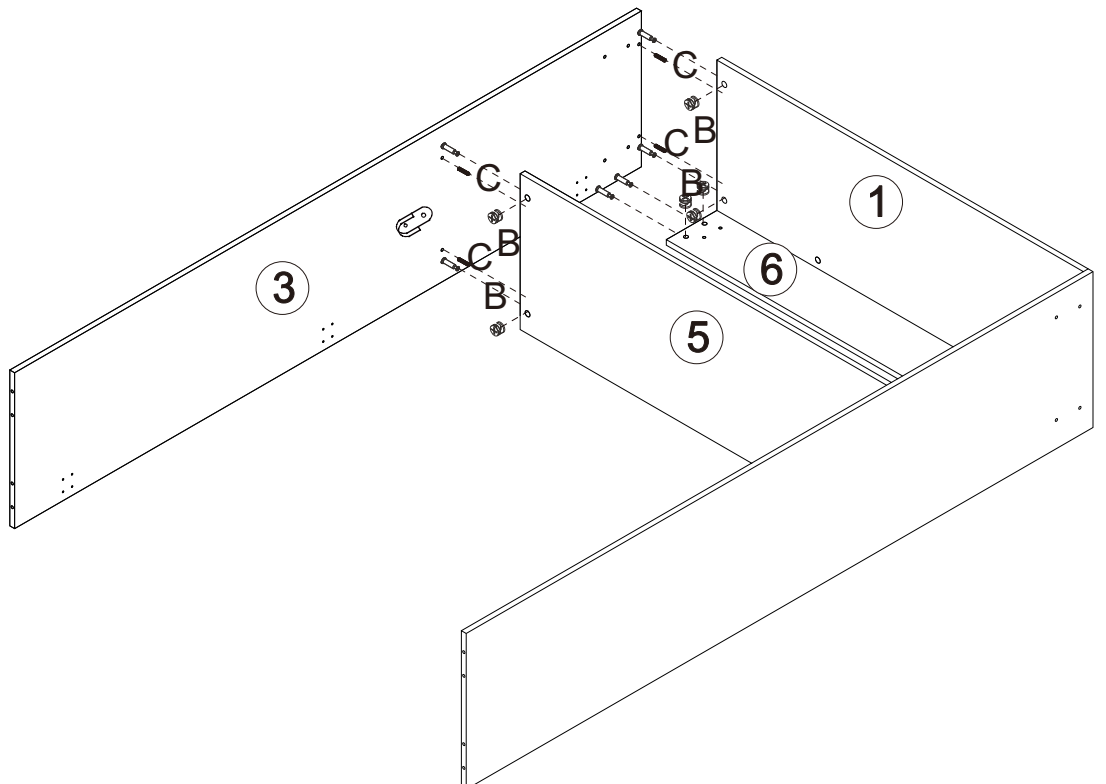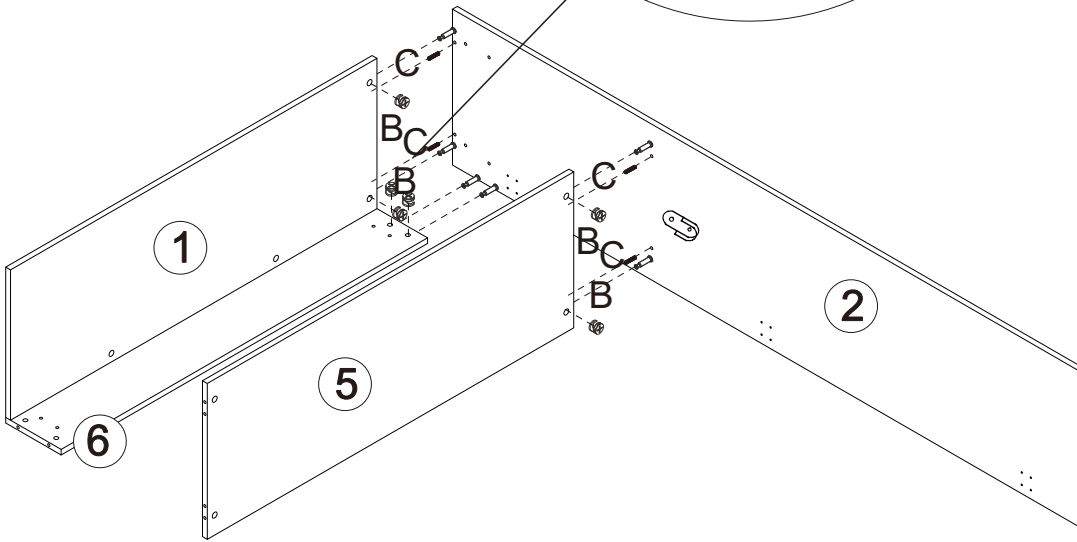
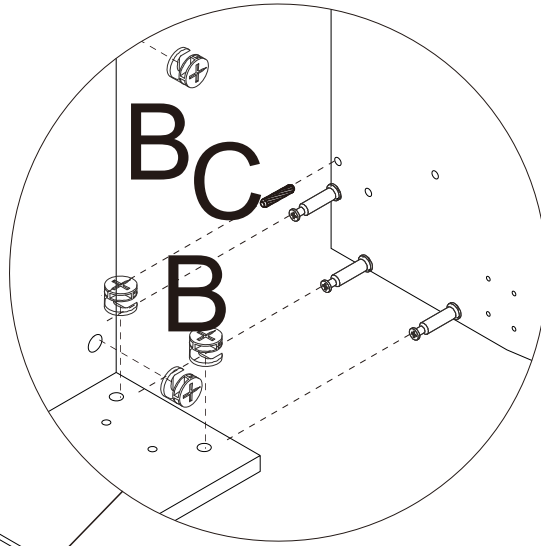


5

 
 
- D x16
- M. x4
- L x16

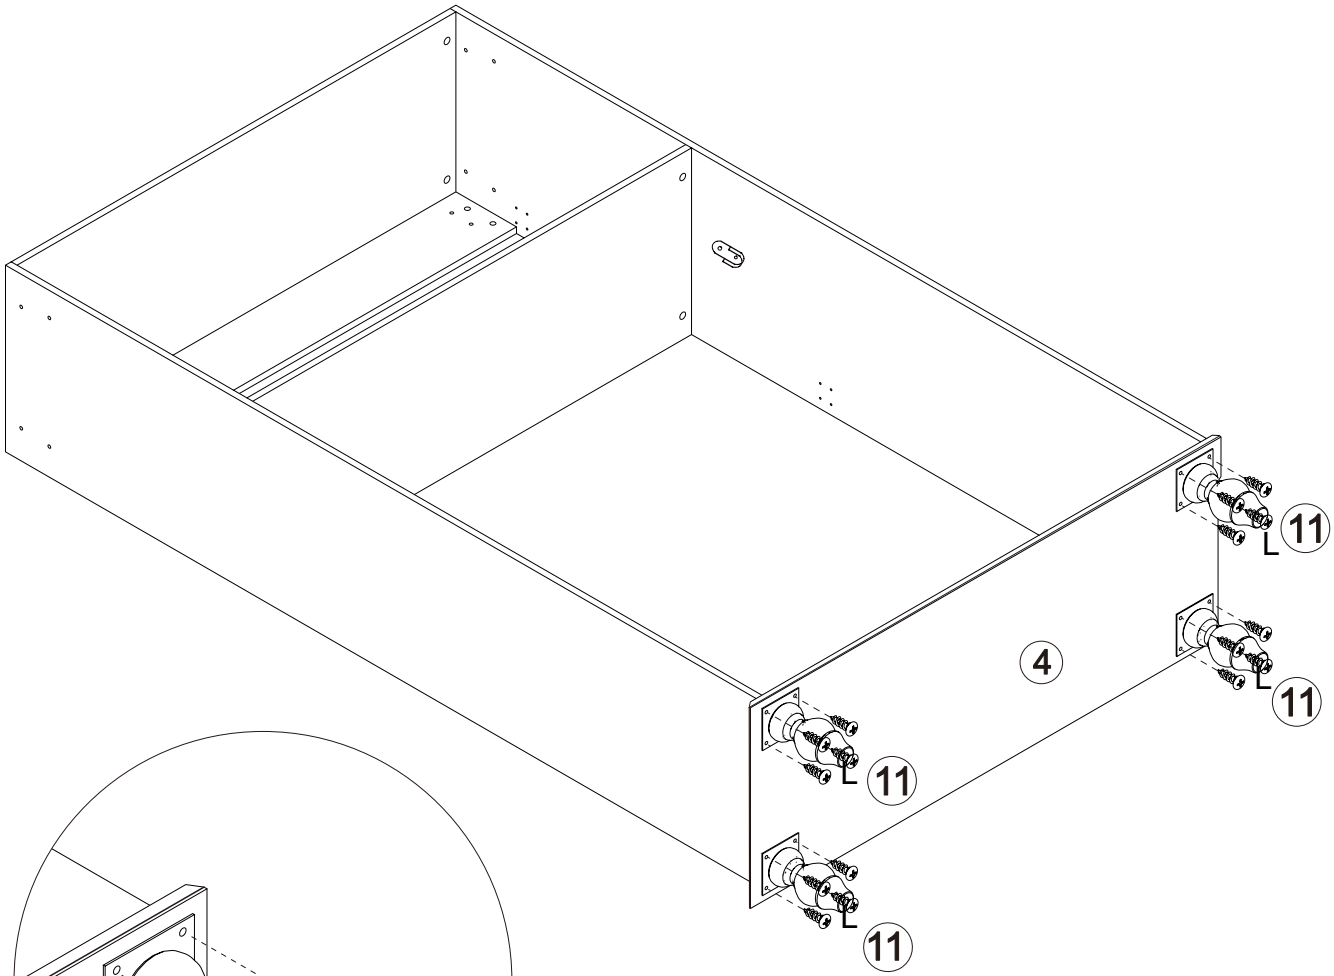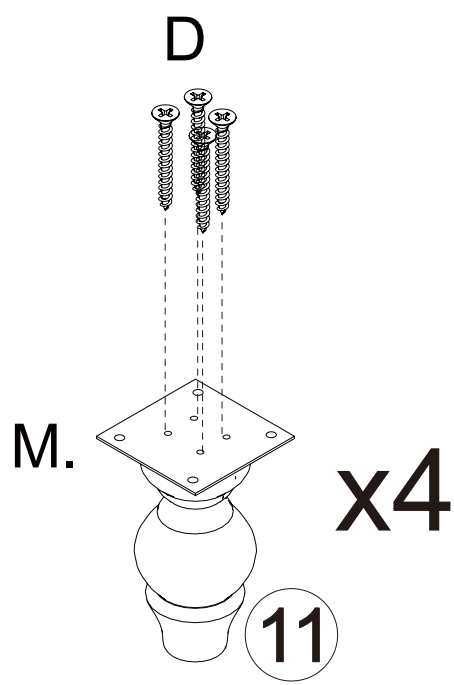

6

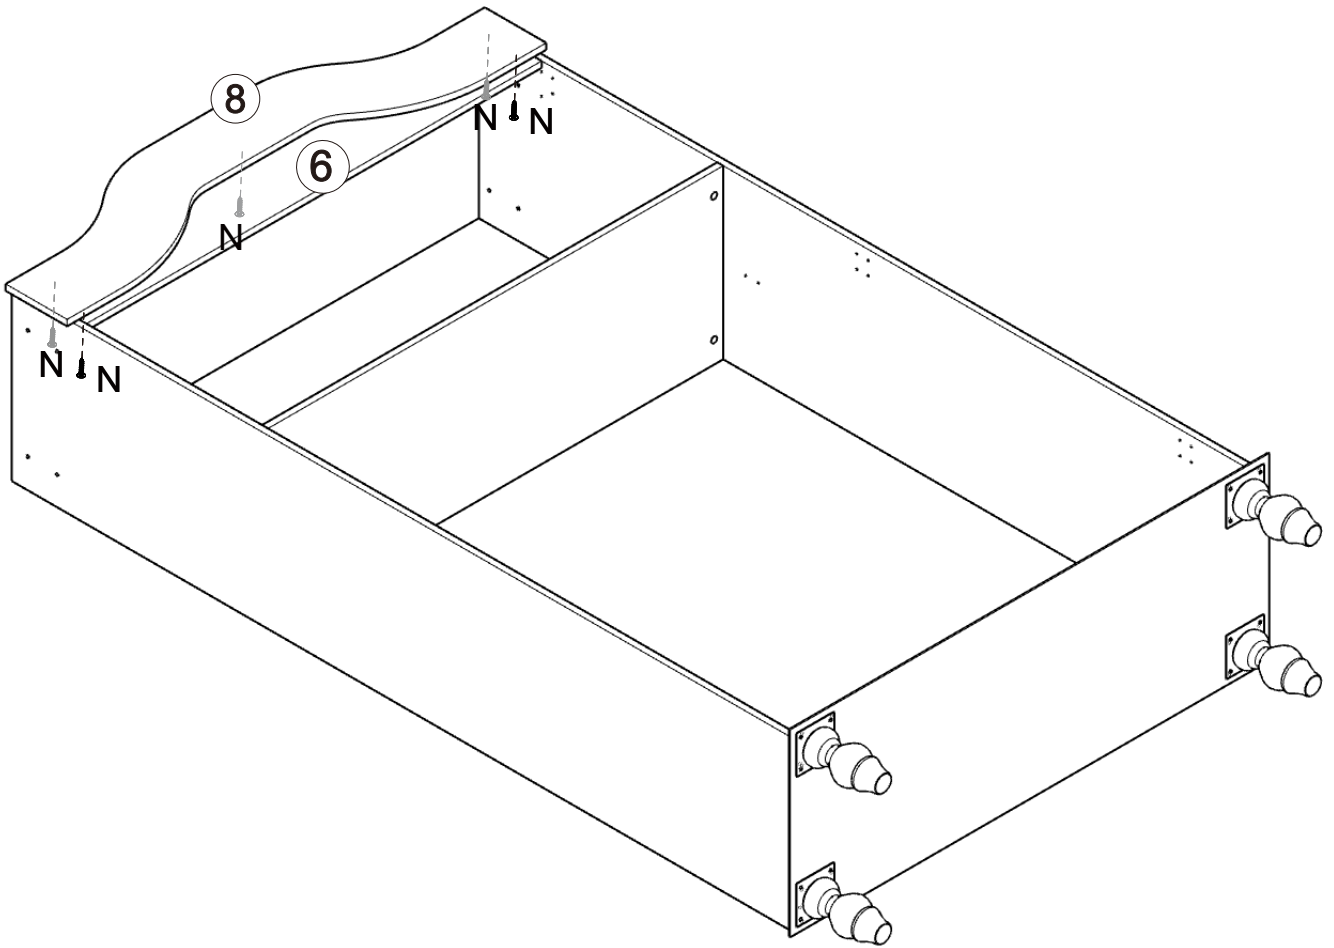 
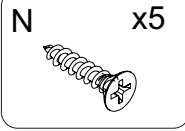 


7

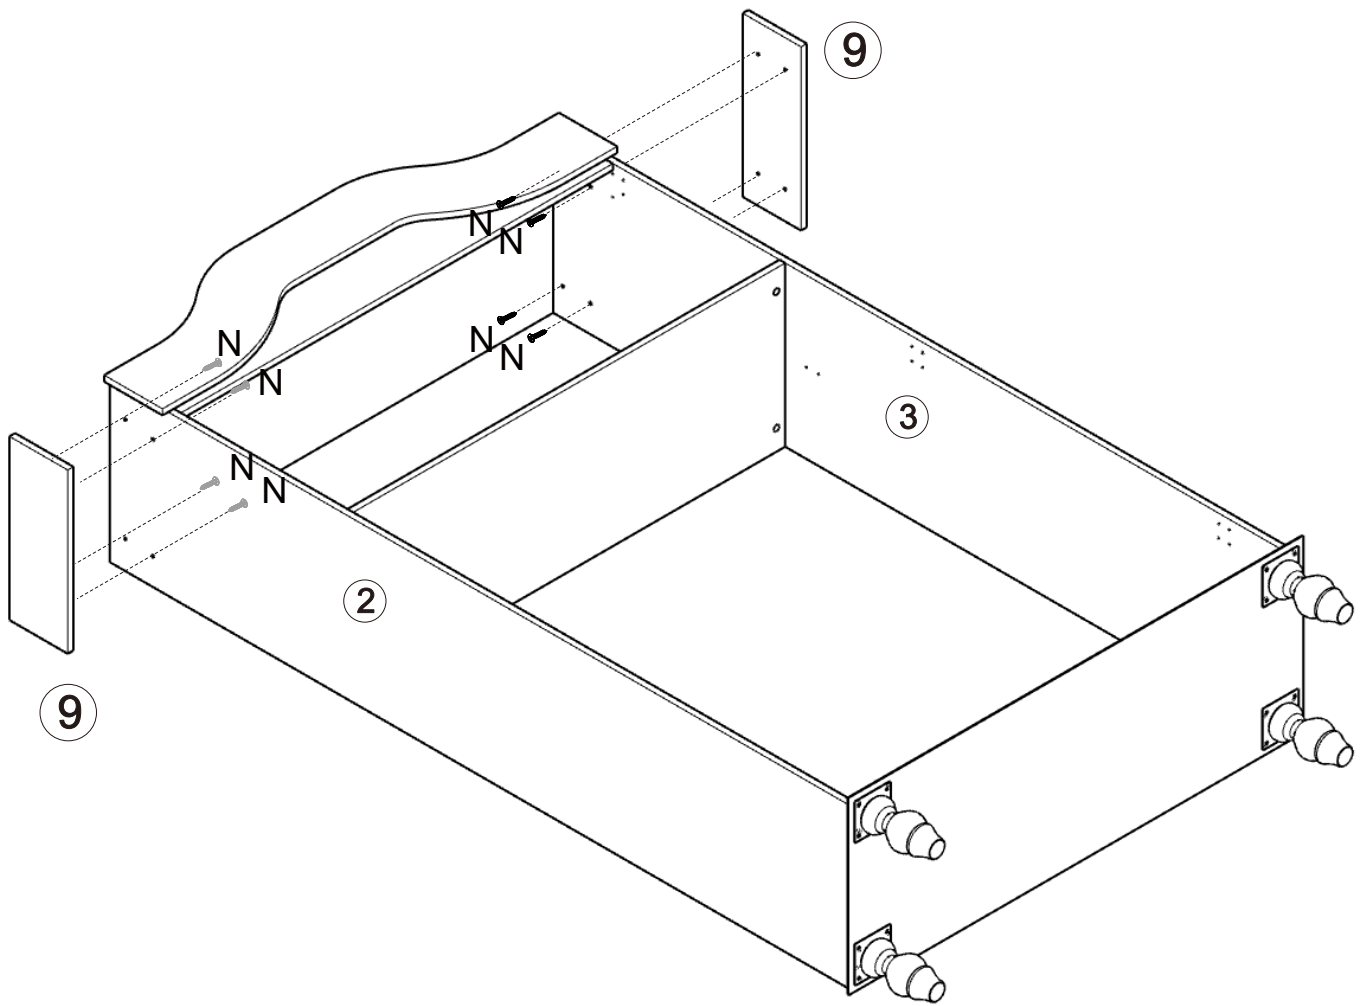 
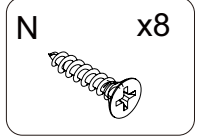 


8

  
E x24

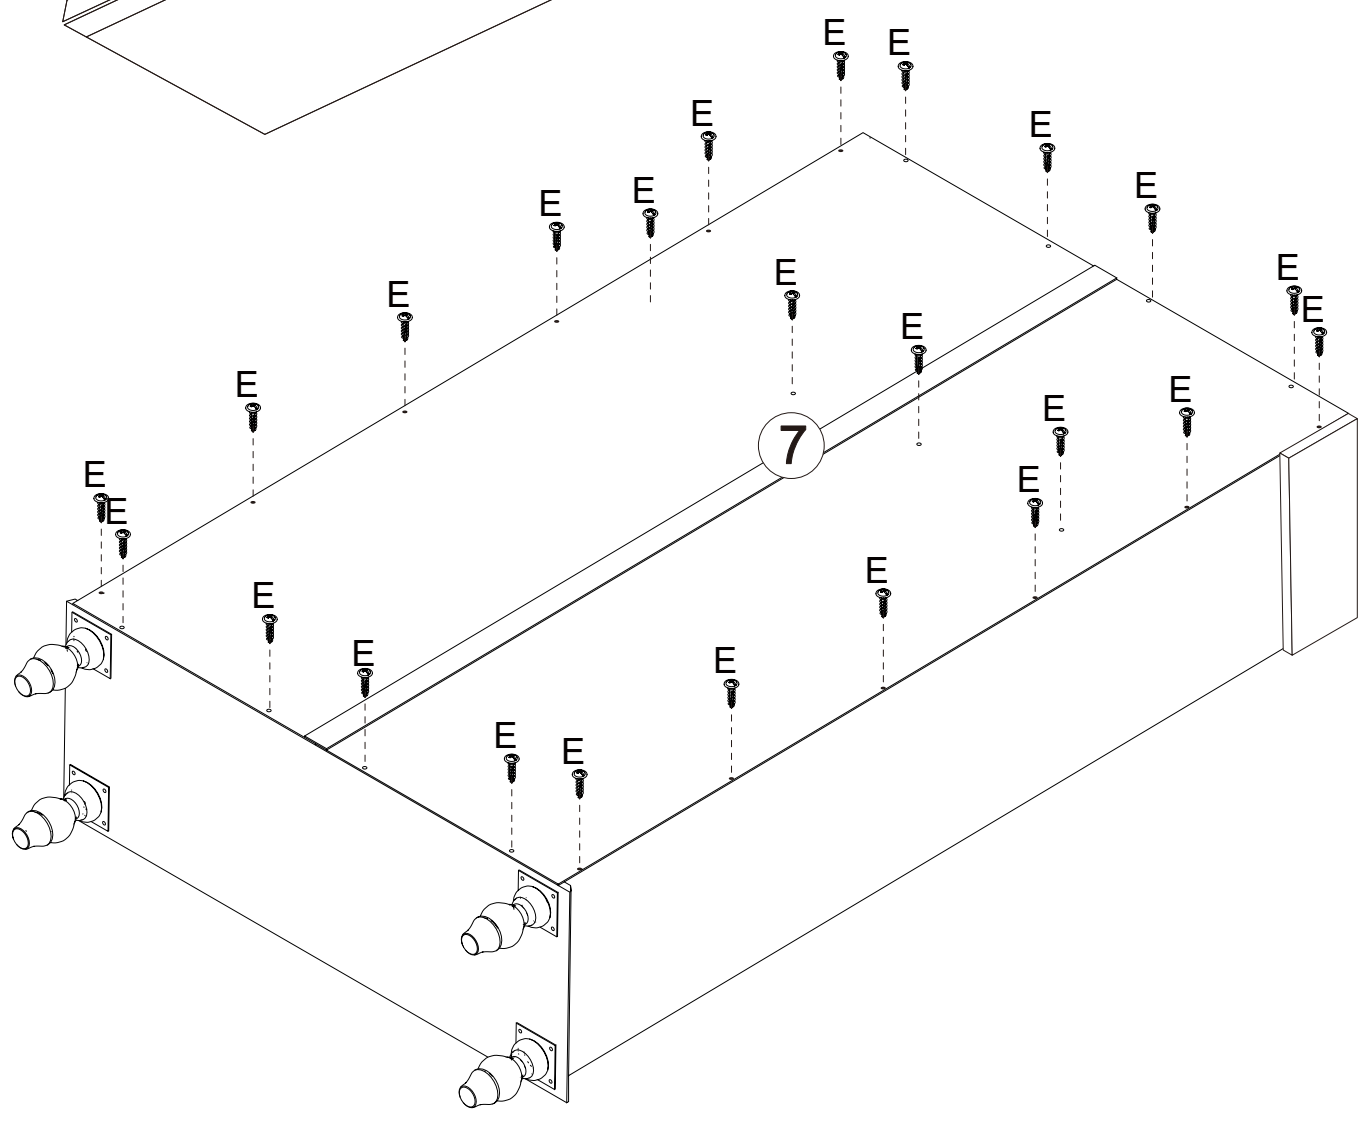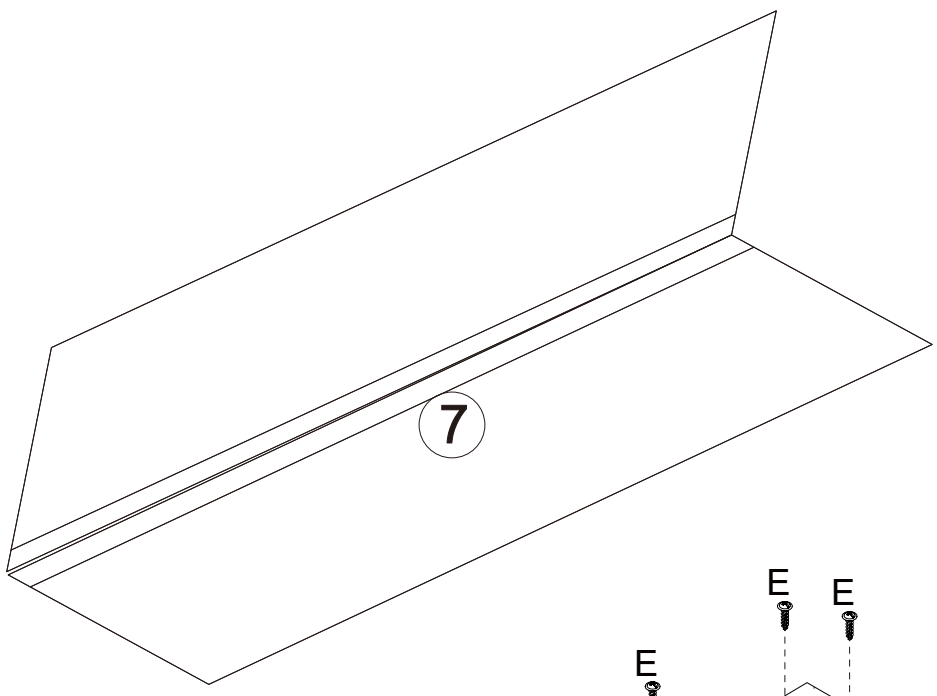





9

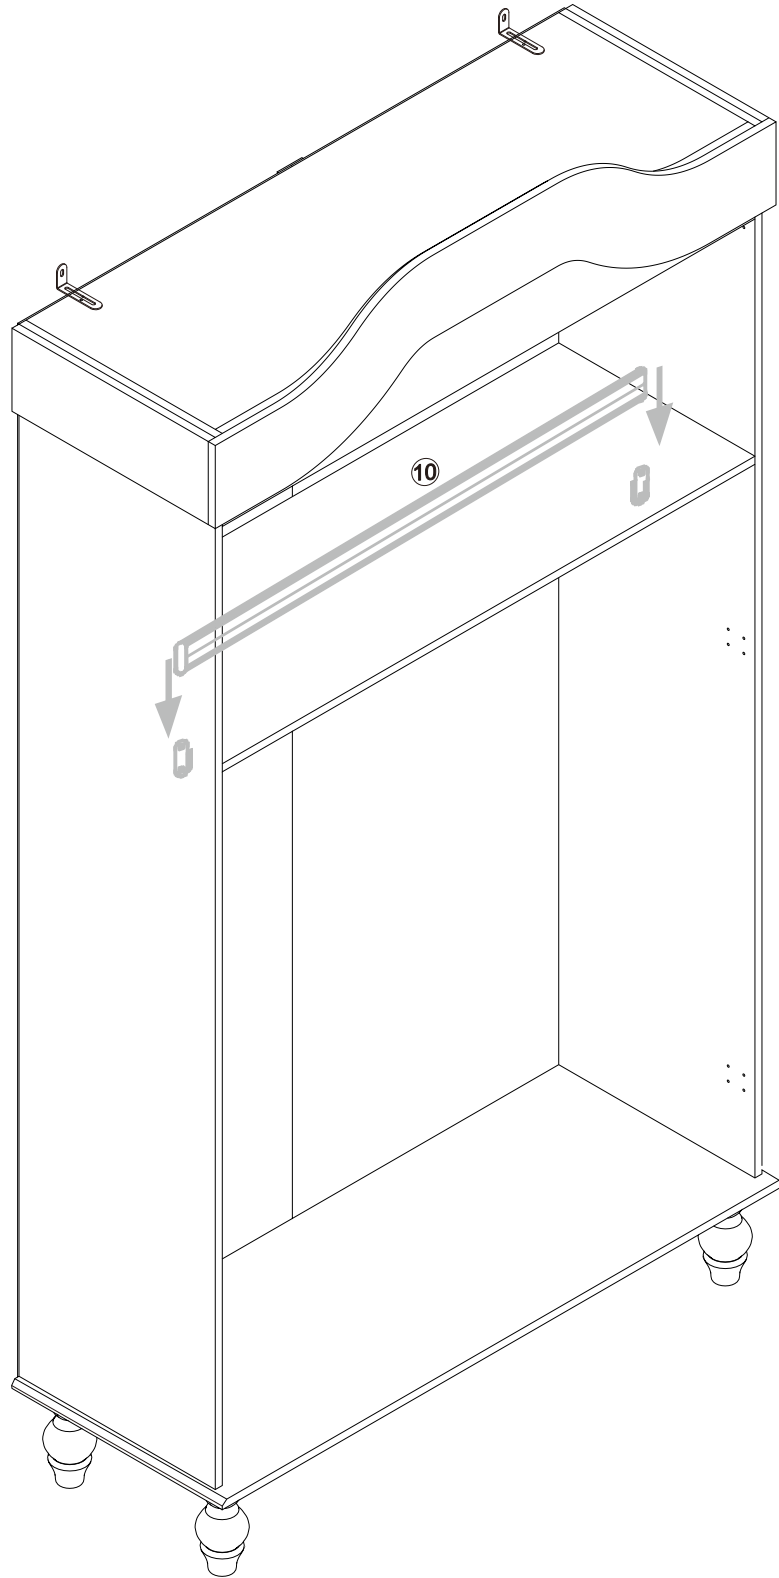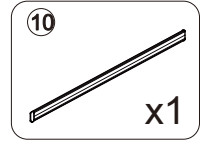  


10

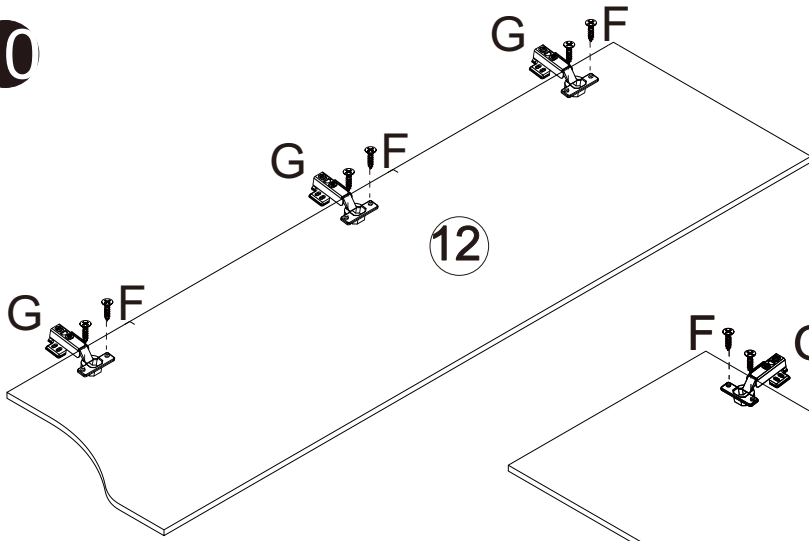 

12

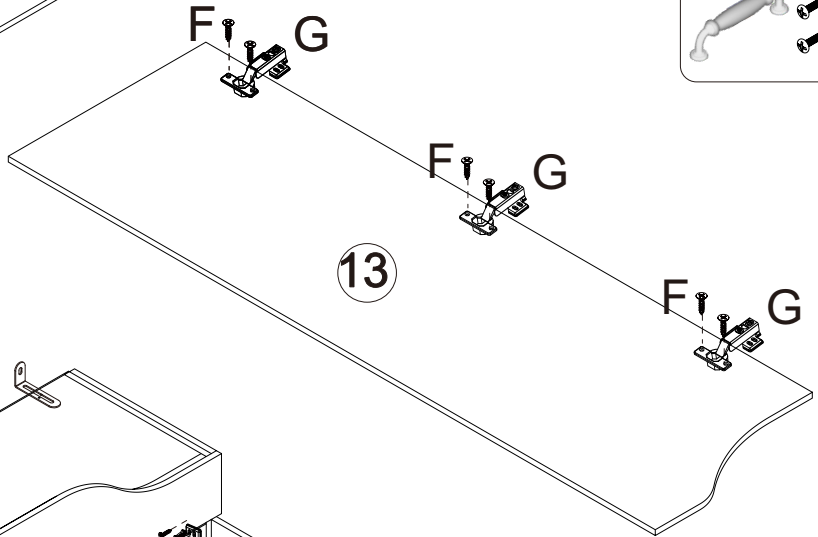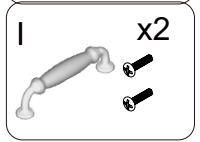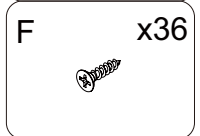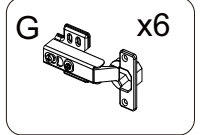    




13

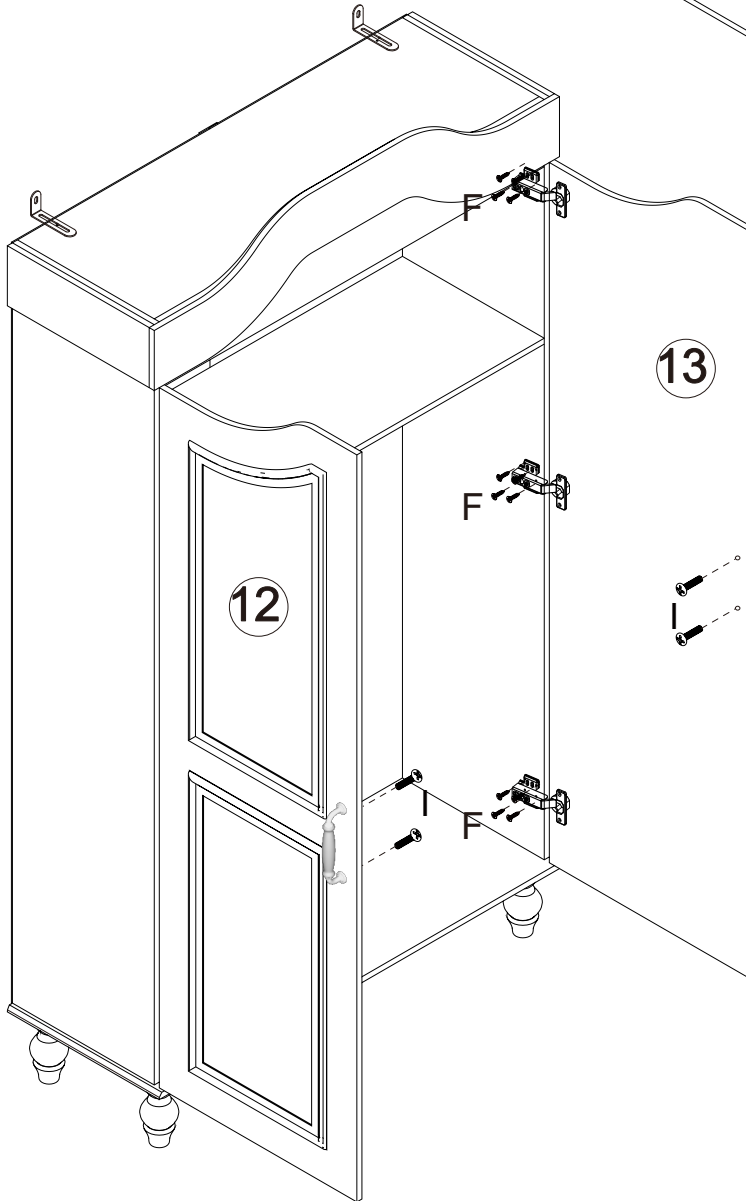 

12

   
13

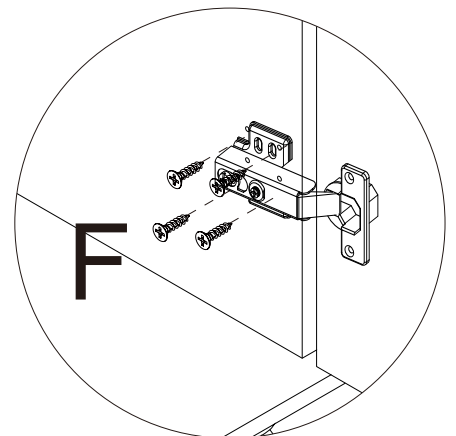

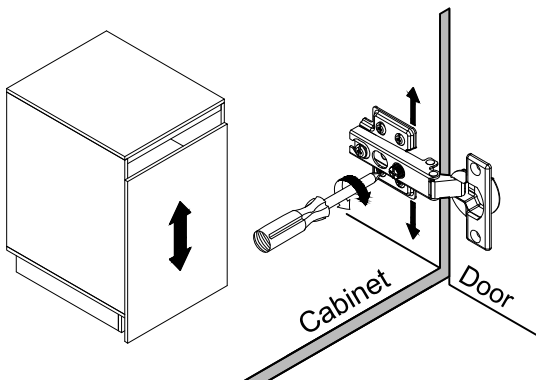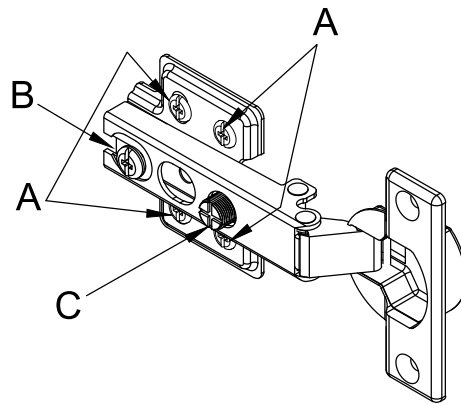


To adjust the vertical height.

 Loosen the four screws "A" on both hinges. Two of them are usually in slotted holes which allows you to adjust up or down by a few mm. Then tighten back up.

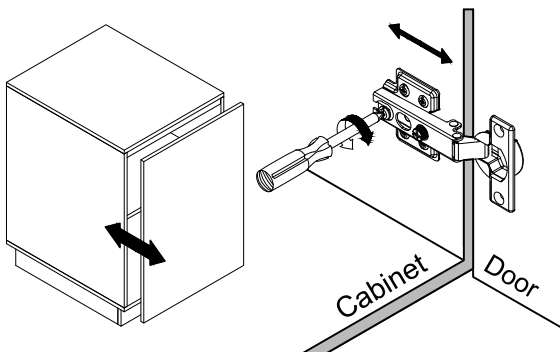

To adjust depth.

 Loosen screw "B" and adjust door, if the door can not be adjusted, please loosen screw "C", then try again. Tighten screw "B" and "C".

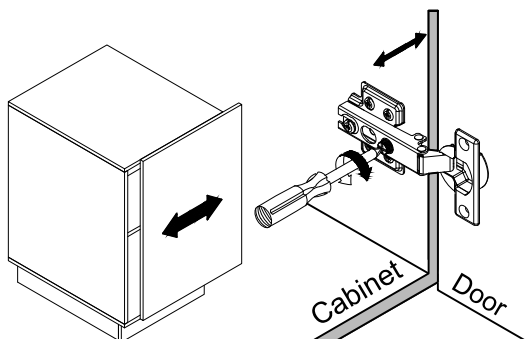

To adjust side ways.

Turning the screw "C" on BOTH hinges on each door.

11

H x2

