

Assembly Manual

Bookcase Headboard

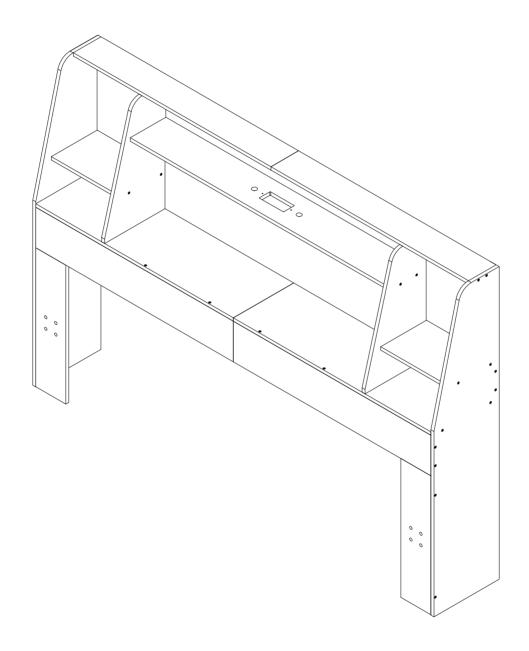

Please read this manual carefully before any operation and keep it properly for future use.

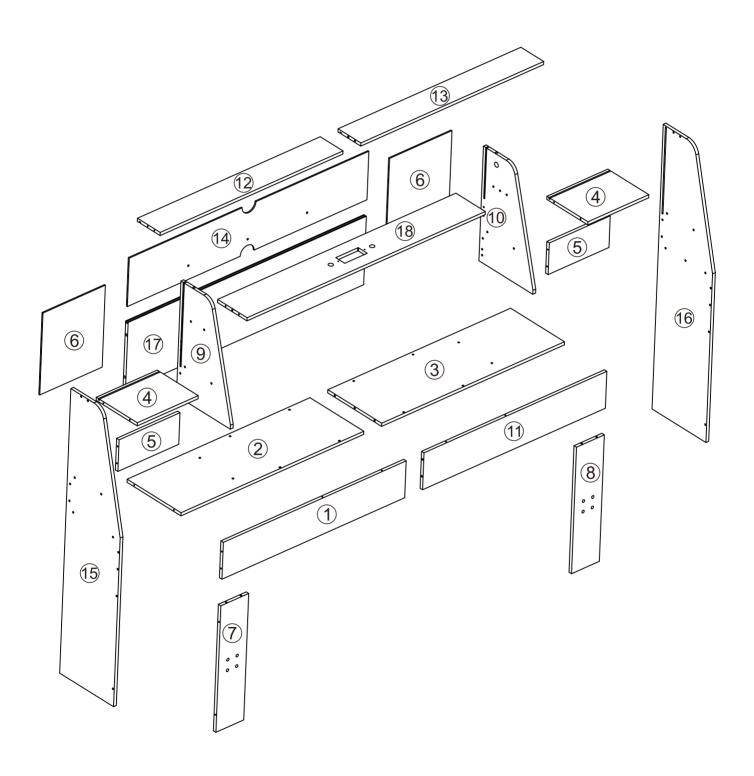





Warnings

ATTENTION:

FUNCTION OF KLIX CAM




1/2 RIGHT **TURN FOR** LOCKING

MAKE SURE THE ARROW OVER AGAINST THE TOPSIDE OF CAM LOCK PIN BEFORE INSERTING INTO THE PANEL'S HOLE

IMPORTANT!

After 180° right turn, if there is a gap between the boards, please check whether the cam lock pin is tightened enough.

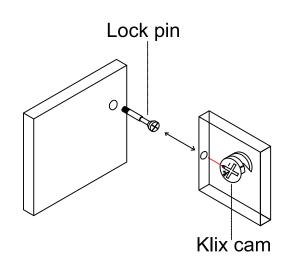




Components List

 A retainer* 2 B connector* 5 C nut* 6 Dbolt*6











  E dowel*13 F bolt*52 G bolt*42 (H) Allen wrench*1













 


















Components List

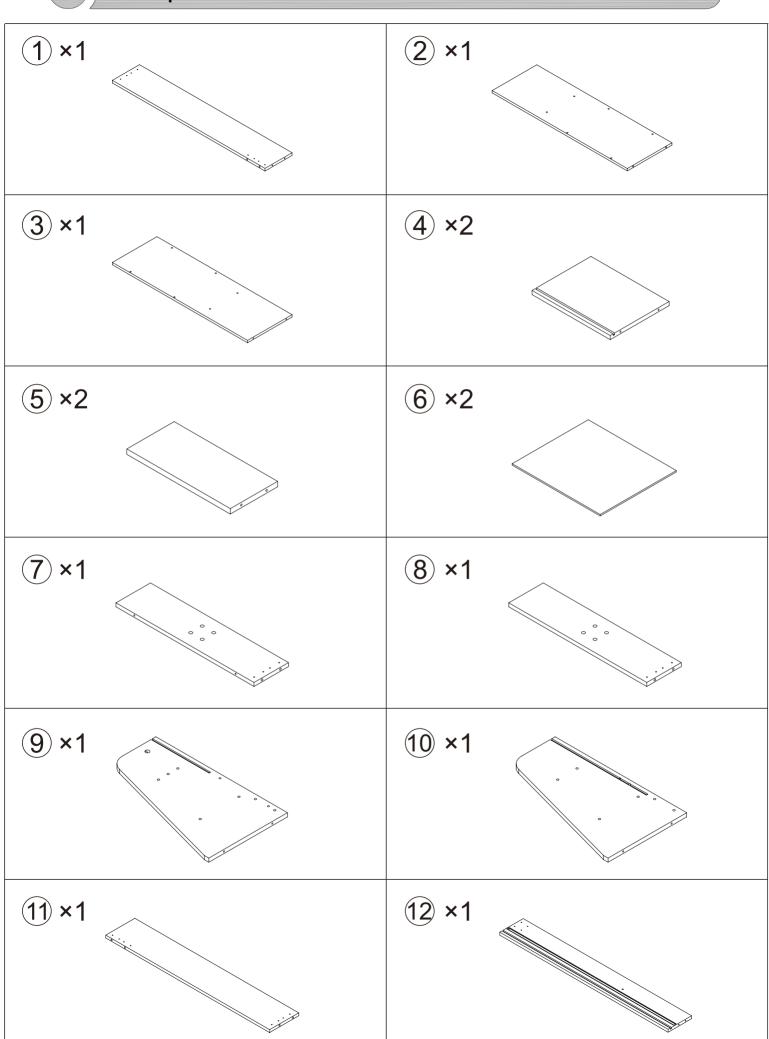





Components List

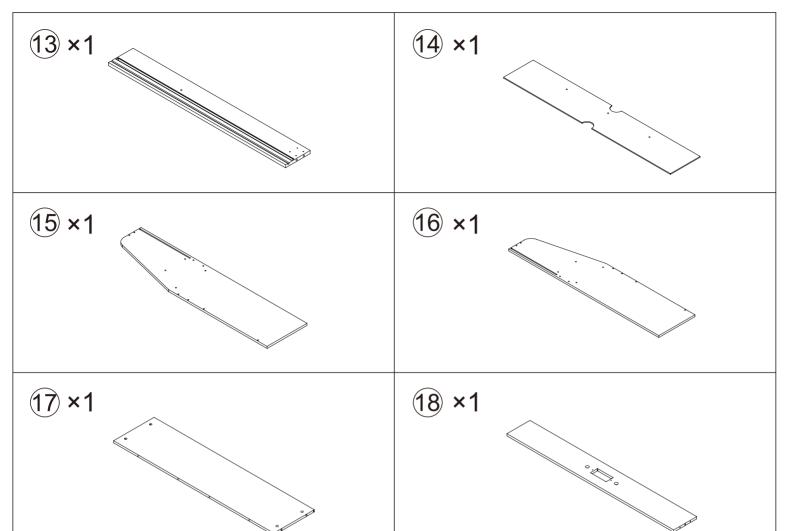




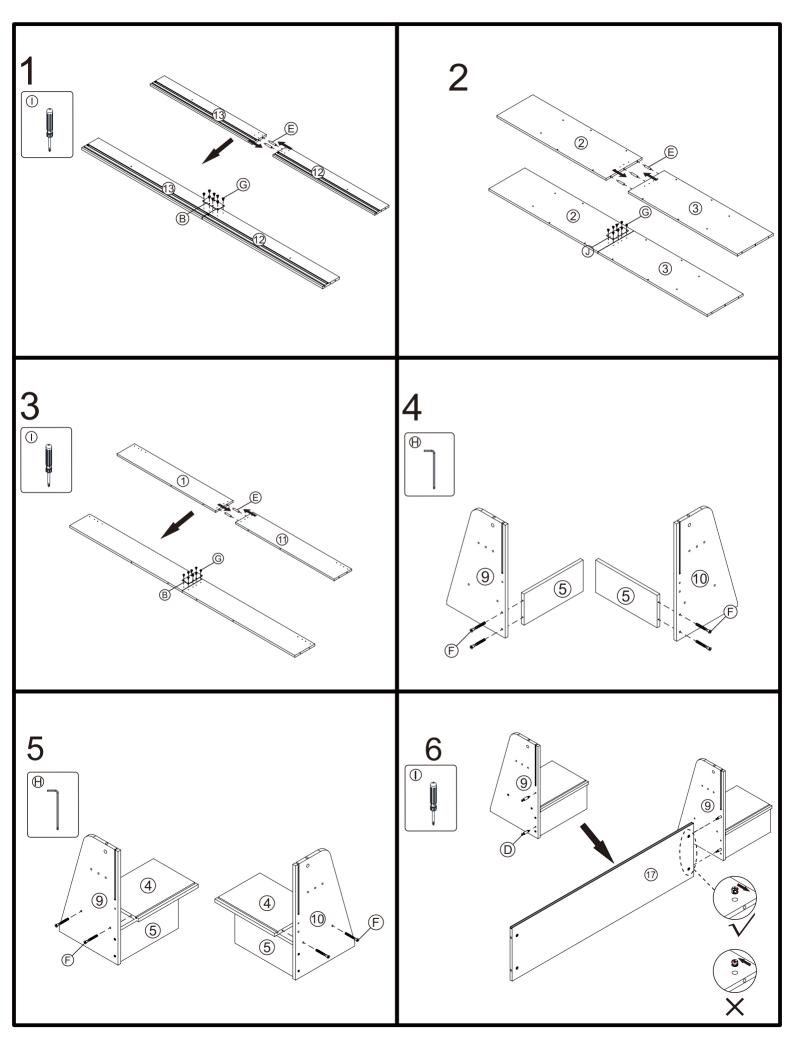




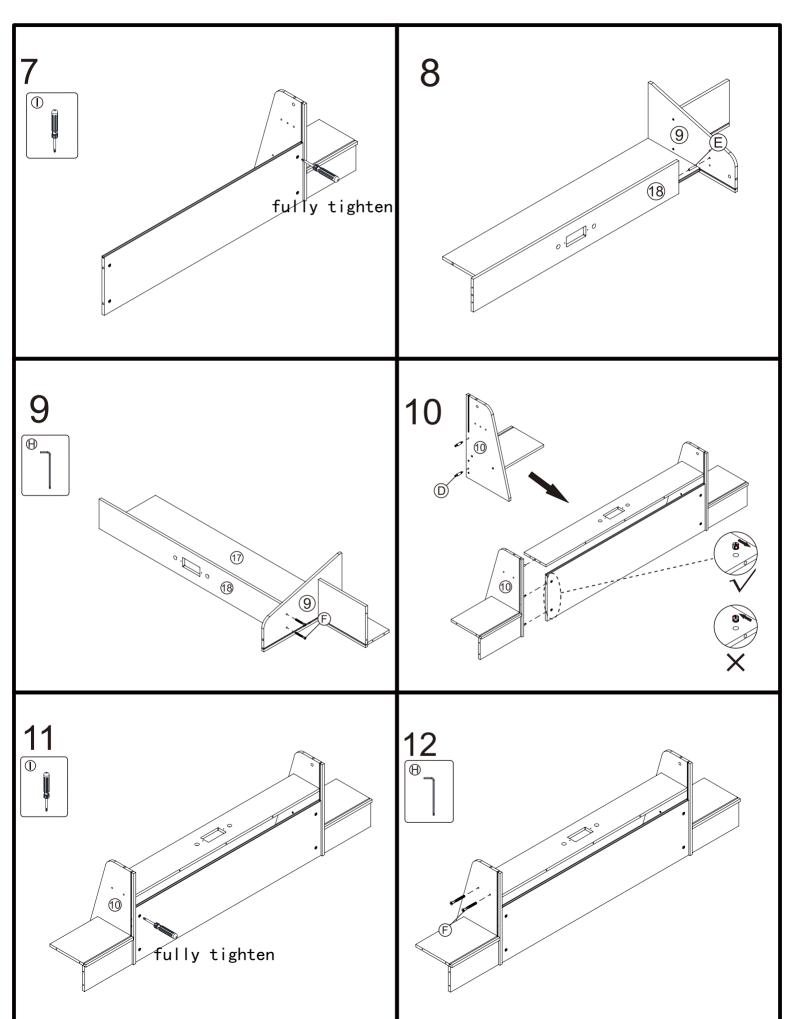





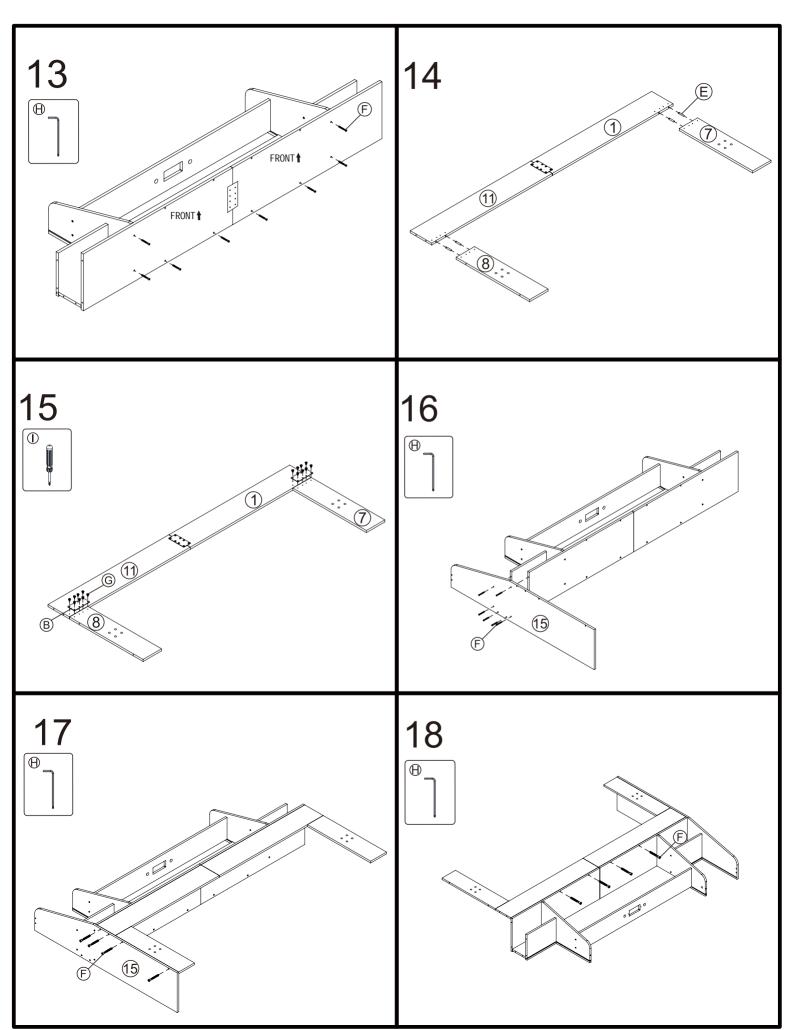




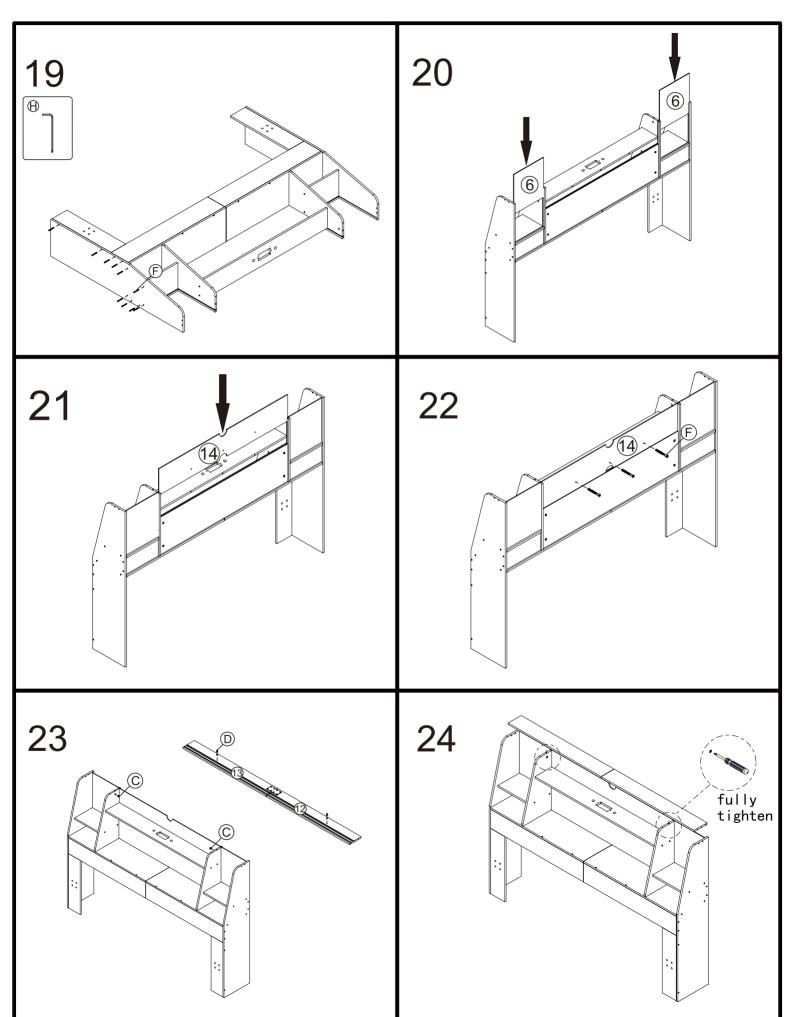

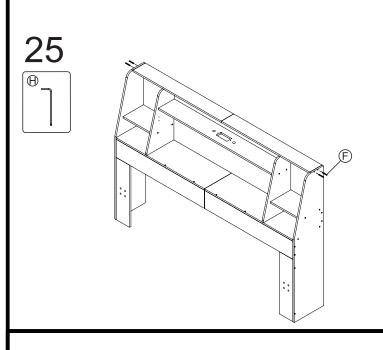

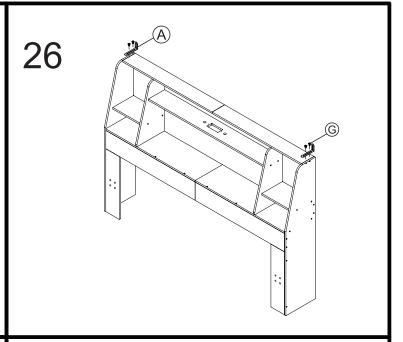

27 Install the plastic corner code between the back plate and the top plate.

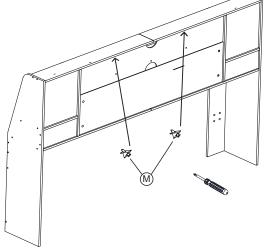

Connect the touch dimmerbu ttons(K-1) b the power cord(K-2). Organize the cablesusing the tie cables(M) to neatly arrange them. First remove the backing of the tie cables, then push hard to place the cable tie where desired.

