



ASSEMBLY INSTRUCTIONS

 
MODEL #

WF-SL012

TOOLS REQUIRED



Screwdriver
(Not included)



Allen Wrench

OR



2 - People

ASSEMBLY RATING



EASY —————> DIFFICULT

The Assembly Rating is a 5-point system showing the level of effort needed to assemble a specific product.

 
ASSEMBLY AND CARE ADVICE



**FAILURE TO FOLLOW THE GUIDELINES BELOW MAY
RESULT IN INJURY AND/OR PROPERTY DAMAGE.**



Position each part correctly
and insert screws or bolts into
their respective holes.

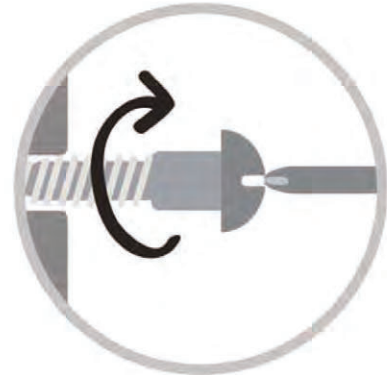

Turn clockwise to tighten and
only tighten when step is
completed or when instructed
to do so.



Save the instructions and store
any supplied tools for later
maintenance.

Use the appropriate hand tools
or power tools for assembly.
Select steps, such as tightening
screws and/or bolts, may require
hand tools to avoid causing
damage during assembly.



After two weeks, check and
tighten any loose hardware and
repeat again every six months
thereafter.

IT IS THE USER'S RESPONSIBILITY TO MAINTAIN THE FURNITURE. THE HARDWARE MAY LOOSEN OVER TIME AND MAY CAUSE THE FURNITURE TO BE WOBBLY AND UNABLE TO SUPPORT ITS INTENDED WEIGHT CAPACITY. THIS MAY LEAD TO COLLAPSE AND MAY CAUSE SERIOUS INJURY.

 
WF-SL012



- Please keep instructions for future reference.
- Check the quantity and irregularity of parts and hardware before you start.


PARTS

①

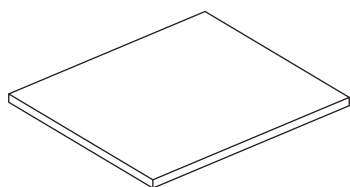


Top Board
1 pc.

 ②

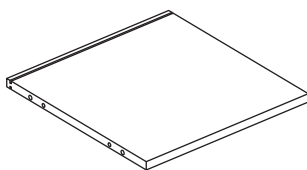


Shelf
1 pc.

 ③

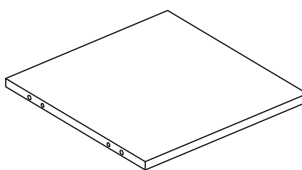


Bottom Board
1 pc.

 ④

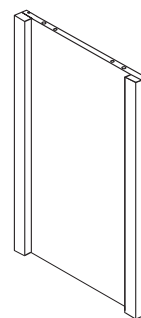


Left Side Panel
1 pc.

 ⑤

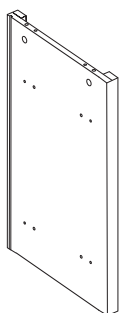


Right Side Panel
1 pc.

 ⑥

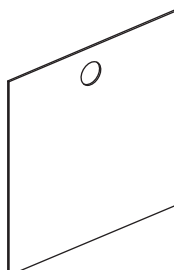

Back Board
1 pc.

 ⑦

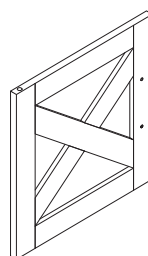


Door
1 pc.

HARDWARE

(A)

 Ø6*35



Cam Bolt
12 pcs.

(B)

Ø15*9.5



Cam Lock
12 pcs.

(C)

Ø6*30



Wood Dowel
12 pcs.

 
(D)



Screwdriver
1 pc.

(E)


Ø3*12



Magnet Plate+Screw
1 pc.

(F)

 
Ø3.5*16



Back panel buckle
4 pcs.

(G)

 
Ø3*15

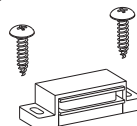

Magnet with 2 Screws
1 pc.

(H)

 Ø8*26



Hinge
2 pcs.

 
(J)

M4*18



Machine Screw
2 pcs.


(K)




Handle
1 pc.

ASSEMBLY INSTRUCTIONS

 1


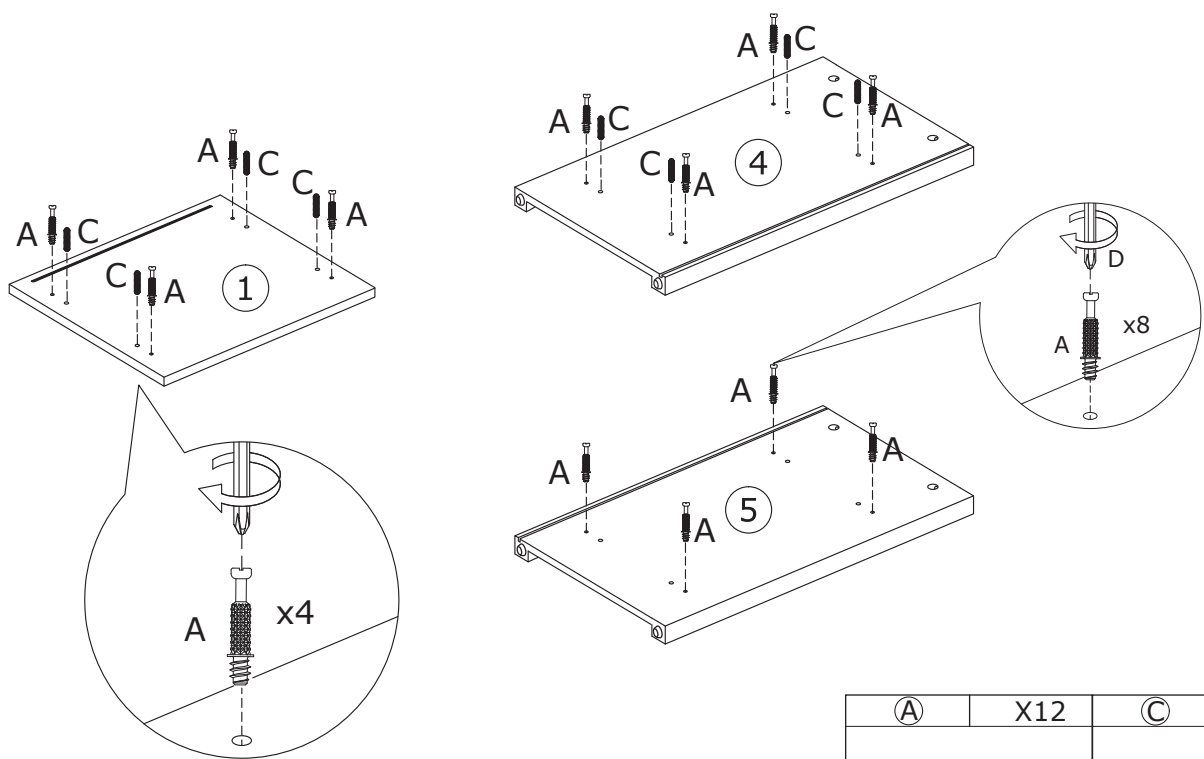


2

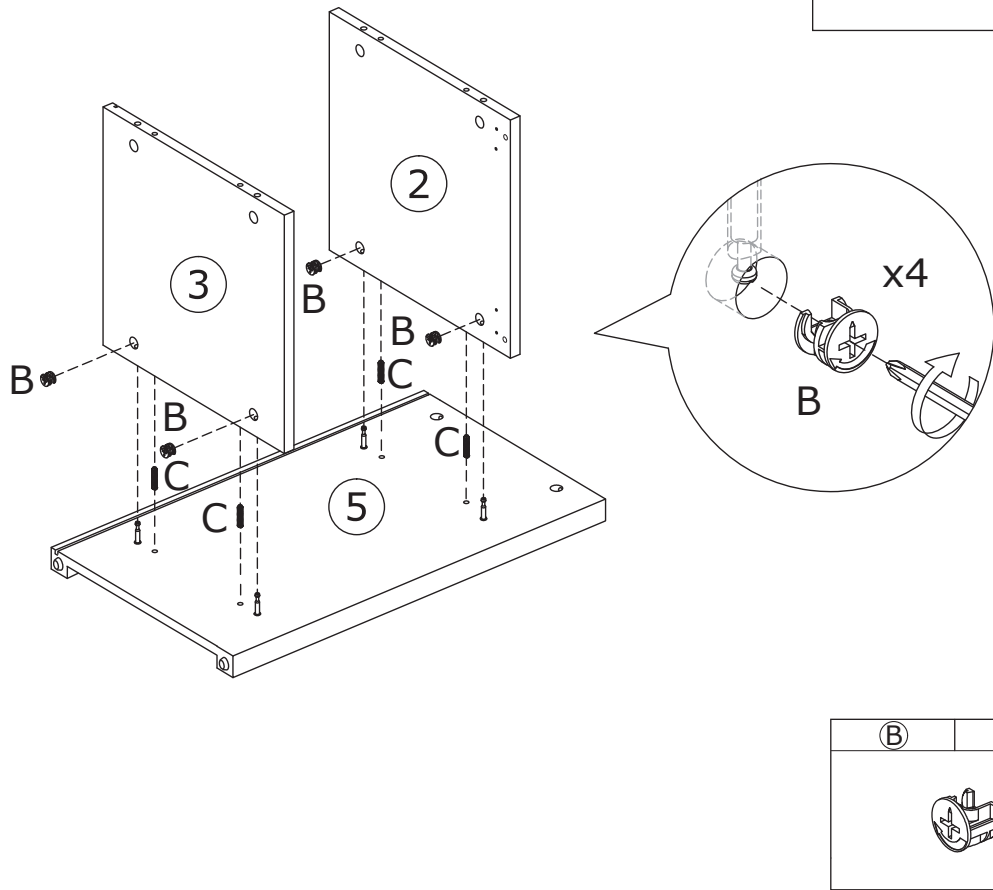 



ASSEMBLY INSTRUCTIONS

  3

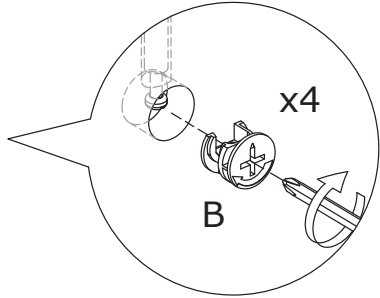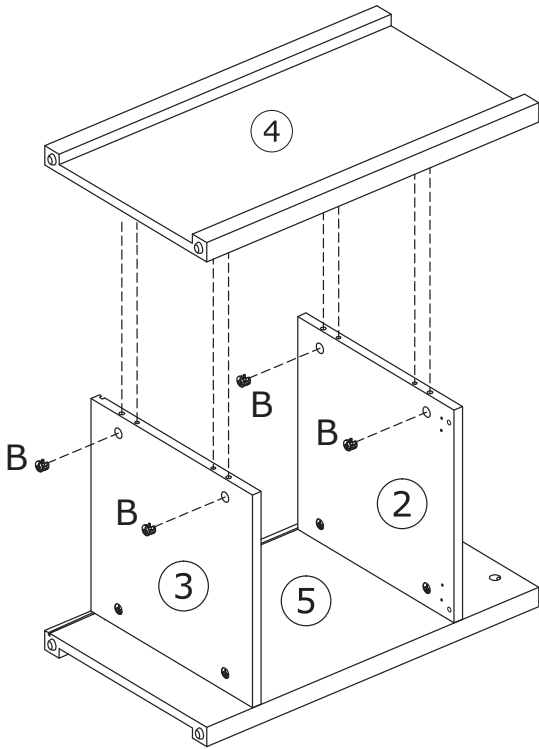

(B)	X4
	

 
 
4

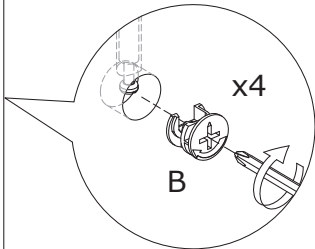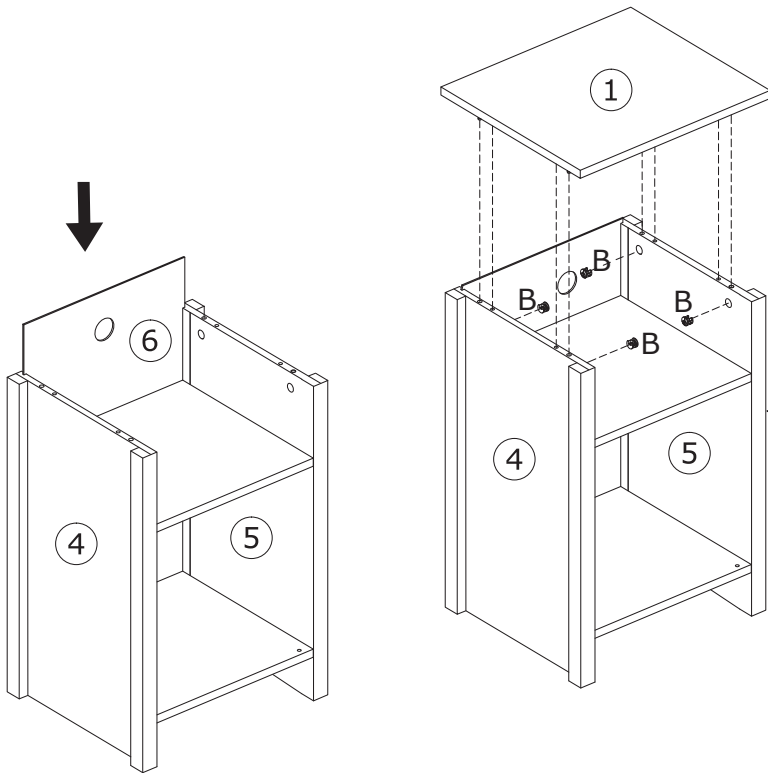

(B)	X4
	


ASSEMBLY INSTRUCTIONS

  5

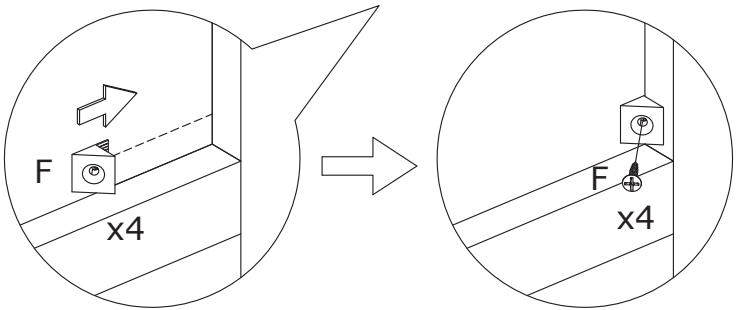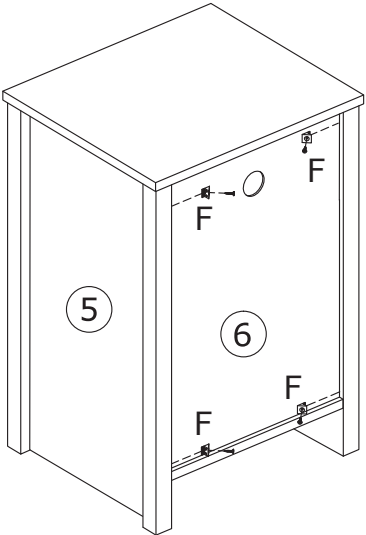

(F)	X4



 
6

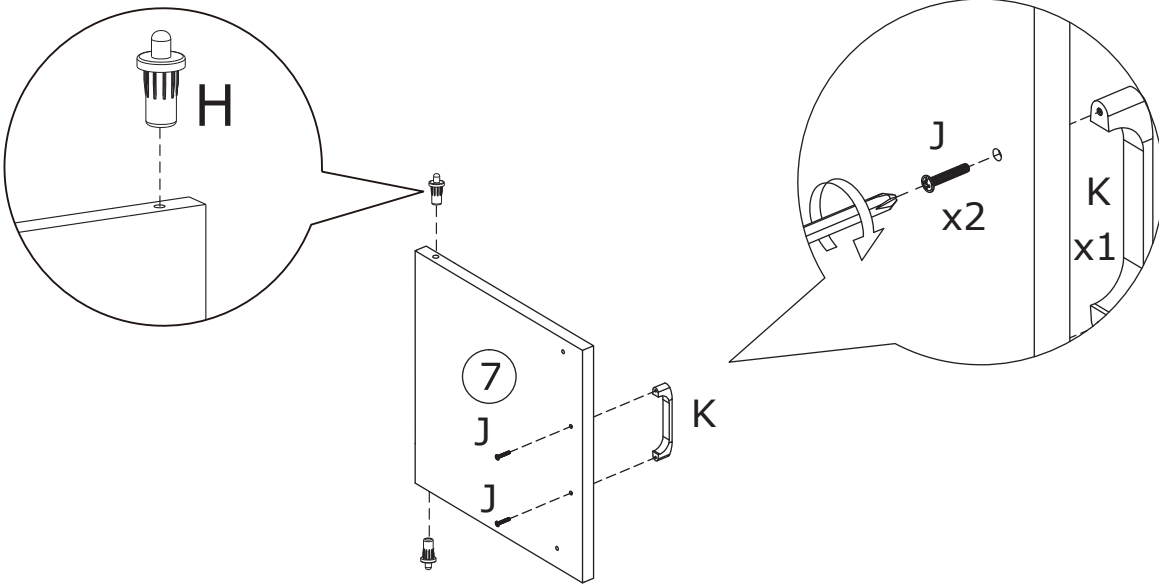

(H)	X2	(J)	X2	(K)	X1

ASSEMBLY INSTRUCTIONS

   7

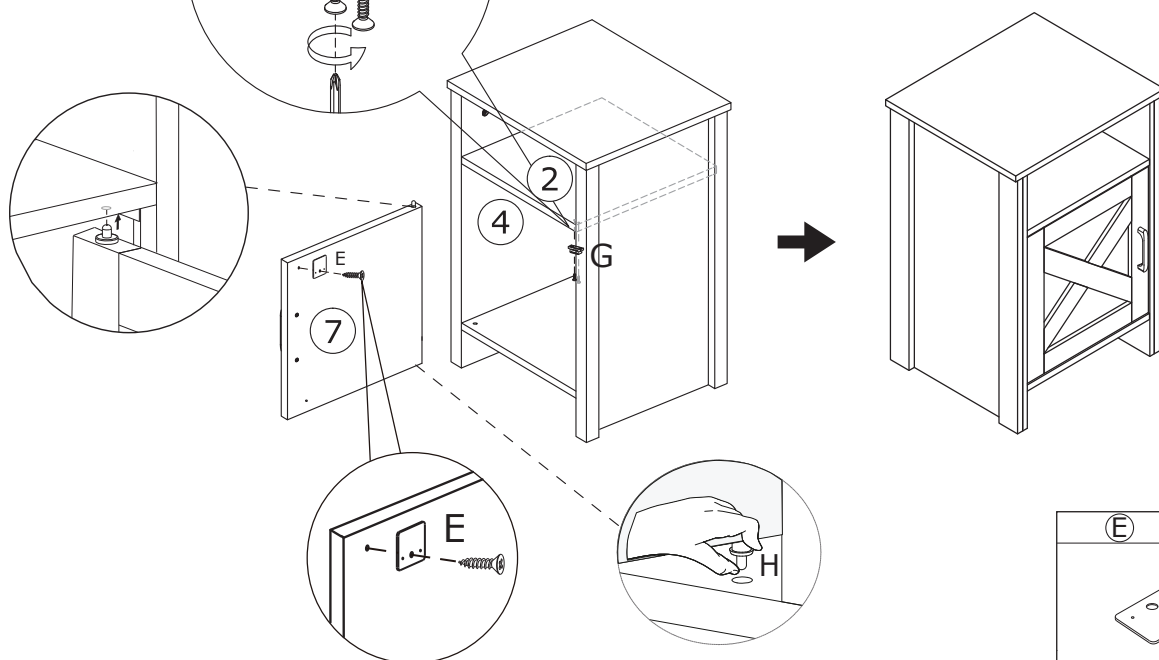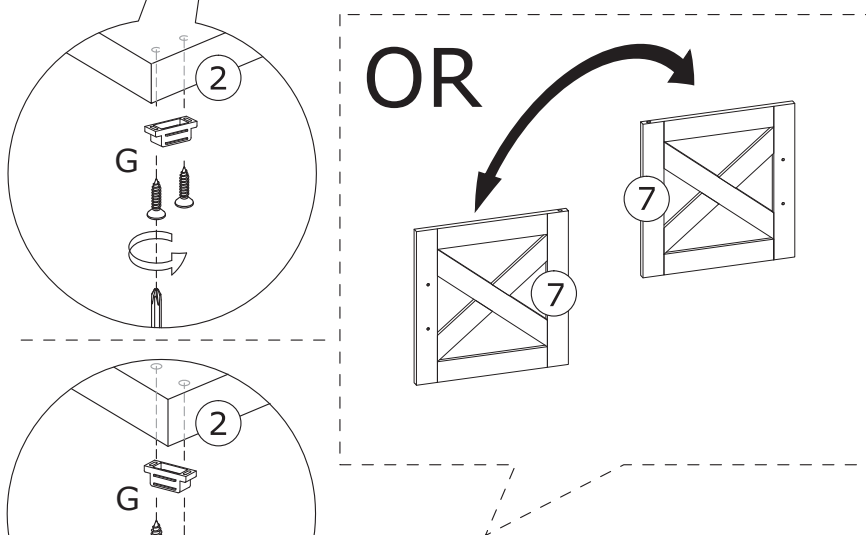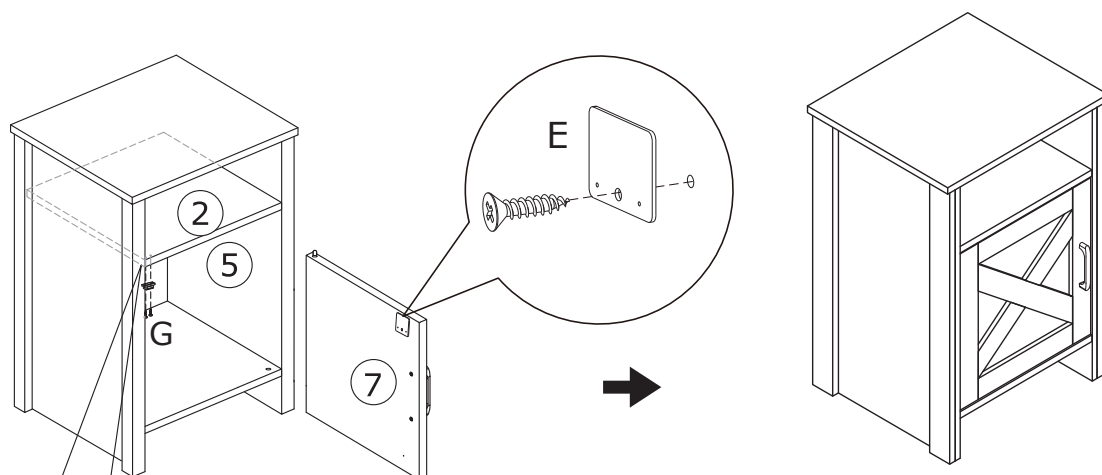


FINISH!

(E)	X1	(G)	X1

ASSEMBLY INSTRUCTIONS

 8

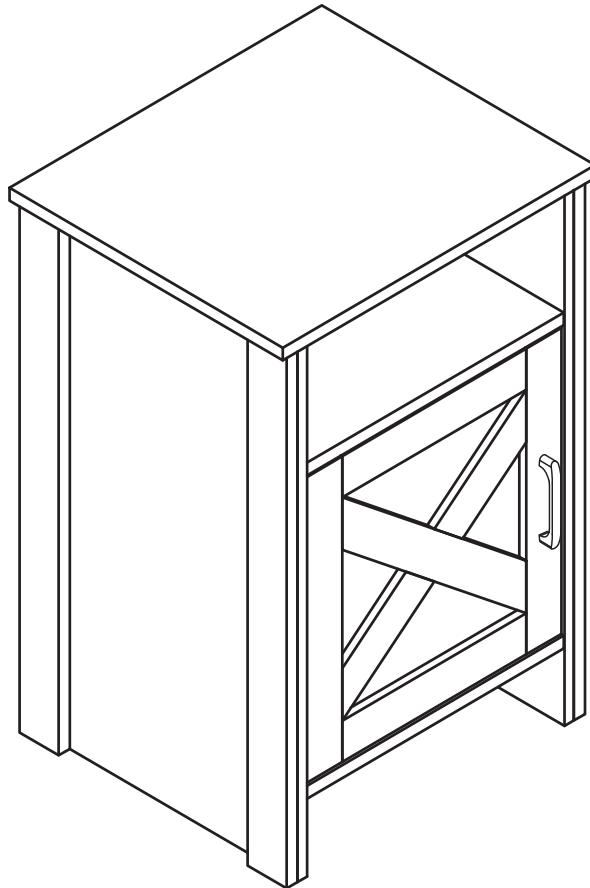

ASSEMBLY COMPLETED



Please ensure the furniture rests on an even and flat surface. If the product wobbles or feels loose, double-check all bolts and/or screws are properly tightened and secured.



Keep this handy!

Please retain this instruction manual and any order-related information for future reference.



Lift, don't drag!

To avoid damage to product please always LIFT the product when transporting or adjusting the placement.

This product is intended for RESIDENTIAL USE ONLY and not for commercial use.