


CUCKOO CLOCK User Manual

AUTOSWINGING PENDULUM & BIRD CHIME

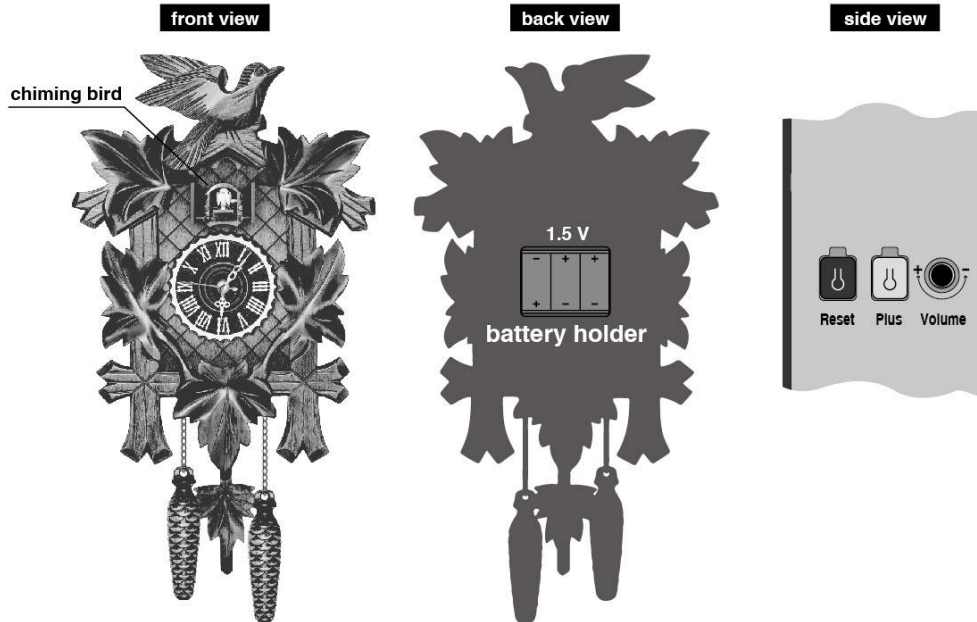

Step for use

- 1 Insert the battery into the battery holder in the same way as shown.
- 2 Turn the hands knob in the direction of the arrow and set time to 7:00.
- 3 Press RESET.
-To prevent malfunction, make sure to press this after the battery is inserted.
-When RESET is pressed, the chime will be set at 7:00
- 4 To prevent malfunction, make sure to the minute hand turns clockwise when setting the time.

Chime function

- 1 The Chime will be sound according to the time.
- 2 Press the SET button once will increase the number of chime sound by 1.
- 3 The volume can be adjusted by using the volume button.